形 61F-GPN-B

DC電源導電式レベルスイッチ

取扱説明書

OMRON

7452182-1 G

2. 使用上の要点

ってください。

オムロン製品をお買い上げいただきありがとうございます。この 製品を安全に正しく使用していただくために、お使いになる前に この取扱説明書をお読みになり、十分にご理解のうえ、正しくこ 使用ください。お読みになった後も、いつも手元においてご使用 ください。

オムロン株式会社

© All Rights Reserved

安全上のご注意

●警告表示の意味

正しい取り扱いをしなければ、この危険のために、時に軽傷 ・中程度の傷害を負ったり、あるい物的損害を受ける恐れか あります。	
---	--

●警告表示

▲注意	
稀に感電の恐れがあります。 端子には触れないでください。	
稀に感電の恐れがあります。 電源を入れた状態で分解したり、内部に触ったりしないでください。	



適切な対策が必要になります。

ネジにゆるみがありますと、振動・衝撃等でDINレールやソケット、製品 本体、配線が外れる原因となります。 DINレールへのソケット取り付けは確実に行ってください。 製品本体とソケットの確実な接続を維持するために保持金具をご使用ください。 用途、使用電源をご確認ください。 電源電圧は本体表示に従ってください。 端子ネジに圧着端子と取り付ける場合は、締付けトルク0.45~0.6N・mの 範囲で締め付けてください。 制御電源や入力等を供給する電源または配線用の電線は適切な仕様のもの をご使用ください。 [61F本体と電極との配線推奨ケーブル:完全絶縁処理を施した600V VCT0.75mm² 3芯キャブタイヤケーブル] 電極回路の配線と高圧線、動力線を同一ダクトに入れたり、接近して配線 しないでください。 誘導ノイズの影響を受けやすく誤動作の要因となります。 形61Fと電極保持器までの配線距離はできるだけ短くしてください。 配線距離が長いと線路の浮遊容量が動作に影響したり、電極回路に異常な サージやノイズがのって動作に異常をきたすことがあります。 コモン電極端子のアースは確実に接地してください。 ノイズの影響などを少しでも軽減できます。 ケーブルをもって引っぱらないでください。 使用しない端子には何も接続しないでください。 端子番号を確認し、正しく配線してください。 電極、電極保持器は水槽の大きさや、水槽内環境(圧力、温度、制御体液等) を考慮して選定ください。 使用負荷は定格範囲内でご使用ください。 ご使用前に用途、配線、使用電源等をもう一度お確かめください。 清掃時にシンナー類を使用しないでください。 市販のアルコールを使用してください。 廃棄する場合は、産業廃棄物として処理してください。 分別廃棄される場合の分解は怪我にご注意ください。 使用上の注意 ・UL規格認定条件でご使用の場合、DC電源は"Class 2 Power supply"を ご使用ください。 電極と電極とが液中で接触するときは別売品のセパレータ(形F03-14)を 使って防いでください。 電極棒接続ナットは、十分締付けてください。 電極に浮遊物がつかないようにしてください。 液体の固有抵抗が高すぎ、ほとんど電気を通さない油等には使用できません。 適合規格については、屋内での使用が条件になります。 設定ボリュームは以下のトルク値の範囲内でご使用ください。 回転トルク ∶20mN • m 回転止強度 : 50mN • m 定格 定格雷圧 DC24V 許容電圧変動範囲 定格電圧の85~110% 2W以下 消費電力 電極間電圧 5Vp-p 以下 動作抵抗値 ₩1 可変(0~100kΩ) 復帰抵抗値 動作抵抗値の200%以下 ۰BT オープンコレクタ (NPN) DC30V、100mA以下 出力仕様 BC リレー出力 (1a) DC30V5A、AC240V 5A (折抗負荷) 配線距離 ※2 100m以下

取り扱い及び保守は取扱説明書、カタログ本文をよく理解してからおこな

ソケット、DINレールは、ネジで緩みがないように取り付けてください。

※1. 整定値 "O" 付近では動作しないことがあります。実使用に合わせた 感度調整を実施してください。

※2. ø0.75mm² 600V VCT 3芯の場合

	性能
使用周囲温度	-10~+55℃
使用周囲湿度	25%~85%
絶縁抵抗	100MΩ以上 DC500Vメガにて
耐電圧	AC2000V 50/60Hz 1分間
応答時間	動作時:1.5s以下、復帰時:3.0s以下
耐振動	10~55Hz、片振幅0.75mm X,Y,Z各方向 50分間
耐衝撃	150m/s ² X,Y,Z各方向 3回
高度	2,000m以下
設置環境	過電圧カテゴリ監、汚染度2 (IEC61010-1による)
適合規格	UL61010-1, CAN/CSA C22.2 No.61010-1.04 (ULにて評価) EN61010-1 (IEC61010-1) EN61326 工業用途 class A



●排水の自動運転の場合

は、短絡してください。

DC30V 100mA以下 形61F-GPN-BT 1 OUT+ OUT-10 **(4**) 給排水 $\overline{(7)}$ (3) (9) ポンプON 切替端子 (8) (OFF) _ 44 4 DC24V E2 ポンプOFF ※リレー出力タイプ(-BC)場合 E3 (ON)も端子のNo.10-11が出力端子 (a接) になります。 ●給水の自動運転の場合 ⑦-⑧間を短絡してください。 上図の()内は給水の場合の動作です。 ●液面信号のみの取り出しの場合(制御なし) 電極E1とE3のみを使用します。液面がE1に達したとき、出力ON にしたい場合は、端子No.⑦-⑧間は開放、出力OFFにしたい場合

●液面信号を1つの水槽から複数点取り出したい場合 各61Fの端子No.④を共通コモンにし、各々の端子No.⑤を信号電 極としてご使用ください。





ご使用に際してのご承諾事項

下記用途に使用される場合、当社営業担当者までご相談のうえ仕様書などに よりご確認いただくとともに、定格・性能に対し余裕を持った使い方や、万 --故障があっても危険を最小にする安全回路などの安全対策を講じてくださ

a)屋外の用途、潜在的な化学的汚染あるいは電気的妨害被る用途またはカタ ログ、取扱説明書等に記載のない条件や環境での使用

b)原子力制御設備、焼却設備、鉄道・航空・車両設備、医用機械、娯楽機械 、安全装置、および行政機関や個別業界の規制に従う設備

c)人命や財産に危険が及びうるシステム・機械・装置

d)ガス、水道、電気の供給システムや24時間連続運転システムなど高い信頼 性が必要な設備

e)その他、上記a)〜d)に準ずる、高度な安全性が必要とされる用途

上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データ シート等最新版のカタログ、マニュアルに記載の保証・免責事項の内容を よく読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー
●お問い合わせ先 カスタマサポートセンタ _{タイック} オムロン
(2) 0120-919-066
携帯電話・PHSなどではご利用いただけませんので、その場合は下記電話番号へおかけください。
電話 055-982-5015 (通話料がかかります) 【技術のお問い合わせ時間】
■営業時間:8:00~21:00 ■営 業 日:365日 ■上記フリーコール以外の制御機器の技術窓口:
電話 055-982-5000 (通話料がかかります) 【営業のお問い合わせ時間】
■営業時間:9:00~12:00/13:00~17:30 (土・日・祝祭日は休業) ■営業日:土・日・祝祭日/春期・夏期・年末年始休暇を除く
●FAXによるお問い合わせは下記をご利用ください。 カスタマサポートセンタ お客様相談室 FAX 055-982-5051
●その他のお問い合わせ先 納期・価格・修理・サンプル・仕様書は貴社のお取引先、 または貴社担当オムロン営業員にご相談ください。
●インターネット情報サービス
http://www.fa.omron.co.jp/

OMRON

MODEL 61F-GPN-B

CONDUCTIVE LEVEL CONTROLLER

INSTRUCTION MANUAL

Thank you for purchasing the Model 61F-GPN-B_Conductive Level Controller. Before using it, thoroughly familiarize yourself with the instructions in this manual. It is recommended that you save this sheet for future reference.

OMRON Corporation

© All Rights Reserved

Safety Precautions

Definition of Precautionary Information



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

Precautionary Information

Do not touch the terminals. Doing so may possibly result in electric shock.	
Do not allow pieces of metal or wire clippings to enter the product while power is being supplied. Electrical shock, fire, or malfunction may result.	8

Precautions for Safe Use

1. Precautions for the environment

- Use and preserve within the proper temperature and humidity described in the specifications.
- Do not install, near heat devices such as coils or other devices having coils, etc.
- Avoid preserving (including transportation) and using in a humid place, in a corrosive gas environment, outdoors and in a place which receives direct sunlight.
- Preserve and use without exposing to danger of explosion, flammable dust, gas and vapor, excessive dust, and saline or droplets.
- Avoid preserving (including transportation) and using in a place which is vulnerable to flooding or oil spillage.
- place, in a corrosive gas environment, outdoors and in a place which
- receives direct sunlight.
- Avoid preserving (including transportation) and using in a place where vibrations and impacts are strong.
- Similarly, avoid using next to a high-capacity contactor which may make
 imports at aparation. Doing as assures malfunctions such as about the
- impacts at operation. Doing so causes malfunctions such as chattering, etc.
 Do not install the product or use where an influence of a static electricity or an electric field or Evacacing pairs.
- or an electric field or Excessive noise.
- Do not install the product near devices generating strong high-frequency waves or surges. When using a noise filter, check the voltage and current and install it as close to the product as possible.
- This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

2. Cautions for Use

- Read the instruction manual and catalog before operating and maintaining the product.
- Fit sockets and DIN rails so that the screws are tight. If the screws are not tight, DIN rails, sockets, the product and cables may lead to come off.
- Be sure to fit sockets to DIN rails without fail.
- Use metal strengtheners to maintain a firm connection between the product and sockets.
- Check the application and power supply.
- Always follow the power voltage described on the device. • When fitting crimping terminals to terminal screws, use a tightening torque of between 0.45 and 0.6N • m.
- Use power supply of appropriate specifications to provide control sources, inputs, etc., and to wire cables.
- [Recommended cable to wire between the model 61F and electrodes : three-core cabtyre cables of completely insulated 600V 0.75mm² VCT]
- Do not put power lines, high-voltage cables and wires of electrode circuits in the same duct nor wire closely. Doing so causes malfunctions by getting vulnerable to induction noise.
- Shorten the distance for wiring between the model 61F and electrode holder as much as possible. Long distance for wiring may cause malfunctions because stray capacitance may influence operation, or abnormal surges or noise may run through electrode circuits.
- Be sure to ground common electrode terminals. Doing so can reduce some effects of noise.
- · Do not hold and pull the cable.
- \cdot Do not connect anything with the terminal not used.
- Check all terminal numbers when wiring.
- Electrodes and electrode holders shall be selected by considering the tank capacity and tank inside condition such as pressure, temperature, or control liquid.
- Use the product within the noted supply voltage and rated load.
- Before using, recheck the application, wiring, power supply, etc.
 Do not clean the Product with paint thinner or other organic solvents. Use commercial alcohol.
- When discarding, follow the instructions of each local government, etc.
 When degrading in separating and discarding, be careful not to
- hurt yourself.

Precautions for Correct

- The DC power supply must use "Class 2 Power supply" as UL recognition condition.
- Make sure that electrode probes in the liquid do not come in contact one another as it may cause malfunction, Use separately when contacting.
- Tighten nuts for electrode probes firmly.
- Prevent flotage from attaching to electrode.
- This device is not available when the resistance is too high and is not conductive such as oil.
- Conformity to standards : The product must be used indoors for the above applicable standards to apply.
- Do not apply a torque to the resistance value adjuster in excess of the specified one.
- Rotation torque : 20mN · m Detent strength : 50mN · m

RATINGS		
Power supply voltage	24VDC	
Operating voltage range	85 to 110% of rated voltage	
Power consumption	2W max.	
Interelectrode voltage	5V p-p max.	
Operating resistance *1	Variable (0 to $100k\Omega$)	
Release resistance	200% of Operating resistance max.	
	BT NPN open collector transistor output with 100mA at 30 VDC max.	
Output configuration	BC Relay output (SPST-NO) with 5A at 240 VAC or 5A at 30 VDC (resistive load)	
Cable length *2	100m max.	

- *1. Operating resistance dose not operate in about 0 occasionally. Please execute the sensitivity adjustment matched to the real use.
- *2. 600V, 3-conductor (0.75mm²) cabtyre cables.

SPECIFICATIONS Operating : -10°C to 55°C Ambient temperature Ambient humidity Operating : 25% to 85% RH 100MΩ max. (at 500 VDC) Insulation resistance 2000 VAC, 50/60 Hz for 1min. Dielectric strength Response time Operate : 1.5s max. Release : 3s max. Vibration resistance 10 to 55 Hz, 0.75-mm single amplitude for 50 minutes each in X,Y and Z directions Shock resistance 150 m/s² 3 times each in X,Y and Z directions Altitude 2.000m max. Over voltage category II, Pollution degree 2 Installation environment (as per IEC61010-1) UL61010-1, CAN/CSA C22.2 No.61010-1.04 Applicable standards (evaluated by UL) EN61010-1 (IEC61010-1) EN61326 Industrial use "Class A"







- Automatic Water Supply Control Short between terminals No.7 and 8. Description in parentheses shown in the above figure indicates the operation for automatic water supply control.
- Only when extracting the liquid signal. (without control) Use only electrodes E₁ and E₃. When the liquid level reaches to E₁, open terminals between No.7 and 8 to opera output ON, and short between terminals No.7 and 8 to opera output OFF.
- When extracting the plural signals of liquid level. Set terminal No.4 of each 61F to common, and use terminal No.5 as a signal electrode.



Suitability for Use

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS. AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

See also Product catalog for Warranty and Limitation of Liability.

Contact Information

OMRON ELECTRONICS LLC.			
One Commerce Drive Schaumburg, IL 60173-5302 U.S.A			
Phone: 1-847-843-7900 Fax: 1-847-843-7787			
OMRON CANADA INC.			
885 Milner Avenue Scarborough, Ontario M1B 5V8, CANADA			
Phone: 1-416-286-6465 Fax: 1-416-286-6648			
OMRON EUROPE B.V.			
Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands			
Phone: 31-23-56-81-300 Fax: 31-23-56-81-388			
OMRON ELECTRONICS PTY.LTD.			
71 Epping Road, North Ryde, Sydney, N.S.W 2113, Australia			
Phone: 61-2-9878-6377 Fax: 61-2-9878-6981			
OMRON ASIA-PACIFIC PTE. LTD.			
No.438A Alexandra Road #05-05/08(Lobby 2), Alexandra			
Technopark, Singapore 119967			
Phone: 65-6835-3011 Fax: 65-6835-2711			
Manufacturer			

Manufacturer

OMRON CORPORATION. Shiokoji Horikawa, Shimogyo-ku, KYOTO, 600-8530 Japan