# OMRON 形 FHV-SDU

スマートカメラデータユニット

# 取扱説明書

このたびは、本製品をお買い上げいただきまして、まことにありがとうございます。 ご使用に際しては、次の内容をお守りください。

- ・電気の知識を有する専門家がお取り扱いください。
- ・この取扱説明書をよくお読みになり、十分にご理解のうえ、正しくご使用ください。
- ・この取扱説明書はいつでも参照できるよう大切に保管してください。



#### 3130057-0C

CE

オムロン株式会社 © OMRON Corporation 2019-2025 All Rights Reserved. 1

# 安全上のご注意

# ●警告表示の意味



正しい取り扱いをしなければ、この危険のために、軽傷・中程 度の傷害を負ったり万一の場合には重傷や死亡に至るおそれが あります。また、同様に重大な物的損害をもたらすおそれがあり ます。

● 警告表示



- 操作や保守の安全を確保するため、高電圧機器や動力機器から離して設置してください。
- ・振動・衝撃のある場所への設置は、極力避けるようにしてください。 ・ノイズを発生する機器の近くに設置しないでください。やむを得ずノイズの多い環境に設置し、動作異常が発生す る場合は、遮へい対策を必ず施してください。

2.電源および配線について ・指定された電圧でご使用ください。定格を超える電圧や交流電圧を印加すると、回路部品が焼損・破裂するおそれ があります。 ・電源の逆接続はしないでください

電源は、高電圧が発生しないように対策(安全超低電圧回路)されている直流電源装置から供給してください。 ・本製品は他の商品と一緒にせず、単独の電源で使用してください。 ・本製品に定格を超える電圧やAC電源を絶対に接続しないでください。接続すると、故障の原因となります。

- 推奨電源は以下の通りです。 照明モジュールを取り付ける場合 形S8VK-G12024 (OMRON製)または、形S8VS-12024 (OMRON製)
- 開明モジュールを取り付けない場合 照明モジュールを取り付けない場合 形S8VK-G06024 (OMRON製)または、形S8VS-06024 (OMRON製) 高圧線、動力線と当製品の配線は別配線としてください。同一配線あるいは同一ダクトにすると誘導を受け、誤動作ある いは破損の原因になることがあります。 ・オープンコレクタ出力は、負荷を短絡させないでください。 ・負荷は定格以下で使用してください。
- 配線は指定サイズの圧着端子を付けてください。撚り合わせただけの電線を直接電源や端子台に接続しないでくだ
- さい。 必要のない信号線は切断し、他の信号線と接触しないようにしてください。 ・配線後は電源を投入する前に、電源の正課、負荷短絡などの誤接続の有無、負荷電流の適否、FGの接続につい て確認を行ってください。誤配線などで故障するおそれがあります。 ・SDU本体のFG線は、必ずD種技地(接地抵抗1000以下)してください。 ・接地線は、他の機器と共用したり建物の梁に接続しないでください。悪影響を受ける可能性があります。 ・接地点はできるだけ近くし、接地線の長さをできるだけ短くしてください。

- 3.取り付けについて
- ・ケーブルにおよりストレスを与えないでください。ケーブルが破損する原因となります。 ・ケーブルの最小曲げ半径を確保してください。確保できない場合、ケーブルが破損する原因となります。
- 4.その他 ・専用のデータユニットケーブル (形FHV-VU□) およびパラレルI/0ケーブル(形XW2Z-S013-□□、形 XW2Z-□□□□EE」以外を使用しないでください。専用品以外では、読動作。破損のおそれがあります。 異見がする、異合がする、本体が非常に熱くなる、煙が出るなどの異常が起こった場合、すぐに使用を中止し、電源 を切った状態で当社支店。営業所までご相談ください。 本製品を分解、加圧変形、焼却、修理、改造したりしないでください。
- 通電中は、端子部に触れないでください。感電のおそれがあります。
   廃棄するときは、産業廃棄物として処理してください。

- 施来することに来加速を抑していたがらいいたが。 「原子力や、人命に関わる安全回路には使用しないでください。 「製品を落下させたり、異常な振動・衝撃を与えないでください。製品の故障、焼損の可能性があります。 ・スマートカメラの計測結果を利用して、ステージャロボットを動作させる場合(キャリプレーション、アライメント計測による 軸移動量出力)は、必ず外部でフェールセーフ対策を施してください。

# 使用上の注意

- 1.設置場所について 次のような場所には設置・保管しないでください。 ・周囲温度が定格(動作時:0~+50℃、保存時:-25~+65℃)の範囲を超える場所 ・温度変化が急激な場所(結素する場所)
- 相対湿度が35~85%RHの範囲を超える場所 ・腐食性ガス、可燃性ガスのある場所 ・塵埃、塩分、金属粉がある場所

- ・膣疾、塩ガ、並用物がめの場所 ・振動や筒撃が直接加わる場所 ・強い外乱光(レーザ光、アーク溶接光、紫外光など)があたる場所 ・直射日光があたる場所や暖房器具のそば ・水・油・化学薬品の飛沫やミスト雰囲気がある場所 ・強磁界、強電界のある場所 ・高圧機器や動力機器のそば 零班をしてため、範疇レマロンプ

「回し秋岡で ツリル酸 ひへは
 2.電源および接続 配線について
 ・市販のスイッチングレギュレータをご使用の際は、フレームグランド端子を接地してください。
 ・電源ラインにサージがある場合は使用環境に応じてサージアブソーパを接続してご使用ください。
 ・配線後は電源を投入する前に、電源の正説、負荷短絡などの誤接続の有無、負荷電流の適否について確認を行ってください。訳配線などで故障するおそれがあります。
 ・ケーブル・コネクタに負荷がかからない状態で配線してください。

- ・スマートカメラにデータを保存中に電源をOFFしないでください。メモリ上のデータが破損し、次に起動したとき正常に
- 動作しません。 電源をOFFするときは、以下のように保存処理が完了したことを確認後、操作を行ってください。 スマートカメラを操作して保存処理を行ったとき:保存処理が完了し、次の操作が可能になっていること。 通信コマンドで保存処理を実行したとき。該当コマンドの処理完了となったことやBUSYがOFFしていること
- ロー・シーンドはたぜたまたコレンにときがヨーンパンプを用してなったことやBUSIがOFFしていること。 ・部分やコネクタ内部の信号線に触れる場合は、静電気による破損を防ぐため、リストストラップなどを使用して帯 ・止措置を行ってください。
- るの正相違いていていていた。 小処理を実行中であることを示すメッセージが画面に表示されているときは、電源をOFFしないでください。メモリ上のデ ータが破損し、次に起動したとき正常に動作しません。
- ークが吸損し、(れに絶知したこれに加い動作しまれ)。 ケーブル装着は端子を合わせて見っ直く装着してください。無理に装着をすると端子が曲がり、故障や正しく通信で きなくなる可能性があります。 ・ケーブル気を着脱するときは、必ずユニット本体や接続している周辺機器の電源を切ってください。電源を供給して いる状態で、ケーブルを接続すると、ユニット本体または周辺機器の破損の原因になります。
- いの状態に、パーフルとすない。3.2000年10月10日にないになった。 3.保守点検について ・お手入れをするときは、電源を切って、安全を確認してから行ってください。 ・本製品の清掃には、シンナー、アルコール、ペンジン、アセレ、灯油類は使用しないでください。 4.上位機器との通信について ・本製品の起動を確認後、上位機器との通信を行ってください。また、本製品の起動時は、上位インターフェースから不 にはなって、知識動を確認といった。 本製品の起動を確認後、上位機器との通信を行ってください。また、本製品の起動時は、上位インターフェースから不 にはなって、知識動を確認となって、知識動をないた。 は、ビージョンマングを見まれた。 などのの気気になって、 などの気気になって、 などの気気になって、 などの気気になって、 などの気気になって、 などの気気になって、 などのないでください。 ・

- 定な信号が出る可能性がありますので、初期動作時はご使用機器の受信バッファをクリアするなどの処置を実施してくだれい。
- いことでは、 5.7ェールセーフ対策について ・スマートカメラの計測結果を利用して、ステージやロボットを動作させる場合(キャリプレーション、アライメント計測による 軸移動量出力)は、必ずステージやロボット側で、計測結果からのデータと、ステージやロボットの可動範囲であることを 確認後、動作させるなどのフェールセーフ対策を施してください。



No.	名称		説明	
(1)	スマートカメラコネクタ部		FHV7シリーズを接続します。(専用ケーブル:形FHV-VU□)	
(2)	電源·接地端子	台	24V電源/接地線を接続します。	
(3)	入出力表示灯	POWER	電源投入時に緑色に点灯します。	
		ERROR	エラー発生時に赤色に点灯します。	
		RUN	RUN 信号出力を、ON と設定したレイアウトに切り替えたときに緑色に点灯します。	
		BUSY	スマートカメラと接続準備中、またはスマートカメラ接続中に緑色に点灯します。	
		CAMERA	スマートカメラ接続中に黄色に点灯します。スマートカメラ接続準備中に黄色に点滅します。	
		OR	総合判定結果がON時に黄色に点灯します。	
(4)	パラレル/0コネクタ部		同期センサ、プログラマブルコントローラ等の外部機器と接続します。左:CN1、右:CN2	
(5)	DINレール取付	部	本体のDINレールへのはめ込み部です。	
(6)	スライダ		本体をDINレールに固定するときに使用します。	
(7)	EtherCATアド	レス設定ボリューム	EtherCAT通信機器としての局アドレス設定(00~255)に使用します。	
(8)	パラレル/0コ	ネクタ部	同期センサ、プログラマブルコントローラ等の外部機器と接続します。	
(9)	EtherCAT	ECAT RUN	EtherCAT通信可能時に緑色に点灯します。	
	表示灯	LINK/ACT IN	EtherCAT通信機器をINコネクタに接続したとき緑色に点灯、通信時に緑色に点滅します。	
		LINK/ACT OUT	EtherCAT通信機器をOUT コネクタに接続したとき緑色に点灯、通信時に緑色に点滅します。	
		ECAT ERROR	EtherCAT通信異常時に赤色に点灯します。	
	EtherCAT通信	『用接続コネクタ(IN)	EtherCATマスタ、または他のスレーブ機器のOUTコネクタと接続します。	
	EtherCAT通信	『用接続コネクタ(OUT)	EtherCATの他のスレーブ機器のINコネクタと接続します。	

※付属品:取扱説明書(本書)、コンプライアンスシート ※本製品をスマートカメラと接続すると、RS-232C通信ができなくなります。

# ■ 入力回路

項目	仕様			
対象信号	DSA/DI0~7	STEP/ENCTRIG_A/B/Z		
入力電圧	DC24V±10%	DC24V±10%		
ON電圧 *1	最小8.8V	最小8.8V		
ON電流 *1	最小5mA	最小5mA		
OFF電圧 *2	最大1.1V	最大0.8V		
OFF電流 *2	最大0.5mA	最大0.5mA		
ONディレイ	5ms以下	0.1ms以下		
OFFディレイ	0.7ms以下	0.1ms以下		
内部回路図 (NPN接続時)	COM IN +」  各入力端子			
内部回路図 (PNP接続時)	+	各入力端子		

\*1 OFF→ON 状態にさせる電流値または電圧値のことです。ON 電圧の値は、COMIN と各入力端子間の電位差となります。 \*2 ON→OFF 状態にさせる電流値または電圧値のことです。OFF 電圧の値は、COMIN と各入力端子間の電位差となります。

重要

チャタリング対策について スマートカメラにはチャタリング対策機能が誤けられていますが、100ッ。以上のチャタリング発生時は、チャタリングによる誤入力を防止できません。 (100/ss 表面の人力信号の変化は無限とれます。人力信号は100/ss 以上同じレベルを保持た場合に確定されます。)人力信号の変化は無限とれます。人力信号は100/ss 以上同じレベルを保持た場合に確定されます。)人力信号の変化は無限とれます。人力信号は100/ss 以上同じレベルを保持た場合に確定されます。)人力信号の変化は無限とれます。

### ■ 出力回路



\*1 負荷電流は指定された電流値以下でご使用ください。指定された電流値を超えると出力回路が破損する原因になります。 \*2 RUN/READY/BUSY/OR/ERROR 信号をご使用の時は、COMOUTO 端子を接続してください DSA/DO1~7をご使用の時は、COMOUT2端子を接続してください。

DO8~15をご使用の時は、COMOUT3 端子を接続してください。

\*3 STGOUT/SHTOUT 信号をご使用の時は、COMOUT1 端子および COMIN0 端子を接続してください。

#### ■ 配線



EtherCAT通信用接続コネクタ(OUT

■パラレルI/O電線の取り付け方法 ①緑色のコネクタ左側の四角部にマイナスドライバを差し込みます。 ②緑色のコネクタ右側の丸部に対応した電線サイズの電線を差し込みます。

③マイナスドライバを引き抜きます。

レル1/0電線の取り外し方法

■パラレルパクを走側の四角部にマイナスドライバを差し込みます。 ②緑色のコネクタ左側の四角部にマイナスドライバを差し込みます。 ②緑色のコネクタ右側の丸部に対応した電線サイズの電線を取り外します。 ③マイナスドライバを引き抜きます。

# ■ EtherCAT通信用接続コネクタ

#### ●ケーブル

ストレートLANケーブルを接続します。 カテゴリ5e以上のSTPケーブルで、アルミテープと編組で二重遮蔽されたものを使用してください

#### ●入出力コネクタ

RJ45の8ピンモジュラコネクタで、カテゴリ5e以上のシールド対応のものを使用してください。

`	 HUV
	_ر _۲

・ピン配列

ピンNo.	信号名	略称	信号方向
1	送信データ+	TD+	出力
2	送信データー	TD-	出力
3	受信データ+	RD+	入力
4	無接続	NC	-
5	無接続	NC	-
6	受信データー	RD-	入力
7	無接続	NC	-
8	無接続	NC	-
コネクタ フード	保安用接地	FG	-

#### ●配線

ケーブル長は最大100mです。

ただしケーブルによっては100mを保証していないものもあります。一般的に導体がより線の場合は単線より伝 送性能が悪くなり100mを保証できません。詳細はケーブルメーカーに確認してください。

ピン番号	ワイヤ色	ワイヤ色	ピン番号
1	ホワイト・グリーン	ホワイト・グリーン	1
2	グリーン	グリーン	2
3	ホワイト・オレンジ	ホワイト・オレンジ	3
4	ブルー	ブルー	4
5	ホワイト・ブルー	ホワイト・ブルー	5
6	オレンジ	オレンジ	6
7	ホワイト・ブラウン	ホワイト・ブラウン	7
8	ブラウン	ブラウン	8
コネクタフード	シールド線	シールド線	コネクタフード

※ケーブルのシールドは両端共、コネクタフードに接続して下さい。

※結線方法は上記のとおりT568A方式としてください。

#### ■ DINレールへの取り付け

取り付け方法 1.スマートカメラデータユニットのスライダを上側に押し込みます。

2.スマートカメラデータユニットの上側のツメをDINレールに引っ掛けます。 3.スマートカメラデータユニットの下側のツメが"カチッ"と鳴るまで押し込みます。

重要
・DINレール上のスマートカメラデータユニットの両脇にエンドプレート(別売)を取り付けてください。
・必ず上側のツメを先にDINレールに引っ掛けてセンサデータユニットを取り付けてください。下側
のツメを先にDINレールに引っ掛けると、取付け強度が低下します。 取外し方法

1.スマートカメラデータユニットのスライダを下に引きます。 2.スマートカメラデータユニットの下側から持ち上げて、DINレールから外します。

### ■ 参照マニュアル

以下のマニュアルをご参照ください。			
No.	形式	マニュアル名称	
SDNC-736	形FHV7〇-〇〇〇〇	セットアップマニュアル	

# ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従いまして、次に 掲げる用途での使用を意図しておらず、お客様が当社商品をこれらの用途に使用される際 には、当社は当社商品に対して一切保証をいたしません。ただし、次に掲げる用途であって も当社の意図した特別な商品用途の場合や特別の合意がある場合は除きます。

- (a) 高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・宇宙設備、鉄 道設備、昇降設備、娯楽設備、医用機器、安全装置、その他生命・身体に危険が及び うる田途
- (b) 高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24時間連続運転 システム、決済システムほか権利・財産を取扱う用途など)
- (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚染を被る設備、 電磁的妨害を被る設備、振動・衝撃を受ける設備など)
- (d) カタログ等に記載のない条件や環境での用途
- \*(a)から(d)に記載されている他、本カタログ等記載の商品は自動車(二輪車含む。以下同 じ)向けではありません。自動車に搭載する用途には利用しないで下さい。自動車搭載用 商品については当社営業担当者にご相談ください。
- \*上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新版 のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー ●製品に関するお問い合わせ先 お客様相談室 **1日 ブリー 01 20-919-066** 携帯電話・PHS・IP電話などではご利用いただけませんので、下記の電話番号へおかけください。 電話 055-982-5015(通話料がかかります) ーオムロンFAクイックチャット www.fa.omron.co.jp/contact/tech/chat/ 技術相談員にチャットでお問い合わせいただけます。 (i-Webメンバーズ限定) ■営業時間:9:00~17:00 (土曜日、日曜日、12月31日~翌年1月3日を除く ●FAXやWebページでもお問い合わせいただけます。 FAX 055-982-5051 / www.fa.omron.co.jp ●その他のお問い合わせ 納期・価格・サンプル・仕様書は貴社のお取引先、または貴社 担当オムロン販売員にご相談ください。 オムロン制御機器販売店やオムロン販売拠点は、Webページで ご案内しています。 A区 2024年12月

# OMRON

# Model FHV-SDU

# Smart Camera Data Unit

# **INSTRUCTION SHEET**

Thank you for selecting OMRON product. This sheet primarily describes precautions required in installing and operating the product.

Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your convenience, keep the sheet at your disposal.

Manufacturer:

Omron Corporation,

Kyoto 600-8530 JAPAN

Shiokoji Horikawa, Shimogyo-ku,

TRACEABILITY INFORMATION:

Importer in EU:

Omron Europe B.V. Wegalaan 67-69

2132 JD Hoofddorp, The Netherlands

The following notice applies only to products that carry the CE mark: Notice:

This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

Regulation of KC marking

Please see the following URL for Korean KC mark compliance information. http://www.rra.go.kr/selform/OMR-FHV-SDU10 http://www.rra.go.kr/selform/OMR-FHV-SDU30

X Dispose of in accordance with WEEE Directive 

© OMRON Corporation 2019-2025 All Rights Reserved.

# SAFETY PRECAUTIONS

#### Keys to Warning Symbols

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

Warning Symbols

# \land WARNING

This product must be used according to the instruction manual. Failure to observe this may result in impairment of functions and performance of the product.	$\triangle$
Do not use the product to directly or indirectly detect a human body for the purpose of ensuring safety. For such a safety purpose, use safety sensors listed on Omron's sensor catalog.	$\bigcirc$
Never connect the AC power supply with this product. When the AC power supply is connected, it causes the electric shock and a fire.	
Please take external safety measures so that the system as a whole should be on the safe side even if a failure of a Sensor or an error due to an external factor occurred.	$\triangle$
Please take fail-safe measures on your side in preparation for an abnormal signal due to signal conductor disconnection and/or momentary power interruption. An abnormal operation may result in a serious accident.	

# Precautions for Safe Use

Please observe the following precautions for safe use of the products. 1. Installation Environment -Do not use the product in areas where flammable or explosive gases are present. -Do not install the product close to high-voltage devices and power devices in order to secure the safety of operation and maintenance.

operation and maintenance.
-Avoid installation in a place exposed to vibration as much as possible.
-Do not install the product near to a device causing noises. If the product is installed in a noisy environment and operational errors are caused, be sure to take shielding measures.
2. Power Supply and Wiring
-Make sure to use the product with the power supply voltage specified. If a DC voltage exceeding the rating or an AC values are analised the instrument be burned to available.

voltage is applied, the circuit parts may be burnt or explode

-Do not connect the power supply with polarity reversed. -Use a DC power supply with safety measures against high-voltage spikes (safety extra low-voltage circuits on the secondary side).

-Use an independent power source for this product. Do not use a shared power source. Never apply more than the rated voltage or AC power supply to this product. It may cause malfunction.

The recommended power supply is as follows: When attaching the lighting module,

use S8VK-G12024 (OMRON) or S8VS-12024 (OMRON)

use SSVK-G12024 (UMRCN) or 36 vortuger (UMRON). When not attaching the lighting module, use SSVK-G06024 (UMRON) or SSVS-06024 (OMRON). -Wire high-voltage cables or power cables separately from the cables of this product. If the same cable or duct is used, the product may receive induction and it may cause malfunctioning or breakage. -Do not short-circuit load on the open collector output. Arabit load not exceeding the rating.

-Do not short-circuit load on the open collector output.
 -Apply load not exceeding the rating.
 -When wiring, put a crimp terminal of the specified size. Do not connect cables just twisted together to the power supply or terminal block directly.
 -Cut off unnecessary signal cables so that they do not contact any other signal cables.
 -After wiring the cables, confirm if the power supply is appropriate, if there is miswiring such as short-circuit of load, if the load current is appropriate, and iFG is connected appropriately. Otherwise, the product may be broken due to miswiring etc.
 -The FG wire of the SDU main body must be IJS class-D grounded (ground resistance of 100Ω or less).
 Do not share the ground wire with some other device or connect it with the optical axis of the building. The product may be adversely affected.

-Determine the contact point as near as possible to shorten the ground wire as much as possible. The product may be adversely affected.

- Noninting -Do not apply torsional stress to the cable. Doing so may cause cable breakage. -Secure the minimum bending radius of the cable. If it cannot be secured, the cable may be broken.

4. Others Do not use other cables than dedicated data unit cable (FHV-VU) and parallel I/O cable (XW2Z-S013-), XW2Z-)

-Do not use other cables than dedicated data unit cable ('HV-VU\_) and parallel I/O cable (XW2Z-S013-\_\_\_, XW2Z-\_\_\_\_\_)
 EE). Otherwise, the product may malfunction or be broken.
 If anything abnormal occurs, for example, strange smell/sound is detected, the main unit gets very hot, or a smoke comes, stop using the product, turn OFF the product, and consult OMRON's branch or sales office.
 -Do not touch the terminal section while power is ON. Otherwise an electric shock may occur.
 -When disposing of the product, treat as industrial waste.
 Durated the use that we done work of the product is not a sufficient of the product.

-wnen disposing of the product, treat as industrial waste.
 -Do not use the product for atomic power or safety circuits endangering human lives.
 -The case is hot while power is supplied or directly after the power is turned OFF. So, do not touch it.
 -Do not drop the product or expose it to abnormal vibration or impact. Doing so may result in Unit malfunction or burning.
 -If using the measurement result of the smart camera to operate the stage or robot (output of axis moving distance by calibration and alignment measurement), be sure to take failsafe measures externally.

# **Precautions for Correct Use**

- In order to prevent the product from becoming inoperable or malfunction, and to prevent other adverse effects to the performance or equipment, please observe the following. 1. An installation location that meets the following conditions.
- An installation location that meets the following conditions.
   A location where the ambient temperature does not exceed the rated range (operating: 0 to 40°C, storage: -25 to 65°C).
   A location where the temperature does not exceed a range of 35-85%RH.
   A location not exposed to corrosive gases or combustible gases.
   A location not exposed to dust, salt, or metal powder.

- A location not exposed to direct vibration or impact. A location not exposed to strong disturbance light (laser light, arc welding light, or ultraviolet light).

- hight, or ultraviolet ignt). A location not near a heating appliance or exposed to direct sunlight. A location not exposed to mist of water, oil, or chemicals or misty atmo A location not exposed to strong magnetic/electric fields. A location not near a high-voltage device or power device
- Power supply, connection, and wiring

   If using a commercially available switching regulator, earth the frame ground terminal.

-It using a commercially available switching regulator, earth the traine ground terminal.
 -If the power supply line has surge, connect a surge absorber according to the operational environment to use the product.
 -After wiring the cables, confirm if the power supply is appropriate, if there is miswiring such as short-circuit of load, or if the load current is appropriate. Otherwise, the product may be broken due to miswiring etc.
 -Do not put load on the cables and connectors before wring them.
 -Do not turn OFF the power supply while data are being saved in the smart camera. Otherwise, data on the memory is broken, so the method deprot terms the super theme the servet form.

so the product does not operate normally when started up next time.

When turning OFF the power, confirm that data have been saved completely before starting operations

When turning OFF the power, continuum that data have been saved completely before starting operations. - When data are saved by operating the sensor controller, the saving process must have been completed and the following user operations must be possible. - When data are saved using communication commands, processing of the applicable commands must have been completed and the busy state is OFF. -If contacting a terminal or a signal cable inside the connector, use a wrist strap to take antistatic measures to prevent breakage diseated network instruction.

due to static electricity. When a message indicating that processing is being executed is displayed on the screen, do not turn OFF the power. Otherwise data on the memory is broken, so the product does not operate normally when started up again. Attach the cable straight with the terminal correctly aligned. Forcibly attaching the cable may bend the terminal, resulting in

Attach the cards statight with the terminal concerns and the rotory anathing the cards may bend the terminal, resulting in failure or communication error. Make sure to turn off power of the main unit and connected peripheral devices before attaching/detaching a cable. Connecting a cable while power is on may result in a damage of the main unit and/or peripheral devices. -Make sur

- Turn OFF the power and confirm safety before starting maintenance
- -Do not use thinner, alcohol, benzene, acetone, or kerosene to clean his product.

-Do not use fininer, alcohol, benzene, acetone, or kerösene to clean his product.
4. Communication with upper equipment
-Implement communication with upper equipment after confirming that this product has been started up. In addition, when this product is being started up, unstable signals may be issued by the upper interface. So, if operating this product initially, take action such as clearing the receiving buffer of the equipment used.
5. Failsafe measures

-If operating a stage or robot using the measurement result of the smart camera (axis moving distance output by the calibration or alig or alignment measurement), take measures as follows: Be sure to operate the stage or robot after confirming the measurement result data on the stage or robot side that the data are within the movable range of the stage or robot.

# Part Names and Functions



			(0)		
	FHV-SDU	10 Front	FHV-SDU10 Back	FHV-SDU30 Front	
No.	Name		Description		
(1)	Smart camera	connector block	Connect the FHV7 series. (Dedicate	ed cable:FHV-VU )	
(2)	Power supply/gr	ounding terminal block	Connect the 24V power supply/gro	unding wire.	
(3)	Input/output	POWER	Turns green when power is turned (	DN.	
	indicator	ERROR	Turns red when an error occurs.		
		RUN	Turns green when switched to the layou	t in which the RUN signal is configured as ON.	
		BUSY	Turns green while preparing connection	or being connected to the smart camera.	
		CAMERA	Turns yellow while the sensor is connected. Flash	es yellow while preparing connection to the smart camera.	
		OR	Turns yellow when the total judgment result is OK.		
(4)	Parallel I/O connector section		Used to connect to external devices such as a synchronized sensor and programmable controller. Left: CN1, Right: CN2		
(5)	DIN rail mount		A mount to which the Unit's DIN rail is mounted.		
(6)	Slider		Used to secure the Unit to the DIN rail.		
(7)	EtherCAT addr	ess setting switch	Used to configure the station address setting	(00 - 255) of an EtherCAT communications device.	
(8)	Parallel I/O co	nnector section	Used to connect to external devices such as	a synchronized sensor and programmable controller.	
(9)	EtherCAT	ECAT RUN	Turns green when EtherCAT comm	unication is available.	
	LINK/ACT OUT		Turns green when an EtherCAT communications device is c	onnected to the IN connector and flashes green while communicating.	
			Turns green when an EtherCAT communications device is co	nnected to the OUT connector and flashes green while communicating.	
			Turns red when an EtherCAT comm	nunications error occurred.	
	EtherCAT commun	ications connector (IN)	Used to connect to the OUT connector	of the EtherCAT master or other slave devices.	
	EtherCAT communications connector (OUT)		Used to connect to the IN connecto	or of other EtherCAT slave devices.	
* Acce	ssories: Instructi	on Sheet (this docum	ent) Compliance Sheet		

\* When this product is connected to the smart camera, RS-232C communications is not available

# Input circuit

Item	Specifications		
Applicable signal	DSA/DI0 to 7	STEP/ENCTRIG_A/B/Z	
Input voltage	24 VDC±10%	24 VDC±10%	
ON voltage *1	8.8V min.	8.8V min.	
ON current *1	5 mA min.	5 mA min.	
OFF voltage *2	1.1 V max.	0.8 V max.	
OFF current *2	0.5 mA max.	0.5 mA max.	
ON delay	5 ms max.	0.1 ms max.	
OFF delay	0.7 ms max.	0.1 ms max.	
I/O circuit diagrams (NPN)	+_ _		
I/O circuit diagrams (PNP)	+_^		

\*1 ON voltage/ON current A voltage value or current value that turn the input from OFF to ON. An ON voltage value is a potential difference between COMIN and input terminals. \*2 OFF voltage/OFF current

A voltage value or current value that turn the input from ON to OFF. An OFF voltage value is a potential difference between COMIN and input tern



hancemp countermeasure he smart camera has a chattering prevention function but incorrect input due to chattering cannot be prevented when chattering of 100 µs or nger occurs. (A change of an input signal less than 100 µs is ignored. An input signal is determined if it keeps a certain level for 100 µs or nger) It is recommended to use a non-contact signal (SSR, PLC transistor output) as an input signal. If a contact signal (relay) is used, it

# Output circuit



1 Use load current of the specified amperage or lower. If the specified amperage is exceeded, the output circuit may be broken. \*2 To use RUN/READY/BUSY/OR/ERROR signal, connect COMOUT0 terminal

To use DSA/DO1-7, connect COMOUT2 terr To use DO8-15, connect COMOUT3 terminal.

\*3 To use STGOUT/SHTOUT signals, connect COMOUT1 and COMIN0 terminals

# Wiring



#### EtherCAT interface (FHV-SDU30)



How to install parallel I/O wire 1. Insert the flathead screwdriver into a square opening in the left of the green connector. 2. Insert a wire of the proper size for a hole in the right of the green connector. Pull out the flathead screwdriver.

#### How to detach parallel I/O wire

Insert the flathead screwdriver into a square opening in the left of the green connector Remove the wire of the proper size for a hole in the right of the green connecto
 Pull out the flathead screwdriver.

# EtherCAT Interface

Cable

Connect a straight LAN cable. Use an STP cable of category 5e or higher, which is shielded double with an aluminum tape and a braided cord

#### I/O Connector

Use an 8-pin shielded RJ45 modular connecter of category 5e or higher

D' ' '			,	<u> </u>
<ul> <li>Pin assignment</li> </ul>	Pin No.	Signal name	Abbreviation	Signal direction
	1	Transmission data +	TD+	Out
	2	Transmission data -	TD-	Out
	3	Reception data +	RD+	In
	4	Not connected	NC	-
	5	Not connected	NC	-
	6	Reception data -	RD-	In
	7	Not connected	NC	-
	8	Not connected	NC	-
	Connector hood	Security ground	FG	-

#### Wiring

The cable is maximum 100m long. However, some cables do not guarantee 100m. If conductor is a twisted cable, transmission performance generally becomes worse than that of straight cables, so that 100m cannot be guaranteed. For details, contact the cable manufacture

3				
Pin No.	Wire color		Wire color	Pin No.
1	White · Green	$\vdash$	White · Green	1
2	Green		Green	2
3	White · Orange	]	White · Orange	3
4	Blue		Blue	4
5	White · Blue		White · Blue	5
6	Orange	]	Orange	6
7	White · Brown	]	White · Brown	7
8	Brown	┝───┼┦	Brown	8
Connector hood	Shielded cable		Shielded cable	Connector hood

\* Connect both ends of the cable shield with the connector hood. \* Use the T568A wiring method as mentioned above.

# Mounting to DIN rail

Mounting the Smart Camera Data Unit 1.Push the slider of the Smart Camera Data Unit into the upper side. 2.Hang the hook of the upper side of the Smart Camera Data Unit on the DIN rail. 3.Push it until the hook of the lower side of the Smart Camera Data Unit clicks. Important Mount the end plate (sold separately) on both sides of the Smart Camera Data Unit on the DIN rail.

Be sure to hang the upper side hook on the DIN rail first before mounting the Smart Camera Data Unit, Hanging the lower side hook on the DIN rail first reduces the mounting strength.

Removing the Smart Camera Data Unit 1.Pull down the Smart Camera Data Unit slider. 2.Lift the Smart Camera Data Unit from the bottom to remove it from the DIN rail.

#### Relevant Manuals

No.	Model	Manual name
Z408	FHV70-000	Setup Manual



# Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buver's application, product or system. Buyer shall take application responsibility in all cases

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

OMRON Corporation Industrial Automation Company Kyoto, JAPAN Contact: www.ia.omron.com
Regional Headquarters
OMRON EUROPE B.V. Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388
OMRON ELECTRONICS LLC 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787
OMRON ASIA PACIFIC PTE. LTD. 438B Alexandra Road, #08-01/02 Alexandra Technopark,Singapore 119968 Tel: (65) 6835-3011 / Fax: (65) 6835-3011
OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-6023-0333 / Fax: (86) 21-5037-2388
D(U) Dec, 2024