
# **OMRON**

## **Smart Camera**

**FQ2-S/CH Series** 

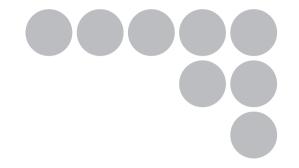

# **User's Manual**



## Introduction

Thank you for purchasing the FQ2-S/CH.

This manual provides information regarding functions, performance and operating methods that are required for using the FQ2-S/CH.

When using the FQ2-S/CH, be sure to observe the following:

- The FQ2-S/CH must be operated by personnel knowledgeable in electrical engineering.
- To ensure correct use, please read this manual thoroughly to deepen your understanding of the product.
- Please keep this manual in a safe place so that it can be referred to whenever necessary.

#### NOTE

- All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.
- No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

#### **Trademarks**

Sysmac and SYSMAC are trademarks or registered trademarks of OMRON Corporation in Japan and other countries for OMRON factory automation products.

- Microsoft, Windows, Windows Vista, Excel, and Visual Basic are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Intel, Core and Pentium are trademarks of Intel Corporation in the U.S. and/or other countries.
- ODVA, CIP, CompoNet, DeviceNet, and EtherNet/IP are trademarks of ODVA.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- MELSEC is trademark of Mitsubishi Electric Corporation.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

#### Copyrights

Microsoft product screen shots reprinted with permission from Microsoft.

## **User's Manual**

(Please Read)	
Introduction	1
Installation and Connections	2
Taking Images	3
Setting Up Inspections	4
Testing and Saving Settings	5
Operation	6
Convenient Functions	7
Troubleshooting	8
Appendices	9

### **Terms and Conditions Agreement**

#### Warranty, Limitations of Liability

#### Warranties

#### **Exclusive Warranty**

Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

#### Limitations

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.

#### **Buyer Remedy**

Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

#### Limitation on Liability; Etc

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### **Application Considerations Warranties**

#### Suitability of Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **Programmable Products**

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### **Disclaimers**

#### **Performance Data**

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

#### **Change in Specifications**

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

#### **Errors and Omissions**

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

## **Meanings of Signal Words**

The following signal words are used in this manual.



Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

## **Meanings of Alert Symbols**

The following alert symbols are used in this manual



The filled circle symbol indicates operations that you must do.

The specific operation is shown in the circle and explained in text.

This example shows a general precaution for something that you must do.



Indicates general prohibitions for which there is no specific symbol.



Indicates the possibility of laser radiation.



Indicates the possibility of explosion under specific conditions.



Indicates prohibition when there is a risk of minor injury from electrical shock or other source if the product is disassembled.

## **. ∴** WARNING

Anti-virus protection

Install the latest commercial-quality antivirus software on the computer connected to the control system and maintain to keep the software up-to-date.



#### Security measures to prevent unauthorized access

Take the following measures to prevent unauthorized access to our products.

- Install physical controls so that only authorized personnel can access control systems and equipment.
- Reduce connections to control systems and equipment via networks to prevent access from untrusted devices.



- Set strong passwords and change them frequently.
- Scan virus to ensure safety of USB drives or other external storages before connecting them to control systems and equipment.

#### Data input and output protection

Validate backups and ranges to cope with unintentional modification of input/output data to control systems and equipment.

- · Checking the scope of data
- Checking validity of backups and preparing data for restore in case of falsification and abnormalities



 Safety design, such as emergency shutdown and fail-soft operation in case of data tampering and abnormalities

#### Data recovery

Backup data and keep the data up-to-date periodically to prepare for data loss.



When using an intranet environment through a global address, connecting to an unauthorized terminal such as a SCADA, HMI or to an unauthorized server may result in network security issues such as spoofing and tampering.



You must take sufficient measures such as restricting access to the terminal, using a terminal equipped with a secure function, and locking the installation area by yourself.

When constructing an intranet, communication failure may occur due to cable disconnection or the influence of unauthorized network equipment.



Take adequate measures, such as restricting physical access to network devices, by means such as locking the installation area.

When using a device equipped with the USB flash drive or SD Memory Card function, there is a security risk that a third party may acquire, alter, or replace the files and data in the removable media by removing the removable media or unmounting the removable media. Please take sufficient measures, such as restricting physical access to the Controller or taking appropriate management measures for removable media, by means of locking the installation area, entrance management, etc., by yourself.



This product is not designed or rated for ensuring safety of persons. Do not use it for such purposes.



The Sensor emits visible light, which may adversely affect the eyes in rare instances. Do not look directly into the light emitted from the Sensor. When the subject is a specular reflective object, protect your eyes from reflected light.



A lithium ion battery is built into the Touch Finder and may occasionally combust, explode, or burn if not treated properly.



Dispose of the Touch Finder as industrial waste, and never disassemble, apply pressure that would deform, heat to 100 °C or higher, or incinerate the Touch Finder.



High-voltage parts inside; danger of electrical shock. Do not open the product cover.

### Precautions for Safe Use

The following points are important to ensure safety, so make sure that they are strictly observed.

#### 1. Installation Environment

- Do not use the product in environments where it can be exposed to inflammable/explosive gas.
- To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
- Install the product in such a way that its ventilation holes are not blocked.
- · Tighten mounting screws at the torque specified in this manual.

#### 2. Power Supply and Wiring

- The power supply voltage must be within the rated range (24 VDC ±10%), and an AC voltage must not be used.
- · Reverse connection of the power supply is not allowed. Do not short the load of the open collector output.
- The load must be within the rated range.
- High-voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- · Use the products within the power supply voltages specified in this manual.
- Use the specified size of crimp terminals to wire connections. Do not connect wires that have been simply twisted together directly to the power supply or terminal block.
- · Use a DC power supply with safety measures against high voltages (safety extra low-voltage circuit).
- Use independent power sources for the products. Do not use a shared power source.
- Tighten mounting screws at the torque specified in this manual.
- · Always turn OFF the power supply before connecting or disconnecting cables or the power supply wiring.

#### 3. Battery

- · Do not short the positive and negative terminals of the Battery.
- Do not use the Touch Finder in an environment that exceeds the operating temperature range of the Battery. If the Touch Finder is used at temperatures that exceed the operating temperature range, the protective device may activate and prevent charging.
- Do not connect the Battery directly to a power supply or car cigarette lighter socket.
- Do not use the Touch Finder with any other type of battery.
- Turn OFF the power supply immediately if the Battery leaks or produces an odor. Electrolyte leaked from the Battery may ignite, possibly causing smoke, rupture, or fire.
- If during usage, charging, or storage, the Battery produces an odor, heats, becomes discolored, becomes
  misshapen, or exhibits any other unusual conditions, remove it and do not use it. Continuing to use such a
  Battery may result in the Battery heating, smoking, rupturing, or igniting.
- If the Touch Finder (FQ2-D31) will be installed permanently or semi-permanently, remove power supplies other than the Battery (FQ-BAT1). If the rated temperature is exceeded with the Battery inserted, the protective circuit may activate and stop the Touch Finder.

#### 4. AC Adapter

- Use an AC cable that is suitable for the power supply and power voltage you are using.
- Do not touch the power plug with a wet hand. Doing so may result in electrical shock.
- If you notice an abnormal condition, such as smoke, abnormal heating of the outer surface, or a strange odor, immediately stop using the AC Adapter, turn OFF the power, and remove the power plug from the outlet.
  - Consult your dealer, as it is dangerous to attempt to repair the AC Adapter yourself.
- If the AC Adapter is dropped or damaged, turn OFF the power, remove the power plug from the outlet, and contact your dealer. There is a risk of fire if you continue using the AC Adapter.

#### 5. Handling

· Connector Cover

Always attach the connector cover when you disconnect the cable. If you do not attach the connector cover, foreign matter may enter the connection, causing malfunctions or damage.

· Lens Cap

Always attach a C-mount lens cap to the lens mount when you remove the lens. If dust or dirt adhere to the imaging elements, false detection or failure may occur.

· Sensor Waterproof Sheets

Do not remove or damage the waterproof sheets on the sides of the Sensor. Doing so may allow dust, dirt, or water drops to enter the Sensor and damage it.

#### 6. EMC Standard

- EU Directive 2014/30/EU
- FN61326-1
- Electromagnetic environment : Industrial electromagnetic environment(EN/IEC 61326-1 Table 2)
- The following condition is applied to the immunity test of this product: If the level of disturbance of the video is such that characters on the monitor are readable, the test is a pass.

#### 7. Other

- Do not use this product in safety circuits associated with nuclear power and human life.
- Do not disassemble, repair, modify, deform by pressure, or incinerate this product.
- · Dispose of this product as industrial waste.
- If you notice an abnormal condition, such as a strange odor, extreme heating of any product, or smoke, immediately stop using the product, turn OFF the power, and consult your dealer.
- The Sensor surfaces become hot during use. Do not touch them.
- · Do not drop or subject the products to shock.
- Use the special Sensor (FQ2-S/CH), Touch Finder (FQ2-D), Sensor Data Unit (FQ-SDU), Cables (FQ-WN, FQ-WD, FQ-WU, and FQ-VP), Battery (FQ-BAT1), and AC Adapter (FQ-AC). Using other than the specified products may cause fire, burning, malfunction or failure.
- If the product has a lock mechanism, always make sure it is locked before using the product.

### **Precautions for Correct Use**

Observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on product performance.

#### 1. Installation Site

Do not install this product in locations subjected to the following conditions:


- · Ambient temperature outside the rating
- Rapid temperature fluctuations (causing condensation)
- Relative humidity outside the range of 35 to 85%
- · Direct vibration or shock
- · Strong ambient light (such as other laser beams, light from arc-welding machines, or ultraviolet light)
- · Direct sunlight or near heaters
- · Strong magnetic or electric field

Also, do not install this product in locations subjected to the following conditions to ensure its protective performance as described in the specifications:

- Presence of corrosive or flammable gases
- · Presence of dust, salt, or iron particles
- · Water, oil, or chemical fumes or spray, or mist atmospheres

Installing and Using a Sensor with Built-in Lighting

- The front-panel plate may occasionally become fogged from the inside if the Sensor is used in location with high humidity and the temperature changes drastically.
- Do not install any objects except for the special mounting brackets within the dotted lines in the following figure. The front-panel plate may become fogged from the inside.

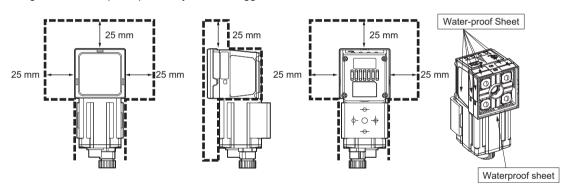

#### 2. Power Supply, Connection, and Wiring

- When using a commercially available switching regulator, make sure that the FG terminal is grounded.
- If surge currents are present in the power lines, connect surge absorbers that suit the operating environment.
- Before turning ON the power after the product is connected, make sure that the power supply voltage is correct, there are no incorrect connections (e.g. load short-circuit) and the load current is appropriate. Incorrect wiring may result in breakdown of the product.
- · For cables, use only the special products specified in this manual.
- Do not subject the Cables to twisting stress. Doing so may damage the Cables.
- Always turn OFF the power supply before connecting or disconnecting Cables. The Sensor may fail if a
  Cable is connected or disconnected while power is being supplied.

p.573, p.574, p.576

- Use only combinations of the Sensor and Touch Finder specified in this manual. Using other combinations
  may cause malfunction or damage.
- Do not turn the power OFF in the following instances. Doing so will damage data that is in the process of being saved.

- While data is being saved in internal memory
- While data is being saved on the SD card
- The LCD panel has been made using precision technology, and sometimes a few pixels are missing in the panel. This is due to the structure of the LCD panel, and is not a malfunction.
- Influence of Temperature Changes on Optical Axis
   Due to the characteristics of the materials that are used in the Sensor, changes in the ambient temperature
   may cause the center of the optical axis to change by several pixels.
- · Imaging Elements

Due to the specifications of the CMOS image sensors that are used in then Sensor, lines may appear in images for some measurement conditions or gain settings. These do not indicate defects or faults in the Sensor. Also, there may be some pixel defects, but these do not indicate defects or faults in the Sensor.

#### 3. Battery

- Do not use or charge the Battery with other than the specified products.
- · Do not charge the Battery with other than the specified AC adapter.
- · When using the Touch Finder, the battery cover screw must be tightened.

#### 4. AC Adapter

- During maintenance and when not using the Touch Finder for an extended time, remove the power plug from the outlet
- · Do not bend the power cable past its natural bending radius.
- Do not use the AC Adapter with other than the specified products.
- If a voltage higher than 380 V is applied, there is a risk that the capacitor will be damaged, the pressure valve will open, and vaporized gas will be emitted. If there is a possibility that a voltage higher than 380 V will be applied, use a protective device.

#### 5. Maintenance and Inspection

Do not use thinner, alcohol, benzene, acetone or kerosene to clean the Sensor and Touch Finder. If large
dust particles adhere to the Camera, use a blower brush (used to clean camera lenses) to blow them off. Do
not use breath from your mouth to blow the dust off. To remove dust particles from the Camera, wipe gently
with a soft cloth (for cleaning lenses). Do not use excessive force to wipe off dust particles. Scratches to the
Camera might cause error.

#### 6. Warm-up

• Turn ON the power and wait for 30 minutes or more before conducting precise inspection. The circuit is not stable directly after the power is turned ON, so brightness may vary gradually.

#### Product manuals

The information required to use the FQ2-S/CH Series is divided into two manuals by objective: "FQ2-S/CH Series User's Manual" and "FQ2-S/CH Series User's Manual for Communications Settings". Read each manual as appropriate for your objective.

Manual	Description	Contents
(This manual) FQ2-S/CH Series	Describes the product specifications,	Product specifications
User's Manual (Cat. No. Z337)	basic settings, and other information	Connections, wiring
	required to use the FQ2-S/CH Series.	Camera, image adjustment
		Inspection item settings
		Test measurement, operation
		Troubleshooting

Manual	Description	Contents
FQ2-S/CH Series User's Manual for	Provides information required to oper-	System configuration
Communications Settings (Cat. No.	ate the sensor by remote control.	Sensor control method
Z338)		Data input/output specifications
		Connectable network types
		Communication settings
		Output data settings

#### **Editor's Note**

#### ■Meaning of Symbols


Menu items that are displayed on the Touch Finder LCD screen, and windows, dialog boxes and other GUI elements displayed on the PC are indicated enclosed by brackets "[ ]".

#### ■Visual Aids

Indicates points that are important to achieve the full product performance, such as operational precautions.

Note
Indicates application procedures.

Indicates pages where related information can be found.

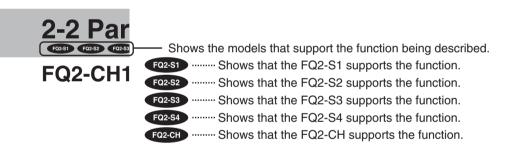

10 FQ2-S/CH User's Manual

# **Contents**

	Terms and Conditions Agreement	2
	Editor's Note	
1. Introduc	tion	
1-1	FQ2-S/CH-series Sensors	22
1-2	Measurement Process	26
	Basic Operational Flow	
	Startup Display and Display Elements	
1-4		
	Startup Display	
	Display Elements	30
2. Installati	on and Connections	
2-1	System Configuration	32
	Part Names and Functions	
	Installation	
20	FQ2-S*****/FQ2-CH1*****-M (Sensors with Built-in Lighting)	
	FQ2-S*-*** (Sensors with C-mounts)	
	Installation Precautions	
	Mounting to DIN Track	
	Mounting to a Control Panel	
	Using the Touch Finder as a Portable Device (with Battery)	
	Mounting to DIN Track	
2-4	Launching the Program for First Time	
	Language settings	
	Time settings	
2-5	Wiring	
	I/O Signal Circuit Diagrams	55
	Power Supply Specifications When a Switching Regulator Is Connected	
	FQ-SDU20/SDU25 RS-232C Pin Signal Names	
2-6	Setting Up Ethernet	
	Connecting to Sensors from the Touch Finder	
	Connecting to Sensors from External Devices Such as PLCs	
	Connecting to Sensors from a Computer Using the PC Tool	

FQ2-S/CH User's Manual

# 3. Taking Images

3-1	Selecting a Sensor for Configuration	74
3-2	Setting Conditions for Taking Images	75
3-3	Adjusting Image Quality	76
	Adjusting the Focus	. 76
	Adjusting Image Brightness with External Lighting	. 77
	Adjusting the Brightness	.77
	Taking Clear Images of Moving Objects	. 82
	Improving the Image Quality of Metallic and other Shiny Surfaces	. 83
	Adjusting the Colors of the Image (White Balance) (Only for Sensors with Col Cameras)	
	Rotating the Touch Finder Image by 180°	. 86
3-4	Adjusting the Timing of Taking Images	87
	Delaying the Image Capture Timing from the Trigger Input	. 87
	Adjusting External Lighting Timing	. 89
	Preventing Mutual Interference of Multiple Sensors	. 89
3-5	Adjusting the Images That Were Taken	91
	Image Adjustment	. 91
	Filtering the Images (Filter Items)	. 93
	Compensating for Position Offset (Position Compensation Items)	102
	lp Inspections	
4-1	Inspection Item Selection Guide	
4-1 4-2	Inspection Item Selection Guide	137
4-1 4-2	Inspection Item Selection Guide	137 138
4-1 4-2	Inspection Item Selection Guide  Setup Procedure for Inspection Items  Configuring Inspection Items.  Adding New Inspection Items	<b>137</b> <b>138</b> 138
4-1 4-2	Inspection Item Selection Guide  Setup Procedure for Inspection Items  Configuring Inspection Items  Adding New Inspection Items  Modifying Existing Inspection Items	<b>137</b> <b>138</b> 138 139
4-1 4-2 4-3	Inspection Item Selection Guide  Setup Procedure for Inspection Items  Configuring Inspection Items.  Adding New Inspection Items  Modifying Existing Inspection Items  Deleting Inspection Items	137 138 138 139 139
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR.	137 138 138 139 139
4-1 4-2 4-3	Inspection Item Selection Guide  Setup Procedure for Inspection Items  Configuring Inspection Items.  Adding New Inspection Items  Modifying Existing Inspection Items  Deleting Inspection Items  Reading with OCR.  Character String Recognition	137 138 138 139 139 140
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR.	137 138 139 139 140 140
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR Character String Recognition Characters That Can Be Recognized	137 138 139 139 140 140 140
4-1 4-2 4-3	Inspection Item Selection Guide  Setup Procedure for Inspection Items  Configuring Inspection Items.  Adding New Inspection Items  Modifying Existing Inspection Items  Deleting Inspection Items  Reading with OCR.  Character String Recognition  Characters That Can Be Recognized  Setup Procedure for Character Recognition	137 138 138 139 139 140 140 140 141
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR Character String Recognition Characters That Can Be Recognized Setup Procedure for Character Recognition Setup Procedure for Character Recognition	137 138 138 139 139 140 140 141 141 156
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items.  Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR. Character String Recognition Characters That Can Be Recognized Setup Procedure for Character Recognition Setup Procedure for Character Recognition Setting the Measurement Parameters	137 138 139 139 140 140 141 141 156 158
4-1 4-2 4-3	Inspection Item Selection Guide  Setup Procedure for Inspection Items  Configuring Inspection Items.  Adding New Inspection Items  Modifying Existing Inspection Items  Deleting Inspection Items  Reading with OCR.  Character String Recognition  Characters That Can Be Recognized  Setup Procedure for Character Recognition  Setup Procedure for Character Recognition  Setting the Measurement Parameters  Limiting Readable Characters	137 138 139 139 140 140 141 141 156 158
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR. Character String Recognition Characters That Can Be Recognized Setup Procedure for Character Recognition Setup Procedure for Character Recognition Setting the Measurement Parameters Limiting Readable Characters Changing the Output Code for Errors (Default: NG)	137 138 139 139 140 140 141 156 158 158
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR. Character String Recognition Characters That Can Be Recognized Setup Procedure for Character Recognition Setup Procedure for Character Recognition Setting the Measurement Parameters Limiting Readable Characters Changing the Output Code for Errors (Default: NG) Troubleshooting Unstable Read Results	137 138 139 139 140 140 141 156 158 158 159
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR Character String Recognition Characters That Can Be Recognized Setup Procedure for Character Recognition Setup Procedure for Character Recognition Setting the Measurement Parameters Limiting Readable Characters Changing the Output Code for Errors (Default: NG) Troubleshooting Unstable Read Results When reading a variable length string	137 138 139 139 140 140 141 156 158 159 159
4-1 4-2 4-3	Inspection Item Selection Guide Setup Procedure for Inspection Items Configuring Inspection Items Adding New Inspection Items Modifying Existing Inspection Items Deleting Inspection Items Reading with OCR. Character String Recognition Characters That Can Be Recognized Setup Procedure for Character Recognition Setup Procedure for Character Recognition Setting the Measurement Parameters Limiting Readable Characters Changing the Output Code for Errors (Default: NG) Troubleshooting Unstable Read Results When reading a variable length string Setting Date Parameter	137 138 139 139 140 140 141 156 158 159 159 166 167

12

168
169
170
176
Calculations 177
178
179
179
180
185
186
187
t and Run Display
187
Calculations 188
189
190
190
191
196
196
197
198
199
Calculations 199
200
200
201
201
202
210
212
212
Calculations 213
214
214
215
215
216
219
220

FQ2-S/CH User's Manual

Select the Results to Output	221
Reflect in Total Judgment	222
Unstable Search Results	222
Increasing Processing Speed	224
Editing the Model and Inspection Regions	224
Errors	229
4-9 Inspecting with the Shape Search III Inspection Item	230
Shape Search II Inspection Item	230
Setup Procedure for the Shape Search III Inspection Item	231
Obtaining Multiple Results Simultaneously	235
Select the Results to Output	237
Reflect in Total Judgment	238
Unstable Shape Search III Results	238
Increasing Processing Speed	243
Judgment is NG (Insufficient memory)	243
Editing the Model Regions and Measurement Region	244
Measurement Data That Can Be Used for External Outputs and Calculation	ons 245
Measurement Data That Can Be Logged	246
Errors	246
4-10 Inspecting with the Shape Search II Inspection Item	247
Shape Search II Inspection Item	247
Setup Procedure for the Shape Search II Inspection Item	248
Obtaining Multiple Results Simultaneously	251
Select the Results to Output	252
Reflect in Total Judgment	253
Unstable Shape Search II Results	253
Increasing Processing Speed	255
Editing the Model Regions and Measurement Region	256
Errors	258
4-11 Inspecting with the Sensitive Search Inspection Item	259
Sensitive Search Inspection Item	259
Setup Procedure for the Sensitive Search Inspection Item	
Reflect in Total Judgment	263
Increasing Measurement Position Accuracy	264
Select the Results to Output	264
Changing the Number Region Divisions	265
Inspecting Plain Regions	265
Unstable Search Results	266
Increasing Processing Speed	267
Editing the Model Regions and Measurement Region	268
Errors	270
4-12 Inspecting with the Edge Position Inspection Item	271
Edge Position	271
Setup Procedure for Edge Position	272

	Reflect in Total Judgment	275
	Changing Edge Detection Conditions (Sensors with Monochrome Cameras O 275	nly
	Unstable Edge Position Results	276
	Increasing Processing Speed for Edge Position	279
	Measurement Data That Can Be Used for External Outputs and Calculations	280
	Measurement Data That Can Be Logged for Edge Position	281
	Errors	281
4-13 lı	nspecting with the Edge Width Inspection Item	282
	Edge Width Inspection Item	282
	Setup Procedure for Edge Width Inspection Item	282
	Changing Edge Detection Conditions (Sensors with Monochrome Cameras O 285	nly
	Reflect in Total Judgment	285
	Unstable Edge Width Results (Sensors with Color Cameras)	285
	Increasing Edge Width Processing Speed	285
	Measurement Data That Can Be Used for External Outputs and Calculations	286
	Measurement Data That Can Be Logged for Edge Width	286
	Errors	287
4-14 lı	nspecting with the Edge Pitch Inspection Item	288
	Edge Pitch Inspection Item	288
	Setup Procedure for Edge Width Inspection Item	288
	Changing Edge Detection Conditions (Sensors with Monochrome Cameras O 290	nly
	Reflect in Total Judgment	290
	Unstable Edge Pitch Results (Sensors with Color Cameras Only)	291
	Increasing Edge Pitch Processing Speed	291
	Measurement Data That Can Be Used for External Outputs and Calculations	291
	Measurement Data That Can Be Logged for Edge Pitch	292
	Errors	292
4-15 lı	nspecting with Color Data Inspection Item	293
	Color Data Inspection Item	293
	Setup Procedure for Color Data Inspection Item	294
	Reflect in Total Judgment	297
	Measurement Data That Can Be Used for External Outputs and Calculations	298
	Measurement Data That Can Be Logged (Color Data)	299
	Increasing Processing Speed for Color Data	299
4-16 lı	nspecting with the Area Inspection Item	300
	Area Inspection Item	300
	Setup Procedure for Area	301
	Reflect in Total Judgment	
	Unstable Area Results	
	Increasing Processing Speed for Area	
	Measurement Data That Can Be Used for External Outputs and Calculations	

	Measurement Data That Can Be Logged for Area	309
4-17	7 Inspecting with the Labeling Inspection Item	310
	Labeling	310
	Setup Procedure for Labeling Inspection Item	311
	Unstable Labeling Results	314
	Changing the Label Detection Conditions	317
	Changing the Label Extraction Conditions	318
	Sorting Extracted Labels	319
	Reflect in Total Judgement	319
	Editing the Measurement Region	
	Increasing the Processing Speed	
	Measurement Data That Can Be Used for External Outputs and Calculation	ons 321
	Measurement Data That Can Be Logged for Labeling	
4-18	8 Calculations and Judgments Using Inspection Item Data	323
	Calculation	323
	Examples for Calculation	
	Procedure (Calculation)	
	Function List	329
_	and Saving Settings  Performing Test Measurements	
	Performing Test Measurements with Samples	
	Performing Test Measurements with Saved Images (Re-measuring)	
5-2	Shortening the Measurement Takt Time	
	Checking the Measurement Takt Time	
	Increasing Image Input Speed	
	Changing the Image Input Mode	
5-3	Adjusting the Judgment Parameters	
	Adjusting Judgment Parameters While Looking at Measurement Results	
F.4	Setting Up the Best Judgement Parameters Automatically	
	Checking a List of All Inspection Item Results	
5-5	Saving Data to the Sensor	350
6. Operatio	n	
6-1	Starting Operation	352
	Run Mode Display	352
	Moving to Run Mode	353
6-2	Configuring the Run Mode Display	354
6-3	Checking the Trend of Measurement Results with Graphs	358
	Trend Monitor	358
	Histograms	360
6-4	Adjusting Judgement Parameters during Operation	362

	Preparations	362
	Changing the Judgment Parameters in Run Mode	362
6-5	Editing the Model Region / Measurement Region from Run Mode .	363
	Preparations	363
	Editing the Model Region from Run Mode	363
7. Conveni	ent Functions	
7-1	Changing the Scene to Change the Line Process	366
	What Are Scenes?	366
	Creating New Scenes	367
	Changing Scene Names, Copying Scenes, and Deleting Scenes	367
	Switching Scenes from an External Device	368
	Setting the Startup Scene	368
7-2	Calibration	369
	Calibration	369
	Setting the Calibration Pattern	371
	Selecting the Calibration Pattern to Use	379
7-3	Display Functions	380
	Image Zoom	380
	Displaying a Live Image	380
	Displaying a Frozen Image	381
	Displaying a Saved Image	382
	Updating the Display and Measurement Results Only for NG Measuremer sults	
	Automatically Changing to the Display for Any Sensor with an NG Result	
	Hiding the Menu	
	Turning ON/OFF the Touch Finder Backlight	
	Changing the Brightness of the Touch Finder	
7-4	Monitoring the Signal I/O Status	
	Connecting to More Than One Sensor	
	Setting the Sensors to Connect	
	Selecting the Display When More Than One Sensor Is Connected	
7-6	Logging Measurement Data and Image Data	
	Logging Procedure	393
	Logging All Data (File Logging)	
	Checking Recent Measurement Trends (Recent Results Logging)	
7-7	Saving Sensor Settings	
	Backing Up Settings in External Memory	406
	Restoring Data to the Sensor from External Memory	
7-8		
	Inserting and Removing SD Cards	
	Checking the Available Space on the SD Card	
	Formatting an SD Card	

,	7-9	Convenient Functions for Operation	413
		Setting a Password to Prevent Unwanted Changes	.413
		Capturing the Displayed Image	.415
		Saving the Currently Displayed Camera Image	.416
		Setting the Startup Run Display Pattern	.416
		Specifying the Sensors to Connect Continuously	.417
		Monitoring and Setting Up a Sensor from Two Touch Finders	.417
		Checking the cause of a sensor NG from the multisensor display	.419
		Do not display the Sensor List to prevent erroneous operation	. 420
,	7-10	Convenient Functions for Setup	421
		Making Settings with Stored Images	.421
,	7-11	Setting the Retry Function	423
		Retry Function	. 423
	7-12	Functions Related to the System	428
		Turning OFF the Integrated Sensor Lighting (Only Sensors with Built-in Ligh 428	iting)
		Switching the Display Language	.428
		Setting the Time on the TouchFinder	.428
		Setting the Day and Time Information	.428
		Initializing the Sensor and Touch Finder	.429
		Restarting the Sensor and Touch Finder	.429
		Checking Versions	.429
		Checking the Touch Finder Battery Level	. 429
		Changing the Sensor Name	
		Checking Available Memory in the Sensor	. 430
		Correcting the Touch Screen Positions of the Touch Finder	
		Setting the Resolution of Measurement Objects Displayed on the PC Tool .	
		Changing the Sensor's BUSY Indicator	
		Setting the Inspection Timeout Time (FQ2-S4 series or FQ2-CH series only)	) 431
8. Trouble	es	hooting	
	8-1	Error Histories	434
	8-2	Error Messages	437
	8-3	Basic Troubleshooting	438
		Restoring a Sensor Connection	.439
9. Append	dic	ces	
!	9-1	Menu Tables	442
		Image Tab Page	.442
		Inspect Tab Page	. 447
		In/Out Tab Page	.465
		Test Tab Page	. 469
		Run Tab Page (from Setup Display)	.470

18

	Tool	470
	Common Menu Commands	480
9-2	External Reference Parameters	481
	Color Gray Filter (Color type only)	481
	Weak Smoothing	482
	Strong Smoothing	482
	Dilate	482
	Erosion, Median, Extract Edges, Extract Horizontal Edges, Extract Vertica Enhance edges	-
	Background Suppression	483
	Shape Search II (FQ2-S1/S2/S3 series or FQ2-S4 series only)	484
	Shape Search III Position Compensation (FQ2-S1/S2/S3 series or FQ2-S only)	
	Shape Search Position Compensation	490
	Search Position Compensation	493
	Edge Position Compensation	494
	Two-edge Position Compensation	496
	Two-edge Midpoint Compensation	499
	Edge Rotation Position Compensation	502
	Position Compensation (Image Rotation, Parameter)	505
	Linear Correction	506
	OCR (FQ2-S4 or FQ2-CH series only)	506
	Bar code (FQ2-S4 series only)	517
	2D-code (FQ2-S4 series only)	
	2D Codes (DPM) (FQ2-S4 series only)	523
	Search (FQ2-S1/S2/S3 series or FQ2-S4 series only)	528
	Sensitive Search (FQ2-S1/S2/S3 series or FQ2-S4 series only)	530
	Shape Search II (FQ2-S1/S2/S3 series or FQ2-S4 series only)	533
	Shape Search III (FQ2-S1/S2/S3 series or FQ2-S4 series only)	535
	Edge Position (FQ2-S1/S2/S3 series or FQ2-S4 series only)	538
	Edge Width (FQ2-S1/S2/S3 series or FQ2-S4 series only)	
	Edge Pitch (FQ2-S1/S2/S3 series or FQ2-S4 series only)	
	Area (FQ2-S1/S2/S3 series or FQ2-S4 series only)	
	Color Data (FQ2-S1/S2/S3 series or FQ2-S4 series only)	
	Labeling (FQ2-S1/S2/S3 series or FQ2-S4 series only)	
9-3	Specifications and Dimensions	550
	Sensor	
	Touch Finder	
	Sensor Data Units	
	System Requirements for PC Tool for FQ	
	Options	571
9-4	Updating the Software	577
	Step 1 Update the software for the PC Tool or Touch Finder	577
	Step 2 Update the software for the Sensor	577

Index	578
Revision History	584

# Introduction


1-1 FQ2-S/CH-series Sensors	22
1-2 Measurement Process	26
1-3 Basic Operational Flow	27
1-4 Startup Display and Display Elements	29

## FQ2-S/CH-series Sensors







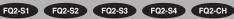



#### Overview of FQ2-S/CH Series

The FQ2-S/CH Series features Sensors with integrated cameras and controllers. They can be used to easily achieve simple inspections\*1 and measurements\*1 and to easily read and verify IDs\*2.

You can use parallel controls, no-protocol communications on Ethernet, PLC Link communications on Ethernet, and EtherNet/IP communications on Ethernet as standard features. You can also use a Sensor Data Unit to enable control with full-scale parallel communications or RS-232C communications.

To set up and monitor the Sensor, you can use either the Touch Finder or the dedicated setting tool, TouchFinder for PC (hereinafter also referred to as PC Tool). For actual operation, you can use the Sensor on a stand-alone basis.

- FQ2-S1/S2/S3/S4 series only
- FQ2-S4/CH series only

#### FQ2 Sensor

Sensor with **Built-in Lighting** 

After the Sensor has been set up, it can be operated alone to perform measurements without the Touch Finder or PC Tool.

Sensor with C-mount

(FQ2-S3/S4 series only)

#### Sensor Data Unit



Sensor Data Unit (Parallel Interface)

A variety of parameters such as judgment results. measurement data of each inspection item and calculation results can be output by parallel communication.

Sensor Data Unit

(RS-232C Interface) Connection to external devices

via the Sensor Data Unit is possible by RS-232C cable.

#### Setup, Image Confirmation, and Logging Tools





Used to check images and set the judgement parameters. It can also be used to save measurement results and check status during operation.

#### PC Tool



The same functions as those that are provided by the Touch Finder can be performed from a computer. The PC Tool is available free of charge.

#### Note

- Sensor Simulation function in TouchFinder for PC version.2.00 or later.
- · When using the PC Tool, the administrator privilege of the computer using the PC Tool are required.

FQ2-S/CH-series Sensors

#### FQ2-S/CH Series types

The FQ2-S Series sensor comes in a C-mount type that allows you to change the lens, and an integrated lighting type with built-in lighting. The FQ2-S/CH Series consists of the following lineup.

#### • FQ2-S1/S2/S3 Series

A standard full-function type to an easy-to-use single-functional type are available.

Models	Single-function	Standard	solution				
Туре	Se	Sensors with C-mounts					
Model number	FQ2-S1	FQ2-S2□□□□-M	FQ2-S3□-13□				
Number of simultaneous measurements	1		32				
Number of registered scenes	8		32				
Partial input	Horizor	ntally only	Horizontally a	and vertically			
Lens mount				C-mount			
Image processing method	Rea	l color	Real color or monochrome (Model numbe for Monochrome Sensors end in "M.")				
Connection to Sensor Data Unit	Not p	ossible.	Possible.				
Processing resolution 752 × 480			928 × 828	1,280 × 1,024			

#### • FQ2-S4 Series

A standard type (350,000 pixels) to high-resolution types with substantially increased resolution (760,000 pixel type and 1.3 million pixel type) are available.

Pixels	35	0,000	76	0,000	1,300,000				
Type		Sensors with	Built-in Lighting	3	Sensors with C-mounts				
Model	FQ2-S40000 FQ2-S40000-M		FQ2-S400000 FQ2-S400000-M FQ2-S400000- FQ2-S400000-08		FQ2-S4□-13	FQ2-S4□-13M			
Number of simultaneous measurements		32							
Number of regis- tered scenes		32							
Partial input	Horizo	Horizontally only Horizontally and vertically							
Lens mount					C-I	-mount			
Image processing method	Real color Monochrome		Real color Monochrome		Real color	Monochrome			
Connection to Sensor Data Unit	Possible.								
Processing resolution	752	2 × 480	928	3 × 828	1,280 × 1,024				

#### • FQ2-CH Series

24

This model is specialized for ID verification and reading.

Models	Single-function					
Туре	Sensors with Built-in Lighting					
Model	FQ2-CH100000-M, FQ2-CH150000-M					
Number of simultaneous measurements	32					
Number of registered scenes	32					
Partial input	Horizontally only					
Lens mount						
Image processing method	Monochrome					
Connection to Sensor Data Unit	Possible.					
Processing resolution	752 × 480					

FQ2-S/CH-series Sensors FQ2-S/CH User's Manual

### • Comparison of functions by FQ2 Series model

		Model						
F	unction	FQ2-S1/S2 FQ2-S3		FQ2-S4	FQ2-CH			
	OCR	×	×	0	0			
	Bar code	×	×	0	×			
	2D-code	×	×	0	×			
	2D-code (DPM)	×	×	0	×			
	Search	0	O	0	×			
	Sensitive Search	0	O	0	×			
Inspection item	Shape Search II	O	O	0	×			
	Shape Search III	O	O	0	×			
	Edge Position	O	O	0	×			
	Edge Width	O	0	0	×			
	Edge Pitch	O	O	0	×			
	Area	O	O	0	×			
	Color Data	0	O	0	×			
	Labeling	0	O	0	×			
	Partial input function	Horizontal only	Both horizontal and vertical	Both horizontal and vertical	Horizontal only			
Main functions	Retry Function	×	×	0	0			
	I/O expansion	×	O	0	0			
	RS-232C	×	O	0	O			

## **Measurement Process**



FQ2-S2 FQ2-S3 FQ2-S4 FQ2-CH

This section describes the basic flow of the measurement process.

Trigger input


• The measurement is started by inputting a trigger signal from an external device.

Take image

· Images are taken according to the trigger.



- The image is measured to see if it matches the configured settings.
- · You can also perform calculations based on the measurement results from inspection items.

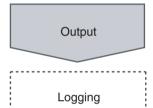


- The overall judgement of all inspection items are output.
- You can output detailed measurement result from the inspection items.
- Measurement data and image data can be logged in memory in the Sensor or in an SD card.

26

## **Basic Operational Flow**



The following flow shows the basic operation of FQ2-S/CH-series Sensors.

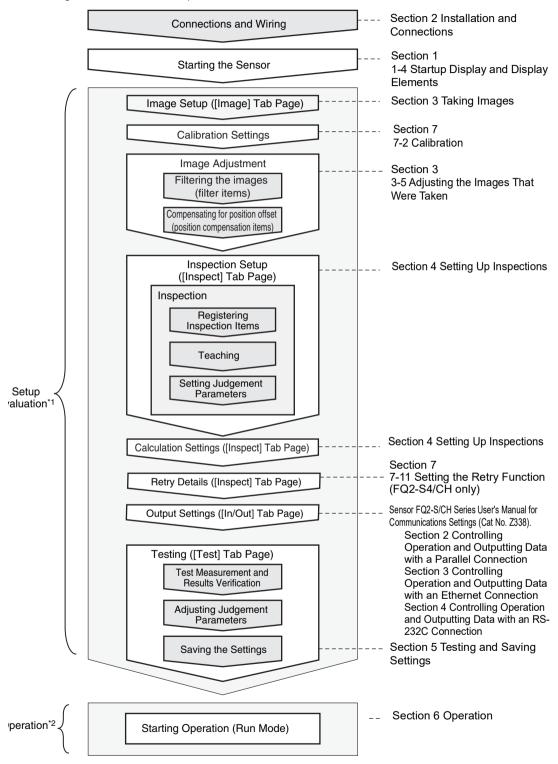

In Setup Mode, the Sensor can be set up and adjusted, but it does not output signals on the I/O lines.

In Run Mode, the Sensor performs measurements and outputs signals on the I/O lines.

Note

Even when a Touch Finder is not connected, you can monitor parallel I/O signals and control output states using only communication commands.


The following commands are used for this purpose:

- Run Mode settings
- Terminal information get/set commands

For details on each command, refer to the following.

FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) 5-1 Command Control

## 1-4 Startup Display and Display Elements

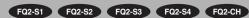

### **Startup Display**

When the Sensor and Touch Finder are powered on, the language selection display appears and then the Sensor List.

Select the Sensor you want to connect, and press [OK].



- 2 Sensor connection processing takes place.
- 3 If the Sensor is not detected, press the [Sensor List] button to move to the Sensor List, and check the connection settings.
  - Selecting the Sensors to Connect: p.388



Note

Touch Finder [DHCP] setting is OFF. In the following cases, the Sensor List will not appear.

The screen of Step 4 is displayed immediately after you turn on the power.

- · The Sensor to be connected is already set
- "Auto sensor detection" is set to ON
- · "Specify sensor" is set to ON

If the setting of the Sensor List screen in the activation setting of the Touch Finder setting is "Do not display", the Sensor List will not appear. To display the Sensor List, set it in the Touch Finder setting at the bottom right of the screen, save the main unit, and restart the Touch Finder.

Do not display the Sensor List to prevent erroneous operation: p.420

### 4 When the Sensor is detected, the following display will appear.

• The Setup Mode will appear if a Sensor that has not been set up is connected.



• The Run Mode will appear if a Sensor that has been set up is connected.



Note

When the Touch Finder is started, IP addresses are automatically set for each Sensor.

To allocate specific IP addresses, set the IP address of each Sensor and the Touch Finder.

2-6 Setting Up Ethernet: p.67

## **Display Elements**


This Sensor has a Setup Mode and a Run Mode.


Refer to 9-1 Menu Tables: p. 442

# **Installation and Connections**

2-1 System Configuration	32
2-2 Part Names and Functions	35
2-3 Installation	39
2-4 Launching the Program for First Time	52
2-5 Wiring	54
2-6 Setting Up Ethernet	67

## 2-1 System Configuration

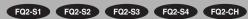

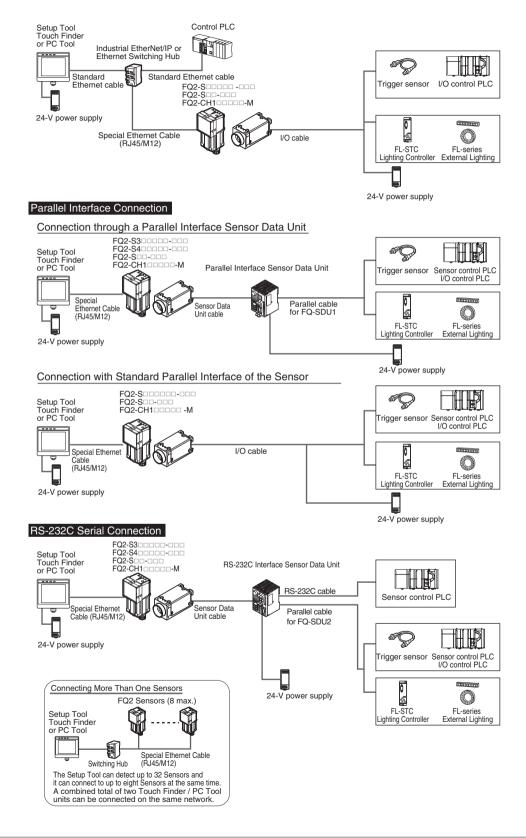

System Configuration FQ2-S/CH User's Manual

32

Product	Model number	Remarks
FQ Sensor	FQ2-S00000-000 FQ2-S00-000 FQ2-CH100000M	This is the Sensor.
Touch Finder	FQ2-D <sub>□</sub>	This is a setup console.
PC Tool		The PC Tool can be used instead of the Touch Finder. If you register as a member, you can download the free PC Tool as a special service to purchasers.  Refer to the <i>Member Registration Sheet</i> that is enclosed with the Sensor for the member registration procedure and the download procedure for special member software.
Parallel Interface Sensor Data Unit <sup>*1</sup>	FQ-SDU1 <sub>□</sub>	You can connect a Sensor Data Unit to the I/O cable connector on the Sensor and connect the Parallel Interface Sensor Data Unit to an external device. This allows you to output the results of judgment conditions, measurements from inspection items, and the results of expressions with parallel communications.
RS-232C Interface Sensor Data Unit <sup>*1</sup>	FQ-SDU2□	You can connect a Sensor Data Unit to the I/O cable connector on the Sensor and connect the RS-232C Interface Sensor Data Unit to an external device. This allows you to use no-protocol communications to send and receive commands, inspection item parameters, and other data between the Sensor and the external control device that is connected with the RS-232C cable. You can also use the ACK signal (parallel command normal completion signal) for a parallel output from the Sensor Data Unit.
FQ Ethernet Cable	FQ-WN0□□-	Connects the Sensors to external devices such as the Touch Finder, computers, and PLCs.
Standard RJ45 Ethernet Cable*2		Connects the Switching Hub to the Touch Finder, computers, and PLCs. Use a connector that complies with the FCC RJ45 standard. (STP (shielded twisted-pair) cable, category 5e or 6, impedance: 100 $\Omega$ )
I/O Cable	FQ-WD0□□-	Connects the Sensor to the power supply and external devices.
Switching Hub	W4S1-0□□-	Used to connect multiple Sensors to one Touch Finder or PC Tool.
Sensor Data Unit cable	FQ-WU0□□-	This cable connects the FQ2-S3/S4/CH Sensor to the Sensor Data Unit.
Parallel cable for FQ-SDU1	FQ-VP1000-	This cable connects the Parallel Interface Sensor Data Unit to an external device.
Parallel cable for FQ-SDU2	FQ-VP2000-	This cable connects the RS-232C Interface Sensor Data Unit to an external device.
RS-232C cable (to connect to a PLC)	Recommended: XW2Z-200S-V (2 m) or XW2Z-500S-V (5 m)	This cable connects the RS-232C Interface Sensor Data Unit to an external device.

<sup>\*1:</sup> FQ2-S1\_\_\_\_and FQ2-S2\_\_\_\_re not supported.

<sup>1.</sup> The shape and dimensions of the Ethernet connector plug and jack are specified in ISO/IEC8877:1992 (JIS X 5110:1996) and RJ-45 of the FCC regulations. To prevent connector connection failures, the structure of the jack of this product does not allow insertion of plugs that do not comply with the standard. If a commercially available plug cannot be inserted, it is likely that the plug is non-compliant.

#### Important

Do not connect network devices other than PLCs on the same network as the Touch Finder or computer. If another device is connected, the responsiveness of displays and settings of the Touch Finder or computer may become slow.

#### Connection Compatibility

Yes: Supported, No: Not supported

			Other connection							
			PLC Link		TCP no- protocol	UDP no-	FINS/ TCP no-		Parallel communications	
	of connection FQ2-S/CH	EtherNet/ IP	on Ether- net	PROF- INET	communi- cations on Ethernet	communi- cations on Ether- net	protocol communi- cations on Ethernet	RS-232C *1	Sensor's standard parallel commu- nications	Parallel Inter- face*2
EtherNet/	IP		No	No	Yes	Yes	Yes	Yes	Yes	Yes
PLC Link	on Ethernet	No		No	Yes	Yes	Yes	Yes	Yes	Yes
PROFINE	T	No	No		Yes	Yes	Yes	Yes	Yes	Yes
•	rotocol com- ns on Ethernet	Yes	Yes	Yes		No	No	No	Yes	Yes
	rotocol com- ns on Ethernet	Yes	Yes	Yes	No		No	No	Yes	Yes
	no-protocol cations on	Yes	Yes	Yes	No	No		No	Yes	Yes
RS-232C	*1	Yes	Yes	Yes	No	No	No		Yes	No
Parallel communications	Sensor's standard par- allel commu- nications	Yes	Yes	Yes	Yes	Yes	Yes	Yes		No
	Parallel Inter- face *2	Yes	Yes	Yes	Yes	Yes	Yes	No	No	

This applies when an RS-232C Interface Sensor Data Unit is connected. This applies when a Parallel Interface Sensor Data Unit is connected.

#### Note


#### Connections Across Network Routers

You can connect to a Sensor on a different network than the Touch Finder or PC Tool through a router.


- If you are connecting to the Sensor from the Touch Finder / PC Tool, directly specify the IP address of the Sensor to connect. Auto Sensor Connection cannot be used to connect to a sensor on a different network over a router because the Sensor cannot be detected
- · Set a fixed IP address for the Sensor.
- When connected over a router, the connection recovery function cannot be used.

System Configuration FQ2-S/CH User's Manual

# 2-2 Part Names and Functions

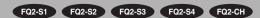


# FQ2-S | | | | | | (Sensors with Built-in Lighting) FQ2-CH1 | | | | | | | | (Sensors with Built-in Lighting)

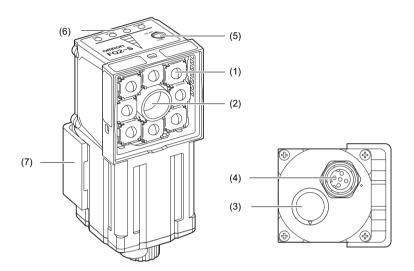

No.	Name		Description			
(1)	Lighting		LEDs for illumination			
(2)	Camera lens		This lens can be focused.			
(3)	I/O Cable con	nector	An FQ-WD or FQ-WU I/O Cable is used to connect the Sensor to the power supply and external I/O.			
(4)	Ethernet cable	connector	An FQ-WN Ethernet Cable is used to connect the Sensor to external devices such as PLCs, the Touch Finder, or computers.			
(5)	Focus adjustn	nent screw	Used to adjust the focus of the image.			
		OR	Lights orange when the overall judgment output (OR) signal turns ON.			
		ETN	Lights orange during Ethernet communications.			
(6)	Operation	ERROR	Lights red when an error occurs.  8-1 Error Histories: p.434			
	BUSY		Lights green when the Sensor is executing a process.  * You can change the BUSY indicator to a RUN indicator.  This indicator is set by Default to a BUSY indicator, but if you change it to a RUN indicator, it will light green during operation.  Changing the Sensor's BUSY Indicator: p.430			
(7)	7) Mounting Bracket		Used to mount the Sensor. The Mounting Bracket can be attached to the front, left side, right side, or back of the Sensor.			


Functions 35

# FQ2-Spp-pp (Sensors with C-mounts)

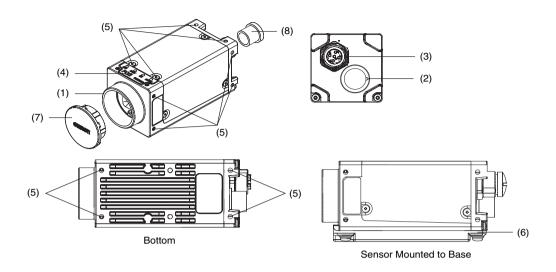

No.	N	lame	Description
(1)	C-mount lens mounting surface		The C-mount lens and extension tube are attached here. Determine the appropriate CCTV lens (C-mount lens) to use based on the field of view required for the size of the measurement object.  Optical Diagrams: p. 42
(2)	I/O Cable con	nector	An FQ-WD or FQ-WU I/O Cable is used to connect the Sensor to the power supply, external I/O, and Sensor Data Unit.
(3)	Ethernet Cable	e connector	An FQ-WN Ethernet Cable is used to connect the Sensor to external devices such as the Touch Finder or computers.
		OR	Lights orange when the overall judgement output (OR) signal turns ON.
		ETN	Lights orange during Ethernet communications.
(4)	Operation	ERROR	Lights red when an error occurs.  8-1 Error Histories: p.434
(4)	indicators	BUSY	Lights green when the Sensor is executing a process.  * You can change the BUSY indicator to a RUN indicator.  This indicator is set by Default to a BUSY indicator, but if you change it to a RUN indicator, it will light green during operation.  Changing the Sensor's BUSY Indicator: p.430
(5)	Mounting holes		These mounting holes for M3 screws are used to mount the Camera and to mount to the base. There are mounting holes on the top, bottom, left, and right surfaces.  Dimensions: p. 563
(6)	Mounting base (enclosed)		The mounting base has 1/4-20UNC threads and is used to mount the Sensor. The base can be attached to the bottom, top, left, or right side of the Sensor.  * We recommend mounting the Sensor with the mounting screw holes.  The mounting base does not necessarily need to be used.
(7)	C-mount cover		This cover is attached to the C-mount lens fitting when a lens is not attached.
(8)	Connector cover		This cover is attached to the connection when an Ethernet Cable is not connected.


# **Touch Finder**

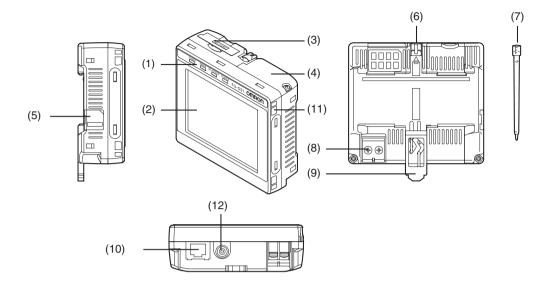


No.	Name		Description			
		POWER	Lights green when the Touch Finder is turned ON.			
		ERROR	Lights red when an error occurs.			
(1)	Operation		8-1 Error Histories: p.434			
	indicators	SD ACCESS	Lights yellow when an SD card is inserted.			
			Flashes yellow when the SD card is being accessed.			
		CHARGE*1	Lights orange when the Battery is charging.			
(2)	LCD/touch pa	nel	Displays the setting menu, measurement results, and images input by the camera.			
(3)	SD card slot		An SD card can be inserted.			
(4)	Battery cover*	1	The Battery is inserted behind this cover.			
			Remove the cover when mounting or removing the Battery.			
(5)	Power supply switch		Used to turn the Touch Finder ON and OFF.			
(6)	Touch pen holder		The touch pen can be stored here when it is not being used.			
(7)	Touch pen		Used to operate the touch panel.			
(8)	DC power sup	pply connector	Used to connect a DC power supply.			
			Wiring the Touch Finder: p. 63			
(9)	Slider		Used to mount the Touch Finder to a DIN Track.			
(10)	Ethernet port		Used when connecting the Touch Finder to the Sensor with an Ethernet			
			cable. Insert the connector until it locks in place.			
(11)	Strap holder		This is a holder for attaching the strap.			
(12)	AC power supply connector*1		Used to connect the AC adapter.			

<sup>\*1:</sup> Applicable to the FQ2-D31 only.


37

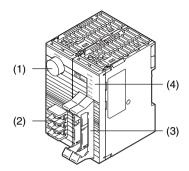

Front Surface of Parallel Interface Sensor Data Unit

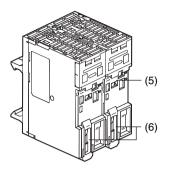

Back Surface of Parallel Interface Sensor Data Unit

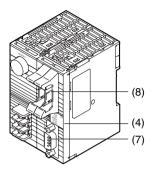


RS-232C Interface Sensor Data Unit

No.	N	lame	Description
(1)	Sensor conne	ctor	Connects to the FQ2-S3/S4/CH.
(2)	Power supply ground terminate		Connects to the 24-V power source and the ground line.
(3)	Parallel I/O co	nnector	Connects to the I/O connector.
		POWER/ ERROR	Lights green when power is being supplied. Lights red when an error occurs.
		RUN	Lights green during operation.
	BUSY Lights ye		Lights yellow when the Sensor is executing a process.
(4)	I/O indicators	SENSOR	Lights yellow when the Sensor is connected.
` '		OR-OK	Lights green when the overall judgment result is OK.
		OR-NG	Lights red when the overall judgment result is OFF or an error occurs.
		232C_COM	Lights yellow during RS-232C communications. (Provided only on the FQ-SDU2□.)
(5)	DIN Track mounting section		Mounts the Sensor Data Unit to a DIN Track.
(6)	Slider		Used to secure the Sensor Data Unit to a DIN Track.
(7)	RS-232C connector		Connects to the RS-232C connector.
(8)	Parallel I/O co	nnector	Connects to the I/O connector.

Part Names and Functions FQ2-S/CH User's Manual

# 2-3 Installation

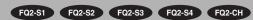

# **Installing the Sensor**


### FQ2-Sanana/FQ2-CH1anana-M (Sensors with Built-in Lighting)

### **Installation Procedure**

1 Align the tabs on one side of the Mounting Bracket with the slot on the Sensor.

The FQ-XL Mounting Bracket can be attached to the back, side, or front of the Sensor.


Press the Mounting Bracket onto the Sensor until the other tabs click into place.

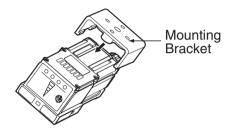



3 Use the following optical charts to check the field of view and installation distance of the Sensor so that it is mounted at the correct position.


Tightening torque (M4): 1.2 N·m

Installation 39

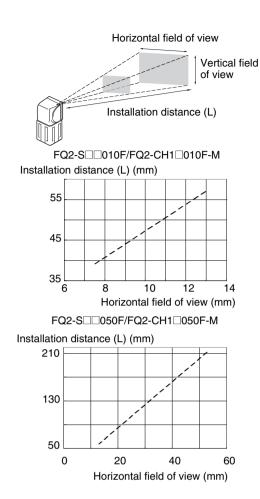

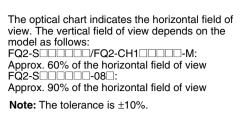

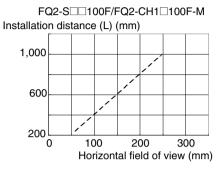

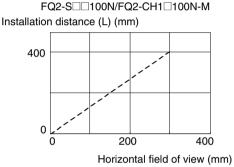


### Important

• There is a certain amount of deviation among Sensors in the center of the optical axis. For this reason, when installing the Sensor, check the center of the image and the field of view on the LCD monitor of the Touch Finder and in the PC Tool.

### **Removal Procedure**

Insert a flat-blade screwdriver between the Mounting Bracket and the Sensor case on either side and remove the Mounting Bracket.

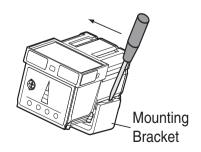

Installation FQ2-S/CH User's Manual

### FQ2-S -- (Sensors with C-mounts)

### **Installation Procedure**

### **Directly Mounting the Sensor**


1 Mount the Sensor with M3 screws.

Tightening torque: 0.54 N·m

Effective depth of mounting holes: 4 mm

### Important

Refer to the dimension drawings in the appendix for the positions of the screw holes.

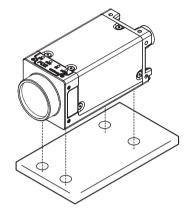

### Mounting the Sensor to the Base

You can attach the mounting base to the bottom, top, left, or right surface. (Recommended mounting screw tightening torque: 0.54 N·m)


Tightening torque: 0.54 N·m

Effective depth of mounting holes: 4 mm

2 Mount the Sensor with M3 screws.

Tightening torque: 0.54 N·m

Effective depth of mounting holes: 4 mm

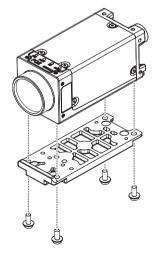


41

Use the following optical diagrams to determine the Lens, camera installation distance, and detection range.


### **Optical Diagrams**

The following values are estimates only. Adjustment is required after installing the camera.

### 3Z4S-LE SV-□□□□H High-resolution, Low-distortion Lenses

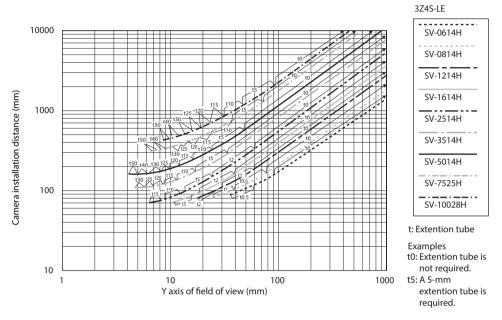

3Z4S-LE SV-□□□□V-series Lenses

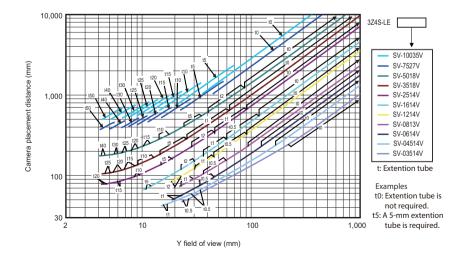


Installation FQ2-S/CH User's Manual

The X axis in the above optical diagrams represent field of view (mm)<sup>\*1</sup>.

The Y axis represents the camera installation distance (mm) or WD (mm). These optical diagrams show the relationship between the detection range and installation distance for different CCTV Lenses. The values vary for each Lens.


Pay close attention to the Lens that you are using when you refer to these optical diagrams.

The extension tube thickness to be used is given as, for example "t5.0," on the graphs. "t0" means that a extension tube is not required. "t5.0" means that you must use a 5-mm extension tube.

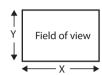


\*1: The Y axis in the optical charts represents the height of the field of view.

Example: If you use an 3Z4S-LE SV-2514H Lens for a measurement object that requires field of view of 35 mm, the camera installation distance must be 200 mm and a 2-mm extension tube is required.

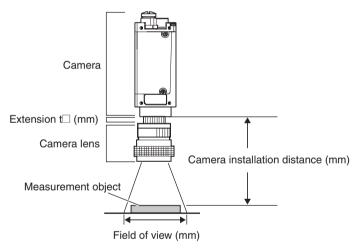

#### **Lens Models and Dimensions**

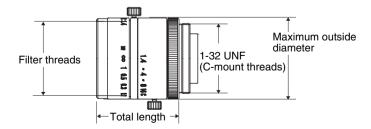

### 3Z4S-LE SV-□□□□H High-resolution, Low-distortion Lenses

Lens model	Focal length	Brightness	Maximum out- side diameter	Total length	Filter size
3Z4S-LE SV-0614H	6.1 mm	F1.4	42 mm	57.5 mm	M40.5 P0.5
3Z4S-LE SV-0814H	8.0 mm	F1.4	39 mm	52.5 mm	M35.5 P0.5
3Z4S-LE SV-1214H	12.3 mm	F1.4	30 mm	51.0 mm	M27 P0.5
3Z4S-LE SV-1614H	16.2 mm	F1.4	30 mm	47.5 mm	M27 P0.5
3Z4S-LE SV-2514H	25.0 mm	F1.4	30 mm	36.0 mm	M27 P0.5
3Z4S-LE SV-3514H	35.01 mm	F1.4	44 mm	45.5 mm	M35.5 P0.5
3Z4S-LE SV-5014H	50.0 mm	F1.4	44 mm	57.5 mm	M40.5 P0.5
3Z4S-LE SV-7525H	75 mm	F2.5	36 mm	49.5 mm	M34.0 P0.5
3Z4S-LE SV-10028H	100 mm	F2.8	39 mm	66.5 mm	M37.5 P0.5


### 

Lens model	Focal length	Brightness	Maximum out- side diameter	Total length	Filter size
3Z4S-LE SV-03514V	3.5 mm	F1.4	29.5 mm	30.4 mm	-
3Z4S-LE SV-04514V	4.5 mm	F1.4	29.5 mm	29.5 mm	-
3Z4S-LE SV-0614V	6.20 mm	F1.4	29 mm	30.0 mm	M27 P0.5
3Z4S-LE SV-0813V	8.05 mm	F1.3	28 mm	34.0 mm	M25.5 P0.5
3Z4S-LE SV-1214V	12.43 mm	F1.4	29 mm	29.5 mm	M27 P0.5
3Z4S-LE SV-1614V	16.34 mm	F1.4	29 mm	24.0 mm	M27 P0.5
3Z4S-LE SV-2514V	25.17 mm	F1.4	29 mm	24.5 mm	M27 P0.5
3Z4S-LE SV-3518V	34.75 mm	F1.8	29 mm	33.5 mm	M27 P0.5
3Z4S-LE SV-5018V	47.97 mm	F1.8	32 mm	37.0 mm	M30.5 P0.5
3Z4S-LE SV-7527V	76.71 mm	F2.7	32 mm	42.0 mm	M30.5 P0.5
3Z4S-LE SV-10035V	95.4 mm	F3.5	32 mm	43.9 mm	M30.5 P0.5

Installation FQ2-S/CH User's Manual

#### **Extension tubes**

Extension tubes are inserted between the Lens and the camera to adjust the focus. You can use up to seven extension tubes to achieve the required thickness.

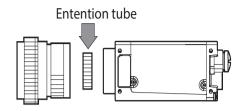

Model	Maximum out- side diameter			Thickne	ess		
3Z4S-LE SV-EXR	31 mm	7-piece set Thickness: 0.5 mm	1 mm 2 mm	5 mm	10 mm	20 mm	40 mm

### Important

- Do not stack 0.5 mm, 1.0 mm, and 2.0 mm extension tubes. These sizes fit between the Lens and the threaded portion of other extension tubes. If two or more are stacked together, the screw cannot be tightened securely.
- The extension tubes may need to be reinforced depending on the vibration conditions if over 30 mm is used.

45


### **Installing the Touch Finder**

### **Installation Precautions**

Install the Touch Finder in the following orientation to allow sufficient heat dissipation.




Do not mount it in the following orientations.

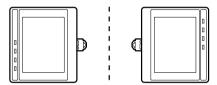

#### Important

• To improve ventilation, leave space on both sides of the Touch Finder.

The distance between the Touch Finder and other devices should be at least that shown in the following diagram.

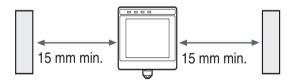


- Make sure that the ambient temperature is 50°C or lower. If it exceeds 50°C, install an cooling fan or an air conditioner and maintain the temperature at 50°C or lower.
- To prevent interference by noise, do not mount the Sensor on panels which contain high-voltage devices.
- To keep the level of noise from the surrounding environment to a minimum, install the Sensor and Touch Finder at least 10 m away from power lines.

Installation FQ2-S/CH User's Manual

### **Mounting to DIN Track**

#### **Installation Procedure**

- 1 Press the slider on the Touch Finder to the top.
- 2 Hook the clip at the top of the Touch Finder on to the DIN Track.
- 3 Press the Touch Finder onto the DIN Track until the bottom clip clicks into place.

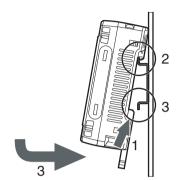


### Important

- Attach End Plates (sold separately) on the sides of the Touch Finder on the DIN Track.
- If other devices will be installed next to the Touch Finder on the same DIN Track, make sure that sufficient space is kept between the devices as indicated on previous page.
- Always hook the clip at the top of the Touch Finder on the DIN Track first. If the lower clip is hooked on first, the Touch Finder will not be mounted very securely.

#### **Removal Procedure**

- 1 Pull down on the slider on the Touch Finder.
- 2 Lift the Touch Finder at the bottom and remove it from the DIN Track.

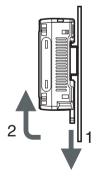

FQ2-S/CH User's Manual Installation

### **Mounting to a Control Panel**


The Touch Finder can be mounted on a panel using the FQ-XPM Panel Mounting Adapter.

### Important


• Always turn OFF the Touch Finder power before attaching or detaching the Panel Mount Adapter. Attaching or detaching with the power turned ON may cause a failure.

#### Installation Procedure

1 Set the Touch Finder in the Panel Mount Adapter.

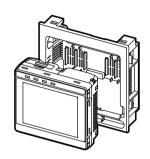

**2** Press the slider up on the Touch Finder.

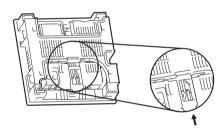



- 3 Create holes in the panel for mounting.

  Refer to the following page for hole dimensions.
  - Dimensions: p.566
- **4** Connect the cable to the Touch Finder.
- Mount the Touch Finder with the Panel Mount Adapter from the front of the panel.
- 6 Hook the hooks on the Mounting Bracket in the four holes of the Panel Mount Adapter and secure them with screws.

(Tightening torque: 1.2 N·m)


Check that the Touch Finder is attached properly to the Panel.

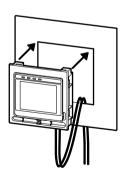

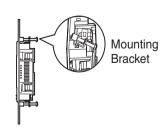


Take off the 4 Panel Mount Adapter's crews,


then remove these Mounting Bracket.

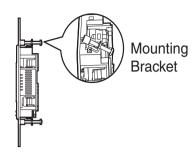

- Remove the Touch Finder with the Panel Mount Adapter from the panel.
- Take off a cable from the Touch Finder.

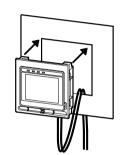

Press down the look, then you are able to unlock.

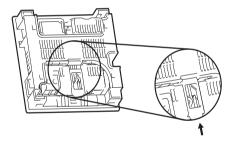


- 5 There are four Snap-fit parts on the back of the Touch Finder. For remove the Snapfit part's hooks, put in a slotted screwdriver to these parts with pushing the Touch Finder.
- Remove the Panel Adapter from the Touch Finder.

### Using the Touch Finder as a Portable Device (with Battery)


The Touch Finder with a Battery can be used as a portable device. Use the strap when carrying it to prevent dropping it.

There are two types of straps (FQ-XH, sold separately), a Neck Strap and a Hand Strap.

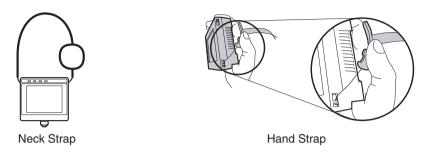


# **1** Attach the Mini-strap to the Touch Finder.

There are a total of four holes for attaching the Mini-strap on the left and on the right of the Touch Finder.

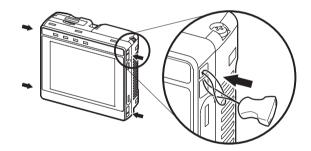

### 2 Connect the Neck Strap or Hand Strap to the Mini-strap.

50

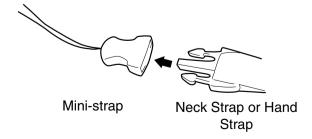


Installation FQ2-S/CH User's Manual

# **Mounting Sensor Data Units**

### **Mounting to DIN Track**

### **Installation Procedure**

- 1 Lock the sliders at the top and bottom of the Sensor Data Unit.
- Press the slider on the Sensor Data Unit to the top.
- 3 Hook the clip at the top of the Sensor Data Unit on to the DIN Track.

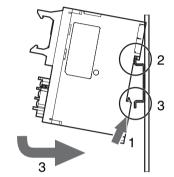


4 Press the Sensor Data Unit onto the DIN Track until the bottom clip clicks into place.

### Important

- Attach End Plates (sold separately) on the sides of the Sensor Data Unit on the DIN Track.
- Always hook the clip at the top of the Sensor Data Unit on the DIN Track first. If the lower clip is hooked on first, the Touch Finder will not be mounted very securely.


#### **Removal Procedure**

- 1 Pull down on the slider on the Sensor Data Unit.
- 2 Lift the Sensor Data Unit at the bottom and remove it from the DIN Track.

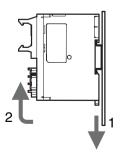

51

# 2-4 Launching the Program for First Time

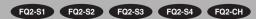

Set the Language settings at the first launch of TouchFinder or TouchFinder for PC. If you use Logging function or Calendar validation of OCR, Time settings is also required.

### Language settings

The Language setting window appears at the first launch.

**1** Select the language.



**2** A dialog for selecting language appears.



**3** The screen changes to the selected language.

### **Time settings**

#### · When using the TouchFinder

TouchFinder uses Day and Time information of your PC.

- - **1** Touch the Time settings of TouchFinder.



2 Set day and time of TouchFinder.



- **3** Touch the OK button.
- When you use the PC Tool

If you want to change these, perform the following procedure:


- 1 Click the Day and Time in Control Panel of Windows.
- 2 Set the Day and Time.

# 2-5 Wiring



# Wiring the Sensor

Connect the I/O Cable to the I/O Cable connector located at the bottom of the Sensor.

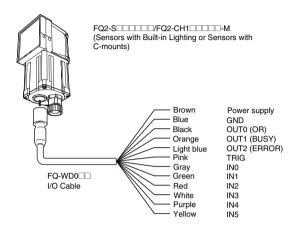

#### Important

- Cut off lines that are not required so that they do not come into contact the other signal lines.
- Do not allow the load current to exceed 50 mA.
   The output circuit may be damaged if the load current exceeds 50 mA.

Classification	Signal	Application
	Power supply (24 V)	These terminals are for the external power supply (24 V).
Power supply	GND	Important Wire the power supply separately from other devices. If the wiring for other devices is placed together or in the same duct as the wiring for the Sensor, the influences of electromagnetic induction may cause the Sensor to malfunction or may damage it.
Inputs	TRIG	This terminal is the trigger signal input.
	IN0 to IN5	These are the command input terminals.
	OUT0 (OR)	By Default, this is the OR output signal (overall judgment). The assignment can be changed to RUN, READY, an individual judgment signal from OR0 to OR31, the STGOUT (strobe trigger output), or an expression judgment from 0 to 31.
Outputs	OUT1 (BUSY)	By Default, this is the BUSY output signal.  The assignment can be changed to RUN, READY, an individual judgment signal from OR0 to OR31, the STGOUT (strobe trigger output), or an expression judgment from 0 to 31.
	OUT2 (ERROR)	By Default, this is the ERROR output signal. The assignment can be changed to RUN, READY, an individual judgment signal from OR0 to OR31, the STGOUT (strobe trigger output), or an expression judgment from 0 to 31.


Note

For the IN/OUT type of the Sensor and Sensor Data Unit, use the same IN/OUT type (NPN/PNP).

Wiring FQ2-S/CH User's Manual

### I/O Signal Circuit Diagrams

#### NPN Brown Power supply (24 VDC) Load Black OUT0 (OR) Orange OUT1 (BUSY) Light blue OUT2 (ERROR) Internal circuits 24 VDC Blue GND (0V) **TRIG** IN0 Grav ₩, IN1 Green ₩ IN2 Red **٧** IN3 White ₩ Purple IN4 ₩ Yellow IN5 ₩.

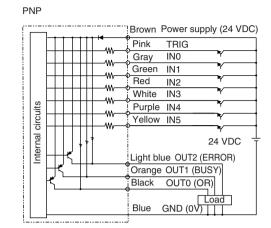

### Important

#### Preventing Chattering

- The Sensor is equipped with an anti-chattering function, but if the chattering is 100 µs or longer, a faulty input may occur. (Input signals of 99 µs or shorter are ignored. Signals of 100 µs or longer are treated as input signals.)
- Use no-contact output devices (e.g., SSR or PLC transistor output) for the input signals. If contacts (e.g., relay) are used, chattering may cause the trigger to be input again during execution of a measurement.

### Power Supply Specifications When a Switching Regulator Is Connected

Use a power supply that meets the following specifications. (The power supply is sold separately.)

	Description				
	When connected to	When connected to			
Item	FQ2-S====== or	FQ2-S======			
	FQ2-CH1=====M				
Power supply voltage	24 VDC (21.6 to 26.4 V)				
Recommended Power Supply	S8VS-06024□(24 VDC, 2.5 A)	S8VS-01524□ (24 VDC, 0.65 A)			
External power supply terminal screws	M4 (tightening torque: 1.2 N·m)				

#### Important


Supply power from a DC power supply for which measures have been applied to prevent high voltages (e.g., a safety extra low voltage circuit).

If UL certification is required for the overall system, use a UL Class II DC power supply.

FQ2-S/CH User's Manual Wiring 55

### **Wiring Sensor Data Units**

### Parallel Interface Sensor Data Unit (FQ-SDU1□)

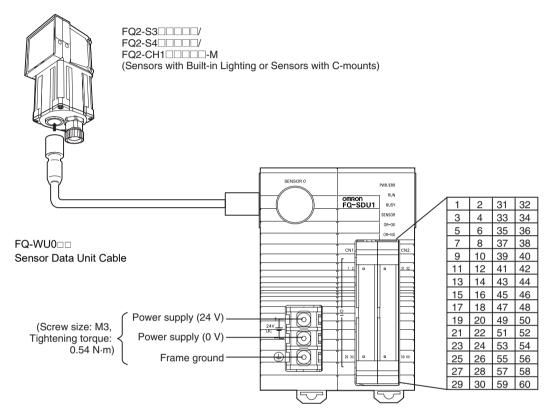

For the I/O connector harness, use an FQ-VP1 $\square\square\square$  Parallel Cable for the FQ-SDU1 or a MIL-standard harness, such as the OMRON XZ2F. (The Cables are sold separately.)

Pins 1 to 30 and pins 31 to 60 are for separate connectors. One FQ-VP1□□□ is required for each connector.

Signal	Application
Power supply (24 V)	These terminals are for the external power supply (24 V).
Power supply (0 V)	<ul> <li>• Wire the power supply separately from other devices. If the wiring for other devices is placed together or in the same duct as the wiring for the Sensor, the influence of electromagnetic induction may cause the Sensor to malfunction or may damage it.</li> <li>• Do not allow the load current to exceed 50 mA. The output circuit may be damaged if the load current exceeds 50 mA.</li> </ul>
Frame ground	This is the frame ground terminal.  Connect the ground wire by a D-type ground (ground resistance of $100\Omega$ or less).
,	<ul> <li>Wire the power supply separately from other devices. If the wiring for other deviplaced together or in the same duct as the wiring for the Sensor, the influence of tromagnetic induction may cause the Sensor to malfunction or may damage it.</li> <li>Do not allow the load current to exceed 50 mA. The output circuit may be damagned the load current exceeds 50 mA.</li> </ul>

Note

For the IN/OUT type of the Sensor and Sensor Data Unit, use the same IN/OUT type (NPN/PNP).


# FQ-SDU10/SDU15 Terminal Signal Names

Pin	Signal	FQ-VP1 Wire color	IN/ OUT	Function
1	COMOUT1	Brown	-	Output signal com-
				mon (DO0 to DO15)
_	NO*1	D. I		
2	NC*1	Red	-	
3	D0	Orange	OUT	Data output
	В	Orange	001	Data output
4	D1	Yellow	OUT	Data output
5	D2	Green	OUT	Data output
6	D3	Blue	OUT	Data output
7	D4	Purple	OUT	Data output
8	D5	Gray	OUT	Data output
9	D6	White	OUT	Data output
10	D7	Black	OUT	Data output
11	D8	Brown	OUT	Data output
12	D9	Red	OUT	Data output
13	D10	Orange	OUT	Data output
14	D11	Yellow	OUT	Data output
15	D12	Green	OUT	Data output
16	D13	Blue	OUT	Data output
17	D14	Purple	OUT	Data output
18	D15	Gray	OUT	Data output
19	NC <sup>*1</sup>	White	-	
20	NC*1	Black	-	
21	NC <sup>*1</sup>	Brown	-	
22	NC <sup>*1</sup>	Red	-	
23	NC*1	Orange	-	
24	NC*1	Yellow	-	
25	NC*1	Green	-	
26	NC*1	Blue	-	
27	NC*1	Purple	-	
28	NC <sup>*1</sup>	Gray	-	
29	NC*1	White	-	
30	NC*1	Black	-	

Pin	Signal	FQ-VP1	IN/	Function
FIII		Wire color	OUT	
31	COMIN0	Brown	-	Input signal common
				(all inputs except TRIG)
32	COMIN1	Red	_	Input signal common
				(TRIG)
33	TRIG	Orange	IN	Measurement trigger
	***			input
34	NC*1	Yellow	-	
35	NC*1	Green Blue	- IN	Poort input
37	RESET IN0	Purple	IN	Reset input Command input
38	IN1	Gray	IN	Command input
39	IN2	White	IN	Command input
40	IN3	Black	IN	Command input
41	IN4	Brown	IN	Command input
42	IN5	Red	IN	Command input
43	IN6	Orange	IN	Command input
44	IN7	Yellow	IN	Command input
45	NC*1	Green	-	
46	NC*1	Blue	-	
47	DSA	Purple	IN	Data send request
				signal
48	NC <sup>*1</sup>	Gray	-	
49	NC*1	White	-	
50	NC*1	Black	-	
51	NC*1	Brown	-	
52	ACK	Red	OUT	Command execution completed flag
53	RUN	Orange	OUT	ON during measure-
55	KON	Orange	001	ment mode
54	BUSY	Yellow	OUT	ON during process
				execution
55	OR	Green	OUT	Overall judgement
				result
56	ERROR	Blue	OUT	ON during error
57	STGOUT	Purple	OUT	Strobe trigger out- put*2, *3
58	SHTOUT	Gray	OUT	Shutter trigger out-
ΕΛ	CATE	\\/\b:\+-	OL IT	put*4
59	GATE	White	OUT	ON during the set output time.
60	COMOU	Black	-	Output signal common
	T0			(ACK, RUN, BUSY, OR, ERROR,
				STGOUT, SHTOUT,
				and GATE)
		1	1	<u> </u>

FQ2-S/CH User's Manual Wiring 57

- \*1: Leave all signal terminals that are labeled "NC" open.
- \*2: You can select whether to turn the external lighting ON (Positive) or OFF (Negative) when the signal turns ON. (The setting is called the strobe output polarity.)
  - FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)
    Section 2 Controlling Operation and Outputting Data with a Parallel Connection
- \*3: This control signal is used to turn ON external lighting when an image is taken. Connect this signal to external lighting.
- \*4: This signal is output to an external device when exposure of the imaging elements is completed. If you want to move the Sensor to the next measurement location after a measurement is completed, move the Sensor only after this signal turns ON.
  Shutter Output Signal (SHTOUT)

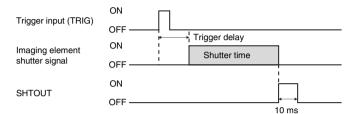


The SHTOUT signal turns ON for approximately 10 ms (fixed) when the shutter time (exposure period) elapses after the trigger is input from an external device.

Wiring FQ2-S/CH User's Manual

58

### RS-232C Interface Sensor Data Unit (FQ-SDU2□)

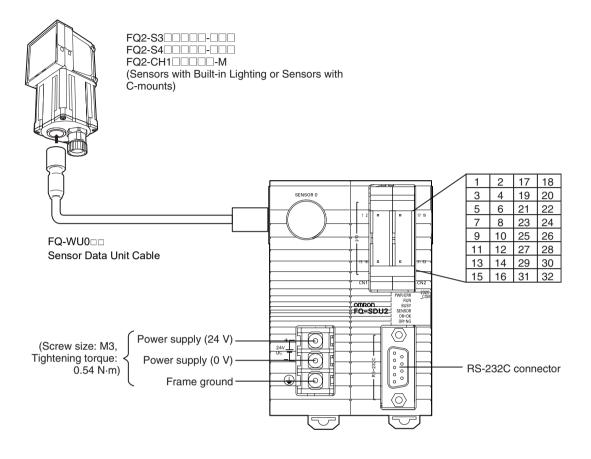

For the I/O connector harness, use an FQ-VP2□□□ Parallel Cable for the FQ-SDU2 or a MIL-standard harness, such as the OMRON XZ2F. (The Cables are sold separately.)

Pins 1 to 16 and pins 17 to 32 are for separate connectors. One FQ-VP2□□□is required for each connector.

Signal	Application
Power supply (24 V)	These terminals are for the external power supply (24 V).
Power supply (0 V)	<ul> <li>Wire the power supply separately from other devices. If the wiring for other devices is placed together or in the same duct as the wiring for the Sensor, the influence of electromagnetic induction may cause the Sensor to malfunction or may damage it.</li> <li>Do not allow the load current to exceed 50 mA. The output circuit may be damaged if the load current exceeds 50 mA.</li> </ul>
Frame ground	This is the frame ground terminal. Connect the ground wire by a D-type ground (ground resistance of $100\Omega$ or less).

FQ2-S/CH User's Manual Wiring 59

# FQ-SDU20/SDU25 Parallel Pin Signal Names

Pin	Signal	FQ-VP2 Wire color	IN/ OUT	Function
1	IN0	Brown	IN	Command input
2	IN1	Red	IN	Command input
3	IN2	Orange	IN	Command input
4	IN3	Yellow	IN	Command input
5	IN4	Green	IN	Command input
6	IN5	Blue	IN	Command input
7	NC*1	Purple	-	
8	NC <sup>*1</sup>	Gray	-	
9	NC <sup>*1</sup>	White	-	
10	NC*1	Black	-	
11	NC*1	Brown	-	
12	NC*1	Red	-	
13	NC*1	Orange	-	
14	NC*1	Yellow	-	
15	NC <sup>*1</sup>	Green	-	
16	NC*1	Blue	-	


Pin	Signal	FQ-VP2 Wire color	IN/ OUT	Function
17	COMIN0	Brown	-	Input signal common (RESET and IN0 to IN5)
18	COMIN1	Red	-	Input signal common (TRIG)
19	TRIG	Orange	IN	Measurement trigger input
20	NC*1	Yellow	-	
21	NC*1	Green	-	
22	RESET	Blue	IN	Reset input
23	NC <sup>*1</sup>	Purple	-	
24	ACK	Gray	OUT	Command execution completed flag
25	RUN	White	OUT	ON during measurement mode
26	BUSY	Black	OUT	ON during process exe- cution
27	OR	Brown	OUT	Overall judgment result
28	ERROR	Red	OUT	ON during error
29	STGOUT	Orange	OUT	Strobe trigger output
30	SHTOUT	Yellow	OUT	Shutter trigger output
31	NC*1	Green	-	
32	COMOUT0	Blue	-	Output signal common (ACK, RUN, BUSY, OR, ERROR, STGOUT, and SHTOUT)

<sup>\*1:</sup> Leave all signal terminals that are labeled "NC" open.

Wiring FQ2-S/CH User's Manual

### FQ-SDU20/SDU25 RS-232C Pin Signal Names

### **RS-232C Connector**

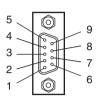

Pin No.	Signal name	Function
1	NC	Not connected
2	RD	For RS-232C
3	SD	For RS-232C
4	NC	Not connected
5	GND	Signal ground
6	NC	Not connected
7	NC	Not connected
8	NC	Not connected
9	NC	Not connected

Pin numbers will depend on the external device being connected. Refer to the manual for the personal computer or PLC being connected.


Use a compatible connector. The followings are recommended items.

	Manufacturer	Model
Socket	OMRON Corporation	XM3D-0921
Hood	OMRON Corporation	XM2S-0911

### Wiring

The maximum cable length is 15m.

• RS-232C

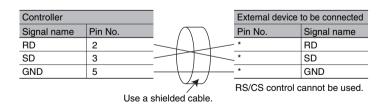

FQ2-S/CH User's Manual Wiring 61

#### **Connection Method**

Align the connector with the socket and press it straight into place, then fix it with the screws on both sides of the connector.


#### Important


Turn OFF the power supply before connecting or disconnecting a Cable.

Peripheral devices may be damaged if the cable is connected or disconnected with the power ON.


### I/O Signal Circuit Diagrams


#### NPN

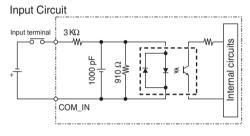

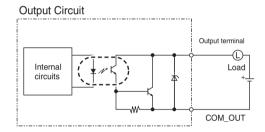

#### PNP

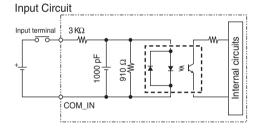

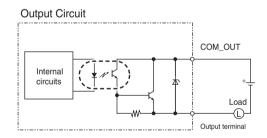

#### Important

#### Preventing Chattering

- The Sensor is equipped with an anti-chattering function, but if the chattering is 100 µs or longer, a faulty input may occur. (Input signals of 99 µs or shorter are ignored. Signals of 100 µs or longer are treated as input signals.)
- Use no-contact output devices (e.g., SSR or PLC transistor output) for the input signals. If contacts (e.g., a relay) are used, chattering may cause the trigger to be input again during execution of a measurement.

Wiring FQ2-S/CH User's Manual

### Power Supply Specifications When a Switching Regulator Is Connected

Use a power supply that meets the following specifications. (They are sold separately.)

	Description			
Item	When connected to	When connected to		
	FQ2-S====== or	FQ2-S======		
	FQ2-CH1=====-M			
Power supply voltage	24 VDC (21.6 to 26.4 V)			
Recommended Power Supplies	S8VS-06024□(24 VDC, 2.5 A)	S8VS-03024 (24 VDC, 1.3 A)		
External power supply terminal screws	M4 (tightening torque: 1.2 N·m)			

### Important

Supply power from a DC power supply for which measures have been applied to prevent high voltages (e.g., a safety extra-low-voltage circuit).

If UL certification is required for the overall system, use a UL Class II DC power supply.


# Wiring the Touch Finder

### **Power Supply Wiring**

### **Connecting the Power Supply**

- 1 Loosen the two terminal screws using a Phillips screwdriver.
- Attach crimp terminals to the power lines. Secure the positive and negative lines as indicated using M3 screws.

Power supply tightening torque: 0.54 N·m

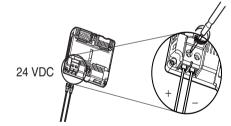

In environments where there is excessive noise, attach a ferrite core (ZCAT1730-0730 from TDK or the equivalent) to the power supply cable.




When you attach the ferrite core to the power supply cable, wrap the cable only one time.

FQ2-S/CH User's Manual Wiring 63

### **Turning ON the Touch Finder**

- 1 Remove the cover from the power switch on the left side of the Touch Finder.
- **2** Press the switch toward ON.

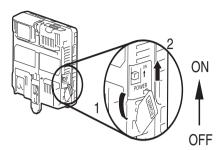

### **Power Supply Specifications**

Use a power supply that meets the following specifications. (The power supply is sold separately.)

Item	Description
Power supply voltage	24 VDC (21.6 to 26.4 V)
Output current	0.65 A min.
Recommended Power Supply	S8VS-01524□ (24 VDC, 0.65 A)
External power supply terminal screws	M3.5 (tightening torque: 1.0 N·m)
Recommended power line wire size	AWG16 to AWG22 (length of 5 m max.)

### Important

- Supply power from a DC power supply for which measures have been applied to prevent high voltages (e.g., a safety extra-low-voltage circuit).
  - If UL certification is required for the overall system, use a UL Class II DC power supply.
- When using the FQ2-D31, do not connect a switching regulator and AC Adapter (FQ-AC□) at the same time.

Wiring FQ2-S/CH User's Manual

### **Charging the Battery**

This section describes how to charge and install the FQ2-D31 Battery and provides applicable precautions.

Charge the Battery while it is attached to the Touch Finder.

Use the AC adapter to charge the battery.

### Mounting the Battery in the Touch Finder


1 Remove the screw from the battery cover on the top of the Touch Finder, slide the cover in the direction of the arrow, and open the battery cover.



2 Face the rounded side of the battery toward the back of the Touch Finder and insert the battery.

Important

Do not insert the battery in the wrong orientation.

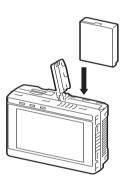


3 Close the battery cover, slide the battery cover in the direction of the arrow, and tighten the screw on the battery cover.



4 Attach the AC adapter to the Touch Finder to start changing the battery.

The CHARGE indicator will be lit while the battery is being charged.

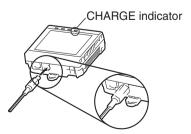

65

The Touch Finder will operate even if the AC adapter is connected when no battery is mounted in the Touch Finder.


### Important

- If the Touch Finder (FQ2-D31) will be installed permanently or semi-permanently, remove the Battery (FQ-BAT1). If the rated temperature is exceeded with the Battery inserted, the protective circuit may activate and stop the Touch Finder.
- The battery complies with the following recycling regulation.



California regulations concerning perchlorate:
 This product is a lithium battery that contains perchlorate, which is regulated by the State of California. Please comply with these regulations. For details see the following URL:
 www.dtsc.ca.gov/hazardouswaste/perchlorate/

# 2-6 Setting Up Ethernet

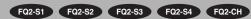

### **Connecting to Sensors from the Touch Finder**

### Configurations Consisting of Only Sensors and the Touch Finder

When only Sensors and a Touch Finder are used, IP addresses are automatically assigned. No settings are required to use Ethernet.

### **Connections on Existing Networks**

If a Sensor or Touch Finder is connected to a network where a PLC or computer is already connected, the Ethernet settings must be made compatible with the existing network.

Set the IP addresses with one of the following methods.

#### Sensor

- ▶ 🖶 (Setup Mode) [Sensor settings] [Network] [Ethernet] [IP address setting]
  - 1 Press [Fixed].
  - 2 Set the IP address and subnet mask according to the network settings.

Note

- If you connect the Touch Finder or PC Tool to a Sensor on a different network through a router, set fixed IP
- When connecting by EtherNet/IP or PROFINET, set fixed IP addresses for the Sensors.

### **TouchFinder**

- - **1** Press [OFF].
  - 2 Set the IP address and subnet mask according to the network settings.

### **Using a DHCP Server**

#### Sensor

- ▶ 🖶 (Setup Mode) [Sensor settings] [Network] [Ethernet] [IP address setting]
  - **1** Press [DHCP].

#### **TouchFinder**

- ▶ 🖶 (Setup Mode) [TF settings] [Ethernet] [AUTO]
  - 1 Press [ON].

### Connecting to Sensors from External Devices Such as PLCs

Set the IP address of the Sensor according to the network where the external devices, such as PLCs, are connected.

- ▶ 🔁 (Setup Mode) [Sensor settings] [Network] [Ethernet] [IP address setting]
  - 1 Press [Fixed].
  - 2 Set the IP address and subnet mask according to the network where the external devices, such as PLCs, are connected.

#### Note

68

If you connect OMRON CS/CJ-series PLCs to the Ethernet, the following Default IP addresses are assigned to the PLCs.

• IP address: 192.168.250.node\_address

Setting Up Ethernet FQ2-S/CH User's Manual

### Connecting to Sensors from a Computer Using the PC Tool


### Configurations Consisting of Only Sensors and a Computer (PC Tool)

If the configuration consists only of Sensors and a Touch Finder, set the network settings on the computer as described below.

(No IP address settings are required on the Sensors.)

The following procedure is for Windows 7.


- 1 Select [Control Panel] from the Windows Start.
- 2 Click [Network and Internet] on Control Panel.
- **3** Click [Network and Sharing Center].
- 4 Click [Change adapter settings] on the left side of [Network and Sharing Center].
- 5 Click the [Local Area Connection] icon in the Network connection window.
- 6 Select [Internet Protocol Version 4 (TCP/IPv4)] in [Local Area Connection Properties], and click [Properties].

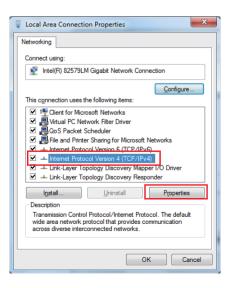

Select the Use the following IP address Option and enter the following IP address and subnet mask.

IP address: 10.5.5.101Subnet mask: 255.255.255.0

8 Click the [OK] Button. This completes the settings.

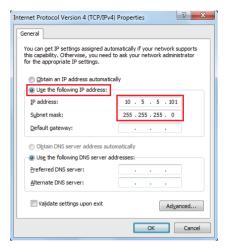

### **Connections on Existing Networks**

Set the Ethernet settings of the Sensors and the computer (PC Tool) to the same settings as the existing network. Refer to *Connecting to Sensors from the Touch Finder* on page 67 for the IP address settings in the Sensors.

Note

70

- If you connect the PC Tool to a Sensor on a different network through a router, set fixed IP addresses.
- When connecting by EtherNet/IP or PROFINET, set fixed IP addresses for the Sensors.

Setting Up Ethernet FQ2-S/CH User's Manual

#### Select the IP address to be used by PC Tool

The computer IP address, subnet address, and Default gateway that are used by the PC Tool are displayed. If multiple IP addresses (network cards) exist in the computer, the IP address to be used for the PC Tool can be selected.

▶ 📥 (Setup Mode or Run Mode) – [TF settings] – [Ethernet] – [IP address]

1 A list of the computer IP addresses that can be used by the PC Tool appears. Touch the list to select an IP address.




**2** The Sensor List appears.

The connected sensor is temporarily disconnected.

To refresh the list, touch [Update list] of any sensor.



3 Select the sensor that you want to connect and touch [OK]. (The sensor is reconnected.)

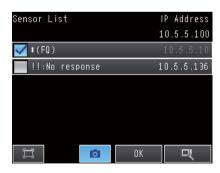

Note

- If you want to change the IP address, change the network settings of the computer and then select the IP address using the above procedure.
- If the list does not appear, check if the LAN is correctly connected.

MEMO

72

Setting Up Ethernet FQ2-S/CH User's Manual

# **Taking Images**


3-1 Selecting a Sensor for Configuration	4
3-2 Setting Conditions for Taking Images	75
3-3 Adjusting Image Quality	76
3-4 Adjusting the Timing of Taking Images	37
3-5 Adjusting the Images That Were Taken	1

## 3-1 Selecting a Sensor for Configuration



If multiple Sensors are connected to a single Touch Finder or computer, a list of the Sensors that are connected is displayed by Default. Use the following procedure to change to the Sensor to set up.

- 1 Press = [Switch Sensor].
- 2 Touch the image of the sensor to be set, and touch [OK].
  - will be displayed for Sensors that are not yet set.

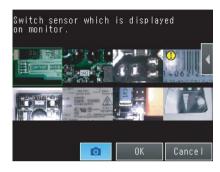

Note


Once the Touch Finder detects and records a Sensor, the display order for showing more than one Sensor is fixed. Even if the system configuration is changed to reduce the number of Sensors, the previous display location will remain for Sensors that were removed.

To update the displays of multiple Sensors to the current connection status, go to Run display - [Sensor monitor] - [Multi sensor], and touch [◀] - [Display position] - [◀] - [Auto position] on the right of the display.

3 Press = - [Sensor settings] to return to Setup Mode.



4 Press [Yes].

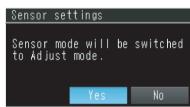

Note

There are different methods that you can use to connect the Sensors. For example, you can automatically connect to the Sensors that are recognized by the Touch Finder, or you can manually register the Sensors to connect.

7-5 Connecting to More Than One Sensor: p. 386

## 3-2 Setting Conditions for Taking Images



You can set the conditions for taking images to use in inspections.


To enable accurate judgments, the following adjustments are made for the conditions for taking images and the images themselves.

Т	Taking Clear Images (Camera Setup)			
	Adjusting the Focus Adjust the focus of the Lens.			
	Taking Bright Images of Dark Objects and Taking Clear Images of Moving Objects  Adjust the shutter speed and gain.			
	Improving the Image Quality of Metallic and Other Shiny Surfaces (HDR)  Make adjustments for shiny objects or metallic surfaces.  For a Sensor with built-in lighting, attach a polarizing filter to cut specular reflections.			
	Adjusting the Colors of the Image (White Balance)			
Α	Adjusting the Timing of Taking Images (Trigger Setting)			
	Trigger Delay   Adjust the timing of taking an image with the Sensor.			



Adjusting the Images That Were Taken (Image Adjustment)			
	Filtering the Images (Filter Items)		
	Compensating for Position Offset (Position Compensation Items)		
	Recognize measurement objects that are not in a consistent location and move them to the center of the image.		

## 3-3 Adjusting Image Quality

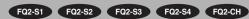

## **Adjusting the Focus**

## ▶ [Image] – [Camera setup]

1 Display the Camera Setup Display.

The focus can be seen as a numerical value. The higher the value, the better the focus.



Focus Level


2 Adjust the focus of the Sensor while checking the image and focus value on the Touch Finder.


For a Sensor with Built-in Lighting, manually adjust the focus using the focus adjustment screw on the Sensor.

In the Default settings, the field of view is set to the narrowest setting.

For a Sensor with a C-mount, use the focus ring on the lens to adjust the focus of the image.

Focus adjustment screw

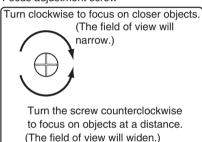

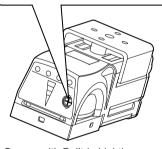

Sensor with Built-in Lighting

## 3 Press [Back].

#### Important

- Turn the focus adjustment screw clockwise or counterclockwise a little bit to make sure that it has not already reached the dead stop. Do not force the screw if it does not rotate anymore. This will damage the Sensor.
- ullet Do not turn the focus adjustment screw with a force that is greater than 0.1 N·m. This may damage it.

## **Adjusting Image Brightness with External Lighting**

You can adjust image brightness with external lighting or by setting the Sensor sensitivity.

## Using a Strobe Trigger Signal to Control External Lighting

If a Sensor Data Unit is connected, you can change the output time of the strobe trigger signal (STGOUT) to adjust the brightness.

FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) Section 2 Controlling Operation and Outputting Data with a Parallel Connection

## **Adjusting the Brightness**

You can adjust the shutter speed/gain or the brightness to make images brighter. The setting method depends on whether HDR Mode is ON or OFF. The setting methods are described below.

HDR Function: p. 83  $\prod$ 

#### Important

The exposure time will be longer for higher values of the shutter speed or brightness. This may cause the image to blur if the object is moving fast. If the Sensor is used on a high-speed line, check that the images are not blurred under actual operating conditions.

#### Brightness Correction Mode (FQ2-S1000/FQ2-S2000/FQ2-S4000/FQ2-S4000-M)

If the brightness changes inconsistently with each image, turn ON the Brightness Correction Mode.


When HDR is ON: ▶ [Brightness] – 【 – [Brightness correction] When HDR is OFF: ▶ [Gain] – 【 – [Brightness correction]

When Brightness Correction Mode is ON, the brightness will be consistent but the timing of image capture will be delayed by 25 ms (when the shutter speed is 1/250 or faster, i.e., the exposure time is shorter).

When built-in lighting is OFF and the shutter speed is slower than 1/250, i.e., the exposure time is longer, the image capture timing will be further delayed.

Make sure that appropriate images of the measured objects are captured when Brightness Correction Mode is ON.

## Timing Chart When the Brightness Correction Mode Is ON

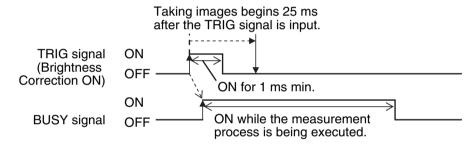


FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)
Section 2 Controlling Operation and Outputting Data with a Parallel Connection

#### Important

If the gain is increased, the brightness will not be stable and measurement values may be inconsistent. We recommend that you turn ON the Brightness Connection Mode.

The brightness of the image is adjusted by adjusting the shutter speed. If the brightness cannot be improved by adjusting the shutter speed, the gain is adjusted.

Relationship between the Shutter Speed/Gain and the Image Brightness (For FQ2-S3/S4 series)

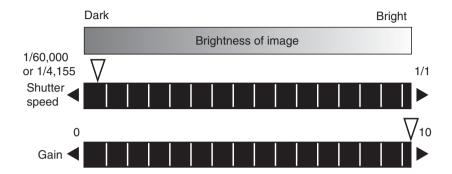

Note

- Adjust the shutter speed not only to adjust the brightness of the image, but also to adjust for the travel speed of the measurement object.
  - Taking Clear Images of Moving Objects: p. 82
- Increasing the gain will make the image brighter, but it will also reduce image quality to the point that the noise component in the images will stand out. Select a suitable factor for the inspection.

## ▶ [Image] – [Camera setup]

- **1** Press [◄] [Shutter speed] on the right of the display.
- 2 Move the bar to the left or right to adjust the shutter speed.

Moving it to the left will make the shutter speed slower and the image brighter. Moving it to the right will make the shutter speed faster and the image darker.



## 3 Press [OK].

If you cannot obtain the required brightness by adjusting the shutter speed, adjust the gain

- **4** Press [◀] [Gain] on the right of the display.
- 5 Move the bar to the left or right to adjust the gain.

Moving it to the right will increase the gain and make the image brighter. Moving it to the left will reduce the gain and make the image darker.



- Press [OK].
- Press [Back].

For FQ2-S3\*\*\*\*-08, FQ2-S4\*\*\*\*-08

Parameter	Setting	Description
	Built-in lighting on	If the shutter speed is slow, the image will be
Shutter speed	Range: 1/250 to 1/60,000, Default: 1/250 *1	bright.
	Built-in lighting off	If the shutter speed is fast, the image will be dark.
	Range: 1/20 to 1/4,155, Default: 1/250 *2	unit: 1/sec
Gain	Range: 0 to 10, Default: 0	If the gain is high, the image will be bright.
		If the gain is low, the image will be dark.

## For FQ2-S3\*\*\*\*-08M, FQ2-S4\*\*\*\*-08M

Parameter	Setting	Description
	Built-in lighting on	If the shutter speed is slow, the image will be
Shutter speed	Range: 1/250 to 1/60,000, Default: 1/250 *1	bright.
		If the shutter speed is fast, the image will be dark.
	Range: 1/1 to 1/4,155, Default: 1/250	unit: 1/sec
Gain	Range: 0 to 10, Default: 0	If the gain is high, the image will be bright.
		If the gain is low, the image will be dark.

For FQ2-S3\*-\*\*, FQ2-S4\*-\*\*

Parameter	Setting	Description
Shutter speed	Range: 1/20 to 1/4,155, Default: 1/250 *2	If the shutter speed is slow, the image will be bright. If the shutter speed is fast, the image will be dark. unit: 1/sec
Gain	Range: 0 to 10, Default: 0	If the gain is high, the image will be bright. If the gain is low, the image will be dark.

For FQ2-S3\*-\*\*M, FQ2-S4\*-\*\*M

Parameter	Setting	Description
Shutter speed	Range: 1/1 to 1/4,155, Default: 1/250	If the shutter speed is slow, the image will be bright.  If the shutter speed is fast, the image will be dark. unit: 1/sec
Gain	Range: 0 to 10, Default: 0	If the gain is high, the image will be bright. If the gain is low, the image will be dark.

**Adjusting Image Quality** 

For FQ2-S1\*\*\*\*, FQ2-S2\*\*\*\*, FQ2-S4\*\*\*\*, FQ2-S4\*\*\*\*-M, FQ2-CH1\*\*\*\*-M

Parameter	Setting	Description
	Built-in lighting on	If the shutter speed is slow, the image will be
Shutter speed	Range: 1/250 to 1/50,000, Default: 1/250 *1	bright.
Built-in lighting off		If the shutter speed is fast, the image will be dark.
	Range: 1/1 to 1/50,000, Default: 1/250	unit: 1/sec
Gain	Range: 16 to 24, Default: 16	If the gain is high, the image will be bright.
		If the gain is low, the image will be dark.

<sup>\*1:</sup> The shutter speed when the built-in lighting is turned on includes not only control by the exposure time of the image sensor, but also control by the light emission time of the lighting

Checking Versions: p.429

#### Important


- To ensure stable operation when the FQ2-S1\_\_\_\_\_/FQ2-S2\_\_\_\_/FQ2-S4\_\_\_\_/FQ2-S4\_\_\_\_\_/M is connected, we recommend that you set the gain to 16.
- If the recommended value is exceeded, the brightness will not be stable and measurement values may be inconsistent. We recommend that you turn ON the Brightness Connection Mode.

If a slow shutter speed (1/1 to 1/10) and a high gain are set, fixed-pattern noise (fleck and striped noise) will sometimes occur. Be sure to thoroughly check the images and the measurement results when you set the shutter speed and gain.

#### When HDR Is ON

Set the brightness adjustment value.

The higher the brightness adjustment value, the brighter the image.

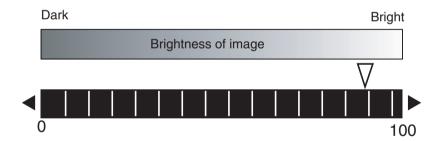

## ▶ [Image] – [Camera setup]

**1** Press [◀] – [Brightness] on the right side of the display.

by the light emission time of the lighting.
\*2: In the case of hardware version A, the range is from 1/1.

2 Move the bar to the left or right to adjust the brightness.

Moving it to the right will make the image brighter, while moving it to the left will reduce the brightness of the image.




3 Press [OK].

## **Taking Clear Images of Moving Objects**

For quick moving objects, the effect of blurring can be reduced by decreasing the shutter speed. In HDR Mode, set the brightness value to a low setting.

• Relationship between Shutter Speed and the Brightness Adjustment Value in HDR Mode

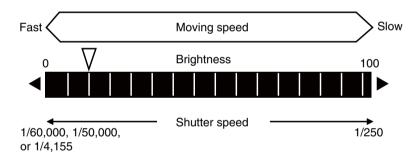

Refer to the following page for the setting methods for the shutter speed and brightness.

Adjusting the Brightness: p. 77

## Important

The lower the shutter speed/gain and brightness settings are, the darker the image becomes. If the Sensor is used in a dark environment, make sure that the darkness of the image does not cause the measurements to be unstable.

## Improving the Image Quality of Metallic and other Shiny Surfaces

When objects with shiny surfaces are being measured, the lighting may be reflected off the surface and affect the image.


To remove reflections, one of the following two functions can be used.

Function	Description
HDR (High Dynamic Range)	If objects have contrasting light and dark areas, the dynamic range can be made wider to improve the quality of the images.
Polarizing filter (for Sensors with Built-in Lighting)	Specular reflections can be eliminated from an image by attaching a polarizing filter to the Sensor.  If the measurement object must be moving, use a polarizing filter.  Also, if reflections cannot be sufficiently removed by using the HDR function, use a polarizing filter as well.

#### **HDR Function**

The HDR function is used for objects that have a large difference between light and dark areas. For this kind of object, clear images cannot be achieved with the standard brightness setting.

The HDR function combines several images of different brightnesses (shutter speed) so that the resulting image has a lower degree of contrast and can be measured stably for the desired characteristic.

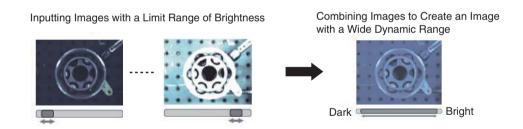

Observe the following precautions.


Use the HDR function only for objects that are not moving to avoid image blurring. Several images are taken with different shutter speeds and combined. If the object moves while the image is being taken, the image will become blurred.


Images with different brightnesses are combined, so the resulting image will have a lower degree of contrast.

## ▶ [Image] – [Camera setup]

- 1 Press [◀] [HDR] on the right side of the display.
- 2 Set the best level for the HDR Mode.


As shown below, the higher the level, the wider the combined dynamic range will be.

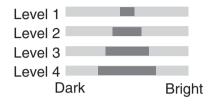

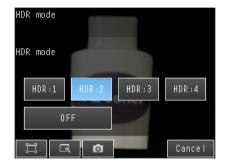

## Using a Polarizing Filter (Only for Sensors with Built-in Lighting)


Specular reflections can be eliminated from an image by attaching an FQ-XF1 Polarizing Filter to the Sensor.

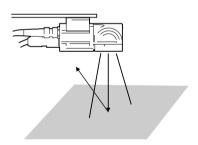


Observe the following precautions.

- The image will be darker compared to when no filter is used.
- If the image becomes too dark, adjust the brightness.
  - Adjusting the Brightness

When HDR Is OFF: p. 79 When HDR Is ON: p. 81 1 Hook the filter in the hole at the top of the Sensor.

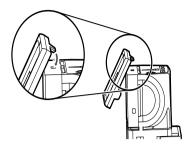

2 Using the top section as a pivot point, pull down the filter so that it attaches to the Sensor.

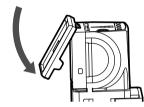

## Adjusting the Colors of the Image (White Balance) (Only for Sensors with Color Cameras)


If external lighting is used, the image may appear as having different colors than the actual object. If this is the case, adjust the white balance.

If the lighting built in to the Sensor is used, the white balance is already adjusted. No setting is required in this case.

## ▶ [Image] – [Camera setup]

- 1 Input a picture of white paper or cloth.
- 2 Press [◄] [White balance] on the right side of the display.

- 3 Press the [Auto] Button. The Sensor will automatically adjust the colors.
- 4 Move the bar to the left (light) or right (dark) to fine-tune the colors.
- 5 Press [OK].

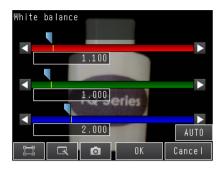


## Rotating the Touch Finder Image by 180°

You can rotate the Camera image by 180°.

This setting also applies to re-measurement of logged images.

**▶** [Image] – [Camera setup] – [◄] – [Rotate 180]

## 3-4 Adjusting the Timing of Taking Images

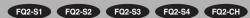

## **Delaying the Image Capture Timing from the Trigger Input**


If the measurement object is moving, the position in the image of the feature that is to be measured will depend on the timing of the trigger signal.

A delay can be applied from when the trigger (i.e., the TRIG signal) is input until when the image is taken to synchronize the timing of image capture with the speed of moving objects.

If the object position varies in the image, this delay cannot be used to make the object position more stable. When you use a trigger delay with external lighting, you will also need to adjust the timing to turn ON external lighting.



Delay from when the trigger is input until when Sensor input is started.

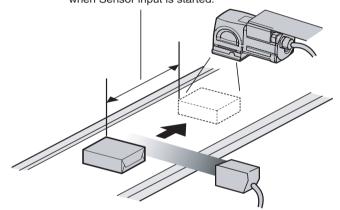


Trigger input Sensor

## ► [Image] – [Trigger setup] – [Trigger delay]

1 A TRIG signal is input.

Images are input continuously.


- 2 Select the image with the measurement object in the center using and .
- 3 Press the image.
- 4 Press [OK].

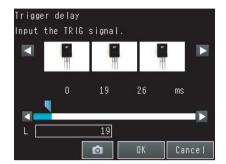

Setting item	Setting value	Description
	Default: 0	Adjusts the time for opening the camera shutter after Trigger conditions are established. Only valid for external triggers. Delay time = (Setting value) + 150µs

## Note

The delay time can be set using the adjustment bar or by directly entering a value.

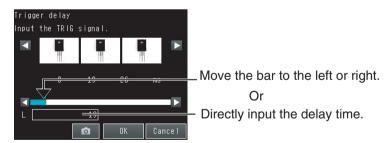

When you use a trigger delay, you must adjust the timing to turn ON external lighting so that it matches the trigger delay timing.

## Using a Strobe Trigger Signal to Control External Lighting

If a Sensor Data Unit is connected, you can change the output time of the strobe trigger signal (STGOUT) to adjust the timing of the external lighting.


- FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)
  Section 2 Controlling Operation and Outputting Data with a Parallel Connection
- [Image] [Camera setup] [◄] [Lightning control]

## **Preventing Mutual Interference of Multiple Sensors**

When the same trigger signal is input to multiple Sensors, the lighting from one Sensor may affect the measurements of the other Sensors. This is called mutual interference. This kind of interference can be prevented offsetting the image input timing of each Sensor from when the trigger signal is received.


#### Example:

A trigger (i.e., the TRIG signal) is input to Sensor 0 and Sensor 1 at the same time.

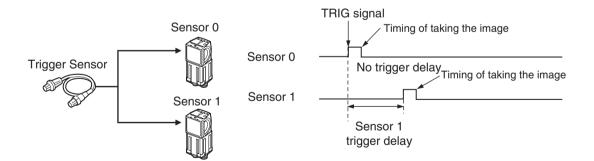

Sensor 0 immediately begins image input when the trigger is input. Sensor 1 begins image input after the specified time has passed.

- 1 Change to the setup for to Sensor 1.
  - 3-1 Selecting a Sensor for Configuration: p. 74
- 2 Press [Image] [Trigger setup] [Trigger delay].
- 3 Set the trigger input delay time for Sensor 1.
  - Delaying the Image Capture Timing from the Trigger Input: p. 87

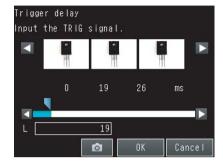


## Important

The delay time for preventing mutual interference must be longer than the shutter time.

When the lighting built into the Sensor is used, the shutter time is 4 ms max. Therefore make the delay at least 4 ms.

## 3-5 Adjusting the Images That Were Taken

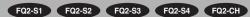

## **Image Adjustment**

You can adjust the image that is taken by the Sensor to make it easy to measure.

There are mainly the following two types of items that you can use to adjust the image.

- Filtering the Images (Filter Items)
  - These items filter the image by eliminating image noise with filters to make them suitable for measurement.
- Compensating for Position Offset (Position Compensation Items)
   These items compensate for offset in the position or orientation of the image.


You can combine several filter items and position compensation items to adjust the image that was taken. (You can use a total of up to eight filter and position compensation items combined.)

#### Flow of Image Adjustment

The image that is taken by the Camera (called the Camera image) is adjusted in the order that the filter and position compensation items are registered.

Note

You can specify the order of image adjustment by registering the items in the desired order, but you cannot change the order of the items after you register them.

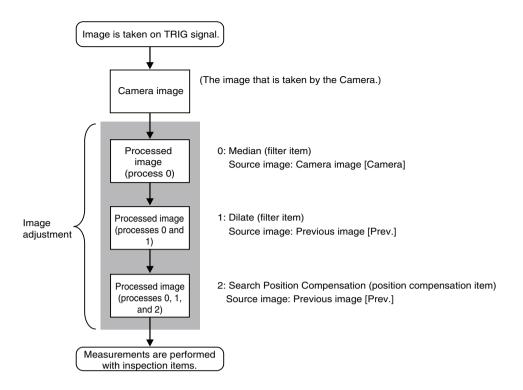

#### Note

Specify the Camera image for the first filter item for image processing.

If you execute more than one filter item for the image, set the source image for the other filter items to the previous image. Also, you can perform image processing with filter items only to enable processing with position compensation items.

In that case, only the position information from position compensation is applied to the image to be measured. For details, refer to *Using Filter Items for Processing with Position Compensation Items* on page 106.

## Filtering the Images (Filter Items)

You can filter the images that are taken by the Camera to make them easier to measure. This is used in the following cases.

- To cut unnecessary backgrounds so that they are not measured
- To remove noise

To stably find the edges of marks when other edges have been clearly extracted

## **Applicable Filters**

Selected filter item	Description	
Color Gray Filter (only for Sensors with	Converts an image that was input from a Color Camera to a monochrome image.  Example: You can extract an image that contains only a specific color.	
Color Cameras)	Note      This inspection item cannot be used for monochrome images. An NG (image error) will result if you use it for a monochrome image.      All inspection items after the Color Gray Filter item will be performed in the same way as when a Monochrome Camera is connected.	
Weak Smoothing	Used when there are minor irregularities in the measurement object.	
Strong Smoothing	The image is feathered to reduce unevenness.	
Dilate	Used when there is dark noise.  Dark noise is removed by dilating bright places.	
Erosion	Used when there is bright noise. Bright noise is removed by eroding bright places.	
Median  Used when there are minor irregularities in the measurement object.  Unevenness is reduced while maintaining outlines.		
Extract Edges	Extracts image edges between light and dark.	
Extract Horiz. Edges (extract horizontal edges)		
Extract vertical edges	Extracts vertical edges between light and dark in the image.	
Enhance edges Enhances image edges between light and dark.		

Selected filter item	Description	
Background Suppression	Extracts a specific range of brightness to increase the image contrast and suppress the unnecessary background.  Example: Increasing Contrast	
	Any areas that are outside of the specified range of brightness are removed as the background.  Also, the brightness within the specified range is converted to 256 levels to enhance the contrast.	

## **Setting Filter Items**

## ▶ [Image] – [Image adjustment]

- 1 Press an unused number, and then press [Add filter].
- 2 Press the filter item to use.
- 3 Make any detailed settings as required for the filter.

Refer to the detailed settings for each of the following filter items.



- 4 Press [OK].
- 5 Press [Back].
- 6 Make any the following settings as required for each filter item.
  - Setting the Source Image for Filtering p. 95
  - Setting the Region to Filter p. 95
  - Setting the Filter Type (for Color Gray Filter Only) p. 96
  - Setting the Brightness Range to Extract (for Background Suppression Item Only) p. 98

You must set the image to which the filter is to be applied.

- ▶ [Image] [Image adjustment] [Add filter] (Filter item to select)
  - 1 Press [◀] [Source image] on the right of the display.
  - 2 Set the source image to [Camera] or [Prev.].

Parameter	Setting	Description
	Camera	
	(camera image)	The filter is applied to the image that is taken by the Camera.
Source image	Prev.	The filter is applied to the image that resulted from the previous
	(brevious image)	filter items or position compensation items in the processing order.


## Setting the Region to Filter

You can specify the region to which to apply the filter.

This setting does not exist in the Color Gray Filter item.

- ▶ [Image] [Image adjustment] [Add filter] (Filter item to select)
  - 1 Press [◄] [Filter region] on the right of the display.
  - 2 Adjust the size and position of the region to which the filter is to be applied.

To fine-tune the region, press [◄] – [Console] on the right of the display to display the console. This will allow you to change the coordinates of the rectangle at the pixel level.

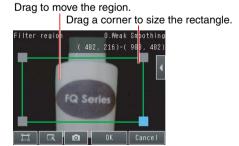


## **Setting the Filter Type (for Color Gray Filter Only)**


You can specify the ranges of colors to which the Color Gray Filter item is applied.

- ► [Image] [Image adjustment] [Add filter] [Color Gray Filter]
  - **1** Press [◀] [Filter type] on the right of the display.
  - 2 Set the filter type to either [RGB] or [HSV].


Parameter	Description
	The red, green, and blue extraction
(Default)	ranges are specified.
	The extracted color ranges are specified with the hue and chroma (saturation).

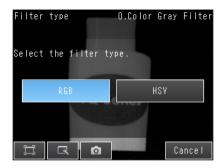

- **3** Press [◄] [Filter settings] on the right of the display.
- 4 Make the detailed filter settings.
  - RGB
     Select the type of color filter to use.
     If you select [Custom filter], set the gains for red, green, and blue.

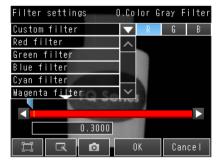

HSV
 Set the following ranges: [Std. Hue], [Hue range], and [Chroma].

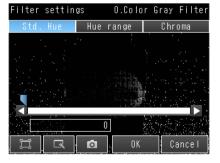

## 6 Press [Back].

#### • RGB

Parameter	Setting	Description	
Filter settings	Red filter (Default) Green filter Blue filter Cyan filter Magenta filter Yellow filter Brgt.F (brightness filter) (R+G+B) Brgt.F (brightness filter) (R+2G+B) Custom filter	These filters achieve the same effect as when using the selected optical filter.	
R	Range: 0.0001 to 9.9999 Default: 0.3000	These are the RGB gain settings for a custom	
G	Range: 0.0001 to 9.9999 Default: 0.5900	filter. Increase the gain to increase the density of that color component.	
В	Range: 0.0001 to 9.9999 Default: 0.1100	You can set the gains only if [Custom filter] is selected in the filter settings.	

## • HSV

Parameter	Setting	Description
Std. Hue	Range: 0 to 359	Sets the standard hue for the HSV filter.
(standard hue)	Default: 0	The density will decrease as the difference between
		the hue and the standard hue increases.
		Sets the hue range for the HSV filter.
Hue range	Range: 10 to 180 Default: 90	The hue range centered on the standard hue is divided into 255 levels to find the difference in the hue. Hues that are outside the hue range will have a density of 0.
Chroma (saturation)	Range: 0 to 255 (Default)	Set the upper and lower limit values for the chroma (saturation).

#### Setting the Brightness Range to Extract (for Background Suppression Item Only)


The range in which to enhance the contrast and the brightness range to extract are set for the Background Suppression item. The Background Suppression item works as described below to suppress the background for the specified brightness range.

#### · Enhancing Contrast

The range of the input brightness that is within the specified brightness range (0 to 255) is converted to 255 levels to enhance the contrast

## • Background Suppression

Input values from 0 to the lower limit are converted to level 0 and input values between the upper limit and 255 are converted to level 255 to remove as the background any places that are not within the specified brightness range.

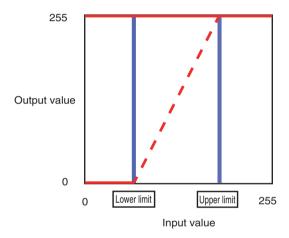


You can use either of the following methods to set the upper and lower limits of the brightness range to extract with the Background Suppression item.

## • Enhancing the Contrast of a Specific Area

You specify the location on the image to enhance the contrast.

- ▶ [Image] [Image adjustment] [Background Suppression] [Modify]
  - Press [◀] [Suppression level] on the right of the display.

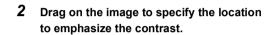

The contrast in the specified range will be reset to between 0 and 255.



- 3 Press [OK].
- Press [Back].

#### • Extracting Only a Specified Range of Brightness


You set the upper and lower limits of the brightness range to extract with the Background Suppression item.

- [Image] [Image adjustment] [Background suppression] [Modify]
  - 1 Press [◄] [Suppression level] on the right of the display.
  - 2 Press [◄] [RGB setting] on the right of the display.
  - 3 Select the method to use to specify the brightness range. (This setting applies to Sensors with Color Cameras only.)
    - Common RGB Settings
       Set the upper and lower limit values of the brightness range. The same limits will be used for all RGB colors.
    - Individual RGB Settings
       Set the upper and lower limit values of the brightness range for each RGB color. Press [R], [G], and [B] and set the upper and lower limits for each of them.





4 Set the upper and lower limit values of the brightness range. (for Sensors with Monochrome Cameras (or after a Color Gray Filter))

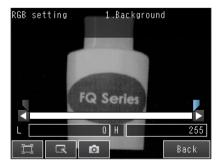

- 5 Press [Back].
- 6 Press [OK].
- 7 Press [Back].

Parameter	Setting	Description
Common (common RGB setting)	Range: 0 to 255 (Default)	Set the upper and lower limit values of the background suppression level. The same limits will be used for all RGB colors. The range from the specified lower to upper limits is converted to 0 to 255.
Individual (individual RGB settings)	Range: 0 to 255 (Default)	Set the upper and lower limit values of the background suppression level for each RGB color. The range from the specified lower to upper limits is converted to 0 to 255.
Brightness range (for Sensors with Monochrome Cameras)	Range: 0 to 255 (Default)	The specified range is converted to 0 to 255.

## Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations. Measurement data can be specified for each filter item.

Expression t ext string	Data name	Description	Data range
JG	Judgement	This is the judgment result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG

## **Compensating for Position Offset (Position Compensation Items)**


Use position compensation items if the position or orientation of the measurement object is not consistent. When you use a position compensation item, the offset between the reference position and the position of the object is calculated and the position of the inspection region is corrected before measurements are performed.

## **Applicable Position Compensation Items**

There are three position compensation items as indicated below. These items vary by detection method.

Туре	Description
Model	A search is made for a characteristic pattern to detect and correct the position.
(model position compensation)	Shape Sear III.pos.comp (Shape Search Position Compensation III)     Shape Sear. pos. comp. (Shape Search Position Compensation)     Search position comp. (Search Position Compensation)
	The color distribution or density changes in the object are used to detect and correct the position.
Edge position comp. (edge position compensation)	<ul> <li>Edge position comp. (Edge Position Compensation)</li> <li>2Edge position comp. (Two-edge Position Compensation)</li> <li>2Edge midpoint comp. (Two-edge Midpoint Compensation)</li> <li>Edge rot. pos. comp. (Edge Rotation Position Compensation)</li> </ul>
Numerical position compensation	Position is corrected based on entered value and image. Position comp. (Image rotation, Parameter) Linear correction

## • Features of the Position Compensation Items

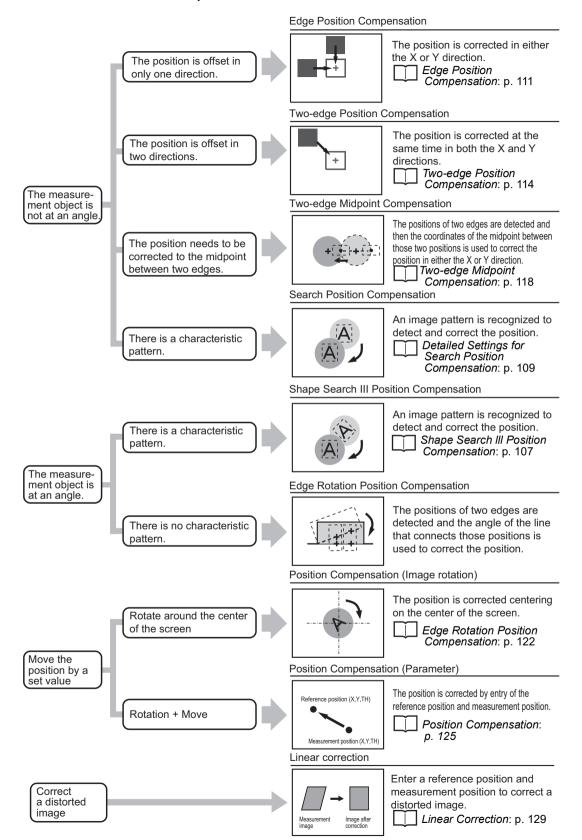

#### **Applying the Results of Position Compensation**

You can apply the results of position compensation either to the Camera image or to the previous image from before position compensation was applied.

If you apply the results of position compensation to the Camera image, only the position information from position compensation is applied to the image to be measured.

Using Filter Items for Processing with Position Compensation Items: p. 106

## • Setting the Image for Position Compensation

You can select the image to which to apply the results of position compensation processing. You can set the image for position compensation for each position compensation item.

- ▶ [Image] [Image adjustment] (Position compensation item name) [Modify]
  - 1 Touch [Details] [Scroll parameter]
  - 2 Set the source image to [Camera] or [Prev.].

Parameter	Setting	Description
Source image	Camera (Camera Image)	The results of processing the position compensation item is applied to the image that is taken by the Camera.  This setting is used when filter items or other position compensation items have been used specifically for the position compensation item.  Using Filter Items for Processing with Position Compensation Items: p. 106
	Prev. (previous image) (default)	This setting is used when the processing results of the current position item are to be applied to the image that results from previous filter items or other position compensation items.

## Source Image

You can select the image to which to apply the results of position compensation processing.

Applying the Results of Position Compensation: p.104

## Interpolation

You can select the precision of position compensation.

If you select [Bilinear], the precision of position compensation will increase.

- [Image] [Image adjustment] [Search position comp.] [Modify] [Details]
   [Scroll parameter] [Interpolation]
  - 1 Touch [Details] [Scroll parameter] [Shape pos. comp]
  - 2 Select [Bilinear] or [None].


Parameter	Setting	Description
Interpolation	Bilinear	Connects the points with a line and calculates an approximate value, Although, the processing time will be longer, a smooth image can be acquired when you select [Bilinear],
	None (Default)	Image correlation is executed by a pixel.

#### • Using Filter Items for Processing with Position Compensation Items

To more effectively perform position compensation, filter items can be used to create an image specifically for position compensation and then apply only the results of processing the position compensation to the image that will be measured.

The processing order of filter and position compensation items and the settings of the source images are set up as shown below.

Processing order	Image processing item	Source image setting
1	0: Enhance edges (Edge Enhancement) (filter item)	Source image: Camera image Camera image (image for processing)  → Processed image (results of processing)
2	Search position comp. (Search Position Compensation) (position compensation item)	Source image: Camera image Previous image (image for processing)  → Camera image (results of processing)

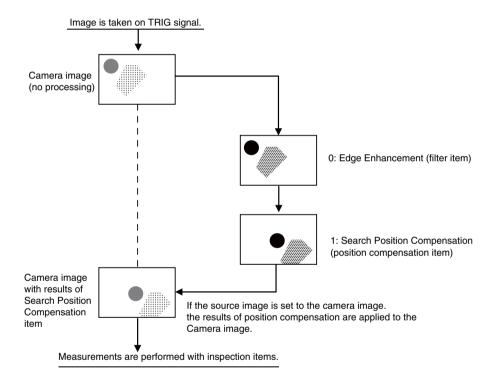

With this position compensation item, an image pattern is registered in advance. When the registered image pattern is detected, the image is adjusted so that the image pattern is in the same position as when it was registered.


This position compensation item performs the same type of processing as the Search Position Compensation item, but it performs special processing for the shape of the image pattern.

Use this position compensation item to correct the position of a rotated image pattern.

### [Image] – [Image adjustment]

- Press an unused number and then press [Add pos. comp.].
- 2 Press [Model] [Shape III. pos. comp.]
- 3 Make any detailed settings as required for the position compensation processing.

Refer to Detailed Settings for Shape Search III Position Compensation, below.

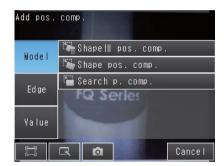

- Press [OK].
- 5 Press [Back].

### • Detailed Settings for Shape Search Position Compensation

The settings for the Shape Search III Position Compensation item are almost the same as those for the Shape Search II inspection item. Only the [Sorting method] settings of the Search item are not included in the settings of the Shape Search Position Compensation item.

Configure the settings for teaching and the judgment conditions in the same way as for the Shape Search II item.

4-9 Inspecting with the Shape Search III Inspection Item: p. 230

Also, the following settings are included only in the Shape Search III Position Compensation Item.

### Source Image

You can select the image to which to apply the results of position compensation processing.

Applying the Results of Position Compensation: p. 104

### Interpolation

You can select the precision of position compensation.

If you select [Bilinear], the precision of position compensation will increase.

### ▶ [Image] – [Image adjustment] – [Search III pos. comp.] – [Modify]

- 1 Press [Details] [Scroll parameter] [Interpolation]
- 2 Set the interpolation to [Bilinear] or [None].

Parameter	Setting	Description
Interpolation	Bilinear	Connects the points with a line and calculates an approximate value, Although, the processing time will be longer, a smooth image can be acquired when you select [Bilinear],
	None (Default)	Position compensation is performed at the pixel level.

### • Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgement result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -10: Image inconsistency error -15: Out of range error
DX	Scroll X	This is the amount of position compensation for the X coordinate.	-99,999.9999 to 99,999.9999
DY	Scroll Y	This is the amount of position compensation for the Y coordinate.	-99,999.9999 to 99,999.9999
DT	Scroll q	This is the amount of angular compensation, q.	-180 to 180
Х	Position X	This is the X coordinate of the position where the model was found.	-99,999.9999 to 99,999.9999
Y	Position Y	This is the Y coordinate of the position where the model was found.	-99,999.9999 to 99,999.9999
TH	Angle	This is the angle at which the model was found.	-180 to 180
SX	Reference X	This is the X coordinate of the position where the model was registered.	-99,999.9999 to 99,999.9999
SY	Reference Y	This is the Y coordinate of the position where the model was registered.	-99,999.9999 to 99,999.9999
ST	Reference angle	This is the angle when the model was registered.	-180 to 180

Expression text string	Data name	Description	Data range
CR	Correlation	This is the correlation.	0 to 100

### Measurement Data That Can Be Logged

The values below can be logged as measurement data.

Parameter	Setting	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	This is the judgment result.
Scroll X	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the X coordinate.
Scroll Y	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the Y coordinate.
Scroll q	-180 to 180	This is the amount of angular compensation, q.
Correlation	0 to 100	This is the correlation.
Position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was found.
Position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was found.
Angle	-180 to 180	This is the angle at which the model was found.

## **Detailed Settings for Search Position Compensation**

The settings for the Search Position Compensation item are almost the same as those for the Search inspection item. (The [Multi-point output] and model parameter settings of the Search inspection item are not included in the Search Position Compensation settings.) Make the settings for teaching and the judgment conditions in the same way as for the Search item.

$\Box$	Inspecting with	the Shape	Search II	Inspection	ltem:	p.215
--------	-----------------	-----------	-----------	------------	-------	-------

Also, the following settings are included only in the Search Position Compensation Item.

### Source Image

You can select the image to which to apply the results of position compensation processing.

Applying the Results of Position Comp	ensation:	p.10
---------------------------------------	-----------	------

### Interpolation

Select the image to reflect the results of Interpolation processing to.

If you select [Bilinear], the precision of position compensation will increase.

- [Image] [Image adjustment] [Search position comp.] [Modify] [Details] [Scroll parameter] [Interpolation]
  - 1 Press [Details] [Scroll parameter] [Interpolation]
  - 2 Set the interpolation to [Bilinear] or [None].

Parameter	Setting	Description
Interpolation	Bilinear	Connects the points with a line and calculates an approximate value, Although, the processing time will be longer, a smooth image can be acquired when you select [Bilinear],
	None (Default)	Position compensation is performed at the pixel level.

### • Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -10: Image error -15: Out of range error	This is the judgment result.
DX	Scroll X	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the X coordinate.
DY	Scroll Y	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the Y coordinate.
X	Position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was found.
Y	Position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was found.
SX	Reference X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was registered.
SY	Reference Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was registered.
CR	Correlation	0 to 100	This is the correlation.

### • Measurement Data That Can Be Logged

The values below can be logged as measurement data.


Parameter	Setting	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error	This is the judgment result.
Scroll X	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the X coordinate.
Scroll Y	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the Y coordinate.
Correlation	0 to 100	This is the correlation.
Position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was found.
Position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was found.

### **Edge Position Compensation**

This position compensation item detects an edge in the set direction.

If the specified color is detected (or the specified density is detected for a Sensor with a Monochrome Camera), it is recognized as an edge.

When an edge is recognized, the image is adjusted so that the edge appears at the position it was in when it was registered.

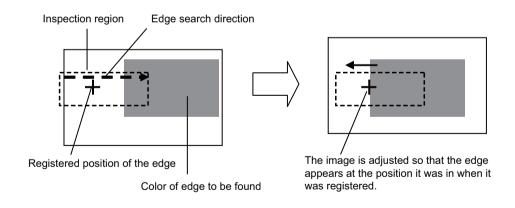

Limag	ej – [image adjustment]
1	Press an unused number and then press [Add pos. comp.].
2	Press [Edge] – [Edge position comp.].
3	Make any detailed settings as required for the position compensation processing.  Refer to Detailed Settings for Edge Position Compensation, below.
4	Press [OK].
5	Press [Back].
• Detailed	Settings for Edge Position Compensation
inspection	settings for teaching and the judgment conditions in the same way as for the Edge Position
<u></u>	1-12 Inspecting with the Edge Position Inspection Item: p. 271
However,	the following settings are included only in the Edge Position Compensation Item.
• Source	Image
You can s	elect the image to which to apply the results of position compensation processing.
<u></u>	pplying the Results of Position Compensation: p.104
• Interpol	ation
	elect the precision of position compensation. ct [Bilinear], the precision of position compensation will increase.
	e] – [Image adjustment] – [Edge position comp.] – [Modify] – [Details] - [Scroll parameter] rpolation]
The settin	gs are the same as those for the Shape Search Position Compensation item.
□ Ir	nterpolation: p. 108

### • Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgement result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG
DX	Scroll X	This is the amount of position compensation for the X coordinate.	-99,999.9999 to 99,999.9999
DY	Scroll Y	This is the amount of position compensation for the Y coordinate.	-99,999.9999 to 99,999.9999
Х	Position X (edge position X)	This is the X coordinate of the measured edge position.	-99,999.9999 to 99,999.9999
Y	Position Y (edge position Y)	This is the Y coordinate of the measured edge position.	-99,999.9999 to 99,999.9999
SX	Reference X	This is the X coordinate of the edge position when it was registered.	-99,999.9999 to 99,999.9999
SY	Reference Y	This is the Y coordinate of the edge position when it was registered.	-99,999.9999 to 99,999.9999

### • Measurement Data That Can Be Logged

The values below can be logged as measurement data.


Parameter	Setting	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	This is the judgment result.
Scroll X	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the X coordinate.
Scroll Y	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the Y coordinate.
Position X (edge position X)	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge position.
Position Y (edge position Y)	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge position.

### **Two-edge Position Compensation**

This position compensation item detects edges in two directions.

If the specified color is detected (or the specified density is detected for a Sensor with a Monochrome Camera), it is recognized as an edge.

When an edge is recognized, the image is adjusted so that the edge appears at the position it was in when it was registered.

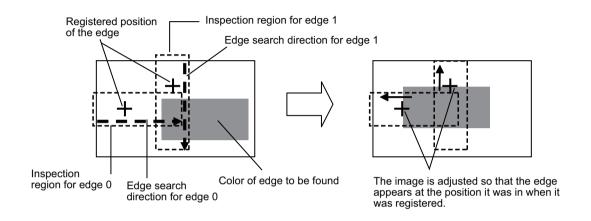

### ▶ [Image] – [Image adjustment]

- 1 Press an unused number and then press [Add pos. comp.].
- Press [Edge] [2Edge position comp.].
- 3 Make any detailed settings as required for the position compensation processing.

Refer to Detailed Settings for Two-edge Position Compensation, below.

- 4 Press [OK].
- 5 Press [Back].

### • Detailed Settings for Two-edge Position Compensation

The settings for the Two-edge Position Compensation item are almost the same as those for the Edge Position inspection item.

Make the settings in the same way as for the Edge Position inspection item.

4-12 Inspecting with the Edge Position Inspection Item: p. 271

However, the following settings are included only in the Edge Position Compensation Item.

### Teaching

Set the inspection regions and measurement directions for both edge 0 and edge 1.

### ► [Image] - [Image adjustment] - [2Edge position comp.] - [Modify] - [Basic]


- 1 Press [Teach].
- 2 Place the object that is to be used as the measurement reference in front of the camera.
- 3 Move the rectangle to the location to be measured, and then press [OK].


This concludes setting the inspection region and edge search direction for edge 0.


Next, go to step 4 to set the inspection region and edge search direction for edge 1.

- 4 Press [◄] [Edge1 region] on the right of the display, move the rectangle to the location to be measured, and then press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed.

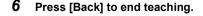

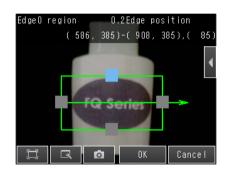

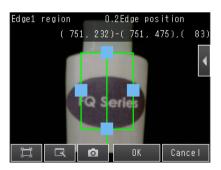

### Source Image

You can select the image to which to apply the results of position compensation processing.

Applying the Results of Position Compensation: p.104

### Interpolation

You can select the precision of position compensation.

If you select [Bilinear], the precision of position compensation will increase.

### ▶ [Image] – [Image adjustment] – [2Edge position comp.] – [Modify] – [Details] – [Interpolation]

The settings are the same as those for the Shape Search Position Compensation item.

Interpolation: p. 108

### Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgement result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error
DX	Scroll X	This is the amount of position compensation for the X coordinate.	-99,999.9999 to 99,999.9999
DY	Scroll Y	This is the amount of position compensation for the Y coordinate.	-99,999.9999 to 99,999.9999
X0	Edge 0 position X	This is the X coordinate of the measured edge 0 position.	-99,999.9999 to 99,999.9999
Y0	Edge 0 position Y	This is the Y coordinate of the measured edge 0 position.	-99,999.9999 to 99,999.9999
X1	Edge 1 position X	This is the X coordinate of the measured edge 1 position.	-99,999.9999 to 99,999.9999
Y1	Edge 1 position Y	This is the Y coordinate of the measured edge 1 position.	-99,999.9999 to 99,999.9999
SX0	Edge0 ref. position X (edge 0 reference position X)	This is the X coordinate of the edge 0 position when it was registered.	-99,999.9999 to 99,999.9999
SY0	Edge0 ref. position Y (edge 0 reference position Y)	This is the Y coordinate of the edge 0 position when it was registered.	-99,999.9999 to 99,999.9999
SX1	Edge1 ref. position X (edge 1 reference position X)	This is the X coordinate of the edge 1 position when it was registered.	-99,999.9999 to 99,999.9999
SY1	Edge1 ref. position Y (edge 1 reference position Y)	This is the Y coordinate of the edge 1 position when it was registered.	-99,999.9999 to 99,999.9999

# • Measurement Data That Can Be Logged

The values below can be logged as measurement data.


Parameter	Setting	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error	This is the judgement result.
Scroll X	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the X coordinate.
Scroll Y	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the Y coordinate.
Edge 0 position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge 0 position.
Edge 0 position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge 0 position.
Edge 1 position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge 1 position.
Edge 1 position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge 1 position.

### **Two-edge Midpoint Compensation**

This position compensation item detects edges in two directions.

If the specified color is detected (or the specified density is detected for a Sensor with a Monochrome Camera), it is recognized as an edge. Two edge positions are detected.

The image is adjusted so that the coordinates of the midpoint position of a line that connects the two detected edge positions matches the position when the edges were registered.

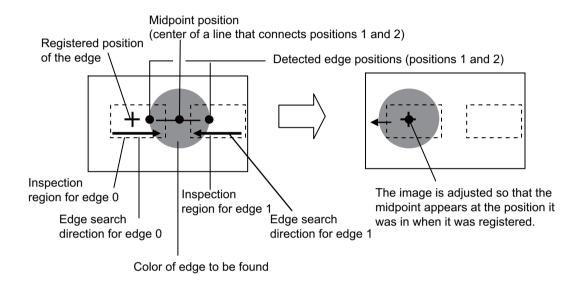

### [Image] – [Image adjustment]

- 1 Press an unused number and then press [Add pos. comp.].
- 2 Press [Edge] [2Edge midpoint comp.].
- **3** Make any detailed settings as required for the position compensation processing. Refer to *Detailed Settings for Two-edge Midpoint Compensation*, below.
- 4 Press [OK].
- 5 Press [Back].

### • Detailed Settings for Two-edge Midpoint Compensation

The settings	for the	e Two-edge	Midpoint	Compensation	item	are	almost	the	same	as	those	for	the	Edge
Position inspe	ection i	tem.												

Make the settings in the same way as for the Edge Position inspection item.

4-12 Inspecting with the Edge Position Inspection Item: p. 271

However, the following settings are included only in the Edge Position Compensation Item.

### Teaching

Set the inspection regions and measurement directions for both edge 0 and edge 1.

[Image] - [Image adjustment] - [2Edge midpoint comp.] - [Modify] - [Basic] - [Teach]

The settings are the same as those for the Two-edge Position Compensation item.

Teaching: p. 115

### Source Image

You can select the image to which to apply the results of position compensation processing.

Applying the Results of Position Compensation: p.104

### Interpolation

You can select the precision of position compensation.

If you select [Bilinear], the precision of position compensation will increase.

▶ [Image] - [Image adjustment] - [2ed. midp. comp.] - [Modify] - [Details] - [Scroll parameter] -[Interpolation]

The settings are the same as those for the Shape Search Position Compensation item.

Interpolation: p. 108

## • Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgement result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error
DX	Scroll X	This is the amount of position compensation for the X coordinate.	-99,999.9999 to 99,999.9999
DY	Scroll Y	This is the amount of position compensation for the Y coordinate.	-99,999.9999 to 99,999.9999
X0	Edge 0 position X	This is the X coordinate of the measured edge 0 position.	-99,999.9999 to 99,999.9999
Y0	Edge 0 position Y	This is the Y coordinate of the measured edge 0 position.	-99,999.9999 to 99,999.9999
X1	Edge 1 position X	This is the X coordinate of the measured edge 1 position.	-99,999.9999 to 99,999.9999
Y1	Edge 1 position Y	This is the Y coordinate of the measured edge 1 position.	-99,999.9999 to 99,999.9999
MX	Midpoint X	This is the X coordinate of the measured edge midpoint position.	-99,999.9999 to 99,999.999
MY	Midpoint Y	This is the Y coordinate of the measured edge midpoint position.	-99,999.9999 to 99,999.999
SX0	Edge0 ref. position X (edge 0 reference position X)	This is the X coordinate of the edge 0 position when it was registered.	-99,999.9999 to 99,999.9999
SY0	Edge0 ref. position Y (edge 0 reference position Y)	This is the Y coordinate of the edge 0 position when it was registered.	-99,999.9999 to 99,999.9999
SX1	Edge1 ref. position X (edge 1 reference position X)	This is the X coordinate of the edge 1 position when it was registered.	-99,999.9999 to 99,999.9999
SY1	Edge1 ref. position Y (edge 1 reference position Y)	This is the Y coordinate of the edge 1 position when it was registered.	-99,999.9999 to 99,999.9999
SMX	Ref. Midpoint X (reference midpoint X)	This is the X coordinate of the midpoint of the two edges when they were registered.	-9,999.9999 to 99,999.9999
SMY	Ref. Midpoint Y (reference midpoint Y)	This is the Y coordinate of the midpoint of the two edges when they were registered.	-9,999.9999 to 99,999.9999

# • Measurement Data That Can Be Logged

The values below can be logged as measurement data.


Parameter	Setting	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error	This is the judgement result.
Scroll X	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the X coordinate.
Scroll Y	-99,999.9999 to 99,999.9999	This is the amount of position compensation for the Y coordinate.
Midpoint X	-99,999.9999 to 99,999.999	This is the X coordinate of the measured edge midpoint position.
Midpoint Y	-99,999.9999 to 99,999.999	This is the Y coordinate of the measured edge midpoint position.
Edge 0 position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge 0 position.
Edge 0 position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge 0 position.
Edge 1 position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge 1 position.
Edge 1 position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge 1 position.

### **Edge Rotation Position Compensation**

This position compensation item detects an edge in two directions.

If the specified color is detected (or the specified density is detected for a Sensor with a Monochrome Camera), it is recognized as an edge. Two edge positions are detected.

The image is adjusted so that the two edge positions match the positions when the edge positions were registered.

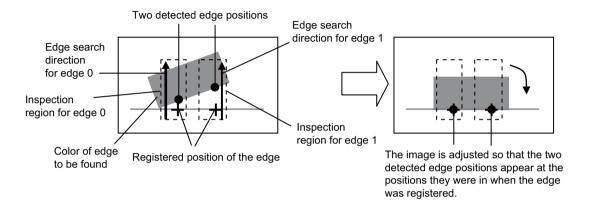

### ▶ [Image] – [Image adjustment]

- 1 Press an unused number and then press [Add pos. comp.].
- 2 Press [Edge] [Edge rot. pos. Comp.]
- **3** Make any detailed settings as required for the position compensation processing. Refer to Detailed Settings for Edge Rotation Position Compensation, below.
- 4 Press [OK].
- 5 Press [Back].

Detailed Settings for Edge Rotation Position Compensation
The settings for the Edge Rotation Position Compensation item are almost the same as those for the Edge Position inspection item.
Make the settings in the same way as for the Edge Position inspection item.
4-12 Inspecting with the Edge Position Inspection Item: p. 271
However, the following settings are included only in the Edge Position Compensation Item.
• Teaching
Inspection Regions and Measurement Directions
Set the inspection regions and measurement directions for both edge 0 and edge 1.
None of the second transport of the second the second the second transport
▶ [Image] – [Image adjustment] – [Edge rot. pos. Comp.] – [Modify] – [Basic] – [Teach]
The settings are the same as those for the Two-edge Position Compensation item.
Teaching: p. 115
Reference Angle
Set the reference angle.
Press [◀] – [Edit Ref. angle] on the right of the display and set the angle.
The state of the s
Source Image
You can select the image to which to apply the results of position compensation processing.
Applying the Results of Position Compensation: p.104
Applying the Nesalis of Fosition Compensation. p. 104
• Interpolation
You can select the precision of position compensation.
If you select [Bilinear], the precision of position compensation will increase.
▶ [Image] – [Image adjustment] – [2Edge position comp.] – [Modify] – [Details] – [Interpolation]
The settings are the same as those for the Shape Search Position Compensation item.
Interpolation: p. 108

## • Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
			-2: No judgement (not measured)
JG	Judgement	This is the judgment result.	0: Judgement is OK
			-1: Judgement is NG
			-15: Out of range error
DT	Scroll q	This is the amount of position compensation.	-180 to 180
X0	Edge 0 position X	This is the X coordinate of the measured edge 0 position.	-99,999.9999 to 99,999.9999
Y0	Edge 0 position Y	This is the Y coordinate of the measured edge 0 position.	-99,999.9999 to 99,999.9999
X1	Edge 1 position X	This is the X coordinate of the measured edge 1 position.	-99,999.9999 to 99,999.9999
Y1	Edge 1 position Y	This is the Y coordinate of the measured edge 1 position.	-99,999.9999 to 99,999.9999
TH	Angle (edge angle)	This is the measured angle.	-180 to 180
SX0	Edg0 ref. pos. (edge 0 reference position X)	This is the X coordinate of the edge 0 position when it was registered.	-99,999.9999 to 99,999.9999
-	Edg0 ref. pos. Y	This is the Y coordinate of the	
SY0	(edge 0 reference position Y)	edge 0 position when it was registered.	-99,999.9999 to 99,999.9999
	Edg1 ref. pos. X	This is the X coordinate of the	
SX1	(edge 1 reference position X)	edge 1 position when it was registered.	-99,999.9999 to 99,999.9999
	Edg1 ref. pos. Y	This is the Y coordinate of the	
SY1	(edge 1 reference position Y)	edge 1 position when it was registered.	-99,999.9999 to 99,999.9999
STH	Reference angle	This is the angle when the edge was registered.	-180 to 180

### • Measurement Data That Can Be Logged

The values below can be logged as measurement data.

Parameter	Setting	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error	This is the judgement result.
Scroll q	-180 to 180	This is the amount of position compensation.
Angle (edge angle)	-180 to 180	This is the measured angle.
Edge 0 position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge 0position.
Edge 0 position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge 0position.
Edge 1 position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the measured edge 1position.
Edge 1 position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the measured edge 1position.


### **Position Compensation**

The position is corrected based on the entered numeric values.

This is used to correct the position by rotating the captured image around the center of the screen or entering numeric values.

### ► [Image] – [Image adjustment]

- 1 Press a free number, and press [Add pos. comp.].
- 2 Press [Value] [Position comp.]

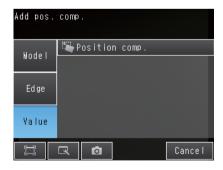

3 At the right of the screen, press — [Image rotation] or [Parameter] to open the settings screen.




Parameter	Setting	Description
Position	Image rotation	Select to correct the position by rotating the image around the center of the screen.
Compensation	Parameter	Select to specify the amount of position compensation from the reference position and the measurement position. The displacement between the measurement position and the reference position is the amount of the position compensation.

### When [Image rotation] is selected



### When [Parameter] is selected

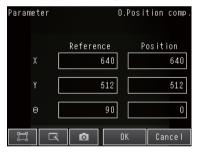

Parameter		Setting	Description
Angle		Range: -180 to 180 Default: 90	Rotates the image clockwise around the center of the screen. To rotate 90° counterclockwise, enter -90.
Reference position [Reference]	Y	Range: -99,999 to 99,999 Defaults:  376 on the FQ2-S1**** FQ2-S2**** FQ2-S4***** FQ2-S4*****-M FQ2-CH  640 on the FQ2-S3*****08* FQ2-S3**-13* FQ2-S4*-13*  Range: -99,999 to 99,999 Defaults:  240 on the FQ2-S1**** FQ2-S2**** FQ2-S2**** FQ2-S4*-*** FQ2-S4*-*** FQ2-S4**** FQ2-S4**** FQ2-S4**** FQ2-S4**** FQ2-S4**** FQ2-S4**** FQ2-S4**** FQ2-S4**** FQ2-S4*-13*  Range: -180 to 180 Default: 90	Sets the reference position.

Parameter		Setting	Description	
raiameter	х	Range: -99,999 to 99,999 Defaults:  376 on the FQ2-S1***** FQ2-S2***** FQ2-S4***** FQ2-S4***** FQ2-CH  640 on the FQ2-S3*****-08* FQ2-S4****-08* FQ2-S3*-13*		
Measurement position [Position]	Y	FQ2-S4*-13*  Range: -99,999 to 99,999  Defaults:  240 on the FQ2-S1***** FQ2-S2***** FQ2-S4***** FQ2-S4***** FQ2-S4***** FQ2-CH  512 on the FQ2-S3*****08 FQ2-S4*****08* FQ2-S4***** FQ2-S4***** FQ2-S4***** FQ2-S4*****	Sets the measurement position.	

4 Press [OK].

5 Press [Finish].

### Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgement result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error
DX	Position correction X	Amount of correction of X coordinate of position	-99,999.9999 to 99,999.9999
DY	Position correction Y	Amount of correction of Y coordinate of position	-99,999.9999 to 99,999.9999
DT	Position correction q	Amount of angle correction q	-180 to 180
Х	Measurement coordinate X	X coordinate of measurement position	-99,999.9999 to 99,999.9999
Υ	Measurement coordinate Y	Y coordinate of measurement position	-99,999.9999 to 99,999.9999
TH	Measurement angle	Angle of measurement position	-180 to 180
SX	Reference coordinate X	X coordinate of reference position	-99,999.9999 to 99,999.9999
SY	Reference coordinate Y	Y coordinate of reference position	-99,999.9999 to 99,999.9999
ST	Reference angle	Angle of reference position	-180 to 180

### **Linear Correction**

When the measurement object is distorted because it is an angle to the camera, you can correct the input image.

### ► [Image] – [Image adjustment]

1 Press an unused number and then press [Add pos. comp.].

2 Press [Value] – [Linear Corr.].



3 Press [◄] – [Meas. position] at the right of the screen to open the settings screen.




- **4** Drag the vertices of the displayed figure to set the points to be used for correction.
- 5 Press [OK].



6 Press [◄] – [Ref. position] at the right of the screen to open the settings screen.



7 Set to the same settings as the measurement position settings, and drag the vertices of the displayed figure to bring the measurement position that you just set to the correct position.

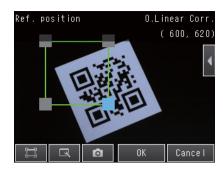

- Press [OK].
- Press [Back].

### • Edit Region

You can set the range for position correction.

- [Image] [Filter adjustment] [Linear Corr.] [Modify]
  - **1** Press [◀] [Filter region] at the right of the screen.
  - 2 Adjust the size and position of the region for position correction. To perform fine adjustment, press [◄] - [Console] at the right of the screen to open the fine adjustment console. The coordinate values of the frame can be moved in increments of one pixel.
  - 3 Press [OK].

### Source Image

You can select the image to which to apply the results of position compensation processing. You can set the image for position compensation for each position compensation item.

### ▶ [Image] – [Image adjustment] – [Linear Corr.] – [Modify]

- 1 Press [◄] [Source image] at the right of the screen.
- 2 For the source image, select [Camera] or [Prev. image].

Parameter	Setting	Description
Source image	Camera	The results of processing the position compensation item is applied to the image that is taken by the Camera.  This setting is used when filter items or other position compensation items have been used specifically for the position compensation item.
	Prev. (Default)	This setting is used when the processing results of the current position item are to be applied to the image that results from previous filter items or other position compensation items.

### • Position Interpolation

You can select the precision of position compensation.

If you select [Bilinear], the precision of position compensation will increase.

### ► [Image] – [Image adjustment] – [Linear Corr.] – [Modify]

- 1 Press [◀] [Interpolation] at the right of the screen.
- 2 Select [Bilinear] or [None] for position interpolation.

Parameter	Setting	Description
Interpolation		Points are connected with lines to find approximations. This create smoother images.  When [Bilinear] is selected, the processing time increases.
	None	Position compensation is performed at the pixel level.

### • Measurement Data That Can Be Used for External Outputs and Calculations


You can use the values below as measurement data for external output and calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgement result.	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG

# **Setting Up Inspections**

4-1 Inspection Item Selection Guide
4-2 Setup Procedure for Inspection Items
4-3 Configuring Inspection Items
4-4 Reading with OCR
4-5 Reading Barcodes
4-6 Reading 2D-codes
4-7 Reading 2D Codes (DPM)
4-8 Inspecting with the Search Inspection Item
4-9 Inspecting with the Shape Search III Inspection Item 230
4-10 Inspecting with the Shape Search II Inspection Item 247
4-11 Inspecting with the Sensitive Search Inspection Item 259
4-12 Inspecting with the Edge Position Inspection Item
4-13 Inspecting with the Edge Width Inspection Item
4-14 Inspecting with the Edge Pitch Inspection Item
4-15 Inspecting with Color Data Inspection Item
4-16 Inspecting with the Area Inspection Item
4-17 Inspecting with the Labeling Inspection Item
4-18 Calculations and Judgments Using Inspection Item Data 323

# 4-1 Inspection Item Selection Guide

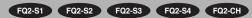


The FQ2 Sensor uses inspection items to judge measurement objects. There are thirteen different measurement objects. Select the best inspection items for the characteristics of the measurement object that are being judged.

Inspection	Inspection Exam		Inspec- tion items used	Compati- ble mod- els	Ш
Judging according to character recognition	Checking printed consume-by dates	OK 2012.10.01 NG 2012.11.01	OCR	FQ2-S4	p. 140
Judging according to bar code	Checking product information	OK NG 12345 12346	Bar code	FQ2-S4	p. 179
Judging according to 2D-code	Checking product information	OK NG 12345 12346	2D-code	FQ2-S4	p. 190
Judging according to DPM 2D-code	Reading 3D codes for direct part marking	OK NG 12345 12346	2D-code (DPM)	FQ2-S4	p. 201
Judging according to shapes	Judging if there is a mark  NG  OK	OK NG	Search or Shape Search III	FQ2-S2 FQ2-S3 FQ2-S4	p. 215 p. 230
Detecting positions with pat- terns	Measurement objects of the san detected.		Search	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 215


Inspection	Exar	Inspec- tion items used	Compati- ble mod- els		
Dividing the inspection region and judging according to shapes for each division	Judging minute differences in printed labels	MARNIG  LED RADIATION DO NOT STANE DO NOT STANE DO NOT STANE DO NOT STANE CASE STANE AS C 6602-2005  NG  A WARNIG  LED RADIATION DO NOT STANE MAKE OF THE PRODUCT CASE STANE STANE MAKE OF THE PRODUCT CASE STANE MAKE OF THE PRODUCT CASE STANE STANE MAKE OF THE PRODUCT CASE STANE M	Sensitive Search	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 259
Judging according to positions	Measuring the position offset of a seal	OK NG	Edge Position	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 271
Judging according to widths	Measuring the width between lead wires	OK NG	Edge Width	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 282
Judging according to the features of parts of a shape	Judging the number of pins	OK ![********] NG ![******]	Edge Pitch	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 288
Judging according to colors	Detecting parts	OK NG	Color Data	F02-S1 F02-S2 F02-S3 F02-S4	p. 293
Judging according to sizes	Judging if there is silver paste	OK NG	Area	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 300

Inspection	Example			Inspec- tion items used	Compati- ble mod- els	
Judging according to shapes and quantities	Judging the number of labels	OK •	NG	Labeling	FQ2-S1 FQ2-S2 FQ2-S3 FQ2-S4	p. 310


# 4-2 Setup Procedure for Inspection Items

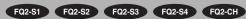

The basic steps for setting up inspection items are shown below.

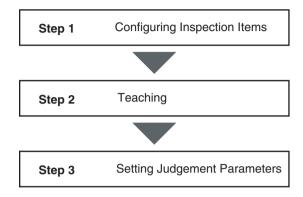

If measurements are unstable

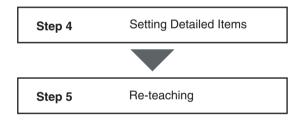


Note

Only one inspection item can be used on the FQ2-S1 Series.


A combination of up to 32 inspection items can be used on the FQ2-S2/S3/S4/CH Series.

# 4-3 Configuring Inspection Items

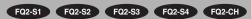

## **Adding New Inspection Items**


1 Press [Inspect] – [Inspection].

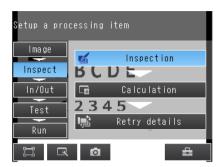


2 Press an unused inspection item number.



3 Press [Add item.] on the menu.

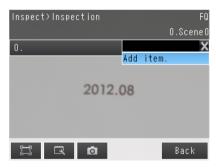

4 Select an inspection item, such as [Search].

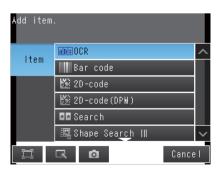

When registering multiple inspection items, press the inspection item number after 1.--- and set it in the same way.

If more than seven inspection items are set, drag the icon at the bottom of the menu upward to display the next inspection item numbers.

# **Modifying Existing Inspection Items**

1 Press the number of the inspection item to be set.




2 Press [Modify] on the menu.



# **Deleting Inspection Items**

- Press the number of the inspection item to be deleted.
- 2 Press [Delete] on the menu.

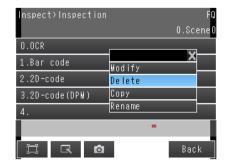

Note

Executing Similar Measurements in Different Places.

- . Copy an inspection item that is already registered: [Copy].
- Change the name of an inspection item: [Rename].


# 4-4 Reading with OCR



## **Character String Recognition**

Character recognition is used to read characters in input images as character information based on font information that is registered in the Sensor in advance. The characters that were read can be output to an external device.

You can also verify the character string that was read to see if it matches a character string that was registered in advance or the read result from a Bar Code\*1, 2D-code\*1, 2D-code (DPM)\*1, or OCR inspection item that was registered before the inspection item number currently being set.

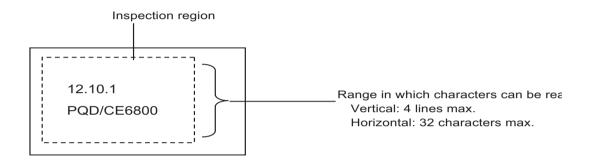

- \*1 FQ2-S4 series only
- \*2 The maximum number of characters that can be displayed in the result display is 15 characters per line.

# **Characters That Can Be Recognized**

Item	Description
Letters*1	0 to 9 A to Z*1
Symbols <sup>*1</sup>	'(apostrophe) - (hyphen) . (period) : (colon) / (slash) () (parentheses)

<sup>\*1</sup> Any symbols other than those that are listed above cannot be recognized.

Note

140

You can also register a custom font for character recognition.

Set the custom dictionary before setting character recognition.


Registering a Custom Dictionary: p. 170

Reading with OCR FQ2-S/CH User's Manual

141

# **Setup Procedure for Character Recognition**

The setup for character recognition is performed in the following order.

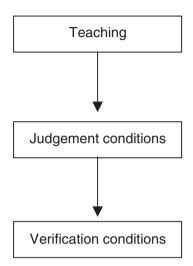

The basic settings to recognize characters are made.

- Character format (number of characters, alphanumeric characters or symbols, etc.)
- Inspection region
- Detailed parameters to recognize characters (These are set automatically.)

Settings are made to check whether the characters that were read from the workpiece were recognized correctly. Differences between the references that were taught for character recognition and the actual result of reading the characters are detected and conditions are set to determine how accurately characters are read.

You can set conditions to verify that the character string that was read matches a specific character string. The character strings to use to verify the character strings that are read are registered in the master data.

# **Setup Procedure for Character Recognition**

# Step 1 Selecting the Inspection Item

- ► [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [OCR].
    - Inspection Item Selection Guide: p. 138



Note


Drag the arrow ( ) at the bottom of the menu to display all of the inspection items.

FQ2-S/CH User's Manual Reading with OCR

# Step 2 Teaching

In this Teaching function, specifying Inspection region, Character color, Printing type and Correct string, the measurement parameters for OCR are set automatically.

- 1 Touch [TEACH].
- 2 Capture the characters for recolonization.

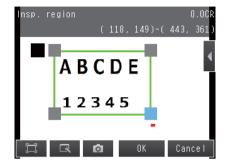


3 Move the rectangle around the character string to read, and then press [OK].

The inspection region will be set.

4 Select [Character Color],

When the [Cancel] is touched, the all settings will be discarded, and then window will return to the previous setting.

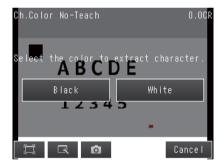


Item	Setting item	Description
Character color	14/1-1	Select this item when the background is Black and character color is White. Select this item when the background is White and character color is Black.

Reading with OCR FQ2-S/CH User's Manual

143

### 5 Select [Printing type].

When the [Cancel] is touched, the all settings will be discarded, and then window will return to the previous setting.

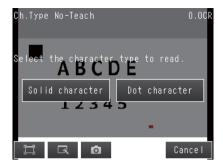


Item	Setting Item	Description
Printing type	Solid character     Dot character	Select Printing type for the character to inspect.

### 6 Select [Teach Mode].

[Correct String] is recommended normally.

When you select [Simple Teach], go to Step 8.

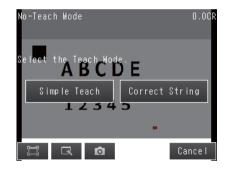

Item	Setting Item	Description
Teach Mode	Simple Teach     Correct String	Simple Teach Specify the Region setting, Character color, and Printing type to execute OCR, and then the measurement parameters are defined. Then measurement parameters are adjusted automatically until the specified characters matches with read result. Simple Teach is useful when the correct strings can be recognized even though the correct strings are not specified. Correct String Specify the Region setting, Character color, and Printing type to execute OCR, and then the measurement parameters are defined.

# 7 Enter your attempted correct string, and then touch [OK].

Acceptable strings: 0 to 9

A to Z

(apostrophe)


- (hyphen)

. (period)

: (colon)

/ (slash)

() (parentheses)

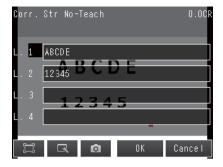

### 8 Press [TEACH] on the lower-right window.

The Measurement parameters for OCR will be set automatically.

- Measurement Parameters That Are Automatically Set by Teaching: p. 156
- 9 Character string that is successfully to recognize is displayed.

Confirm the result, and then touch [OK].



### 10 Press [Back] to end teaching.

The measurement parameters are adjusted automatically after Teaching. Character format is set automatically from the result.

• For confirming character format.

Select [Format] from the menu button.

Item	Description		
Characters that can be entered in the character format string	Numbers: 0 to 9 Letters: A to Z Symbols: '(apostrophe), - (hyphen), . (period), : (colon), / (slash), () (parentheses) Wildcards You can use wildcards to specify characters. For example, you can use wildcards to prevent incorrect recognition of 0 (zero) and O (the letter O).  ?: Any character (recognized characters: any characters except for symbols) #: Any number from 0 to 9 (recognized characters: 0 to 9) \$: Any letter from A to Z (recognized characters: A to Z) @: Any symbol (recognized characters: '(apostrophe),- (hyphen),. (period),: (colon), / (slash), () (parentheses)) *: any single character (Alphabetic character, Numeral, and Symbols are recognizable.) &: Skip (No judgment is made for the judgment conditions (similarity or stability). The detected character count is also not incremented.)		
Limits to the character format string	Each line can have a maximum of 32 characters. There can be a maximum of four lines. Characters must be input from line 1. (You cannot skip line 1 and set the character format string starting with line 2.) If you leave any line blank, the setting for the next line will be moved up to fill it.  You cannot specify a symbol by itself. You cannot specify more than symbol consecutively. You cannot specify more than 16 symbols on one line.		

#### Note

You can use on the right of the display to access the following menu commands to change the following settings


- [Teach mode]: You can change the Teach mode.
- [Insp. region]: You can change the inspection region for OCR.
- [Format]: You can change the setting of the character format.
- [Correct String]: You can change the correct string.
- [Camera setup]: You can adjust the Camera focus, brightness, and other factors to input a better image.
  - . Inputting Better Images: p. 76
- [Meas. Parameter]: You can change the type of code to read, the read settings, etc..
  - . Detailed Parameters: p. 156
- [Continuous test]: You can start test measurements of displayed images for the settings that were taught.
  - . Test Measurements: p. 340

### Step 3 Setting the Judgment Parameters

Settings are made to check whether the characters that were read from the workpiece were recognized correctly. Differences between the references that were taught for character recognition and the actual result of reading the characters are detected and conditions are set to determine how accurately characters are read.

- ▶ [Inspect] [Inspection] [OCR] [Settings] Tab Page
  - 1 Press [Judgement].
  - 2 Press each parameter and set the range that is to be judged as OK.

Set the range for each of the following parameters. Continuous measurements will be performed for the images that are displayed.

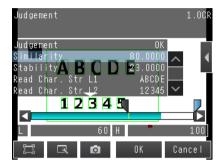

#### Note

- You can change measurement values that appear on the display on the Display Settings Display.
- Press — [Display setting] on the right of the display to switch to the Display Settings Display.
- You can automatically adjust the judgment conditions by using OK and NG workpieces.
  - Test Measurements: p. 346
  - Press [Auto adjustment] on the right of the display to switch to the Auto adjustment Display.
- You can set the judgment condition depending on figure numeral, alphabet, or character type. Touch [ [Judgement mode], displays the Judgment mode window.
  - Whole setting: Set the same judgment condition to all of the character strings.
  - Individual setting: Set judgment condition to each character strings.
  - 3 Press [OK] to enter the values.

Item	Parameter	Setting	Description
	Similarity	0 to 1000  Default Upper limit: 100  Lower limit: 60	Sets the similarity of the read characters that is to be judged as OK. If any of the characters in the read character string has a similarity that is lower than the set value, the judgment will be NG.  To judge incomplete or worn characters as NG, set a high upper limit for the similarity.
Judgement	Stability	0 to 100  Default Upper limit: 100 Lower limit: 10	Sets the stability of the read characters that is to be judged as OK. If there is more than one candidate for the same character, the difference between the first and second candidates is numerically expressed by the stability.  (For example, if the similarity of the first candidate is 90 and the similarity of the second candidate is 25, then the stability is 80 - 25 = 55.) To prevent misreading similar characters, set a high value for the stability.
	Read Ch.Str L1 to Read Ch.Str L4	-	Displays the detected character strings.
	Verif. Str L1 to Verif. Str L4	-	Displays verification character strings. The verification strings are displayed only the verification pattern is set.
	Num. of char.L1 to Num. of char.L4	1 to 32  Default Upper limit: 32  Lower limit: 0	Set the number of characters to judge as OK.

#### Note

You can specify whether to reflect the judgment result of the judgment conditions for character recognition in the overall judgment. (The Default is to reflect them.)

► [Inspect] – [Inspection] – [Add item.] – [OCR] – [Details] Tab Page – [Output parameter] – [Reflect]

Reading with OCR 147

# **Step 4 Setting the Verification Conditions**

Register the character string based on read character match to specific character string. Matching Mode, select Direct input, Calender Matching, or Code Matching.

Parameter	Setting	Description
A maximum of 32 types of verified. The result is refleresult can be output to the mand.  fixed character string leng		fixed character string length is 32 characters X 4 lines.
Matching Mode	Calendar Matching	Verify with the sensor calender information.  For the versification, the character length including calender is 32 characters. The number of the verification master data is one.
	Code Matching	Verify with the following functions.  • 2D code  • 2D code (DPM)  • Code Reader (description as CR)  For verification target is the loaded result of CR inspection item.  The number of the verification master data is one.

### Important

When you select Calendar Matching, the date and time information must loaded, or updated via TouchFinder, or external device connection, such as with PLC. Without date and time settings for Calendar Matching, the verification string will be zero.

4 Set or Acquire the Date and Time: p. 167

- ▶ [Inspect] [Inspection] [Add item.] [OCR] [Settings] Tab Page
  - 1 Touch [Verification].
  - Touch [Matching Mode], and then select [Direct Input].
  - 3 Touch [Master data regist.].



- Touch the master data to register.
- You can use any of the following three methods to register character strings in the master data from the menu display.
  - [Auto]: A character string is read from an image and registered in the master data. The procedure is essentially the same as the procedure for teaching in step 2.
  - [Manual]: A character string is entered directly in the master data.

Select this menu when making a change to the master data registered using [Auto] menu.

You can use a software keyboard to register a character string with up to 32 characters.

Note

You can set letters, numbers, symbols, and the following wildcards: \* and ?.

- \*: A wildcard for a character string of 0 or more characters
- ?: A wildcard for one character (alphabetic or numeric)
- [Item ref.]: Select this item to use the immediately preceding read results as the verification character

The following inspection items can be used as references.

- FQ2-S4 Series: Bar code, 2D-code, 2D-code (DPM), and OCR
- FQ2-CH Series: OCR


You cannot reference an inspection item that is after the current inspection item. After a character string is registered, a reference item number, such as "Ref. 00," will be displayed to the right of the character string in the master data.

FQ2-S/CH User's Manual Reading with OCR 149

Note

On FQ2-S4 Series, you can set the [Item ref.] verification condition to check if characters that are printed near a barcode or 2D code match the contents of the barcode or 2D code.

Place the inspection item to read the barcode or 2D code to check before the OCR inspection item and then specify the [Item ref.] verification condition for the OCR inspection item. The verification condition will be used to verify whether the character string from the barcode or 2D code and the characters printed below it match. You can output the verification result.

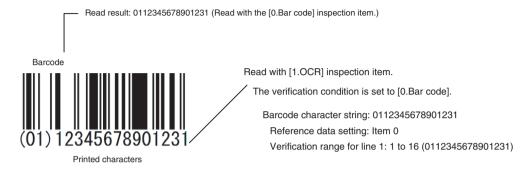

- 6 Repeat the above procedure to register more than one character string in the master data.
- 7 Touch [Verif. master data] and select the character string in the master data to use for verification.

Note

150

You can automatically register the read result from teaching from an external device in the character string with number that is specified [External teach No.] in the master data.


## 8 Touch [Back].

Parameter	Setting	Description
Matching mode	Direct Input (Default)     Calender Matching     Code Matching	Select your attempted Matching mode.
Verif. master data	OFF (Default)     All master data	Sets whether to verify the read character string against a character string that is registered in the master data.  To verify the read character string against the master data, select the character string to use for verification.
Master data regist.		Registers a character string in the master data. Use [Manual] menu when making a change to the [Partial Verification] setting for master data originally registered by [Auto].
External teach No (Only the Direct Input is selected.)	OFF (Default)     Master data 0 to 31	Sets the character string in which to automatically register the read result for teaching from an external device.

- 1 Touch [Verification].
- 2 Touch [Matching Mode].
- 3 Touch [Calender Matching].





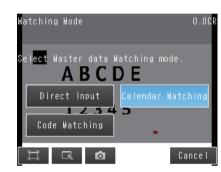



151


### 5 Touch lines, a soft keyboard appears. Enter your attempt date to each lines.


Enter formats of the alphabetical characters or date to be read.

**Examples of Acceptable Formats** 

- To recognize the text string "2014/01/01," enter "2014/01/01" in the string format area.
- To recognize four-digit numbers, enter as [####], where each "#" represents a number, in the string format area.
- To recognize 3 digits the current year / the current month

Enter "\*\*\*-mYYYY#/mMM#".

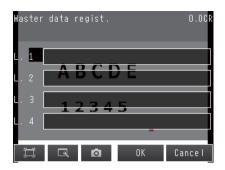

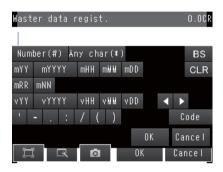

Label	Description	Label	Description
0 to 9	Normal numeric value input	eY1	Coded year 1
A to Z	Normal alphabetic character input	eM1	Coded month 1
· : /()	Normal symbol input	eD1	Coded day 1
*	Uppercase alphabetic character judg- ment, Numeric character judgment and Symbol judgment	eR1	Coded hour 1
#	Numeric character judgment	eN1	Coded minute 2
mYY	Current year, 2 digits	eY2	Coded year 2
MYYYY	Current year, 4 digits	eM2	Coded month 2
mHH	Current year of the Heisei imperial era, 2 digits	eD2	Coded day 2
mMM	Current month	eR2	Coded hour 2
mDD	Current day	eN2	Coded minute 2
mRR	Current hour	iY1	Coded year after set interval 1
mNN	Current minute	iM1	Coded month after set interval 1
vYY	Year after set interval, 2 digits	iD1	Coded day after set interval 1
vYYYY	Year after set interval, 4 digits	iY2	Coded year after set interval 2
mHH	Year of the Heisei imperial era after set interval, 2 digits	iM2	Coded month after set interval 2
vMM	Month after set interval	iD2	Coded day after set interval 2
vDD	Day after set interval		


#### 6 Touch [OK].

#### 7 Touch [Back].

- 1 Touch [Verification].
- 2 Touch [Matching Mode].




3 Touch [Code Matching].

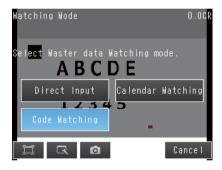


4 Touch [Master data regist.].



5 Touch [Item ref.], and then select the Code Matchin items to refer.

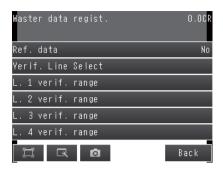

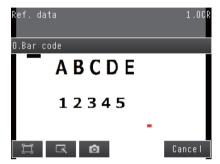

6 Touch Line number for verification.



7 Set the Verification region as necessary.



8 Touch [Back].

154

D	0-44:	December 1
Parameter	Setting	Description
Matching mode	Direct Input (Default)     Calendar Matching     Code Matching	Select your attempted Matching mode.
	The following registered function before setting of item ref.	
Item ref.	Bar code     2D-code     2D-code (DPM)     (Default: None)	Use this parameter when you set the latest result as a verification string. Specify the Processing item for the verification string.
Line for varif.range	Check     Un-check (Default)	Select the line 1-4 for which to apply Calendar Matching.
L1. verif. range		Specify the result range of Calender Machining function that is compare with line 1.
L2. verif. range	1 to 1024 (Default Start Line: 1 Finish Line: 1024)	Specify the result range of Calender Machining function that is compare with line 2.
L3. verif. range		Specify the result range of Calender Machining function that is compare with line 3.
L4. verif. range		Specify the result range of Calender Machining function that is compare with line 4.

# **Setting the Measurement Parameters**

When you perform teaching, the measurement parameters are set automatically.

If you obtain incorrect reading results with the automatic settings, set the measurement parameters manually.

#### ▶ [Inspect] – [Inspection] – [OCR] – [Details] Tab Page – [Meas. parameter]

### **Detailed Parameters**

156

Parameter	Setting	Description
Reading Speed	Normal (Default)     Fast	Set the speed to read characters. When the space is large between characters, select [Fast].
Character color	Black (Default)     White	Sets the color of the characters to detect.
Printing type	Solid character (Default)     Dot character	Sets the type of printing of the characters to detect.  When using a custom dictionary, set this to the same setting as [Meas. parameter] – [Printing type] of the dictionary.
Dot ver. interval	0 (Default) to 30	Adjusts the vertical dot interval of the characters to detect. This parameter is enabled only when [Printing type] is set to [Dot character].
Dot hor. interval	0 (Default) to 30	Adjusts the horizontal dot interval of the characters to detect. This parameter is enabled only when [Printing type] is set to [Dot character].
Char. thick. th.	-255 to 255 (Default: 0)	Sets the thickness of the characters.  Negative numbers indicate thinner characters.  Positive numbers indicate thicker characters.  Recognition performance will improve for positive numbers, but noise will increase, causing instability.
Boundary correction	ON OFF (Default)	If boundary correction is turned ON, dark areas at the edges of the inspection region will be considered to be noise and removed from the read candidates.
Rotation compensation	ON OFF (Default)	If rotation compensation is turned ON, the image will be compensated for a –15° to 15° rotational variation. (This setting compensates for rotational variations in the placement of the workpiece on the line, and not for rotational variations in the characters themselves that result from printing conditions.)
Slant compensation	ON OFF (Default)	If slant compensation is turned ON, the image will be compensated for a –20° to 20° slant variation. (This setting compensates for slant variations in the placement of the workpiece on the line or in the printing mechanism, and not for italic fonts.)
Hyphen height upp. th.	0 to 100 (Default: 30)	Sets the upper limit of the height of the region to treat as a hyphen or other symbol.
Hyphen height low. th.	0 to 100 (Default: 70)	Sets the lower limit of the height of the region to treat as a hyphen or other symbol.
Slender char. th.	1 to 10 (Default: 3)	Sets the ratio of the height to the width of the detection character rectangle to judge as thin characters (I, J, 1, :, and /).
Max Width Setting	ON OFF (Default)	Set the Max Width Setting to ON or OFF.
Max Width	0 to 9,999 (Default)	Specify the max width of the character to be read.
Max Height	0 to 9,999 (Default)	Specify the max height of the character to be read.

Parameter	Setting	Description
Min Height	0 to 100 (Default: 50)	Characters with "the height of the adjacent character times Min height [%] times 0.01" or less are recognized only as symbols. Set by the relative value (%) to the height of the character on the left (the character on the right in the case of the left end). This is valid when the character string is 2 or more characters.  Example:  Min height [%]: Default value 50 Character height to the left [pixel]: 100 Character height [pixel]: 30 A character with a character height of 30 pixels is recognized only as a symbol because the character height to the left is smaller than the character height times Min height [%] times 0.01 on the left. It is not recognized as the character.
Read Length	Variable (Default)     Fixed	If character strings with a variable number of characters are to be read, specify variable.  The character format should be the same as the maximum character string length format.

#### • Important

When loading Scene data from an older version, the [Legacy Mode] Setting appears above the measurement parameters.



The [Legacy Mode] allows for Scene data, or Dictionary data created with software versions older than ver. 2.10 to be usable with ver. 2.02, or later software. The Dictionary data created with the old software version can only be used with Scene data also created from the old software version.

If you touch [Legacy Mode], which is above the measurement parameters, the following dialog appears. Touching [Yes] will update the settings to version 2.10, or later.



157

Use Dictionary data with Scene data created with the same Sensor version. In [Legacy Mode] use only Dictionary data created with Sensor version older than ver. 2.02. Likewise, with Sensor version 2.10 or later, use Dictionary data created in Sensor version 2.10, or later. The following dialog will appear if there is a version mismatch.



#### **Executing Teach function, parameters are set automatically**

The following parameters in measurement parameters, are automatically set by executing Teach function.

Parameter	Setting	Parameter	Setting
Character color	Manual	Rotation compensation	Auto
Printing type	Manual	Slant compensation	Auto
Dot ver. interval	Auto	Max Width Setting	Auto
Dot ver. interval	Auto	Max Width	Auto
Char.thick.th.	Auto	Max Height	Auto
Boundary correction	Auto	Min Height	Auto

# **Limiting Readable Characters**

Limiting the readable characters decreases the possibility of mis-reading similar characters.

▶ [Inspect] – [Inspection] – [OCR] – [Details] Tab Page – [Dictionary parameter] – [Individual char.]

# Changing the Output Code for Errors (Default: NG)

You can change the character string that is output for read errors. (The output code must be no more than 20 characters.)

▶ [Inspect] – [Inspection] – [OCR] – [Details] Tab Page – [Output parameter] – [Error string]

## **Troubleshooting Unstable Read Results**

- The read results may be unstable if the contrast is low. Adjust the brightness to improve the contrast.
- · Set a custom dictionary.
- · Adjust the detailed parameters.

# When reading a variable length string

Set the Read Length of measurement parameters to Variable.

Then set the character format to the maximum character string format.

### **Setting Date Parameter**

Set the date, time or update setting.

- ▶ [Inspect] [Inspection] [Add item.] [Details] tab [Date parameter]
  - 1 Touch [Period setting], and then set Year, Month and Day.

Item	Setting	Description
Year	Range : 0 to 99 Default : 0	
Month	Range : 0 to 99 Default : 0	Set the usage period from the current date.
Day	Range : -999 to 999 Default : 0	

2 Touch [Date setting], and then set the following settings.

Item	Setting	Description
Zero suppress	• [0] • Space	Set how the tens digits of the month and day are displayed.
Calculation order	• Month→Day • Day→Month	Set whether to calculate the month first or the day first when the usage period is set. (This affects calculation of end of month.)
Month end adjust	[Last day of current month]     First day of next month     Gap day of next month	Set the adjustment method that will be used if the result of the expiration date calculation is an invalid date.

Use the following examples as reference for setting of the date parameter.

E.g.1

Measurement is performed on 9/30, and the period setting is: Year: 1, Month: 1, Day: 1.

- [Month→Day]: A month is added to 9/30, and the result will be 10/30.
   A day is added to 10/30, and the result will be 10/31.
- [Day→Month]: A day is added to 9/30, and the result will be 10/1.
   A month is added to 10/1, and the result will be 11/1.

E.g.2

160

Measurement is performed on 1/31, and the period setting is: Year: 0, Month: 1, Day: 1.

[Month→Day]: A month is added to 1/31, and the result will be 2/31.
 The month end adjustment will be applied since 2/31 does not exist.
 The result of the month end adjustment plus 1 will be the verification string.

Month end adjust	Result
Last day of current month	2/28
First day of next month	3/1
Gap day of next month	3/3

- [Day→Month]: A day is added to 1/31, and the result will be 2/1.
   The month end adjustment will not be applied since 2/31 exists.
   A month is added to 2/1, and the result will be 3/1.
- [Day→Month]: A day is added to 1/31, and the result will be 2/1.
   The month end adjustment will not be applied since 2/31 exists.
   A month is added to 2/1, and the result will be 3/1.

Measurement is performed on 10/30, and the period setting is: Year: 0, Month: 1, Day: 1.

- [Month→Day]: A month is added to 10/30, and the result will be 11/30.
   The month end adjustment will not be applied since 11/30 exists.
   A day is added to 11/30, and the result will be 12/1.
- [Day→Month]: A day is added to 10/30, and the result will be 10/31.
   A month is added to 10/31, and the result will be 11/31.

   The month end adjustment will be applied since 11/31 does not exist.

Month end adjust	Result
Last day of current month	11/30
First day of next month	12/1
Gap day of next month	12/1

# ${f 3}$ Touch [Common Setting], and then set Auto Update, Back margin and Ahead margin.

Item	Setting	Description
		Select the condition for updating the date. The time is always updated.
		Not update
		The date is not automatically updated. Update the date using the menu.
	Not update     First Update     Always update (Default)	First Update
Auto Undata		Updates the Sensor day and time information at the first launch.
Auto Update		Always update
		The date is updated when measurement is performed. When the
		controller is kept running more than one day, the date is updated
		the first time measurement is performed after the date changes.
Abood margin	Range: 0 to 99 Default: 0	Set an appropriate count back time from the current time. Set in units of minutes.
Ahead margin	Delault. 0	Set this when the printing time is different from the inspection time.
	Rango: 0 to 00	Set an appropriate count forward time from the current time. Set in
Back margin	Range: 0 to 99 Default: 0	Set an appropriate count forward time from the current time. Set in units of minutes.
		Set this when the printing time is different from the inspection time.

Touching [Date update], date and time of Verify String will be updated.

# 4 Touch [Back].

161

#### Code data Parameters

Set the Code data format to measure the encrypted date and time information.

For changing of Code data parameters, refer to the following two method.

- · Code data edit tool
- · Set using PC

#### Important

When you use the period setting, the encrypted data is unacceptable for OCR.

#### Code data edit tool

Set the Code data using Code data edit tool

Download the Code data edit tool from the OMRON website.

For registration of OMRON website, confirm the SYSMAC ID \*\*\*\*\* that comes with Sensor.


The following explanation of settings is for the example of an October date encrypted as X. Describes the setting method.

- 1 Launch the Code data edit tool.
- In the code detail setting area, select the "Code month 1 flag" check box.

Note

Code month 1 and code month 2

- Set up code files for 2 patterns in order to be ready for setup changes. Select a check at the one to use.
- 3 Place a check at "Code month 1" in the "Code detail setting" area.

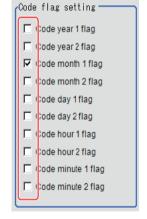



4 Enter "X" in the [10:].
For character string, enter with in four strings.

- 5 Select the code file (CSV format) to be loaded in the file selection screen, and click [OK]. The code file is loaded and displayed on the screen.
- 6 Click [Save].

#### Set Code Data using PC


Since the Code data file is complicated, it is best to edit it using a PC. Once an empty CSV file is saved, edited on a PC and then re-loaded, it can most efficiently be used.


#### · Save the Code Data


Create an empty file for editing with PC.

If the Code data has already been set in Sensor, a file having the settings will be saved.

- ▶ [Setup] [Save to file] [Setting] tab
  - 1 Touch [Code data].

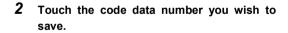


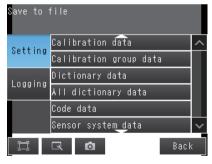

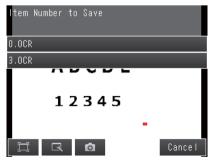

163

3 Enter file name, and them touch [OK]. (Default file name; code.csv)

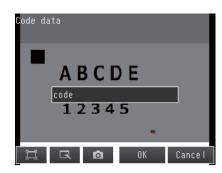


#### Code File Format


- "Item" appears on the 1st line.
- "Flag" appears on the 2nd line. To use the item, set "1".
- On the 3rd and following lines, the code corresponding to each number appears. The month and day start from "1".

Code	Year 1	Year 2	Month 1	Month 2	Day 1	Day 2	Hour 1	Hour 2	Minute 1	Minute 2
Flag	0	0	0	0	0	0	0	0	0	0
0										
1										
2										
3										
4										
:										
95										
96										
97										
98										
99										


- ► [Setup] [Load from file]
  - 1 Touch [Code data].

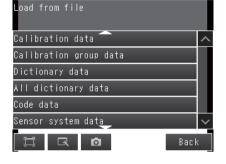

2 Touch Code data number to load.

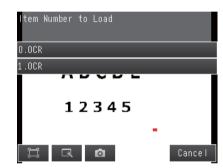

3 Select the Code data.

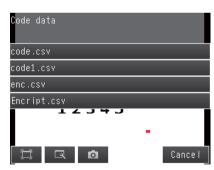


4 Touch [Yes].



## **Confirm the Code Data Name**

The current Code data name can be confirmed with the following steps.

- ▶ [Inspect] [Inspection] [Add item] [OCR] [Detail] tab
  - 1 Touch [Code data].

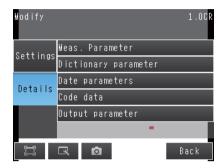

2 The Code data file name is displayed.



167


### Set or Acquire the Date and Time


Since the Sensor does not have date and time information, setting or acquirement of date and time is necessary for Calendar Matching function.

Set or acquire the Date and Time by any the following methods.

- · Set the Date and Time information automatically when TouchFinder is connected to the Sensor.
- ► = [Setup] [Sensor settings] [Current Day/Time]
  - 1 Touch [Auto-Sync with TF]

2 Touch [ON].

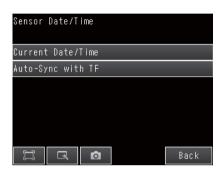

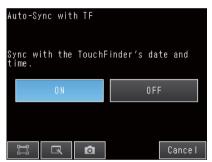

#### Important

- $\bullet$  When you re-connect the TouchFinder to Sensor, the day and time information is acquired,
- If one more than Sensors are connected to the TouchFinder, the day and time information of second connected TouchFinder is enabled.
- Set or Acquire the Date and Time using the external device.

Acquires the Date and Time information by sending a command from the external device.


For details, refer to 5-1 Command Control, Command List, and Command to Write Data in FQ2-S/CH User's Manual for Communications Settings.

## **Confirm the Date and Time information**

Date and Time information of Sensor is displayed.


Sensor Date and Time information will be initialized when the Sensor restarts.

- - 1 Touch [Current Date/Time].

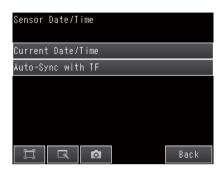

2 Date and Time information is displayed.

168

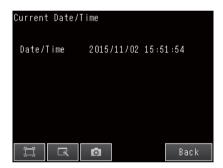


# Perform OCR with creating dictionary (Model dictionary)

Characters in special fonts cannot be read correctly with the built-in dictionary. In this case, a custom dictionary can be created to read such characters. The size of characters that can be registered is 30 pix X 30 pix.

## **Creating Model Dictionaries to Recognize Custom Characters**

Use the dictionary customize after adding [OCR] to Inspection item and finishing TEACH. Configure model dictionary settings in the order below.

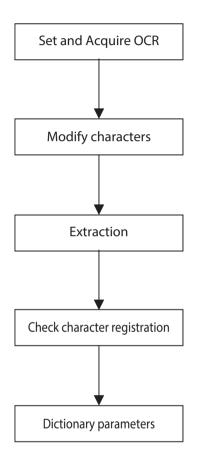

Specify OCR inspection item, and then acquire the inspection region and measurement parameters.

Specify the cropped character format.

Extract the characters to be registered in the dictionary data. If the characters cannot be extracted, repeat from edit extraction region.

Display and check the registered characters.


Apply the model dictionary settings to character recognition.

- · Custom dictionary reference
- · Individual setting

# **Setup Procedure for Model Dictionary**

### **Creating a Dictionary**


Press the Tool Button, and then [Model dictionary].

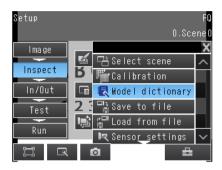

2 Press the dictionary in which to register characters.




3 Press [Modify] on the menu.

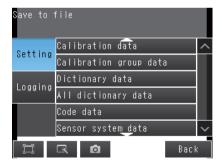


4 Press [Add].


170

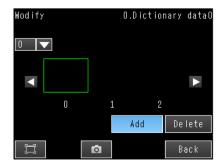


5 Touchpress - [Load OCR setting].

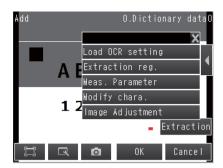

6 Touch inspect item to acquire the measurement range or measurement parameters.

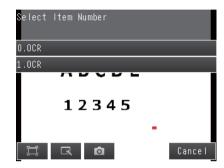


7 To change Extraction range, press [ - [Extraction reg.] on the right of the display.

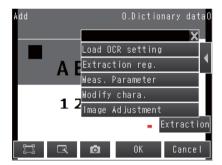


**8** Specify the region to extract and press [OK].

The inspection region can contain character strings on up to four lines.

Each line can contain up to 32 characters.

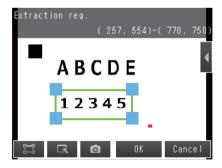

9 To extract characters based on a specified character format, press [ - [Modify chara.] on the right of the display.

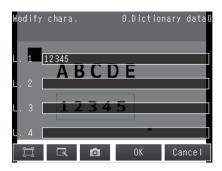


To edit the measurement parameters, press [ - [Meas. Parameter] at the right of the screen.


Setting the Measurement Parameters: p. 156

#### Important

The model dictionary [Printing type] settings must match the inspection item [OCR] settings.

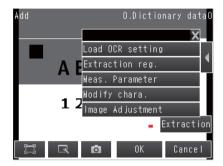

### 11 Press [Extraction].

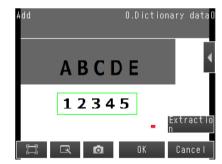


Note

The current filter item, or position correction item will be reflected in the extracted image.


To not reflect in this image. If this reflection is not necessary, touch - [Image Adjustment], and then select OFF.

12 The extracted characters will be displayed on the upper left of the display.

If characters are not displayed even you touch [Extraction] button, back Step 7 and retry to.

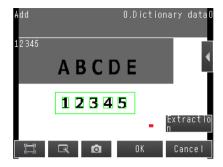

- 13 Press [OK] to register the characters.
- 14 The characters are registered for the corresponding character type.

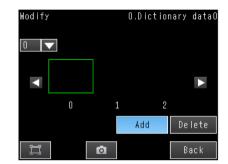


### **Error Messages during Registration**


- Failed to register data. Character format is wrong.
   The format or the number of characters did not match between the read character string and the registered character string. Correct the character string to register.
- Failed to register data. Character size is too small You can register characters that are  $30 \times 30$  pixels or larger in the dictionary. Change the settings of the Sensor to increase the size of the characters.
- Extraction error
   Failed to extract the characters. Check the measurement parameter settings and the read region.
- Excess char. num
   An attempt was made to register more than 10 characters. Delete the data that does not need to be registered.

### **Displaying Registered Characters**

1 To display the registered characters, select the characters on the upper left of the display.

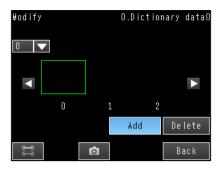


2 The registered characters will be displayed.

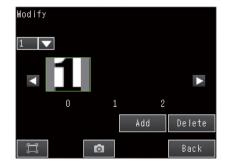


### **Deleting Registered Characters**

1 Select the character that you want to delete in the customized dictionary registration display.

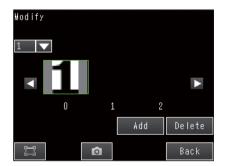


- 2 Press [Delete].
- 3 Press the [Yes] Button.

- ▶ [Inspect] [Inspection] [Add item.] [OCR] [Details] Tab Page
  - 1 Touch [Dictionary param.].

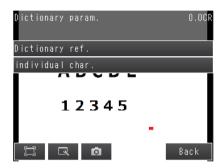

2 Touch [Dictionary ref.] and select the dictionary to use.

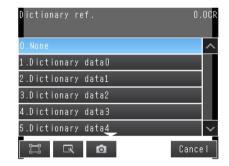

3 Touch [Individual char.] and select the figure numerical, alphabet, or symbol that you want to exclude from the reading target.



4 Press [Back].

### Important

To apply the model dictionary settings, be sure to perform [Dictionary ref.] and [Individual char.].

If the measurement results still do not stabilize after you have configured model dictionary settings, check the following:

• Make sure that appropriate dictionary data is selected in [Details] – [Dictionary param.] – [Dictionary ref.].

Setting the Measurement Parameters: p. 156

• Make sure that [Meas. parameter] – [Printing type] in the model dictionary settings matches [Measurement] – [Printing type] in OCR inspection item.

Editing the Measurement Parameters: p. 172

Setting the Measurement Parameters: p. 156

## **Outputting Read Characters to an External Device**

Note

176

After a measurement, you can automatically output the character string that was read with the OCR inspection item to a PLC or other external device. The character strings are output after outputting the output data (output data settings 0 to 31), such as the inspection item parameters and calculation result.

Refer to the description for the communications format for the setting procedure and output specifications to output the character string.

Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)

- · Section 2 Controlling Operation and Outputting Data with a Parallel Connection
- Section 3 Controlling Operation and Outputting Data with an Ethernet Connection
- Section 4 Controlling Operation and Outputting Data with an RS-232C Connection

The following values can be used as measurement data and output to external devices via Ethernet or used in calculations.

Expression text string	Data name	Description	Data range		
JG	Judgement	This is the judgement result.	-2: No judgment (not measured) 0: Judgment is OK -1: Judgment is NG -11: Model does not match -13: Measurement time out -16: Measurement timeout error, -17: Format not entered error		
IN	Index	This is the verification result (i.e., the master data number).	<ul><li>−2: No verification pattern, or reading error</li><li>−1: Verification is NG</li><li>0 to 31: Master data No.</li></ul>		
N	Number of read characters	This is the total number of characters that were read for all four lines.	0 to 128		
SIM	Similarity	This is the lowest similarity of the read characters.	0 to 100		
STB	Stability	This is the lowest stability of the read characters.	0 to 100		
N1	Number of read characters (line 1) N1	This is the number of read characters for line 1.	0 to 32		
N2	Number of read characters (line 2) N2	This is the number of read characters for line 2.	0 to 32		
N3	Number of read characters (line 3) N3	This is the number of read characters for line 3.	0 to 32		
N4	Number of read characters (line 4) N4	This is the number of read characters for line 4.	0 to 32		
SM	Individual similarity	This is the similarity of read character $N (N = 0 \text{ to } 127)$ .	0 to 100		
SB	Individual stability	This is the stability of read character N (N = 0 to 127).	0 to 100		
SMC	Similarity (each character type)	Similarity level of loaded characters. (N = 0 to 39)  N = 0 to 9: 0 to 9 10 to 35: A to Z 36: / (slash) 37: : (colon) 38 • 39; (, ) (parenthesis)	0 to 100		
SBC	Stability (each character type)	Stability level of loaded characters. (N = 0 to 39)  N = 0 to 9: 0 to 9 10 to 35: A to Z 36: / (slash) 37: : (colon) 38 • 39; (, ) (parenthesis)	0 to 100		

# **Measurement Data That Can Be Logged for OCR**

Parameter	Setting	Description
Judgement	-2: No judgment (not measured) 0: Judgment is OK -1: Judgment is NG -11: Model does not match -13: Measurement time out -16: Measurement timeout error, -17: Format not entered error	This is the judgment result.
Similarity	0 to 100	This is the lowest similarity of the read characters.
Stability	0 to 100	This is the lowest stability of the read characters.
Number of read characters on line 1	0 to 32	This is the number of characters that were read on line 1.
Number of read characters on line 2	0 to 32	This is the number of characters that were read on line 2.
Number of read characters on line 3	0 to 32	This is the number of characters that were read on line 3.
Number of read characters on line 4	0 to 32	This is the number of characters that were read on line 4.
Individual similarity	0 to 100	This is the similarity of read character N (N = 0 to 127).
Individual stability	0 to 100	This is the stability of read character N (N = 0 to 127).

Reading with OCR FQ2-S/CH User's Manual

178

# **Reading Barcodes**



#### **Bar Codes**

You can read barcodes.

You can also verify if the character string that was read from the barcode matches a registered character string.

You can output the result of reading a barcode and the verification result to an external device.

The following ten code types can be read.

- JAN/EAN/UPC
- Code39
- Codabar (NW-7)
- ITF (Interleaved 2 of 5)
- Code 93
- Code128/GS1-128
- GS1 DataBar\*

(Truncated, Stacked, Omni-directional, Stacked Omni-directional, Limited, Expanded, Expanded Stacked)

- Pharmacode
- GS1-128 Composite Code (CC-A,CC-B,CC-C)
- GS1 DataBar Composite Code (CC-A,CC-B)
- \* GS1 DataBar is a code in which the name has been changed from the previous RSS.

Note

#### Setup

Set the inspection region, place the applicable code in front of the Camera, and then perform teaching. The code type and the detailed parameters are set automatically.



#### Measurement

One barcode is read in a single inspection region. When the inspection region contains multiple barcodes, the result of the first barcode to be read is output.\*



(Max.16 characters per line and Max.4 lines can be displayed.)

#### Important

Reading will end in error if the barcode type is incorrectly set. Set the barcode type before starting reading. When teaching is performed, the captured barcode is read, and the following items can be set:

- Code type Detailed Parameters: p. 186
- Direction (for Pharma only) Detailed Parameters: p. 186
- Reverse decode (for Pharma only) Detailed Parameters: p. 186

**Reading Barcodes** 

<sup>\*:</sup> A Max.64 characters can be displayed on the result screen.

# **Setup Procedure for Bar Code**

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Bar code].
    - 4-3 Configuring Inspection Items: p. 138

Note

180

Drag the arrow ( ) at the bottom of the menu to display all of the inspection items.




Reading Barcodes FQ2-S/CH User's Manual

#### Step 2 **Teaching**

For teaching, the region to measure and the barcode within that region are set as read conditions.

You can also register the contents that was read from the barcode as a verification condition in the master data.

- ► [Inspect] [Inspection] [Add item.] [Bar code] [Settings] Tab Page
  - Step 3 Verification Conditions
    - Press [Teach].
    - Input an image of the barcode.
    - 3 Move the rectangle so that it surrounds the barcode.
    - Press the [OK] Button.
    - 5 The result of reading the barcode that was displayed will be displayed along with a confirmation dialog box for registration in the master data.

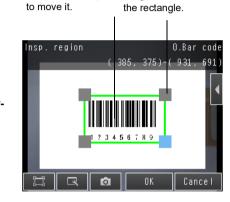

Drag a corner to size

Drag the rectangle

- 6 Press [Yes] to register the barcode read result in the master data.
  - The master data contains the character strings from the barcodes that are registered to verify whether the read character strings match specific character strings.
- Press the master data in which the read characters will be registered.
- Press [Back] to end teaching.

Note

### Step 3 Setting Verification Conditions

Performing Test Measurements: p. 340

You can register a character string from a barcode to use it to verify that the character string that was read from a barcode matches the registered character string.

You can register up to 32 character strings for verification in the master data.

You can verify the character string in the inspection against up to 32 character strings that are registered in the master data.

The verification result is saved in an external reference parameter, so you can use a communications command to output it to an external device.

External Reference Parameters: p. 481

[Inspect] – [Inspection] – [Add item.] – [Bar code] – [Settings] Tab Page

1 Press [Verification].


182

**2** Press [Master data regist.].

3 Press the character string to register in the master data.

Reading Barcodes FQ2-S/CH User's Manual

4 You can use any of the following three methods to register character strings in the master data from the menu display.

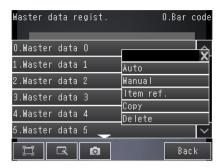

[Auto]: Registers a character string from an actual barcode in the master data. The procedure is essentially the same as the procedure for teaching in step 2.

[Manual]: Registers a character string that is entered directly in the master data. You can use a software keyboard to register a character string with up to 32 characters.

Note

Check the table of ASCII characters to see what characters can be registered. You cannot enter two-byte characters, one-byte Kana characters, and control codes. You can use the following characters as wildcards.

- \*: A wildcard for a character string of 0 or more characters
- ?: A wildcard for one character
- ASCII code table: p. 185

[Item ref.]: Select this item to use the immediately preceding read results as the verification character string. The following inspection items can be used as references: Bar code, 2D-code, 2D-code (DPM), and OCR. You cannot reference an inspection item at an item number that is after the item number of the inspection item that you are editing. When you register a character string from the master data, the item number of the inspection item that is being referenced, such as "Ref. 00," will be displayed.

Using Item References: p. 148

- 5 Repeat the above procedure to register more than one character string in the master data.
- 6 Press [Back] to return to the verification conditions screen.
- 7 Press [Verif. master data] and select the character string in the master data to use for verification.
- 8 Set the following verification conditions as required.

183

Setup Item	Setting Value	Description
	OFF(Default)	Sets whether to verify the character string that was read from the
Verif. master data	All master data	<ul> <li>barcode against a character string that is registered in the master data.</li> </ul>
	Master data 0 to 31	To verify the read character string against the master data, select the character string to use for verification.
Partial verif on/off	No (Default)	The number of digits in the read results to be verified with the master data can be limited. When [Partial verification] is set to Yes, set
Faruai verii. Ori/ori	Yes	the first and last compared digit positions. Up to 32 characters can
Partial Verif. setup	1 to 1024 Default First digit: 1, last digit: 1024)	be set as the number of digits.  Example: First compared digit 2, last compared digit 6  OMRON2008 2nd digit 6th digit  The text string used for verification becomes "MRON2". Manually register "MRON2", the comparison character string, in master data registration.
Master data regist.		Registers a character string in the master data.  When using Partial verification, after automatically registering the master data, you should then adjust the data manually.
External teach No.	Off (Default)	Sets the character string in which to automatically register the read result for teaching from an external device.
External teach No.	Master data 0 to 31	result for teaching from an external device.

# 9 Press [Back].

184

Reading Barcodes FQ2-S/CH User's Manual

The following table shows the ASCII codes that can be used for manual registration of master data and also for registering characters of Limits.

Upper 4 bits

Lower 4 bits

	2	3	4	5	6	7
0	SP	0	@	Р	`	р
1	!	1	Α	Q	а	q
2	"	2	В	R	b	r
1 2 3		3	С	R S	С	s
4		4	D	Т	d	t
5		5	Е	U	е	u
6	&	6	F	V	f	٧
6 7 8 9	,	7	G	W	g	W
8		8	Н	Х	h	Х
9		9	I	X	·	у
Α	*	•••	J	Z	ij	Z
В	+	;	K	[	k	{
B C D E F	,	<	L	¥	I	ł
D	-	=	М	]	m	}
Е		<b>&gt;</b> ?:	Ν	٨	n	~
F	/	?	0		0	

# **Reflect in Total Judgment**

You can specify whether to reflect the verification result of a barcode inspection item in the overall judgment. (The Default setting is [Yes].)

▶ [Inspect] – [Inspection] – [Add item.] – [Bar code] – [Details] – [Output parameter] – [Reflect]

Setting Up Inspections

# **Detail Settings**

186

When you execute TEACH, the measurement parameters are automatically set according to the read cords.

### ▶ [Inspect] – [Inspection] – [Add item.] – [Bar code] – [Details] Tab Page

Press [Meas. parameter], and set the measurement parameters.

Be sure to always specify the code type. Specify other items as necessary. If master data is automatically registered, the code type, the composite codes on/off setting, and the read direction are automatically set.

Setup Item	Setting Value	Description
	JAN/EAN/UPC (Default)	
	Code39	
	Codebar	
	ITF	
Code type	Code93	Selects the type of barcode to be read.
	Code128/GS1-128	
	GS1 DataBar	
	Pharmacode	
0.1.1	Black (Default)	
Code color	White	Sets the color of the code to be read.
	No (Default)	Sets whether or not to support composite codes.
Composite codes on/off	Yes	This item is enabled only when the following barcode types are selected:  Code128/GS1-128, GS1 DataBar
	No (Default)	Selects whether or not to insert a check digit. This item is enabled
Check digit on/off	Yes	only when the following barcode types are selected: Codebar, Code39, ITF (Interleaved 2 of 5), JAN, EAN, UPC, or Code93. When the other codes are selected, this item is set to ON.
Discoutions	Horizontal mode (Default)	Selects the reading direction. This item is enabled only when Phar-
Direction	Vertical mode	macode is selected as the barcode type.
Davers on/off	No (Default)	Sets whether or not to use the reverse mode. This item is enabled
Reverse on/off	Yes	only when Pharmacode is selected as the barcode type.
Timeout	1 to 9999 ms Default value: 9999	Sets the timeout time in read processing. A read error occurs if measurement does not end after the preset timeout time is exceeded.

Reading Barcodes FQ2-S/CH User's Manual

# **Changing the Character String That Is Output for Read Errors**

You can change the character string that is output for read errors.

▶ [Inspect] – [Inspection] – [Add item.] – [Bar code] – [Details] Tab Page – [Output parameter] – [Error string]

Setup Item	Setting Value	Description
U	Max. 20 digits (Default value: NG)	Sets the text string to be output when a read error occurs.  ASCII code table: p. 185

# Changing the Items That Are Displayed on the Test Measurement and Run Display

Display setting	Description
Num. of char.	Displays the number of characters that were read.
Characters	Displays the character string that was read.

# **Unstable Reading Results**

### **Reading Is Unstable Due to Low Contrast**

Adjust the brightness to improve the contrast of the bar code.

Adjusting the Brightness: p. 77

FQ2-S/CH User's Manual Reading Barcodes

### **Outputting Read Characters to an External Device**

After a measurement, you can automatically output the character string that was read with the barcode inspection item to a PLC or other external device. The character strings are output after outputting the output data (output data settings 0 to 31), such as the inspection item parameters and calculation result.

Refer to the description for the communications format for the setting procedure and output specifications to output the character string.

$\Gamma$	П	Vision Sensor FQ2-S/CH	Series User's Manual	for Communications	Settings (	(Cat. No. 2	Z338
----------	---	------------------------	----------------------	--------------------	------------	-------------	------

- Section 2 Controlling Operation and Outputting Data with a Parallel Connection
- Section 3 Controlling Operation and Outputting Data with an Ethernet Connection
- Section 4 Controlling Operation and Outputting Data with an RS-232C Connection

|--|

The read character string is output after the other output data (data 0 to 31 in the output data settings) after the measurement, such as the inspection item parameters and calculation results.

Refer to the following section for the location of the output area for the character string and other details.

Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z3	38)
 Section 1 Overview of Communication Specifications	

# Measurement Data That Can Be Used for External Outputs and Calculations

Expression text string	Data name	Description	Data range
JG	Judgment	This is the judgment result.	-2: No judgment (not measured) 0: Judgment is OK -1: Judgment is NG -16: Measurement timeout error
IN	Index	The verification result (master data No.) is output.	<ul><li>-2: No verification pattern, or reading error</li><li>-1: Verification is NG,</li><li>0 to 31: Master data No.</li></ul>
N	Num. of characters	The number of characters read is output.	0 to 1024

Reading Barcodes FQ2-S/CH User's Manual

# Measurement Data That Can Be Logged (Bar Code)

The following values can be logged as measurement data.

Measured item	Range of value	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -16: Measurement timeout error	This is the judgment result from the measurements.
Num. of characters	0 to 1024	The number of characters read is output.

\*When logging data is output, the data is output in the order of the above table.

7-6 Logging Measurement Data and Image Data: p. 392

#### **Errors**

### **Error in Teaching**

If 2D-codes cannot be read during an automatic registration, a teaching error message is displayed. The reading may be unstable due to low contrast.

Adjust the brightness to improve the contrast of the 2D-code.

Note Adjusting the Brightness: p.77

189

# 4-6 Reading 2D-codes



#### 2D-codes


You can read 2D codes. You can also verify whether the character string that was read from the 2D code matches a registered character string. You can output the result of reading a 2D code and the verification result to an external device. The following five code types can be read.

Data Matrix (ECC200, GS1), QR Code, Micro QR Code, PDF417, or MicroPDF417

Note


#### Setup

Set the inspection region, place the applicable code in front of the Camera, and then perform teaching. The code type and the detailed parameters are set automatically.

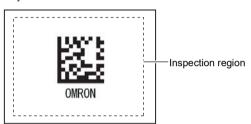

#### Measurement

One 2D barcode is read in a single inspection region. When the inspection region contains multiple 2D codes, the result of the first 2D code to be read is output.\*

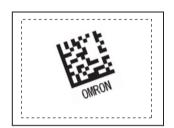

\*: A Max.64 characters can be displayed on the result screen. (Max.16 characters per line and Max.4 lines can be displayed.)

#### Important

190

Reading will end in error if the 2D Code type is incorrectly set. Set the code type before starting reading. When teaching is performed, the captured 2D code is read, and the following items can be set.

- Code type Detailed Parameters: p. 196
- Mirror Detailed Parameters: p. 196
- Specifying the Code Color (Data Matrix, QR Code, or Micro QR Code only) Detailed Parameters: p. 196
- Shape (Data Matrix, QR Code, or Micro QR Code only) Detailed Parameters: p. 196

Reading 2D-codes FQ2-S/CH User's Manual

# **Setup Procedure for 2D-code**

# Step 1 Selecting the Inspection Item

- ► [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [2D-code].
    - 4-3 Configuring Inspection Items: p. 138



Note

Drag the arrow ( ) at the bottom of the menu to display all of the inspection items.

# Step 2 Teaching

For teaching, the region to measure and the 2D code within that region are set as read conditions. You can also register the contents that was read from the 2D code as a verification condition in the master data.

- Step 3 Verification Conditions: p. 194
- ▶ [Inspect] [Inspection] [Add item.] [2D-code] [Settings] Tab Page
  - 1 Press [Teach].
  - 2 Input an image of the 2D code.
  - **3** Move the rectangle so that it surrounds the 2D code.
  - 4 Press the [OK] Button.

191

5	Press [TEACH] on the lower right of the display.
6	The result of reading the 2D code that was displayed will be displayed along with a confirmation dialog box for registration in the master data.
7	Press [Yes] to register the read result in the master data.
	The master data contains the character strings from the 2D codes that are registered to verify whether the read character strings match specific character strings.
8	Press the master data in which the read characters will be registered.
9	Press [Back] to end teaching.
Note	
	use the menu commands that are displayed for at the right of the display to adjust the settings that from teaching.
• [Insp.	
	from teaching.
• [Came	from teaching. region]: You can change the inspection region.
• [Came	from teaching. region]: You can change the inspection region. ra setup]: You can adjust the Camera focus, brightness, and other factors to input a better image.
• [Came	from teaching. region]: You can change the inspection region. ra setup]: You can adjust the Camera focus, brightness, and other factors to input a better image.  Adjusting Image Quality: p. 76
• [Came	from teaching.  region]: You can change the inspection region.  ra setup]: You can adjust the Camera focus, brightness, and other factors to input a better image.  Adjusting Image Quality: p. 76  Parameter]: You can change the type of code to read, the read settings, etc.
• [Came	from teaching. region]: You can change the inspection region. ra setup]: You can adjust the Camera focus, brightness, and other factors to input a better image.  Adjusting Image Quality: p. 76  Parameter]: You can change the type of code to read, the read settings, etc.  Detailed Parameters: p. 196

Reading 2D-codes FQ2-S/CH User's Manual

192

193


### Step 3 Judgement condition adjustment

Settings can be made to check whether the characters that were read from the workpiece were recognized correctly.

Differences between the references that were taught for 2D code reading and the actual result of 2D code reading are detected and conditions are set to determine how accurately 2D codes are read.

#### ▶ [Inspect] – [Inspection] – [Add item.] – [2D-code] – [Settings] Tab Page

- 1 Press [Judgement].
- Press a setting item to set the OK range. Set a range for each of the setting items below. Continuous measurement of the displayed image is executed.

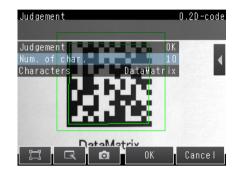

Note

Measured item	Range of value	Description
( )verall auality	Default value: Lower limit 0, upper limit 4	Can only be displayed and set when the code being read is Data Matrix and print quality is ON. Adjusts the upper and lower limits of the overall quality that is to be judged as OK.

3 Press [OK] to finalize.

FQ2-S/CH User's Manual Reading 2D-codes

### Step 4 Setting Verification Conditions

You can register a character string from a 2D code to use it to verify that the character string that was read from a 2D code matches the registered character string. You can register up to 32 character strings for verification in the master data. You can verify the character string in the inspection against up to 32 character strings that are registered in the master data.

The verification result is saved in an external reference parameter, so you can use a communications command to output it to an external device.

External Reference Parameters: p. 481

### ▶ [Inspect] - [Inspection] - [Add item.] - [2D-code] - [Settings] Tab Page

- 1 Press [Verification].
- **2** Press [Master data regist.].
- 3 Press the character string to register in the master data.
- 4 You can use any of the following three methods to register character strings in the master data from the menu display.



[Auto]: Registers a character string from an actual 2D code in the master data. The procedure is essentially the same as the procedure for teaching in step 2.

[Manual]: A character string is entered directly in the master data.

Select this menu when making a change to the master data registered using [Auto] menu.

You can use a software keyboard to register a character string with up to 32 characters.

Note

Check the table of ASCII characters to see what characters can be registered. You cannot enter two-byte characters, one-byte Kana characters, and control codes. You can use the following characters as wildcards.

- \*: A wildcard for a character string of 0 or more characters
- ?: A wildcard for one character

ASCII code table: p. 196

194 Reading 2D-codes FQ2-S/CH User's Manual

- [Item ref.]: Select this item to use the immediately preceding read results as the verification character string. The following inspection items can be used as references: Bar code, 2D-code, 2D-code (DPM), and OCR. You cannot reference an inspection item at an item number that is after the item number of the inspection item that you are editing. When you register a character string from the master data, the item number of the inspection item that is being referenced, such as "Ref. 00," will be displayed.
  - Using Item References: p. 148
- 5 Repeat the above procedure to register more than one character string in the master data.
- 6 Press [Back] to return to the verification conditions screen.
- 7 Press [Verif. master data] and select the character string in the master data to use for verification.
- 8 Set the following verification conditions as required.

Setup Item	Setting Value	Description
Verif. master data	OFF (Default)	Sets whether to verify the character string that was read from the barcode against a character string that is registered in the master
veili. Illastei uata	All master data	data. To verify the read character string against the master data,
	Master data 0 to 31	select the character string to use for verification.
Partial verif. on/off	No (Default)	The number of digits in the read results to be verified with the master data can be limited. When [Partial verification] is set to [Yes], set
	Yes	the first and last compared digit positions. Up to 32 characters can be set as the number of digits.
Partial verif. setup	1 to 1024 (Default value first digit:1 last digit:1024)	Example: First compared digit 2, last compared digit 6  OMRON2008  the digit of the digit of the text string used for verification becomes "MRON2".  Manually register "MRON2", the comparison character string, in master data registration.
Master data regist.		Registers a character string in the master data. When you specify the vitrification range, adjust the data manually after executing the master data automatically.
External teach No.	OFF (Default)	Sets the character string in which to automatically register the read result for teaching from an external device.
External teach No.	Master data 0 to 31	result for teaching from an external device.

9 Press [Back].

FQ2-S/CH User's Manual Reading 2D-codes

#### Note

#### **ASCII** code table

The following table shows the ASCII codes that can be used for manual registration of master data and also for registering characters of Limits.

Upper 4 bits

Lower 4 bits

	2	3	4	5	6	7
0	SP	0	@	Р	`	р
1	!	1	Α	Q	а	q
2	"	2	В	R	b	r
1 2 3		3	С	R S	С	s
4		4	D	Т	d	t
5		5	Е	U	е	u
6	&	6	F	V	f	٧
7 8 9	,	7	G	W	g	W
8		8	Ι	Х	h	X
9		9		X Y Z		У
Α	*	•••	J	Z	ij	Z
В	+	;	K	[	k	{
С	,	<	L	¥		-
B C D E F	_	=	М	]	m	}
Е		<b>&gt;</b> ?	Ν	٨	n	~
F	/	?	0		0	

# **Reflect in Total Judgment**

You can specify whether to reflect the verification result of a 2D code inspection item in the overall judgment. (The Default setting is [Yes].)

[Inspect] - [Inspection] - [Add item.] - [2D-code] - [Details] Tab Page - [Output parameter] - [Reflect]

# **Detail Settings**

When you execute TEACH, the measurement parameters are automatically set corresponded read code.

▶ [Inspect] – [Inspection] – [Add item.] – [2D-code] – [Details] Tab Page

Press [Meas. Parameter]
Set the measurement parameters.

Be sure to always specify the code type. When you automatically register matrix data, the code type, code color, data matrix shape, and reverse settings are set automatically.

Setup Item	Setting Value	Description			
	Data Matrix (Default)				
	QR Code				
Code type	MicroQR Code	Selects the type of 2D Code to be read.			
	PDF417				
	MicroPDF417				
Reverse	Normal (Default)	Sets normal or reverse as the image orientation.			
	Reverse	This parameter is valid only one of the following code types is selected.			
		Data Matrix, QR Code, or Micro QR Code			
	Black	Specifies the code color.			
Code color	White	This item is enabled only when the following barcode types are selected:			
	Auto (Default)	Data Matrix, QR Code, MicroQR Code			
Ob a ma	Square (Default)	Specifies the code shape.			
Shape (Data Matrix)	Square or Rectangle	This item is enabled only when the following barcode types are selected:     Data Matrix			
Print quality	ON	Sets print quality evaluation ON/OFF.			
(Data Matrix)	OFF (Default)	Sets print quality evaluation ON/OFF.			
-	ON	Set whether grid correction is ON or OFF.			
Grid correction (MicroQR Code)	OFF (Default)	If it is set to ON, recognizing the timing pattern cell in the 2D code makes it easier to recognize the correct position of the cell.  If it is set to OFF, the cell position will be the part that is evenly divided from the outer shape and the number of cells. Therefore, if the actual cell positions are not even, it is easy to detect falsely.			
Timeout	1 to 9999 ms (Default: 9999)	Sets the timeout time in read processing. A read error occurs if measurement does not end after the preset timeout time is exceeded.			

# **Outputting Read Characters to an External Device**

After a measurement, you can automatically output the character string that was read with the 2D-code inspection item to a PLC or other external device. The character strings are output after outputting the output data (output data settings 0 to 31), such as the inspection item parameters and calculation result. Refer to the description for the communications format for the setting procedure and output specifications to output the character string.

Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)

- Section 2 Controlling Operation and Outputting Data with a Parallel Connection
- Section 3 Controlling Operation and Outputting Data with an Ethernet Connection
- Section 4 Controlling Operation and Outputting Data with an RS-232C Connection

197

N	ote
	OLC

The read character string is output after the other output data (data 0 to 31 in the output data settings) after the measurement, such as the inspection item parameters and calculation results. Refer to the following section for the location of the output area for the character string and other details.

Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)
Section 1 Overview of Communication Specifications

### **Changing the Character String That Is Output for Read Errors**

You can change the character string that is output for read errors.

[Inspect] – [Inspection] – [Add item.] – [2D-code] – [Details] Tab Page − [Output parameter] – [Error string]

Setup Item	Setting Value	Description
•	Max. 20 digits (Default value: NG)	Sets the text string to be output when a read error occurs.  ASCII code table: p. 196

Reading 2D-codes FQ2-S/CH User's Manual

# **Unstable Reading Results**

### **Reading Is Unstable Due to Low Contrast**

Adjust the brightness to improve the contrast of the 2D code.

Adjusting the Brightness: p. 77

# Measurement Data That Can Be Used for External Outputs and Calculations

Expression text string	Data name	Description	Data range
JG	Judgment	This is the judgment result.	-2: No judgment (not measured), 0: Judgment is OK 1: Judgment is NG -16: Measurement timeout error
IN	Index	The verification result (master data No.) is output.	-2: No verification pattern, or reading error -1: Verification is NG 0 to 31: Master data No.
N	Num. of characters	The number of characters read is output.	0 to 1024
GD0	Overall quality	Overall quality of 2D code. The lowest grade of the individual indices is the overall quality.	0 to 4
GD1	Decode	Evaluates whether decode was successful.	0 to 4
GD2	Cell contrast	Evaluates the difference between the average of the white cell density and the average of the black cell density.	0 to 4
GD3	Cell modulation	Evaluates the deviation of cell brightness.	0 to 4
GD4	Fixed pattern damage	Evaluates the degree of fixed pattern damage of the code.	0 to 4
GD5	Axial nonuniformity	Evaluates the degree of vertical and horizontal distortion of the code.	0 to 4
GD6	Grid nonuniformity	Evaluates the position deviation of each cell.	0 to 4
GD7	Unused err. Corr.	Evaluates the proportion of unused error correction during decode.	0 to 4
GD8	Print scale	Outputs the print scale.	0 to 4
GD9	Print scale X	Outputs the print scale X direction.	0 to 4
GD10	Print scale Y	Outputs the print scale Y direction.	0 to 4

FQ2-S/CH User's Manual Reading 2D-codes

# Measurement Data That Can Be Logged (2D Code)

The following values can be logged as measurement data.

Measured item	Range of value	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -16: Measurement timeout error	This is the judgment result from the measurements.
Num. of characters	0 to 1024	The number of characters read is output.
Overall quality	0 to 4	Outputs the evaluation value of overall quality.
Decode	0 to 4	Outputs the evaluation value of decode.
Cell contrast	0 to 4	Outputs the evaluation value of the contrast.
Cell modulation	0 to 4	Outputs the evaluation value of cell modulation.
Fixed pattern damage	0 to 4	Outputs the evaluation value of fixed pattern damage.
Axial nonuniformity	0 to 4	Outputs the evaluation value of axial nonuniformity.
Grid nonuniformity	0 to 4	Outputs the evaluation value of grid nonuniformity.
Unused err. Corr.	0 to 4	Outputs the evaluation value of unused error correction.
Print scale	0 to 4	Outputs the evaluation value of the print scale.
Print scale X	0 to 4	Outputs the evaluation value of print scale X.
Print scale Y	0 to 4	Outputs the evaluation value of print scale Y.

<sup>\*</sup> When logging data is output, the data is output in the order of the above table.

$\Box$	¬ 7-6 Logging Measurement Data a	and Image Data: p	). 392

#### **Errors**

#### **Errors in Teaching**

If 2D-codes cannot be read during an automatic registration, a teaching error message is displayed. The reading may be unstable due to low contrast. Adjust the brightness to improve the contrast of the 2D-code.

Adjusting the Brightness: p. 77

Reading 2D-codes FQ2-S/CH User's Manual

# 4-7 Reading 2D Codes (DPM)



### 2D Codes (DPM)

You can read DPM (direct part marking) 2D codes.

You can also verify whether the character string that was read from the 2D code matches a registered character string.

You can output the result of reading a 2D code and the verification result to an external device.

The scan result and verification result can be externally output.

Codes that can be scanned are Data Matrix (ECC200) and QR Codes.


The print quality evaluation result defined in ISO/IEC TR29158 can only be calculated for Data Matrix.

#### Setting image

When the inspection region is set, the code image is displayed, and teaching is executed, the code type and detailed parameters are automatically set.

#### Inspection image

One 2D code is scanned in one inspection region. If there are multiple 2D codes in the inspection region, the first scanned result is output.\*

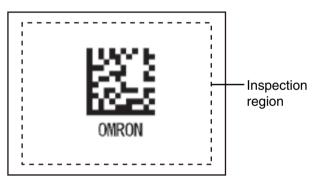



<sup>\*:</sup> A Max.64 characters can be displayed on the result screen. (Max.16 characters per line and Max.4 lines can be displayed.)

# **Setup Procedure for 2D-code (DPM)**

# Step 1 Select the Inspection Item

- ► [Inspect] [Modify]
- 1 Press an unused inspection item number and press [Add item.].
- 2 Press [2D-code (DPM)].
  - 4-3 Configuring Inspection Items: p. 138

Note

Drag the arrow ( ) at the bottom of the menu to display all of the inspection items.



### Step 2 Teaching

For teaching, the region to measure and the 2D code within that region are set as read conditions. You can also register the contents that was read from the 2D code as a verification condition in the master data.


Step 4 Setting the Verification Conditions: p. 207


#### ▶ [Inspect] - [Inspection] - [Add item.] - [2D-code (DPM)] - [Settings] Tab Page

1 Press [Teach].



- 2 Display the image of the 2D code.
- 3 Move the rectangle so that it surrounds the 2D code.
- 4 Press the [OK] Button.
- 5 Press [TEACH] on the lower right of the display.

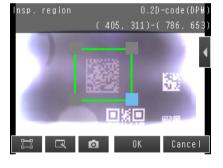


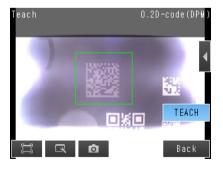

The result of reading the 2D code that was displayed will be displayed along with a confirmation dialog box for registration in the master data.

7 Press [Yes] to register the read result in the master data.

The master data contains the character strings from the 2D codes that are registered to verify whether the read character strings match specific character strings.

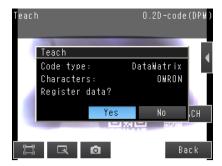

- 8 Press the master data in which the read characters will be registered.
- 9 Press [Back] to end teaching.

#### Note

You can use the menu commands that are displayed for at the right of the display to adjust the settings that resulted from teaching.

- [Insp. region]: You can change the inspection region.
- [Camera setup]: You can adjust the Camera focus, brightness, and other factors to input a better image.
  - Adjusting Image Quality: p. 76
- [Meas. Parameter]: You can change the type of code to read, the read settings, etc.
  - Detailed Parameters: p. 196
- [Continuous test]: You can start test measurements of displayed images for the settings that were taught.
  - Performing Test Measurements: p. 340

### Step 3 Setting the Judgement Parameters

Settings are made to check whether the characters that were read from the workpiece were recognized correctly. Differences between the references that were taught for reading the 2D code and the actual result of reading the 2D code are detected and conditions are set to determine how accurately characters are read.

#### ▶ [Inspect] - [Inspection] - [2D-code (DPM)] - [Settings] Tab Page

- 1 Press [Judgement].
- 2 Press each parameter and set the range that is to be judged as OK. Set the range for each of the following parameters.

Continuous measurements will be performed for the images that are displayed.



#### Note

- You can change measurement values that appear on the display on the Display Settings Display.

  Press [Display setting] on the right of the display to switch to the Display Settings Display.
- You can automatically adjust the judgement conditions by using OK and NG workpieces.
  - 5-3 Adjusting the Judgment Parameters: p. 346

Press [ - [Auto adjustment] on the right of the display to switch to the Auto adjustment Display.

Parameter	Setting	Description
Contrast	Range: 0 to 100 (Default)	Adjust the upper and lower limits of the contrast that is to be judged as OK. Cannot be displayed or set when DPM print quality is ON.
Focus	Range: 0 to 100 (Default)	Adjust the upper and lower limits of the focus that is to be judged as OK. Cannot be displayed or set when DPM print quality is ON.
Cell Recog. Rate	Range: 0 to 100 (Default)	Adjust the upper and lower limits of the cell recognition rate that is to be judged as OK. Cannot be displayed or set when DPM print quality is ON.
Overall quality	Range: 0 to 4 (Default)	Can only be displayed and set when the code being read is Data Matrix and DPM print quality is ON. Adjusts the upper and lower limits of the overall quality that is to be judged as OK.

#### Note

- Refer to the following information for Contrast, Focus and Cell Recog. Rate.
  - Measurement Data That Can Be Used for External Outputs and Calculations: p. 213

3 Press [OK] to enter the values.

Note

You can specify whether to reflect the judgment result of the judgment conditions for character recognition in the overall judgment. (The Default is to reflect them.)

► [Inspect] – [Inspection] – [Add item.] – [2D-code (DPM)] – [Details] Tab Page – [Output parameter] – [Reflect]

### **Step 4** Setting the Verification Conditions

You can register a character string from a 2D code to use it to verify that the character string that was read from a 2D code matches the registered character string. You can register up to 32 character strings for verification in the master data.

You can verify the character string in the inspection against up to 32 character strings that are registered in the master data. The verification result is saved in an external reference parameter, so you can use a communications command to output it to an external device.

- 9-2 External Reference Parameters: p. 481
- ▶ [Inspect] [Inspection] [Add item.] [2D-code (DPM)] [Settings] Tab Page
  - **1** Press [Verification].
  - 2 Press [Master data regist.].
  - **3** Press the character string to register in the master data.
  - 4 You can use any of the following three methods to register character strings in the master data from the menu display.



- [Auto]: Registers a character string from an actual 2D code in the master data. The procedure is essentially the same as the procedure for teaching in step 2.
- [Manual]: A character string is entered directly in the master data.

  Select this menu when making a change to the master data registered using [Auto]

You can use a software keyboard to register a character string with up to 32 characters.

Note

Check the table of ASCII characters to see what characters can be registered. You cannot enter two-byte characters, one-byte Kana characters, and control codes. You can use the following characters as wildcards.

- \*: A wildcard for a character string of 0 or more characters
- ?: A wildcard for one character
- ASCII code table: p. 209

#### [Item ref.]:

Select this item to use the immediately preceding read results as the verification character string. The following inspection items can be used as references: Bar code, 2D-code, 2D-code (DPM), and OCR. You cannot reference an inspection item at an item number that is after the item number of the inspection item that you are editing.

When you register a character string from the master data, the item number of the inspection item that is being referenced, such as "Ref. 00," will be displayed.

- 5 Press [Back] to return to the verification conditions screen.
- 6 Press [Verif. master data] and select the character string in the master data to use for verification.
- 7 Set the following verification conditions as required.

Parameter	Setting	Description
Verif. master data	OFF (Default)     All master data     Master data 0 to 31	Sets whether to verify the read character string against a character string that is registered in the master data.  To verify the read character string against the master data, select the character string to use for verification.
Partial verif. on/off	No (Default) Yes	The number of digits in the read results to be verified with the master data can be limited. When [Partial verification] is set to [Yes], set the first and last compared digit positions. Up to 32 characters can be set
Partial verif. setup	1 to 1024  Default value first digit:1 last digit:1024	as the number of digits.  Example: First compared digit 2, last compared digit 6  OMRON2008  the part of the digit of the digit of the text string used for verification becomes "MRON2".  Manually register "MRON2", the comparison character string, in master data registration.
Master data regist.		Registers a character string in the master data. Use [Manual] menu when making a change to the [Partial verif. on/off] setting for master data originally registered by [Auto].
External teach No.	OFF (Default) Master data 0 to 31	Sets the character string in which to automatically register the read result for teaching from an external device.

#### 8 Press [Back].

The following table shows the ASCII codes that can be used for manual registration of master data and also for registering characters of Limits.

Upper 4 bits

Lower 4 bits

	2	3	4	5	6	7
0	SP	0	@	Р	,	р
1	!	1	Α	Q	а	q
2	"	2	В	R	b	r
1 2 3		3	С	S	С	s
4		4	D	Т	d	t
5		5	Е	U	е	u
6	&	6	F	V	f	٧
7 8 9	,	7	G	W	g	W
8		8	Н	Х	h	Х
9		9	1	X Y Z	ï	y
Α	*	:	J	Z	j	Z
В	+	;	K	[	k	{
B C	,	<	L	¥	I	ł
D	_	=	М	]	m	}
E F		> ?	N	٨	n	<b>~</b>
F	/	?	0		0	

### **Detailed Parameters**

When you execute TEACH, the measurement parameters are automatically set corresponded read code.

▶[Inspect] - [Inspection] - [Add item] - [2D-code (DPM)] - [Details] Tab Page - [Meas. Parameter]

### **Measurement Parameters**

Parameter	Setting	Description
Code type	DataMatrix QR Code Auto (Default)	Sets the type of code to be scanned.
Auto length	No Yes (Default)	Sets whether the code length is automatically acquired.
Size	50 to 480 (Default)	Sets the length of the code on the display. (pixels)
Reverse	Normal Reverse Auto (Default)	Sets normal image or reverse (mirror) image.
Code color	Black White Auto (Default)	Sets the color of the code.
Grid correction	ON OFF (Default)	Set whether grid correction is ON or OFF. You can set this for DataMatrix and for QR codes. If it is set to ON, recognizing the timing pattern cell in the 2D code makes it easier to recognize the correct position of the cell. If it is set to OFF, the cell position will be the part that is evenly divided from the outer shape and the number of cells. Therefore, if the actual cell positions are not even, it is easy to detect falsely.
Fast mode	Yes No (Default)	Sets fast mode.  When ON, the scanning time is shorter.  For certain work, the scanning time may be longer when Fast mode is ON. Please use after performing test measurements and verifying the scanning speed.
Shape (DataMatrix only)	Square Rectangle Auto (Default)	Sets the code shape.
QR Code Model (QR Code only)	Model 1 Model 2 Auto (Default)	Sets the QR Code model.
Error Correction Level (QR Code only)	L (7%) M (15%) Q (25%) H (30%) Auto (Default)	Sets the error correction level (ECC level). (The ECC level of DataMatrix is fixed at 200.)
Cell (QR Code only)	21 × 21, 25 × 25, 29 × 29, 33 × 33, 37 × 37, 41 × 41, 45 × 45, 49 × 49, 53 × 53, 57 × 57, Auto (Default)	Sets the number of code cells.

Parameter	Setting	Description
Cell (DataMatrix only)	Shape: Square 10 × 10, 12 × 12, 14 × 14, 16 × 16, 18 × 18, 20 × 20, 22 × 22, 24 × 24, 26 × 26, 32 × 32, 36 × 36, 40 × 40, 44 × 44, 48 × 48, 52 × 52, 64 × 64, Auto (Default)  Shape: Rectangle 8 × 18, 8 × 32, 12 × 26, 12 × 36, 16 × 36, 16 × 48, Auto (Default)	Sets the number of code cells.
DPM print quality (Data Matrix only)	ON OFF (Default)	Sets print quality ON/OFF.
Timeout	1 to 9999 ms (Default value: 9999)	Sets the timeout time in read processing. A read error occurs if measurement does not end after the preset timeout time is exceeded.

### Important

- Measurement parameters other than [Grid correction], [Fast mode] and DPM print quality are initialized as set when [Teach] is pressed.
- When the "Code type" setting is changed, some settings are initialized as shown below.

Parameter	Initialized due to "Code type" change
Code type	Initialized
Auto length	
Size	Initialized
Reverse	
Code color	
Grid correction	
Fast mode	
Shape	Initialized
QR Code Model	Initialized
Error Correction Level	Initialized
Cell	Initialized
DPM print quality	

### **Outputting Read Characters to an External Device**

After a measurement, you can automatically output the character string that was read with the DPM 2D code inspection item to a PLC or other external device. The character strings are output after outputting the output data (output data settings 0 to 31), such as the inspection item parameters and calculation result. Refer to the description for the communications format for the setting procedure and output specifications to output the character string.

Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)

- Section 2 EtherNet/IP
- · Section 3 PLC Link
- · Section 4 TCP No-protocol Communications

### **Changing the Character String That Is Output for Read Errors**

You can change the character string that is output for read errors.

▶ [Inspect] – [Inspection] – [Add item.] – [2D-code (DPM)] – [Details] Tab Page – [Output parameter] – [Error string]

Setup Item	Setting Value	Description					
Error string	Max. 20 digits (Default value: NG)	Sets the text string to be output when a read error occurs.  ASCII code table: p. 209					

# Measurement Data That Can Be Used for External Outputs and Calculations

Expression	Data name	Data range	Description			
text string	Bata Hamo	Data rango	Doodiplion			
JG	Judgment	-2: No judgment (not measured) 0: Judgment is OK -1: Judgment is NG -16: Measurement timeout error	This is the judgment result.			
IN	Index	-2: No verification pattern or reading error -1: Verification is NG 0 to 31: Master data No	The verification result (master data No.) is output.			
N	Num. of characters	0 to 1024	The number of characters read is output.			
E	Cell recognition rate	0 to 100	Value that lets you check the correction rate. The recognition rate is higher when the ratio of corrected characters to the total number of characters in the code is lower. When a code cannot be read, the value is 0.			
С	Contrast	0 to 100	Indicates the contrast in a code. When the difference of contrast between light and shade in a code is bigger, the value of contrast become higher. When a code cannot be read, the value is 0.			
F	Focus	0 to 100	Indicates the focus of the image using the change of density at cell edges. When out of focus, the code cannot be read. When the cell edges are sharper, the value of Focus become higher. When a code cannot be read, the value is 0.			
Р	Cell size	Depends on the size of the code.	Depends on the size of the code.			
GDA0	Overall quality	0 to 4	Overall quality of 2D code based on ISO/IEC TR29158(AIM-DPM-1-2006). The lowest grade of the individual indices is the overall quality.			
GDA1	Decode	0 to 4	Evaluates whether decode was successful.			
GDA2	Cell contrast	0 to 4	Evaluates the difference between the average of the white cell density and the average of the black cell density.			
GDA3	Cell modulation	0 to 4	Evaluates the deviation of cell brightness.			
GDA4	Fixed pattern damage	0 to 4	Evaluates the degree of fixed pattern damage of the code.			
GDA5	Axial nonuniformity	0 to 4	Evaluates the degree of vertical and horizontal distortion of the code.			
GDA6	Grid nonuniformity	0 to 4	Evaluates the position deviation of each cell.			
GDA7	Unused err. Corr.	0 to 4	Evaluates the proportion of unused error correction during decode.			

# Inspection Data that Can be Logged

The following values can be logged as inspection data.

Inspection item	Value range	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -16: Measurement timeout error	This is the judgment result from the measurements.
Contrast	0 to 100	Outputs the contrast.
Focus	0 to 100	Outputs the focus.
Cell recognition rate	0 to 100	Outputs the cell recognition rate.
Num. of char.	0 to 1024	Outputs the number of characters that were detected.
Index	-2: No verification pattern, or reading error -1: Verification is NG, 0 to 31: Master data No.	Outputs the index.
Cell size	Depends on the size of the code.	Outputs the number of pixels per cell of the scanned code.
Overall quality	0 to 4	Outputs the evaluation value of overall quality.
Decode	0 to 4	Outputs the evaluation value of decode.
Cell contrast	0 to 4	Outputs the evaluation value of the contrast.
Cell modulation	0 to 4	Outputs the evaluation value of cell modulation.
Fixed pattern damage	0 to 4	Outputs the evaluation value of fixed pattern damage.
Axial nonuniformity	0 to 4	Outputs the evaluation value of axial nonuniformity.
Grid nonuniformity	0 to 4	Outputs the evaluation value of grid nonuniformity.
Unused err. Corr.	0 to 4	Outputs the evaluation value of unused error correction.

When lo	aaina	data is	output	the	data i	s outpu	ıt in	the	order	of the	above	table
VVIIGITIO	ggirig '	uata is	output,	uic	uala i	ο σαιρυ		uic	oraci	OI LITE	above	table.

	7-6 Logging	Measurement	Data and	Image	Data: p.	392
--	-------------	-------------	----------	-------	----------	-----

### If an Error Occurs

# If a teaching error occurs

If scanning of the 2D code fails, a teaching error message appears.

It is likely that low contrast caused unstable scanning.

Adjust the brightness to increase the contrast of the 2D code.

Adjusting the Brightness: p. 77

# 4-8 Inspecting with the Search Inspection Item




# **Search Inspection Item**

This inspection item is used to perform inspections for shapes or for presence. The image pattern that is to be measured is registered in advance and measurements are performed to see if the pattern is present or if the shape is different.


The image pattern that is registered in advance is called the model.

The degree to which the image matches the model is called the correlation.

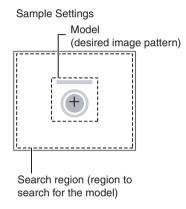



Search for sections that are similar to the model.

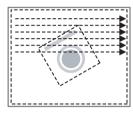






# **Setup Procedure for the Search Inspection Item**

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Search].
    - Registering inspection items: p. 138

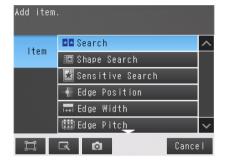


Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

Teaching means to store the region and partial image as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Search] [Settings] Tab Page
  - 1 Press [Teach].

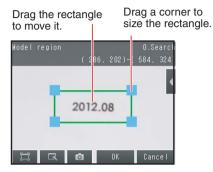

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- **3** Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.
  The basic settings will be registered when teaching has been completed.
- 6 Press [Back] to end teaching.

The following data is stored as the measurement reference.

Item	Parameter	Description	
Reference data	Model image	This is the partial image that is stored as the reference.	
	Reference position X	The area of the model in a set that are stand a unfared	
	Reference position Y	These are coordinates of the model image that are stored as reference.	
	Reference Angle	The angle of the registered model.	

# Step 3 Adjusting Judgement Parameters

- ▶ [Inspect] [Inspection] [Add item.] [Search] [Settings] Tab Page
  - 1 Press [Judgement].
  - Press each parameter and set the range that is to be judged as OK. Set the range for each of the following parameters.


Continuous measurements will be performed for the images that are taken.

Note

You can change the parameters for judgement conditions on the Display Settings Display.

Press [◀] – [Display setting] on the right of the display to switch to the Display Settings Display.

If more than one result was detected, you can switch to a display for each result. (Multi-point output must be enabled.)

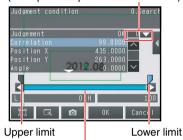

Blue for OK. Red for NG.

- 3 Press [OK] to accept the value.
- 4 Press [Back] to end making the setting.

Parameter	Setting	Description
Correlation	Range: 0 to 100 Defaults: Lower: 60 Upper: 100	Adjust the upper and lower limits of the correlation for an OK judgment.
Position X	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Adjust the upper and lower limits of measurement position X for an OK judgment.
Position Y	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Adjust the upper and lower limits of measurement position Y for an OK judgment.
Angle	Range: -180 to 180 (Default) Defaults: Lower: -180 Upper: 180	Adjust the upper and lower limits of angle for an OK judgment.
Count	Range: 0 to 32 Defaults: Lower: 0 Upper: 32	Adjust the upper and lower limits of the detection count for an OK judgment.


### Note

- You can change the output form for each measurement value to one of the following settings.
  - Press [◀] [Result type] on the right of the display.
    - Absolute value (Default): The measured coordinates are output.
    - Relative value : The difference from the reference position is output as coordinates.
- Note the following when [Multi-point output] is enabled.
  - If [Candidate level] is higher than the lower value of the Judgment condition, [Candidate level] has higher priority.
  - If Correlating value is lower than [Candidate level], measurement result will be zero.

# **Increasing Measurement Position Accuracy**

You can increase the accuracy of measurement positioning. You can calculate down to four decimal places.

- ▶ [Inspect] [Inspection] [Search] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Press [Sub-pixel] and select [Yes].

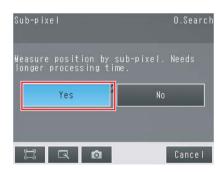

# **Obtaining Multiple Results Simultaneously**

You can detect all items that satisfy the extraction conditions. Judgment is performed for all detected results.

- [Inspect] [Inspection] [Search] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Press [Multi-point output] and select [Yes].
  - 2 Press [Sorting method] and select the conditions by which to sort the detected results.

You can output the results in the sort order that you selected.



### Note

You can specify the actual output conditions and count for outputting multiple results.

Selecting the results to output: p. 221

Selection item	Setting	Description
	Corr. ascending order (ascending order of correlation value)	Sorts the results in order from the smallest correlation to the largest.  Candidate level has priority when Candidate level is lower than lower value of Judgment condition.  Measurement value will be zero if the correlating value is lower than Candidate level.
	Corr. descending order (Default) (descending order of correlation value)	Sorts the results in order from the largest correlation to the smallest.
Sorting method	Pos.X ascending order (ascending order of position X)	Sorts the results in order from the smallest measurement X position to the largest.
	Pos.X descending order (descending order of position X)	Sorts the results in order from the largest measurement X position to the smallest.
	Pos.Y ascending order (ascending order of position Y)	Sorts the results in order from the smallest measurement Y position to the largest.
İ	Pos.Y descending order (descending order of position Y)	Sorts the results in order from the largest measurement Y position to the smallest.

# Select the Results to Output

You can use multiple conditions to determine which results to output from all the objects detected with a correlation at the candidate level or higher.

Only the results that meet all the specified conditions are output.

- ▶ [Inspect] [Inspection] [Search] [Modify] [Details] Tab Page [Meas. Parameter]
  - Press [Extraction condition] and adjust the candidate level so that only objects higher than a certain correlation are detected.
  - 2 If [Multi-point output] is set to [Yes], you can specify the output conditions for more than one result.
    (Extraction X/Y and Detection count)



Extraction condition	Range	Description
Candidate level	Range: 0 to 100 Defaults: Lower: 70 Upper: 100	Set the threshold to find Candidate. Output the correlating value that is higher than [Candidate level] value. Decrease the value when Model search is unstable.
Extraction X	Range :-99999.9999 to 99999.9999 Defaults: Lower: -99999.9999 Upper: 99999.9999	Results are output only for objects with a measured X coordinate that is within this range.
Extraction Y	Range :-99999.9999 to 99999.9999 Defaults: Lower: -99999.9999 Upper: 99999.9999	Results are output only for objects with a measured Y coordinate that is within this range.
Detection count	Range: 1 to 32 Default: 32	Sets the maximum number of detection results to output.

Note

The processing time changes if you change the candidate level.

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. (The Default is to reflect them.)

▶ [Inspect] – [Inspection] – [Add item.] – [Search] – [Details] Tab Page – [Output parameter]

### **Unstable Search Results**

# **Inclined Measurement Objects**

Adjust the [Angle range] parameter to increase the range in which a search is made for the model.

The Search inspection item judges whether an image is OK or NG according to the correlation with a previously registered image pattern.

For this reason, if the object is at an angle, the correlation is reduced and the image may be judged as NG. To achieve an OK judgment for the same image pattern even when the object is at an angle, the rotation range must be widened.

- ▶ [Inspect] [Inspection] [Search] [Modify] [Details] Tab Page [Model parameter]
  - 1 Set [Rotation] to [Yes].
  - 2 Press [Angle range] and set the following range.

Parameter	Setting	Description
Angle range	Range: –180 to 180 Default: Lower: –180 Upper: 180	A search is performed within the set angle range. The larger the angle range, the longer the processing time.  Important If you change the angle range, perform teaching again.  p. 217

### **Correlation Is Inconsistent Due to Low Contrast**

Adjust the b	rightness	to improve	the contrast	of the mark.

Adjusting the Brightness: p. 77

# **Correlation Is Inconsistent Due to Variations in the Measurement Object**

Inconsistent portions can be masked so that they are omitted from matching.

Masking Parts of the Model: p. 226

### Correlation coefficient is zero

If the correlation coefficient is zero, reduce the Candidate level.

Select the Results to Output p. 221.

### **Search a Different Place**

If the measurement result does not stabilize, change the stability and precision as needed. For better detection accuracy, the following two methods can be used.

- · Set [Model mode] to [stable].
- · Increase [Candidate level] value.

### ▶ [Inspect] – [Inspection] – [Search] – [Modify] – [Details] Tab Page – [Model parameter]

Parameter	Setting	Description
Stability	Range: 1 to 15 Default: 12	Sets whether priority is given to measurement stability or speed. If the speed is slow even when the stability is lowered, it is possible that many candidates are found. Raise the candidate level or increase the stability.
Precision	Range: 1 to 3 Default: 2	Sets whether priority is given to measurement position precision or speed. Increasing the precision gives priority to measurement position accuracy.

# **Increasing Processing Speed**

The following two methods can be used to reduce processing time.

- Reduce the range in which a search is performed for the model.
  - Changing the inspection region: p. 227
- · Reduce the angle range setting.

Adjust the [Angle range] parameter to reduce the range in which a search for the model is performed.

- Setting the angle range: p. 222
- Increase the [Candidate level] value and limit the models.
  - Select the Results to Output: p. 221

# **Editing the Model and Inspection Regions**

This section describes how to edit the following regions.

Model registration region



Inspection region

(region that is searched for the model)

Important

If the model region is changed, perform teaching again. p. 217


# Changing the Model Registration Region to a Shape Other Than a Rectangle

One rectangular region is registered as the Default model registration region.

Other than rectangles, circles and polygons can be set as the model registration regions.

- [Inspect] [Inspection] [Search] [Modify] [Settings] Tab Page [Teach] [◀] [Model region]
  - 1 Press [◀] [Model region].
  - 2 Press [◄] [Delete] in the model registration editing display.

The rectangle will be deleted.

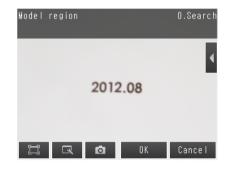

3 Press [Yes].




- 4 Press [Add] in [◀].
- 5 Press the shape of the region that you want to use.
- 6 Draw the region.
- 7 Press [OK].

Note

Up to 8 shapes can be combined to create a region for one model.

# **Masking Parts of the Model**

The model registration region can be formed freely by combining enabled and disabled regions.

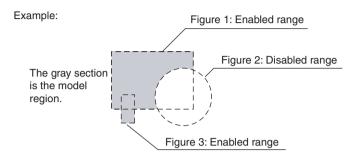


- ▶ [Inspect] [Inspection] [Search] [Modify] [Settings] Tab Page [Teach] [◄] [Model region]
  - 1 Draw the figure according to the section that you want to mask.

\_\_\_\_ p. 225

2 While the figure to be masked is selected, press [◄] on the right of the display and then press [OR/NOT]

The selected area will be removed from the model. Every time you press [OR/NOT], the area will switch between being enabled and disabled.

OR : Enabled rangeNOT: Disabled range

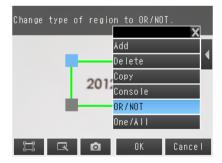

### Fine-tuning the Position of the Region


This section describes the console which is useful to fine-tune the position of the inspection region or the model registration region in 1-pixel increments.

- [Inspect] [Inspection] [Search] [Modify] [Settings] Tab Page [Teach] [◄] [Model region]
  - 1 Press [◄] [Console] on the right side of the display where you draw the region.

The console will appear.

- 2 To adjust the position of the figure, press within the frame. To adjust the size of the figure, press a corner of the figure.
- 3 Use the cross-key to align the figure with the search object.

The position of the figure can be adjusted by pressing the cross-key. Pressing it once will change the coordinate values by one pixel.

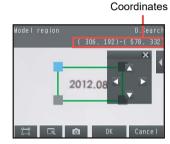

### **Changing the Inspection Region**

The region within which the model is searched can be changed.

- ▶ [Inspect] [Inspection] [Search] [Modify] [Settings] Tab Page [Teach]
  - 1 Press [◄] [Insp. region] on the right of the display.

The [Insp. region] Display will appear.



- 2 Adjust the size and position of the inspection region.
  - · Change the size.

Press the frame at one corner.

The processing time can be shortened by making the region smaller.

· Change the position.

Drag the figure to move it.

### **Changing Output Coordinate Positions**

You can specify which part of the model to detect as coordinates during inspections. Normally, the center position of the registered model is used as the detection point.

- [Inspect] [Inspection] [Search] [Modify] [Settings] Tab Page [Teach] [◄] [Detection point]
  - 1 Use one of the following methods to move the cross cursor to the desired position.

The position of the cross cursor will be the coordinate position that is output. This position is registered relative to the model region.

- Drag the cross cursor to move it.
- Press [◄] [Console] on the right of the display to display the console. You can use the cross cursor on the console to change the coordinate values one pixel at a time.



Note

The detection coordinates will automatically return to the center coordinates of the model if you change the model region.

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression	Data name	Description	Data range
text string			
JG	Judgement	<ul> <li>-2: No judgment (not measured)</li> <li>0: Judgment is OK</li> <li>-1: Judgment is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	This is the judgment result.
CR[0] to CR[31]	Correlation	0 to 100	This is the correlation of the Nth model that was found.
X[0] to X[31]	Position X	-99,999.9999 to 99,999.9999	This is the X coordinate where the Nth model was found.
Y[0] to Y[31]	Position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate where the Nth model was found.
TH[0] to TH[31]	Angle	-180 to 180	This is the angle in which the Nth model was found.

Expression text string	Data name	Description	Data range
SX	Reference X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was registered.
SY	Reference Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was registered.
ST	Reference angle	-180 to 180	This is the angle when the model was registered.
RX	Detection coordinate X	-99,999.9999 to 99,999.9999	-99,999.9999 to 99,999.9999 This is the X coordinate of the detection point when the model was registered.
RY	Detection coordinate Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the detection point when the model was registered.
С	Count	0 to 32	This is the number of models found.

4-18 Calculations and Judgments Using Inspection Item Data: p. 323

# Measurement Data That Can Be Logged

The following values can be logged as measurement data.

Parameter	Range of value	Description
Judgement	0: Judgement is OK  -1: Judgement is NG  -13: Teaching not performed error  -14: Figure not registered error  -15: Out of range error	This is the measurement judgment results.
Correlation	0 to 100	This is the measured correlation.
Position X	-99999.9999 to 99999.9999	This is the measurement position X.
Position Y	-99999.9999 to 99999.9999	This is the measurement position Y.
Angle	-180 to 180	This is the measurement angle.
Count	0 to 32	This is the number of models found.

\*When logging data is output, the data is output in the order of the above table. If more than one item is stored, results are output for each model.

7-6 Logging Measurement Data and Image Data: p. 392

# **Errors**

### **Errors in Teaching**

A teaching error message will appear if the contrast of the image within the model registration region is too low. Select a region with a larger contrast between light and dark areas compared to the region that was registered as the model and re-register it as the model.

# 4-9 Inspecting with the Shape Search III Inspection Item




# **Shape Search II Inspection Item**

This function is for detecting user-defined target to estimate target position and pose precisely. The correlation value indicating the degree of similarity, measurement target position, and orientation can be output. In shape search III, edge information is used as features, whereas in a normal search mode, color and texture information are used.


It enables highly robust and fast detection robust to environmental variations including shadings, reflections, lightings, shape deformations, pose and noises.

Since state-of-the-art object detection algorithm is exploited in shape search III, it can provides much more reliable position and pose estimation with higher speed compared to shape search II. Furthermore, it has much more parameter to tune to support a wider variety of applications.

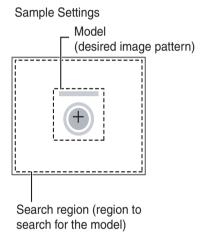

### Sample Measurement

Search for sections that are similar to the model.

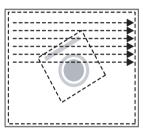






# Setup Procedure for the Shape Search III Inspection Item

# Step 1 Selecting the Inspection Item

- ► [Inspect] [Inspection]
  - Press an unused inspection item number and press [Add item.].
  - 2 Press [Shape Search III].
    - Registering inspection items: p. 138

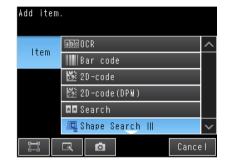


Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

# Step 2 Teaching

Teaching means to store the region and partial image as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Shape Search III] [Settings] Tab Page
  - 1 Press [Teach].

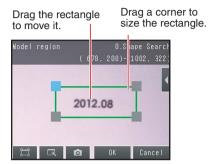

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- 3 Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed.

6 Press [Back] to end teaching.

The following data is stored as the measurement reference.

Item	Parameter	Description
	Model image	This is the partial image that is stored as the reference.
Reference position X These are concerned and Reference position Y	These are coordinates of the model image that are stored as refer-	
	Reference position Y	ence.
	Reference angle	An angle when the model is registered.

The following settings can be changed from the menus in the lower-right of the screen. • [Model region]: Editing the Model and Inspection Regions p.224. Changing the Inspection Region p. 227 • [Insp. region] : • [Detection point]: Changing Output Coordinate Positions p.228 • [Edge extraction]: When Edge cannot be detected at model region p.241 • [Display setting]: the following images can be selected. · Measurement image: displays the Measurement image. • Measurement image + Model image (Default): displays the detected Model on the Edge image. • Edge image: displays the Edge image. • Edge image + Model image: displays the detected Model on the Edge image. • Green: Model points matching with Edge image. • Yellow: Model points match with Edge image except for direction.


• Red: Model points not matching with Edge image.

# Step 3 Adjusting Judgment Parameters

- ▶ [Inspect] [Inspection] [Add item.] [Shape Search] [Settings] Tab Page
- 1 Press [Judgement].
- Press each parameter and set the range that is to be judged as OK. Set the range for each of the following parameters.

Continuous measurements will be performed for the images that are taken.

If more than one result was detected, you can switch to a display for each result. (Multi-point output must be enabled.)

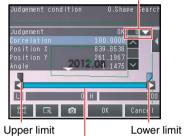

Blue for OK. Red for NG.

Note

You can change the parameters for judgement conditions on the Display Settings Display.

Press [◄] – [Display setting] on the right of the display to switch to the Display Settings Display.

- **3** Press [OK] to accept the value.
- 4 Press [Back] to end making the setting.

Parameter	Setting	Description
Correlation	Range: 0 to 100 Defaults: Lower: 60 Upper: 100	Adjust the upper and lower limits of the correlation for an OK judgment.  When the candidate level is higher than the judgment lower-limit value of correlation, the candidate level has priority.  If the correlation value is lower than the candidate level, the measurement result is 0.
Position X	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Adjust the upper and lower limits of measurement position X for an OK judgment.
Position Y	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Adjust the upper and lower limits of measurement position Y for an OK judgment.
Angle	Range: -180 to 180 Defaults: Lower: -180 Upper: 180	Adjust the upper and lower limits of angle for an OK judgment.
Count	Range: 0 to 32 Defaults: Lower: 0 Upper: 32	Adjust the upper and lower limits of the detection count for an OK judgment.

### Note

- You can change the output form for each measurement value to one of the following settings.
  - Press [◀] [Result type] on the right of the display.
    - Absolute value (Default): The measured coordinates are output.
    - Relative value: The difference from the reference position is output as coordinates.
- [Display setting]: the following images can be selected.
  - Measurement image: displays the Measurement image.
  - Measurement image + Model image (Default): displays the detected Model on the Edge image.
  - Edge image: displays the Edge image.
    - Edge image + Model image: displays the detected Model on the Edge image.
    - Green: Model points matching with Edge image.
    - Yellow: Model points match with Edge image except for direction.
    - Red: Model points not matching with Edge image.

# **Obtaining Multiple Results Simultaneously**

You can detect all items that satisfy the extraction conditions. Judgment is performed for all detected results.


- [Inspect] [Inspection] [Shape Search III] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Press [Sorting method] and select the conditions by which to sort the detected results.

You can output the results in the sort order that you selected



You can specify the actual output conditions and count for outputting multiple results.


Selecting the results to output: p. 237

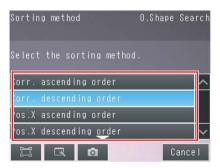

Selection item	Setting	Description	
	Corr. ascending order (ascending order of correlation value)	Sorts the results in order from the smallest correlation to the largest.Candidate level has priority when Candidate level is lower than lower value of Judgment condition. Measurement value will be zero if the correlating value is lower than Candidate level.	
	Corr. descending order (Default) (descending order of correlation value)	Sorts the results in order from the largest correlation to the smallest.	
Sorting method	Pos.X ascending order (ascending order of position X)	Sorts the results in order from the smallest measurement X position to the largest.	
	Pos.X descending order (descending order of position X)	Sorts the results in order from the largest measurement X position to the smallest.	
	Pos.Y ascending order (ascending order of position Y)	Sorts the results in order from the smallest measurement Y position to the largest.	
	Pos.Y descending order (descending order of position Y)	Sorts the results in order from the largest measurement Y position to the smallest.	

# **Exclude the Overlapping Detected Result**

- ► [Inspect] [Inspection] [Shape Search III] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Touch [Overlay judgment], and then select [Yes].
  - 2 Set Overlay rejection.

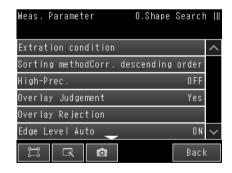


Extraction condition	Setting	Description	
Overlay Judgement	Yes No (Default)	When you find the overlapped result, set the Overlay judgment to Yes.	
Overlay Rejection	0 to 100 (Default: 100)	This parameter is acceptable when the Overlay judgment is Yes. Set the overlay level to remove, If you want to remove small overlay, increase this parameter.	

# Select the Results to Output

You can use multiple conditions to determine which results to output from all the objects detected with a correlation at the candidate level or higher.

Only the results that meet all the specified conditions are output.

- [Inspect] [Inspection] [Shape Search III] [Modify] [Details] Tab Page [Meas. Parameter]
  - Press [Extraction condition] and adjust the candidate level so that only objects higher than a certain correlation are detected.
  - 2 Set the conditions for outputting the detected objects.(Extraction X/Y and Detection Count)

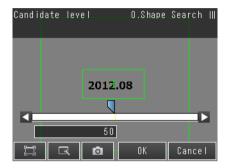

Extraction condition	Range	Description	
Candidate level	0 to 100 Default: 50	Set the threshold to find Candidate.  Output only a value that is higher than [Candidate level].  Increase the value if Model search is unstable.	
Extraction X	-99999.9999 to 99999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Results are output only for objects with a measured X coordinate that is within this range.	
Extraction Y	-99999.9999 to 99999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Results are output only for objects with a measured Y coordinate that is within this range.	
Detection count	1 to 32 Default: 1	Sets the maximum number of detection results to output.	

Note

The processing time changes if you change the candidate level.

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. The Default is to reflect them.

[Inspect] – [Inspection] – [Add item.] – [Shape Search III] – [Details] Tab Page – [Output parameter]

# **Unstable Shape Search III Results**

### **Inclined Measurement Objects**

The search area for the model can be expanded by adjusting [Angle range].

The OK or NG Judgment is determined by the correlation to the registered image pattern for the search. Therefore, there may be an NG judgment result for good workpiece if the correlation is low due to the angle being slanted.

In this case, to get an OK judgment, increase the Angle range.

- ▶ [Inspect] [Inspection] [Shape Search III] [Modify] [Details] Tab Page [Model parameter]
  - 1 Set [Rotation] to [Yes].
  - 2 Press [Angle range] and set the following range.

Parameter	Setting	Description
	Range: –180 to 180  Default: Lower: –180  Upper: 180	A shape search II is performed within the set angle range. The larger the angle range, the longer the processing time.  Important  If you change the angle range, perform teaching again.   p. 232

If you cannot detect the Edge correctly, adjust the Edge parameters.

- [Inspect] [Inspection] [Shape Search III] [Modify] [Details] Tab Page [Measure parameter]
- 1 Touch [Edge level auto], and then select [OFF].
- 2 Set [Edge level].



Parameter	Setting	Description
Edge level auto	ON (Default) OFF	This setting will be enabled to set automatically by selecting ON. If edge recognition results are not good with this setting, set to OFF.
Edge level	0 to 1024 (Default: 30)	This setting will be enabled if [Edge level auto] is OFF. Set the lower limit to recognize the [Edge level]. Edges higher than set value are recognized. Decrease the setting value when it is difficult to find edges. Increase the setting value when the effect of noise is high.

# When the variability of good work pieces is large.

	Increase	the	Cano	lidate	اوبروا
•	IIICIEase	uie	Canc	iiuaie	ıevei

If the mis-detection occurs, i.e. detects same shape with workpiece, the targets can be detected too much. Adjust the correlating value of target or increase the Candidate level.

Select the Results to Output: p. 221

### The size difference of work piece is large

If the correlation value is significantly lower when the variation of target shapes may be large, increase the Acceptable distortion level.

- [Inspect] [Inspection] [Add item.] [Shape Search III] [Details] tab page [Meas. Parameter]
  - 1 Touch [Acceptable Dist. level].
  - 2 Set the [Acceptable Dist. level].

Parameter	Setting	Description	
Acceptable distortion level	0: Low 1: Medium 2: High	Selects the degree of influence of correlation values when Model edge has small uneven patterns.  To avoid reduction of correlation value, set [High] in this item.	

# Search other place

If the model image consists of detailed graphic images, similar models may be detected. For more accurate detection, consider the followings.

[Inspect] - [Inspection] - [Shape Search III] - [Modify] - [Details] Tab Page - [Model parameter] - [Model mode]

Parameter	Setting	Description
Model mode	Stable (Default) Fast	This function is enabled for color images only.  Stable: Creates the model image using RGB colors, Fast: Creates the model image using one color of RGB.  When the shape is same, but the color differs, the detection can be unstable.

### Increase the Candidate level

If the mis-detection occurs, i.e. detects same shape with workpiece, the targets can be detected too much. Adjust the correlating value of target or increase the Candidate level.

Select the Results to Output: p. 221

- ▶ [Inspect] [Inspection] [Add item.] [Shape Search III] [Settings] tab page [Teach]
  - 1 Touch [Edge setting] on the upper-right window.



2 Set each item.



Parameter	Setting	Description
Mask size	3×3 (Default) 5×5 7×7	Select the range of pixels which are used to extract the edge.  With a larger mask size, search is less affected by variation in pixels.
Edge level: Auto	ON (Default) OFF	Select this check box to adjust [Edge level] automatically. If edges are not detected under the auto settings, clear this check box and adjust value of [Edge level].
Edge level	0 to 1024 Default: 20	This setting is enabled when the [Auto] check box is cleared in the [Edge setting] area. Set the lower limit of edge level to recognize as edge. Edges are recognized when their edge level is above this value. The smaller the value, the easier it is to find edges. The larger the value, the less noise will affect finding edges.
Noise removal level	0 to 100 Default: 0	Specify the upper limit of noise level to eliminate. Noise whose noise level is below this value will be eliminated. In the noise removal process, edges are connected and divided into a set of groups of line segments, and then these line segments are removed one by one from shorter segments. Setting a larger value removes larger noise.

# Adjust the brightness to improve the contrast of the mark. Adjusting the Brightness: p. 77 Correlation Is Inconsistent Due to Variations in the Measurement Object Inconsistent portions can be masked so that they are omitted from matching. Model masking: p. 226 Correlation coefficient is zero If the correlation coefficient is zero, reduce the Candidate level.

Select the Results to Output: p. 221

# **Increasing Processing Speed**

The following two methods can be used to reduce processing time.

Reduce the range in which a shape search III is performed for the model.
Changing the Inspection Region: p. 227
Reduce the Angle range setting.
Adjust the [Angle range] parameter to reduce the range in which a shape search II for the model is performed.
Select the Results to Output: p. 237
Raise [Candidate level].
Raise [Candidate level], then processing time will be shortened.
Select the Results to Output p. 221
Set the Model region as small as possible.
Raise [Candidate level], then processing time will be shortened.
Step 2 Teaching: p.142
Judgment is NG (Insufficient memory)
The measurement region is possible to use large memory. Set the measurement region as smaller as possible.
Set the measurement region to be small.
Changing the Inspection Region: p. 227
Set the model region to be small.
The model size is possible to use large memory. Set the model region as smaller as possible.

# **Editing the Model Regions and Measurement Region**


# **Changing the Model Regions**

This section describes how to edit the model regions.

You can edit the model region in the same way as for a search region.

Changing the Model Registration Region to a Shape Other Than a Rectangle: p. 225

### Model registration region

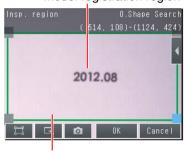

Measurement region (region that is searched for the model)

Important

If the model region is changed, perform teaching again. p. 232

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression	Data name	Data range	Description
text string			
JG	Judgment	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -10: Image error -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the judgment result.
CR[0] to CR[31]	Correlation	0 to 100	This is the correlation of the Nth model that was found.
X[0] to X[31]	Position X	-99999.9999 to 99999.9999	This is the X coordinate where the Nth model was found.
Y[0] to Y[31]	Position Y	-99999.9999 to 99999.9999	This is the Y coordinate where the Nth model was found.
TH[0] to TH[31]	Angle	-180 to 180	This is the angle in which the Nth model was found.
SX	Reference X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was registered.
SY	Reference Y	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was registered.
ST	Reference angle	-180 to 180	This is the angle when the model was registered.
RX	Detection coordinate X	-99,999.9999 to 99,999.9999	This is the X coordinate of the detection point when the model was registered.
RY	Detection coordinate Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the detection point when the model was registered.
С	Count	This is the number of models found.	0 to 32

<sup>4-18</sup> Calculations and Judgments Using Inspection Item Data: p. 323

### Measurement Data That Can Be Logged

The following values can be logged as measurement data.

Parameter	Range of value	Description	
Judgement	0: Judgement is OK -1: Judgement is NG -10: Image error -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the measurement judgment results.	
Correlation	0 to 100	This is the measured correlation.	
Position X	-99999.9999 to 99999.9999	This is the measurement position X.	
Position Y	-99999.9999 to 99999.9999	This is the measurement position Y.	
Angle	-180 to 180	This is the measurement angle.	
Count	0 to 32	This is the number of models found.	

<sup>\*</sup>When logging data is output, the data is output in the order of the above table. If more than one item is stored, results are output for each model.

7-6 Logging Measurement Data and Image Data: p. 392

### **Errors**

# **Errors in Teaching**

A teaching error message will appear if the contrast of the image within the model registration region is too low. Select a region with a larger contrast between light and dark areas compared to the region that was registered as the model and re-register it as the model.

# 4-10 Inspecting with the Shape Search II Inspection Item




# **Shape Search II Inspection Item**

This inspection item is used to search for the portion of the input image that most closely resembles an image pattern that is called a model. The model is registered in advance based on a characteristic feature of the measurement object.


You can output the correlation, which tells how closely the portion of the image matches the model. You can also output the position of the measurement object and the angle of the measurement object. For the normal Search inspection item, a model that concentrates on the color and brightness of the image pattern is used, but in the Shape Search II, a model that concentrates on the outline information is used.

This inspection item enables robust, high-speed, high-precision detection of models even when lighting is reflected from the workpieces, when the shapes of the workpieces are inconsistent, when the orientation of the workpieces change, when noise is superimposed, when part of the image is blocked, or when there are other fluctuations in the environment.

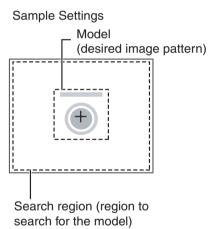



Search for sections that are similar to the model.

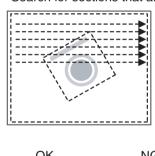






# Setup Procedure for the Shape Search II Inspection Item

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Shape Search II].
    - Registering inspection items: p. 138

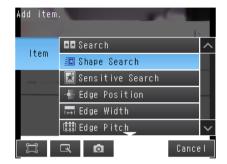


Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

Teaching means to store the region and partial image as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Shape Search II] [Settings] Tab Page
  - 1 Press [Teach].

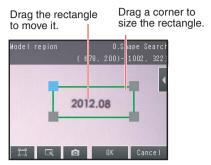

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- **3** Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed.

6 Press [Back] to end teaching.

The following data is stored as the measurement reference.


Item	Parameter	Description	
Reference data	Model image	This is the partial image that is stored as the reference.	
	Reference position X	These are coordinates of the model image that are stored as ref-	
	Reference position Y	erence.	
	Reference Angle	The angle of the registered model.	

# Step 3 Adjusting Judgment Parameters

- ▶ [Inspect] [Inspection] [Add item.] [Shape Search] [Settings] Tab Page
  - 1 Press [Judgement].
  - Press each parameter and set the range that is to be judged as OK. Set the range for each of the following parameters.

Continuous measurements will be performed for the images that are taken.

If more than one result was detected, you can switch to a display for each result. (Multi-point output must be enabled.)

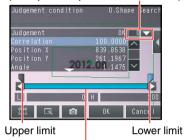

Blue for OK. Red for NG.

### Note

You can change the parameters for judgement conditions on the Display Settings Display.

Press [◄] – [Display setting] on the right of the display to switch to the Display Settings Display.

- 3 Press [OK] to accept the value.
- 4 Press [Back] to end making the setting.

Parameter	Setting	Description
Correlation	Range: 0 to 100 Defaults: Lower: 60 Upper: 100	Adjust the upper and lower limits of the correlation for an OK judgment.
Position X	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Adjust the upper and lower limits of measurement position X for an OK judgment.
Position Y	Range : -99,999.9999 to 99,999.9999 Defaults : Lower: -99,999.9999 Upper: 99,999.9999	Adjust the upper and lower limits of measurement position Y for an OK judgment.
Angle	Range: -180 to 180 Defaults: Lower: -180 Upper: 180	Adjust the upper and lower limits of angle for an OK judgment.
Count	Range : 0 to 32 Defaults: Lower: 0 Upper: 32	Adjust the upper and lower limits of the detection count for an OK judgment.

### Note

- You can change the output form for each measurement value to one of the following settings.
  - Press [◀] [Result type] on the right of the display.
    - Absolute value (Default): The measured coordinates are output.
    - Relative value: The difference from the reference position is output as coordinates.

### **Obtaining Multiple Results Simultaneously**

You can detect all items that satisfy the extraction conditions. Judgment is performed for all detected results.


- [Inspect] [Inspection] [Shape Search II] [Modify] [Details] Tab Page [Meas. Parameter]
  - Press [Sorting method] and select the conditions by which to sort the detected results.

You can output the results in the sort order that you selected.



You can specify the actual output conditions and count for outputting multiple results.

Selecting the results to output: p. 237

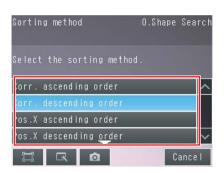

Selection item	Setting	Description
	Corr. ascending order (ascending order of correlation value)	Sorts the results in order from the smallest correlation to the largest.  Candidate level has priority when Candidate level is lower than lower value of Judgment condition.  Measurement value will be zero if the correlating value is lower than Candidate level.
Sorting method	Corr. descending order (Default) (descending order of correlation value)	Sorts the results in order from the largest correlation to the smallest.
Sorting method	Pos.X ascending order (ascending order of position X)	Sorts the results in order from the smallest measurement X position to the largest.
	Pos.X descending order (descending order of position X)	Sorts the results in order from the largest measurement X position to the smallest.
	Pos.Y ascending order (ascending order of position Y)	Sorts the results in order from the smallest measurement Y position to the largest.
	Pos.Y descending order (descending order of position Y)	Sorts the results in order from the largest measurement Y position to the smallest.

## Select the Results to Output

You can use multiple conditions to determine which results to output from all the objects detected with a correlation at the candidate level or higher.

Only the results that meet all the specified conditions are output.

- [Inspect] [Inspection] [Shape Search II] [Modify] [Details] Tab Page [Meas. Parameter]
  - Press [Extraction condition] and adjust the candidate level so that only objects higher than a certain correlation are detected.
  - 2 Set the conditions for outputting the detected objects.

(Extraction X/Y and Detection Count)



Extraction condition	Range	Description
Candidate level	0 to 100 Default: 80	Set the threshold to find Candidate point. Output only a value that is higher than [Candidate level]. Increase the value if Model search is unstable.
Extraction X	-99999.9999 to 99999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Results are output only for objects with a measured X coordinate that is within this range.
Extraction Y	-99999.9999 to 99999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Results are output only for objects with a measured Y coordinate that is within this range.
Detection count	1 to 32 Default: 1	Sets the maximum number of detection results to output.

Note

The processing time changes if you change the candidate level.

## **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. The Default is to reflect them.

[Inspect] - [Inspection] - [Add item.] - [Shape Search II] - [Details] Tab Page - [Output parameter]

### **Unstable Shape Search II Results**

#### **Inclined Measurement Objects**

Adjust the [Angle range] parameter to increase the range in which a search is made for the model.

The Shape Search II inspection item judges whether an image is OK or NG according to the correlation with a previously registered image pattern.

For this reason, if the object is at an angle, the correlation is reduced and the image may be judged as NG. To achieve an OK judgment for the same image pattern even when the object is at an angle, the rotation range must be widened.

- ► [Inspect] [Inspection] [Shape Search II] [Modify] [Details] Tab Page [Model parameter]
  - 1 Set [Rotation] to [Yes].
  - 2 Press [Angle range] and set the following range.

Parameter	Setting	Description
Angle range	Range: –180 to 180  Default: Lower: –180  Upper: 180	A shape search II is performed within the set angle range. The larger the angle range, the longer the processing time.  Important If you change the angle range, perform teaching again.  p. 232

#### **Searching for Other Locations**

If the model image consists o	f detailed graphic images,	similar models may be detected.
For more accurate detection.	consider the followings.	

- Set [Model mode] to [Stable]
- · Raise [Candidate level].
- Increase the Candidate level Increasing the [Candidate level], limit the detected model.

For [Candidate level], refer to Select the Results to Output: p. 221

# [Inspect] – [Inspection] – [Shape Search II] – [Modify] – [Details] Tab Page – [Model parameter] – [Model mode]

Parameter	Setting	Description
Model mode	Stable (Default) Fast	This function is only valid for color images.  Stable: Creates a model using the three RGB colors.  Fast: Creates a model using only one of the RGB colors.  Detection is occasionally unstable for workpieces with the same shape but a different color.

#### **Correlation Is Inconsistent Due to Low Contrast**

Adjust th	e brightness to improve the contrast of the mark.	
	Adjusting the Brightness: p. 77	

#### **Correlation Is Inconsistent Due to Variations in the Measurement Object**

Inconsistent portions can be masked so that they are omitted from matching.

Masking Parts of the Model: p. 226

#### Correlation coefficient is zero

If the correlation coefficient is zero, reduce the Candidate level.

Select the Results to Output: p. 221.

# **Increasing Processing Speed**

The following two methods can be used to reduce processing time.

Reduce the range in which a shape search II is performed for the model.
Changing the Model Regions: p. 227
Reduce the angle range setting.
Adjust the [Angle range] parameter to reduce the range in which a shape search II for the model is performed
Select the Results to Output: p. 237
Raise [Candidate level].
Raise [Candidate level], then processing time will be shortened.
Select the Results to Output: p. 221

# **Editing the Model Regions and Measurement Region**

### **Changing the Model Regions**

This section describes how to edit the model regions.

You can edit the model region in the same way as for a search region.

Changing the Model Registration Region to a Shape Other Than a Rectangle: 

p. 225

Model registration region



Measurement region (region that is searched for the model)

Important

If the model region is changed, perform teaching again.

D. 232

### **Changing the Measurement Region**

The region within which the model is searched can be changed. You can edit the measurement region in the same way as for a search region.

Changing the Inspection Region: 

p. 227

### Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgment	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	This is the judgment result.
CR[0] to CR[31]	Correlation	0 to 100	This is the correlation of the Nth model that was found.
X[0] to X[31]	Position X	-99999.9999 to 99999.9999	This is the X coordinate where the Nth model was found.
Y[0] to Y[31]	Position Y	-99999.9999 to 99999.9999	This is the Y coordinate where the Nth model was found.
TH[0] to TH[31]	Angle	-180 to 180	This is the angle in which the Nth model was found.
SX	Reference X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was registered.
SY	Reference Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was registered.
ST	Reference angle	-180 to 180	This is the angle when the model was registered.
RX	Detection coordinate X	-99,999.9999 to 99,999.9999	This is the X coordinate of the detection point when the model was registered.
RY	Detection coordinate Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the detection point when the model was registered.
С	Count	0 to 32	This is the number of models found.

<sup>4-18</sup> Calculations and Judgments Using Inspection Item Data: p. 323

#### Measurement Data That Can Be Logged

The following values can be logged as measurement data.

Parameter	Range of value	Description
Judgement	0: Judgement is OK  -1: Judgement is NG  -13: Teaching not performed error  -14: Figure not registered error  -15: Out of range error	This is the measurement judgment results.
Correlation	0 to 100	This is the measured correlation.
Position X	-99999.9999 to 99999.9999	This is the measurement position X.
Position Y	-99999.9999 to 99999.99999	This is the measurement position Y.
Angle	-180 to 180	This is the measurement angle.
Count	0 to 32	This is the number of models found.

<sup>\*</sup> When logging data is output, the data is output in the order of the above table. If more than one item is stored, results are output for each model.

7-6 Logging Measurement Data and Image Data: p. 392

#### **Errors**

#### **Errors in Teaching**


A teaching error message will appear if the contrast of the image within the model registration region is too low. Select a region with a larger contrast between light and dark areas compared to the region that was registered as the model and re-register it as the model.

### **Sensitive Search Inspection Item**

This inspection item automatically divides the registered model into smaller areas and performs matching for details. The lowest correlation for all of the divisions is output.


A sensitive search is suitable when the differences between the model image and measurement image are too small to produce differences in correlations with a normal search.

#### Sample Settings

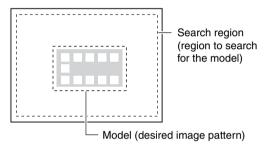

#### Sample Measurement

A search is made for sections that are similar to the model and then a finely divided model is used to check the correlations in detailed divisions. If there is no pattern in the divided model, then you can inspect the degree by which there is no pattern.

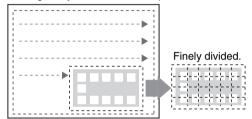

# **Setup Procedure for the Sensitive Search Inspection Item**

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - Press an unused inspection item number and press [Add item.].
  - 2 Press [Sensitive Search].
    - Registering inspection items: p. 138




Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

Teaching means to store the region and partial image as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Sensitive Search] [Settings] Tab Page
  - 1 Press [Teach].

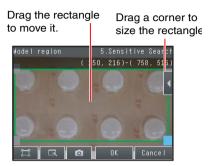

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- **3** Move the rectangle to the location to be measured.
- 4 Press [OK].
- Fress [TEACH] on the lower right of the display.
  The basic settings will be registered when teaching has been completed.
- 6 Press [Back] to end teaching.

The following data is stored as the measurement reference.

Item	Parameter	Description
Reference data	Model image	This is the partial image that is stored as the reference.
	Reference position X	These are coordinates of the model image that are stored as reference.
	Reference position Y	

### Step 3 Adjusting Judgement Parameters

- ▶ [Inspect] [Inspection] [Add item.] [Sensitive Search] [Settings] Tab Page
  - 1 Press [Judgement].
  - 2 Press each parameter and set the range that is to be judged as OK. Set the range for each of the following parameters.


Continuous measurements will be performed for the images that are taken.



You can change the parameters for judgment conditions on the Display Settings Display.

Press [◀] – [Display setting] on the right of the display to switch to the Display Settings Display.

- 3 Press [OK] to accept the value.
- 4 Press [Back] to end making the setting.

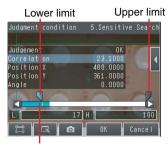

Blue for OK. Red for NG.

Parameter	Setting	Description
Correlation	Range: 0 to 100 Default: Lower: 60, Upper: 100	Set the correlation range that is to be judged as OK. If the correlation in the measurement results is 0, the judgment will be NG regardless of the setting of the lower limit.
Position X	Range: -99,999.9999 to 99,999.9999 Default: Lower: -99,999.9999 Upper: 99,999.9999	Set the range of movement in the X direction that is to be judged as OK.
Position Y	Range: -99,999.9999 to 99,999.9999 Default: Lower: -99,999.9999 Upper: 99,999.9999	Set the range of movement in the Y direction that is to be judged as OK.
Angle	Range: -180 to 180 Default: Lower: -180 Upper: 180	Set the angle range that is to be judged as OK.
Density deviation	Color image Range: 0 to 221 Default: Lower: 0 Upper: 221  Monochrome image Range: 0 to 127 Default: Lower: 0 Upper: 127	Set the density difference range that is to be judged as OK. The value will increase for larger percentages of areas with no pattern. This parameter is valid when setting a plain inspection region for a divided model.

#### Note

- You can change the output form for each measurement value to one of the following settings.
  - Press [◀] [Result type] on the right of the display.
    - Absolute value (Default): The measured coordinates are output as absolute values.
    - Relative value: The difference from the reference value is output.

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. The Default is to reflect them.

[Inspect] - [Inspection] - [Add item.] - [Sensitive Search] - [Details] Tab Page - [Output parameter]

# **Increasing Measurement Position Accuracy**

You can increase the accuracy of measurement positioning. You can calculate down to four decimal places.

- [Inspect] [Inspection] [Sensitive Search] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Press [Sub-pixel] and select [Yes].



### Select the Results to Output

Only objects with a correlation that is higher than the specified candidate level are output.

- [Inspect] [Inspection] [Sensitive Search] [Modify] [Details] Tab Page [Meas. Parameter]
  - Press [Candidate level] and adjust the candidate level so that only objects higher than a certain correlation are detected.



Extraction condition	Range	Description
Candidate level	(Default: 70)	Set the threshold to find Candidate. Output the correlating value that is higher than [Candidate level] value.  Decrease the value when Model search is unstable.

Note

The processing time changes if you change the candidate level.

# **Changing the Number Region Divisions**

You can change the number of divisions of the registered model.

[Inspect] - [Inspection] - [Sensitive Search] - [Modify] - [Details] Tab Page - [Model parameter] - [Sub-model number]

Parameter	Setting	Description
Sub-model number	• 3 × 3 • 5 × 5 (Default) • 9 × 9	Sets the number of divisions of the registered model.

## **Inspecting Plain Regions**

Density deviations are used to inspect sections that are set as plain regions during teaching.

[Inspect] – [Inspection] – [Sensitive Search] – [Modify] – [Details] Tab Page – [Model parameter] – [Plain inspection]

Parameter	Setting	Description
Plain inspection	<ul><li>Yes</li><li>No (Default)</li></ul>	Enables or disables inspecting plain sections.

### **Unstable Search Results**

### **Inclined Measurement Objects**

Adjust the [Angle range] parameter to increase the range in which a search is made for the model.

The Search inspection item judges whether an image is OK or NG according to the correlation with a previously registered image pattern.

For this reason, if the object is at an angle, the correlation is reduced and the image may be judged as NG.

To achieve an OK judgment for the same image pattern even when the object is at an angle, the rotation range must be widened.

- ▶ [Inspect] [Inspection] [Sensitive Search] [Modify] [Details] Tab Page [Model parameter]
  - 1 Set [Rotation] to [Yes].
  - 2 Press [Angle range] and set the following range.

Parameter	Setting	Description
Angle range	Range: –180 to 180 Default: Lower: –180 Upper: 180	A search is performed within the set angle range. The larger the angle range, the longer the processing time.  Important  If you change the angle range, perform teaching again.  p. 261

### **Correlation Is Inconsistent Due to Low Contrast**

Adjust the	e brightness to improve the contrast of the mark.
₩ ′	Adjusting the Brightness: p. 77

#### **Correlation Is Inconsistent Due to Variations in the Measurement Object**

Inconsistent portions	can be mask	ed so that they	are omitted	from matching.

Model masking: p. 226

# **Increasing Processing Speed**

The following two methods can be used to reduce processing time.

Reduce the range in which a search is performed for the model.
Changing the measurement region: p. 227
Reduce the angle range setting.
Adjust the [Angle range] parameter to reduce the range in which a search for the model is performed.
Setting the angle range: p. 266
For more accurate detection, consider the followings:
Set [Model mode] to [Stable]     Raise [Candidate level].
For [Candidate level], refer to Select the Results to Output: p. 221

# **Editing the Model Regions and Measurement Region**

### **Changing the Model Regions**

This section describes how to edit the model regions. You can edit the model region in the same way as for a search region.

Changing the Model Registration Region to a Shape Other Than a Rectangle: p. 225

Model registration region



Measurement region (region that is searched for the model)

Important

If the model region is changed, perform teaching again. 

p. 261

### **Changing the Measurement Region**

The region within which the model is searched can be changed. You can edit the measurement region in the same way as for a search region.

Changing the Inspection Region: p. 227

### Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	This is the judgment result of the sensitive search.	-2: No judgment (not measured)  0: Judgment is OK  -1: Judgment is NG  -13: Teaching not performed error  -14: Figure not registered error  -15: Out of range error
CR	Correlation	Correlation	0 to 100
DV	Deviation	Density deviation	Color image: 0 to 221 Monochrome image: 0 to 127
Х	Position X	This is the X coordinate of the position where the model was found.	-999,999,999.9999 to 999,999,999.9999
Y	Position Y	This is the Y coordinate of the position where the model was found.	-999,999,999.9999 to 999,999,999.9999
TH	Angle	This is the angle of the position where the model was found.	-180 to 180
RX	Detection X	This is the X coordinate of the detection point when the model was registered.	-999,999,999.9999 to 999,999,999.9999
RY	Detection Y	This is the Y coordinate of the detection point when the model was registered.	-999,999,999.9999 to 999,999,999.9999
SX	Reference position X	This is the X coordinate of the position where the model was registered. (This is the center of the model region.)	-999,999,999.9999 to 999,999,999.9999
SY	Reference position Y	This is the Y coordinate of the position where the model was registered. (This is the center of the model region.)	-999,999,999.9999 to 999,999,999.9999
ST	Reference angle	This is the angle when the model was registered.	-180 to 180
СТ	NG sub-region	This is the number of NG sub-regions.	0 to 100
AN	Sub-region number	This is the number of the regions with the lowest correlation.	0 to 99
ANX	Sub-region number (X)	This is the column number in the X direction of the output region.	0
ANY	Sub-region number (Y)	This is the row number in the Y direction of the output region.	0
DX	Sub-region pos. X	This is the X coordinate of the sub- region that was found.	-999,999,999.9999 to 999,999,999.9999
DY	Sub-region pos. Y	This is the Y coordinate of the sub- region that was found.	-999,999,999.9999 to 999,999,999.9999
CRN[0] to CRN[99]	Correlation (sub-region)	This is the correlation of the sub-region that was found.	0 to 100
DVN[0] to DVN[99]	Deviation (sub-region)	This is the density deviation of the region that was found.	Color image: 0 to 221 Monochrome image: 0 to 127

4-18 Calculations and Judgments Using Inspection Item Data: p. 323

### Measurement Data That Can Be Logged

The following values can be logged as measurement data.

Parameter	Range of value	Description
Judgement	−2: No judgment (not measured) 0: Judgment is OK −1: Judgment is NG	This is the judgment result of the sensitive search.
Correlation	0 to 100	Correlation
D deviation	Color image: 0 to 221 Monochrome image: 0 to 127	Density deviation
Position X	-99,999.9999 to 99,999.9999	This is the X coordinate of the position where the model was found.
Position Y	-99,999.9999 to 99,999.9999	This is the Y coordinate of the position where the model was found.
Angle	-180 to 180	This is the angle of the position where the model was found.
NG sub-region	0 to 100	This is the number of NG sub-regions.
Sub-region number	0 to 99	This is the number of the regions with the lowest correlation.
Sub-region pos. X (sub-region number (X))	0 to 9	This is the column number in the X direction of the output region.
Sub-region pos. Y (sub-region number (Y))	0 to 9	This is the row number in the Y direction of the output region.
Sub-region position X	-999,999,999.9999 to 999,999,999.9999	This is the X coordinate of the sub-region that was found.
Sub-region position Y	-999,999,999.9999 to 999,999,999.9999	This is the Y coordinate of the sub-region that was found.
Correlation (sub-region)	0 to 100	Correlation
Deviation (sub-region)	Color image: 0 to 221 Monochrome image: 0 to 127	Density deviation

<sup>\*</sup> When logging data is output, the data is output in the order of the above table.

7-6 Logging Measurement Data and Image Data: p. 392

#### **Errors**

#### **Errors in Teaching**

A teaching error message will appear if the contrast of the image within the model registration region is too low. Select a region with a larger contrast between light and dark areas compared to the region that was registered as the model and re-register it as the model.










# **Edge Position**

This inspection item is used to inspect positions. For example, it can be used to see if a label is attached at the correct position or if a product is set in the correct position.


Places where the color changes greatly are called edges. The positions of these edges are measured.



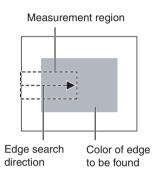

Sample Measurement


An edge is detected within the region according to set direction and color.

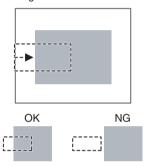

# **Setup Procedure for Edge Position**

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Edge position].
    - Registering inspection items: p. 138

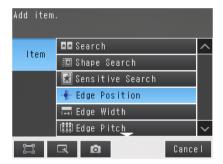


Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

- ▶ [Inspect] [Inspection] [Add item.] [Edge Position] [Settings] Tab Page
  - 1 Press [Teach].

The arrow in the middle shows the direction for detecting an edge.

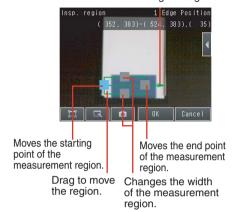

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- 3 Move the rectangle to the location to be measured.
- 4 Press [OK].
- Fress [TEACH] on the lower right of the display.
  The basic settings will be registered when teaching has been completed.
- 6 Press [Back] to end teaching.
  - Changing the measurement region: p. 227

The following data is stored as basic measurement data.

Item	Parameter	Description
Reference data	Reference position X Reference position Y	The reference coordinates (X, Y) of the position are set automatically.


### Step 3 Adjusting Judgment Parameters

### ▶ [Inspect] – [Inspection] – [Add item.] – [Edge Position] – [Settings] Tab Page

#### 1 Press [Judgement].

2 Press the parameters and set the range that is to be judged as OK.

The measurement value is displayed next to the parameter name. Continuous measurements will be performed for the images that are displayed.

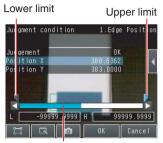

Blue for OK. Red for NG.

#### Note

You can change the parameters for judgement conditions on the Display Settings Display. Press [◄] – [Display setting] on the right of the display to switch to the Display Settings Display.

### **3** Press [OK] to enter the value.

Parameter	Setting	Description
Offset amount	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -1,640 Upper: 1,640	Sets the upper/lower limit range for the amount of position deviation considered to be OK.
Position X	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Sets the upper/lower limit range for the amount of edge position X considered to be OK.
Position Y	Range: -99,999.9999 to 99,999.9999 Defaults: Lower: -99,999.9999 Upper: 99,999.9999	Sets the upper/lower limit range for the amount of edge position Y considered to be OK.

#### Note

- You can change the output form for each measurement value to one of the following settings.
  - Press [◀] [Result type] on the right of the display.
    - Absolute value (Default): The measured coordinates are output as absolute values.
    - Relative value: The difference from the reference value is output.

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. The Default is to reflect them.

[Inspect] - [Inspection] - [Add item.] - [Edge Position] - [Details] Tab Page - [Output parameter]

## **Changing Edge Detection Conditions (Sensors with Monochrome Cameras Only)**

You can change the following measurement conditions for Sensors with Monochrome Cameras.

▶ [Inspect] – [Inspection] – [Edge Position] – [Modify] – [Details] Tab Page – [Meas. Parameter]

Item	Parameter	Description
	Projection	A projection is formed based on the gray level, and any position of intersection between the gray level value and the threshold (edge level) is detected as an edge.  This detection method is used when you must process an image with excessive noise or when the edges are blurry.
Measurement methods	Differentiation	A differentiated waveform is created that represents the amount of change in gray level between neighboring pixels.  The edge position is detected from the differentiated waveform that exceeds the threshold (edge level).  This detection method is used for low-contrast images.
Density change	Light to Dark	Detects as an edge any position within the specified region that changes from white to black.
(when Measurement methods is set to Projection only)	Dark to Light	Detects as an edge any position within the specified region that changes from black to white.

## **Unstable Edge Position Results**

#### There Is an Edge But It Cannot Be Detected


# ▶ [Inspect] – [Inspection] – [Edge Position] – [Modify] – [Details] Tab Page – [Meas. Parameter] – [Edge Level]

Parameter	Setting	Description
Edge level	Color diff. / density diff. (%) Range: 0 to 100 Default: 50  When specified by absolute value • Color Range: 0 to 442 Default: 20 • Monochrome Range: 0 to 255 Default: 20	Set the color change level to detect as an edge. The edge point is found based on a threshold that is set for a color change.  Important If you change the edge level, perform teaching again.

Note


#### **Edge Level**

- When measuring by relative value (%) of color difference width An edge is detected in the following way.
  - 1. The color change distribution of the entire measurement region is determined.
- 2. The minimum color change is 0%. The maximum color change is 100%.
- 3. The location where the color change intersects with the edge level is detected as the edge.

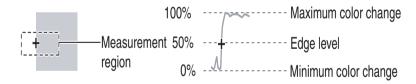

• When measuring by color difference value

The edge threshold is set using the absolute value of the color difference.

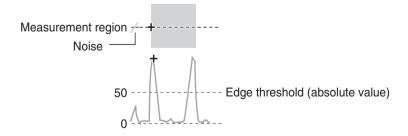

# [Inspect] - [Inspection] - [Edge Position] - [Modify] - [Details] Tab Page - [Meas. Parameter] - [Noise Level]

Parameter	Setting	Description				
Noise level	Sensors with Color Cameras Only Range: 0 to 442 Default: 5 (Sensors with Monochrome Cameras only) Range: 0 to 255 Default: 5	Sets the density level to be considered as noise. If the difference between the maximum and minimum color changes in the region is below the noise level, it will be assumed that there is no edge. Increase this value if noise is incorrectly detected as an edge.  Important  If you change the noise level, perform teaching again.				

Note

#### Noise threshold

The maximum and minimum color deviations and densities within the edge detection region are determined. If the difference is less than the noise threshold, it is assumed that there are no edges. Normally there is no problem with the Default value of 10, but if noise is mistakenly detected as an edge, make this value higher.

· Sensors with Color Camera


Within the Region

Max. color change – Min. color change < Noise threshold  $\rightarrow$  No edge found  $\rightarrow$  Measurement result: NG Max. color change – Min. color change  $\geq$  Noise threshold  $\rightarrow$  Edge found  $\rightarrow$  Perform measurement

· Sensors with Monochrome Cameras

Max. density change – Min. density change < Noise threshold  $\rightarrow$  No edge found  $\rightarrow$  Measurement result: NG


Max. density change – Min. density change – Noise threshold → Edge found → Perform measurement

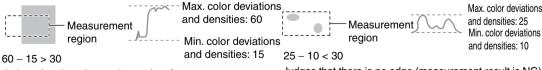

Judges that there is an edge and performs measurements. Judges that there is no edge (measurement result is NG).

#### Screen Display When the Edge Level and Noise Level Are Changing

A bar showing the threshold level moves up and down on the graphic as the edge level/noise level value changes. A cross-key cursor will also appear at the detected edge position.

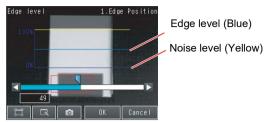

Screen display when the edge level are changing.


#### Undesired Edge Position Is Automatically Detected When Teaching (Sensors with Color Cameras Only)

Manually set the color of the edge that you want to detect.

- ▶ [Inspect] [Inspection] [Edge Position] [Modify] [Settings] Tab Page [Teach]
  - 1 Press [◄] [Color ON/OFF] on the right side of the display.
  - 2 Press [ON].
  - 3 Press [◄] [Set color.] on the right of the display.
  - 4 Press [◄] [Detection mode] on the right of the display and select one of the following detection modes.
  - 5 Draw a rectangle around the color that you want to use to extract an edge.


The specified color will be extracted.

- 6 Press [OK] to enter the edge color.
- 7 Press [TEACH] again.
- 8 Press [Back].

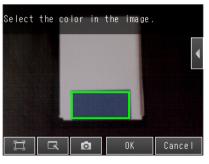

(Only a rectangle can be used to specify the region.)

Item	Parameter	Description
		Detects as an edge any position where the color changes from another color to the specified color.
Detection mode	Color OUT	Detects as an edge any position where the color changes from the specified color to another color.

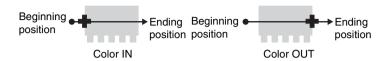

Note

It is also possible to check the extraction colors or specify them using the color palette.

The RGB values of the extraction color can be checked and adjusted using the color palette.

If you press [◄] – [Color palette], a color palette will appear.



When a color is pressed on the color palette, its RGB values will be displayed.

# **Increasing Processing Speed for Edge Position**

Make the measurement region smaller to reduce the processing time.

Changing the measurement region: p. 227

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	·		Data range
JG	Judgement	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	This is the judgment result.
X	Position X	-99999.9999to 99999.9999	This is the X coordinate of the measured edge position.
Y	Position Y	-99999.9999 to 99999.9999	This is the Y coordinate of the measured edge position.
SX	Ref. position X (reference position X)	-99999.9999 to 99999.9999	This is the X coordinate of the edge position when a range is set.
SY	Ref. position Y (reference position Y)	-99999.9999 to 99999.9999	This is the Y coordinate of the edge position when a range is set.
DF	D. position (difference in position)	-99999.9999 to 99999.9999	This is the offset from the measured reference position.

<sup>4-18</sup> Calculations and Judgments Using Inspection Item Data: p. 323

## Measurement Data That Can Be Logged for Edge Position

The following values can be logged as measurement data.

Measured item	Range of value	Description
Judgement	0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the measurement judgment results.
D. position (difference in position)	-99999.9999 to 99999.9999	This is the offset from the measured reference position.
Position X	-99999.9999 to 99999.9999	This is the X coordinate of the measured edge position.
Position Y	-99999.9999 to 99999.9999	This is the Y coordinate of the measured edge position.

When logging data is output, the data is output in the order of the above table. If more than one item is stored, results are output for each model.

7-6 Logging Measurement Data and Image Data: p. 392

#### **Errors**

#### **Errors in Teaching**

A teaching error message will appear if the edge position cannot be detected when teaching. Perform the following.

- If the color of the measurement object has changed from the specified color, set the color again and try teaching again.
- If there is an edge and it cannot be detected, adjust the [Noise level] on the [Details] Tab Page and try teaching again.

#### **Edge Not Found**

If an edge is not found, the measurement result will be NG. Perform the following.

- If a color was specified, make sure the color of the measurement object has not changed from the specified color.
- · Set the color again if necessary.
- If there is an edge and it cannot be detected, make sure the [Edge level] parameter on the [Details] Tab Page is correct.


$\sqcap$	Edge	level:	p.	27
	Luge	IEVEI.	μ.	2/(

# 4-13 Inspecting with the Edge Width Inspection Item



### **Edge Width Inspection Item**

This inspection item is used to measure dimensions. Places where the color changes greatly are called edges. The distance between two edges is called the edge width.

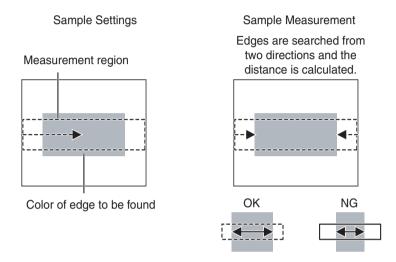

# **Setup Procedure for Edge Width Inspection Item**

# Step 1 Selecting the Inspection Item

- [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Edge Width].
    - Registering inspection items: p. 138




Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

### Step 2 Teaching

Teaching means to store the region and the edge width in the region as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Edge Width] [Settings] Tab Page
  - 1 Press [Teach].

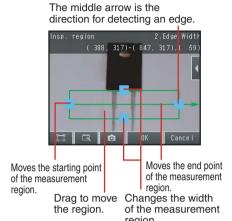

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- **3** Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed.

6 Press [Back] to end teaching.

Changing the measurement region: p. 227

The following data is stored as the measurement reference.

Item	Parameter	Description
Reference data	Reference width	The reference edge width is set automatically.


## Step 3 Adjusting the Judgement Parameters

#### ▶ [Inspect] - [Inspection] - [Add item.] - [Edge Width] - [Settings] Tab Page

#### 1 Press [Judgement].

### 2 Set the D. Width range for an OK judgement.

Continuous measurements will be performed for the images that are displayed. The measured value is displayed beside the parameter name.

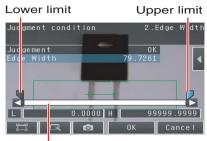

Blue for OK. Red for NG.

#### Note

You can change the parameters for judgement conditions on the Display Settings Display. Press  $[\blacktriangleleft]$  – [Display setting] on the right of the display to switch to the Display Settings Display.

### 3 Press [OK] to enter the value.

Parameter	Setting	Description
Edge width (edge in width)	When the result type is set to absolute value Range: 0.0000 to 99,999.999 Defaults: Upper: 99,999.999 Lower: 0.0000 When the result type is set to relative values: Range: -99,999.9999 or 99,999.999 Defaults: Upper: 99,999.9999 Lower: -99,999.9999 When the result type is set to ratios: Range: 0.000 to 999.9999(%) Defaults: Upper: 999.9999 Lower: 0.000	Set the upper and lower limits of the reference width for an OK judgment.

#### Note

• You can change the output form for each measurement value to one of the following settings.

Press [◀] – [Result type] on the right of the display.

- Absolute value (Default): The measured edge width is output.
- Relative value: The difference from the reference value is output.
- · Ratio: The percentage of the reference value is output.

0 0	,	•
_	he measurement conditions for Sensors with Monochrome Cameras. sity change] and [Measurement method] parameters.	
p. 275		
Reflect in	Total Judgment	
Ttoricot iii	Total badgmont	
You can specify w The Default is to r	whether to reflect the judgment results of an inspection item in the overall judgment. reflect them.	
▶ [Inspect] – [I	nspection] – [Add item.] – [Edge Width] – [Details] Tab Page – [Output paramet	:er]
Unstable	Edge Width Results (Sensors with Color Cameras)	
If the measureme	nt result is not stable, adjust the [Edge level], [Noise level], and [Set color.] parameters.	
p. 276		
Increasing	g Edge Width Processing Speed	
Make the measure	ement region smaller to reduce the processing time.	
Changing	g the measurement region: p. 227	

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be output to external devices or used in calculations as measurement data.

Expression	Data name	Description	Data range
text string			
JG	Judgement	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	This is the judgment result.
W	Edge width	0 to 99999.9999	Edge width
SW	Ref. edge width (reference edge width)	0 to 99999.9999	This is the reference edge width from when the model was registered.
DF	D. edge width (difference in edge width)	0 to 99999.9999	This is the difference between the reference edge width and the measured edge width.

$\bigcap$ 4	<ul> <li>-18 Calculations</li> </ul>	and Judaments	Usina	Inspection	Item Data:	p. 323
-------------	--------------------------------------	---------------	-------	------------	------------	--------

# Measurement Data That Can Be Logged for Edge Width

The following values can be logged as measurement data.

Measured item	Range of value	Description		
Judgement	0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the measurement judgment results.		
Edge Width (edge in width)	-99999.9999 to 99999.9999	This is the difference between the reference width and the measured edge width.		

<sup>\*1</sup> When logging data is output, the data is output in the order of the above table. If more than one item is stored, results are output for each model.

L	Ļ	7-6	Logging	Measurement	Data	and	Image I	Data: ¡	). S	39.	2
---	---	-----	---------	-------------	------	-----	---------	---------	------	-----	---

#### **Errors**

### **Errors in Teaching**

A teaching error message will appear if the edge position cannot be detected when teaching. Perform the following.

- If the color of the measurement object has changed from the specified color, set the color again and try teaching again.
- If there is an edge and it cannot be detected, adjust the [Noise level] on the [Details] Tab Page and try teaching again.

#### **Edge Not Found**

The measured edge width will be 0. Perform the following:

- If a color was specified, make sure the color of the measurement object has not changed from the specified color.
- · Set the color again if necessary.
- If there is an edge and it cannot be detected, make sure the [Edge level] parameter on the [Details] Tab Page is correct.

Edge level: p. 276

# 4-14 Inspecting with the Edge Pitch Inspection Item




### **Edge Pitch Inspection Item**


This inspection item is used to detect edges through changes in brightness within a region.

Edges of the specified color in one inspection region are found and the number objects, object width, and pitch are output.

Sample Settings

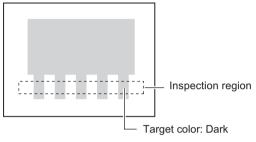


Sample Measurement

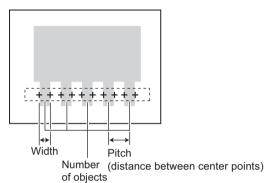

### **Setup Procedure for Edge Width Inspection Item**

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Edge Pitch].
    - Registering inspection items: p. 138

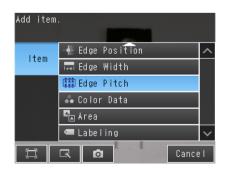


Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

### Step 2 Teaching

Teaching means to store the region as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Edge Pitch] [Settings] Tab Page
  - 1 Press [Teach].
  - Place the object that is to be used as the measurement reference in front of the camera.
  - 3 Move the rectangle to the location to be measured.
  - 4 Press [OK].
    - Changing the Measurement Region: p. 227

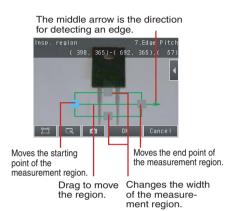

# Step 3 Adjusting the Judgment Parameters

- ▶ [Inspect] [Inspection] [Add item.] [Edge Pitch] [Settings] Tab Page
  - 1 Press [Judgement].
  - Press the parameters and set the range that is to be judged as OK.


Continuous measurements will be performed for the images that are displayed. The measured value is displayed beside the parameter name.

Note

You can change the parameters for judgment conditions on the Display Settings Display.

Press [◀] – [Display setting] on the right of the display to switch to the Display Settings Display.

**3** Press [OK] to enter the value.

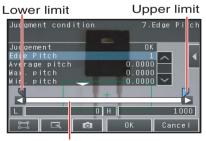

Blue for OK. Red for NG.

Item	Parameter	Setting	Description
	Edge pitch	Range: 0 to 1000 Defaults: Lower: 0 Upper: 1000	
	Average pitch	Range: 0.0000 to 99,999.9999 Defaults: Lower: 0.0000 Upper: 99,999.9999	Set the range that is to be judged OK for each parameter.
	Max. pitch (maximum pitch)	Range : 0.0000 to 99,999.9999 Defaults: Lower: 0.0000 Upper: 99,999.9999	
Judgment Parameter	Min. pitch (minimum pitch)	Range: 0.0000 to 99,999.9999 Defaults: Lower: 0.0000 Upper: 99,999.9999	
	Average width	Range: 0.0000 to 99,999.9999 Defaults: Lower: 0.0000 Upper: 99,999.9999	Pitch Width (distance between center points)
	Max. width (maximum pitch)	Range: 0.0000 to 99,999.9999 Defaults: Lower: 0.0000 Upper: 99,999.9999	Edge pitch (number of objects)
	Min. width (minimum pitch)	Range: 0.0000 to 99,999.9999 Defaults: Lower: 0.0000 Upper: 99,999.9999	

# **Changing Edge Detection Conditions (Sensors with Monochrome Cameras Only)**

You can change the following measurement conditions for Sensors with Monochrome Cameras.

### ▶ [Inspect] – [Inspection] – [Edge Pitch] – [Modify] – [Details] Tab Page – [Meas.parameter]

Parameter	Setting	Description
Color to count	White (Default) Black	Sets the color of edges to measure.
Mode	` ,	Select the Precise Mode if the pin width or pitch is less than 2 pixels.

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. The Default is to reflect them.

▶ [Inspect] – [Inspection] – [Add item.] – [Edge Pitch] – [Details] Tab Page – [Output parameter]

# **Unstable Edge Pitch Results (Sensors with Color Cameras Only)**

If the measurement result is not stable, adjust the [Edge level], [Noise level], and [Set color.] parameters.
---

\_\_\_ p. 276

# **Increasing Edge Pitch Processing Speed**

Make the measurement region smaller to reduce the processing time.

Changing the measurement region: p. 227

### Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be output to external devices or used in calculations as measurement data.

Expression text string	Data name	Description	Data range
JG	Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the judgement result.
N	Edge pitch	0 to 999	This is the number of objects.
Р	Average pitch	0 to 99999.9999	This is the average pitch.
PH	Max. pitch	0 to 99999.9999	This is the maximum pitch.
PL	Min. pitch	0 to 99999.9999	This is the minimum pitch.
W	Average width	0 to 99999.9999	This is the average width between edges.
WH	Max. width	0 to 99999.9999	This is the maximum width between edges.
WL	Min. width	0 to 99999.9999	This is the minimum width between edges.

4-18 Calculations and Judgments Using Inspection Item Data: p. 323

# Measurement Data That Can Be Logged for Edge Pitch

The following values can be logged as measurement data.

Measured item	Range of value	Description
Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the judgement result from the measurements.
Edge pitch	0 to 999	This is the number of objects that were detected.
Average pitch	0 to 99999.9999	This is the average pitch that was detected.
Max. pitch	0 to 99999.9999	This is the maximum pitch that was detected.
Min. pitch	0 to 99999.9999	This is the minimum pitch that was detected.
Average width	0 to 99999.9999	This is the average width that was detected between edges.
Max. width	0 to 99999.9999	This is the maximum width that was detected between edges.
Min. width	0 to 99999.9999	This is the minimum width that was detected between edges.

When logging data is output, the data is output in the order of the above table.

$\Box$	7-6 Logging	Messurement	Data and	Image Data: p.	30,
1   1	7-0 Loudilla	vieasurerrierii	Dala aliu	IIIIau <del>e</del> Dala. D.	394

#### **Errors**

### **Edge Not Found**

The measured edge pitch will be 0. Perform the following.

- If a color was specified, make sure the color of the measurement object has not changed from the specified color.
- · Set the color again if necessary.
- If there is an edge and it cannot be detected, make sure the [Edge level] parameter on the [Details] Tab Page is correct.

$\Box$	Edge	level:	p.	276


# 4-15 Inspecting with Color Data Inspection Item



### **Color Data Inspection Item**

This inspection item is used to perform inspections for foreign matter with a different color or for presence. The region is set for a portion of the image with the color that is to be measured. This region is called the measurement region. The average color within the measurement region is measured.

If a Sensor with a Monochrome Camera is connected, the average density in the measurement region is found and inspections are performed for the difference from the registered reference value (density average) and the variation within the measurement region (density deviation).

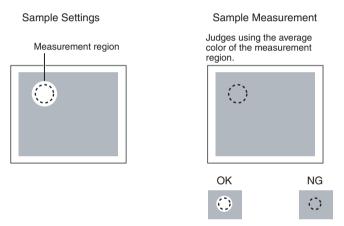

If a Sensor with a Monochrome Camera is connected, the average density in the measurement region is measured and the density deviation is used for judgments.

# **Setup Procedure for Color Data Inspection Item**

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Color Data].
    - Registering inspection items: p. 138



Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.


### Step 2 Teaching

Teaching means to store the region and the average color in the region as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Color Data] [Settings] Tab Page
  - 1 Press [Teach].

Drag the rectangle to move it.



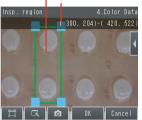

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- 3 Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed.

6 Press [Back] to end teaching.

Changing the measurement region: p. 227


The following data is stored as the measurement reference.

Item	Parameter	Description
	Reference color R	The R average to use as a reference is set automatically.
Reference data	Reference color G	The G average to use as a reference is set automatically.
	Reference color B	The B average to use as a reference is set automatically.
	Reference color B	The B average to use as a reference is set automatically.

### Step 3 Adjusting Judgment Parameters

- ▶ [Inspect] [Inspection] [Add item.] [Color Data] [Settings] Tab Page
- 1 Press [Judgement].
- Press the parameters and set the range that is to be judged as OK.

The measured value is displayed beside the parameter name. Continuous measurements will be performed for the images that are displayed.

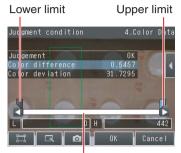

Blue for OK. Red for NG.

Note

You can change the parameters for judgment conditions on the Display Settings Display. Press [◀] – [Display setting] on the right of the display to switch to the Display Settings Display.

3 Press [OK] to enter the value.

#### • Sensors with Color Cameras Only

Item	Parameter	Setting	Description
	Color difference	0 to 442	Sets the upper and lower limits of the difference between the average color and reference color that is to be judged as OK.
	Color deviation	0 to 221	Set the upper and lower limits of the range of the deviation in the region that is to be judged as OK.
Judgement Parameter	R average	0.0000 to 255.0000	Set the difference in the average value of the R (red) component that is to be judged as OK.
	G average	0.0000 to 255.0000	Set the difference in the average value of the G (green) component that is to be judged as OK.
	B average	0.0000 to 255.0000	Set the difference in the average value of the B (blue) component that is to be judged as OK.

#### • Sensors with Monochrome Cameras only

Item	Parameter	Setting	Description
Judgement Parameter	Density average	0 to 255	Set the judgment upper and lower limits for the average density in the measurement region.
Parameter	Density deviat. (density deviation)	0 to 127	Set the upper and lower limits for the deviation in the average density in the measurement region.

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment.

▶ [Inspect] – [Inspection] – [Add item.] – [Color Data] – [Details] Tab Page – [Output parameter]

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-10: Image error</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> <li>-20: Other error</li> </ul>	This is the judgment result.
AR	R average	0 to 255	This is the average value of the R (red) component.
AG	G average	0 to 255	This is the average value of the G (green) component.
AB	B average	0 to 255	This is the average value of the B (blue) component.
AD	Color diff./dens. AV.	0 to 442	(For Sensors with Color Cameras) This is the difference between the average color in the region and the standard color.
	Color difference	0 to 255	(For Sensors with Monochrome Cameras) This is the difference between the average density in the region and the standard density.
	Clr. deviat. Color	0 to 221	(For Sensors with Color Cameras) This is the deviation within the region.
DV	deviation	0 to 217	(For Sensors with Monochrome Cameras) This is the deviation within the region

<sup>4-18</sup> Calculations and Judgments Using Inspection Item Data: p. 323

# Measurement Data That Can Be Logged (Color Data)

The following values can be logged as measurement data.

Measured item	Range of value	Description
Judgement	0: Judgement is OK, -1: Judgement is NG -10: Image error -13: Teaching not performed error -14: Figure not registered error -15: Out of range error -20: Other error	This is the measurement judgment results.
R average	0 to 255	This is the average value for the R (red) component.
G average	0 to 255	This is the average value for the G (green) component.
B average	0 to 255	This is the average value for the B (blue) component.
Color diff./dens. AV. Color (for Sensors with Color Cameras)	0 to 442	This is the difference between the color that was registered as the reference and the measured color. The average color within the inspection region is used in both cases.
Color diff./dens. AV. Color (for Sensors with Mono- chrome Cameras)	0 to 255	This is the difference between the average density in the region and the currently measured density.
Clr. deviat. (for Sensors with Color Cameras)	0 to 221	This is the deviation within the measurement region.
Clr. deviat. (for Sensors with Mono- chrome Cameras)	0 to 127	This is the deviation in the average density in the measurement region.

When logging data is output, the data is output in the order of the above table.

7-6 Logging Measurement Data and Image Data: p. 392

# **Increasing Processing Speed for Color Data**

Make the measurement region smaller to reduce the processing time.


Changing the measurement region: p. 227

# 4-16 Inspecting with the Area Inspection Item




### **Area Inspection Item**

This inspection item is used to measure sizes. It measures the amount of a color within the measurement region. The size is calculated as a number of pixels and it is called the area.

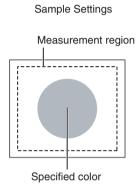


Sample Measurement Judges according to the number of pixels (area) of the specified color.

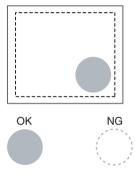

# Step 1 Selecting the Inspection Item

- ▶ [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Area].
    - Registering inspection items: p. 138

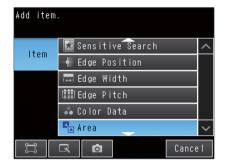

Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

### Step 2 Teaching

Teaching means to store the region and the color area in the region as reference data for the measurement.

- ▶ [Inspect] [Inspection] [Add item.] [Area] [Settings] Tab Page
  - 1 Press [Teach].

Drag the rectangle to move it.

Drag a corner to size the rectangle.

3. Area
( 478, 126) ( 768, 410)

- Place the object that is to be used as the measurement reference in front of the camera.
- 3 Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed. Areas with the extracted color will be automatically detected.

Note

Information on the color that has the largest area in the measurement region is extracted and registered. (The color information is extracted only the first time.)

The extracted color information will not change from the second time on.

To specify a desired color, refer to Extraction Is Automatically Performed for an Undesired Color When Teaching p. 305.

- 6 Press [Back] to end teaching.
  - Changing the measurement region: p. 227

The following data is stored as the measurement reference.

Item	Parameter	Description	
Reference data	Extract color	This is the color for which to measure the area.  The color occupying the largest area will be automatically registered.  Setting Colors Manually: p. 305	
	Reference area	The area to use as a reference is set automatically.	

#### ▶ [Inspect] – [Inspection] – [Add item.] – [Area] – [Settings] Tab Page

#### 1 Press [Judgement].

# Press the parameters and set the range that is to be judged as OK.

The measured value is displayed beside the parameter name. Continuous measurements will be performed for the images that are displayed.



Blue for OK. Red for NG.

#### Note

You can change the parameters for judgment conditions on the Display Settings Display. Press [◄] – [Display setting] on the right of the display to switch to the Display Settings Display.

#### 3 Press [OK] to enter the value.

Item	Parameter	Setting	Description
Judgement Parameter	Area	When the result type is set to absolute value  Range: 0.0000 to 999,999,999.9999  Defaults: Upper: 999,999,999.9999  Lower: 0.0000  When the result type is set to relative value  Range: -999,999,999,999 to 999,999,999,999  Defaults: Upper: 999,999,999,999  Lower: -999,999,999,999  When the result type is set to ratio  Range: 0.00000 to 999,999  Defaults: Upper: 999,999  Lower: 0.0000	Set the upper and lower limits for an OK judgment. The set range is the difference between the reference area and the measured areas.
	Gravity X	Range: -99,999.9999 to 99,999.9999 Defaults: Upper: 99,999.9999 Lower: -99,999.9999	Set the upper and lower limits of the range of gravity X that is to be judged as OK.
	Gravity Y	Range: -99,999.9999 to 99,999.9999 Defaults: Upper: 99,999.9999 Lower: -99,999.9999	Set the upper and lower limits of the range of the gravity Y that is to be judged as OK.

#### Note

- You can change the output form for each measurement value to one of the following settings.
  - Press [◄] [Result type] on the right of the display.
    - Absolute value (Default): The measured coordinates are output.
    - Relative value: The difference from the reference position is output as coordinates.
    - Ratio: The percentage of the reference value is output. (This applies to the area only.)

# **Reflect in Total Judgment**

You can specify whether to reflect the judgment results of an inspection item in the overall judgment. (The Default is to reflect them.)

▶ [Inspect] – [Inspection] – [Add item.] – [Area] – [Details] Tab Page – [Output parameter]

#### **Unstable Area Results**

#### The Desired Color Cannot Be Detected


Add a specific color or enlarge the color range.

Manually set the color for which to measure the area.

- ▶ [Inspect] [Inspection] [Area] [Modify] [Settings] Tab Page [Teach]
- Sensors with Color Cameras Only
  - 1 Press [◄] [Set color] on the right of the display.
  - 2 Drag around the color for which you want to measure the area.

Areas with that color will be automatically detected. Continuous measurements will be performed for the images that are displayed.

Only the extracted color will appear on the display.

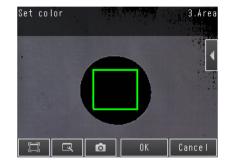

- 3 Press [OK].
- 4 Press [TEACH].
- 5 Press [Back] to end teaching.

Note

#### **Measuring More Than One Color**

Set the colors using the color palette.

Press [◀] – [Color palette] on the Set Color Display to display the color palette.

Up to four colors can be specified.

If the Color inv. Option is selected, the color outside the region will become the selected color.

If the Inv. Check Box is selected, the color outside the region will become the selected color.

The [Inv.] Check Box applies to all colors. Select the [Exclusion] Check Box to exclude the selected color from extraction. The order of exclusion is from the largest color palette number.




#### Making the Extract Color Easier to Check

- The display for the extracted color can be switched by using [◄] [Display setting].
   (The following display patterns can be selected for the extracted color: [Measurement image], [All color image]
   (Default), [Selected color image], or [Binary image].)
- Press [◄] [Background color] to change the display for colors other than the extraction color.
   (The color can be chosen from [Black] (Default), [White], [Red], [Green], or [Blue].)

- Sensors with Monochrome Cameras (or for a Color Gray Filter)
  - 1 Press [◄] [Set color] on the right of the display.
  - 2 Press [◀] [Binary level].
  - 3 Specify the range of brightness to detect, and then press [OK].

Specify the range of brightness to convert to a binary image. Measurement is performed after the image taken by the camera in 256-color grayscale is converted to a binary image. Then, white pixels are measured.

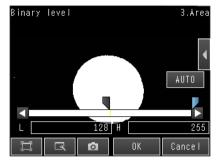

- 4 Press [OK].
- 5 Press [TEACH].
- 6 Press [Back] to end teaching.

Note

#### Making the Extraction Results Easier to Check

- You can invert the black/white extraction results.
  - Press [◀] [Reverse] and select [Yes].
- You can select whether to display a binary image.
  - Press [◀] [Binary image display] and select [OFF] or [ON].

#### **Changing the Area Detection Conditions**

You can fill in the area detected through color extraction or binary conversion to perform a stable extraction of the areas and their characteristics or to mark only areas inside the measurement region for inspection.

- ▶ [Inspect] [Inspection] [Aria] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Press [Fill profile] and select [Filling up holes] or [Fill Outline].



Parameter	Setting	Description	
Fill profile	None (Default)     Fill Outline     Filling up holes	None: Holes are not filled. Filling up holes: Processes areas that are surrounded by the specified color, like in the shape of a donut, as the specified color.  Input Image Filled Image Filled Image Fill Outline: Measures the image between the first extracted point and the last extracted point in the X axis direction in the inspection region as the extracted color. Because filling is performed only in the X axis direction, this method is faster than filling up holes.  Input Image Image Following Fill Outline	

# **Increasing Processing Speed for Area**

Make the measurement region smaller to reduce the processing time.

Changing the measurement region: p. 227

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the judgement result.
AR	Area	0 to 9999999999999	This is the area in the measurement region with the specified color.
X	Gravity X	-99999.9999 to 99999.9999	This is the X coordinate of the center of the inspection region with the specified color.
Y	Gravity Y	-99999.9999 to 99999.9999	This is the Y coordinate of the center of the inspection region with the specified color.
SA	Reference area	0 to 999999999999	This is the area with the specific color to be measured when a range is set.
SX	Ref. point X (reference point X)	-99999.9999 to 99999.9999	This is the X coordinate of the center of gravity when a range is set.
SY	Ref. point Y (reference point Y)	-99999.9999 to 99999.9999	This is the Y coordinate of the center of gravity when a range is set.

4-18 Calculations and Judgments Using Inspection Item Data: p. 323

# Measurement Data That Can Be Logged for Area

The following values can be logged as measurement data.

Measured item	Range of value	Description	
0: Judgement is OK -1: Judgement is NG Judgement -13: Teaching not performed error -14: Figure not registered error -15: Out of range error		This is the measurement judgement results.	
Area	0 to 99999.9999	This is the measured color area.	
Gravity X	-99999.9999 to 99999.9999	This is the detected center of gravity X coordinate.	
Gravity Y	-99999.9999 to 99999.9999	This is the detected center of gravity Y coordinate.	


<sup>\*</sup> When logging data is output, the data is output in the order of the above table.

# 4-17 Inspecting with the Labeling Inspection Item



### Labeling

One region of the color you want to measure is counted as a Label. You can sort these labels by position or size, and assign numbers to them. You can then output the total number of labels, and size and position of a desired label.

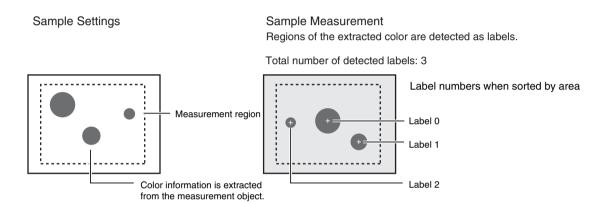

Note

If a Sensor with Color Camera is connected, you can specify up to four colors to measure.

If a Sensor with Monochrome Camera is connected, the image is converted to a black and white binary image. Then, white pixels are measured.

# **Setup Procedure for Labeling Inspection Item**

# Step 1 Selecting the Inspection Item

- ► [Inspect] [Inspection]
  - 1 Press an unused inspection item number and press [Add item.].
  - 2 Press [Labeling].
    - Registering Inspection Items: p. 138



Note

Drag the arrow at the bottom of the menu upward to display all of the inspection items.

### Step 2 Teaching

Teaching means to register the region and label characteristics in that region as reference data for measurements

- Sensors with Color Cameras Only
- ▶ [Inspect] [Inspection] [Add item.] [Labeling] [Settings] Tab Page
  - 1 Press [Teach].

Drag the rectangle to move it.

Drag a corner to size the rectangle.

| Drag a corner to size the rectangle. | 6.Labeling | 6.Labeling | 6.50, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400) | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] | 650, 400] |

- 2 Place the object that is to be used as the measurement reference in front of the camera.
- 3 Move the rectangle to the location to be measured.
- 4 Press [OK].
- 5 Press [TEACH] on the lower right of the display.

The basic settings will be registered when teaching has been completed.

Note

Information on the color that has the largest area in the measurement region is extracted and registered. (The color information is extracted only the first time.)

The extracted color information will not change from the second time on.

To specify a desired color, refer to Extraction Is Automatically Performed for an Undesired Color When Teaching: p. 314.

- 6 Press [Back] to end teaching.
  - Changing the measurement region: p. 227

Note

If you press the [TEACH] Button without specifying a color, the color with the largest area in the measurement region will be extracted and the resulting color information will be registered.

The following data is stored as the measurement reference.

Item	Parameter	Description
	Reference area	The area for label 0 to use as a reference is set automatically.
Reference data	Reference position X	The gravity position X for label 0 to use as a reference is set automatically.
	Reference position Y	The gravity position Y for label 0 to use as a reference is set automatically.

### Step 3 Adjusting Judgment Parameters


#### ▶ [Inspect] – [Inspection] – [Add item.] – [Labeling] – [Settings] Tab Page

1 Press [Judgement].

**2** Press the parameters and set the OK ranges.

Set the range for each of the following parameters. Continuous measurements will be performed for the images that are taken.

If more than one result was detected, you can switch to a display for each result.

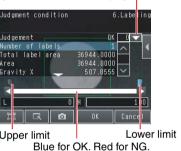

Item	Parameter	Setting	Description
	Number of labels	Range: 0 to 100 (Default)	Set the upper and lower limits of the number of labels for an OK judgment.
	Total label area	Range: 0 to 999,999,999.9999 (Default)	Set the upper and lower limits of the total label area for an OK judgment.
Judgment parameters	Area	Range: 0 to 999,999,999.9999 (Default)	Sets the upper and lower limits of the area for an OK judgment.
	Gravity center X	Range: -99,999.999 to 99,999.999 (Default)	Set the upper and lower limits of the gravity X for an OK judgment.
	Gravity center Y	Range: -99,999.999 to 99,999.999 (Default)	Set the upper and lower limits of the gravity Y for an OK judgment.
	Master angle	Range: -180 to 180 (Default)	Sets the upper and lower limits of the master angle for an OK judgment.

#### Note

You can change the parameters for judgment conditions on the Display Settings Display. Press [◀] – [Display setting] on the right of the display to switch to the Display Settings Display.

3 Press [OK] to accept the value.

### **Unstable Labeling Results**

#### The Desired Color Cannot Be Detected

Add a specific color or enlarge the color range.

#### **Unintended Labels Detected**

If the number of labels is large, processing will be aborted midway and the labels will not be detected correctly. Reduce the number of detected labels by narrowing the measurement area or adjusting the binarization level.

#### **Extraction Is Automatically Performed for an Undesired Color When Teaching**


Manually set the color for which to measure the labeling.

- ▶ [Inspect] [Inspection] [Area] [Modify] [Settings] Tab Page [Teach]
- Sensors with Color Cameras Only
  - 1 Press [◄] [Set color] on the right of the display.
  - 2 Drag around the color for which you want to measure the labeling.

Labeling with that color will be automatically detected.

Continuous measurements will be performed for the images that are displayed.

Only the extracted color will appear on the display.

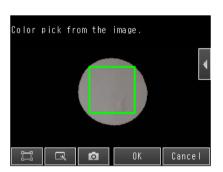

- 3 Press [OK].
- 4 Press [TEACH].
- 5 Press [Back] to end teaching.

#### **Measuring More Than One Color**

Set the colors using the color palette.

Press [ ] – [Color palette] on the Set Color Display to display the color palette. Up to four colors can be specified. If the *Color inv.* Option is selected, the color outside the region will become the selected color.

The [Inv.] Check Box applies to all colors. Select the [Exclusion] Check Box to exclude the selected color from extraction.

The order of exclusion is from the largest color palette number.




#### Making the Extract Color Easier to Check

- The display for the extracted color can be switched by using [◄] [Display setting].
   (The following display patterns can be selected for the extracted color: [Measurement image], [All color image]
   (Default), [Selected color image], or [Binary image].)
- Press [◀] [Background color] to change the display for colors other than the extraction color. (The color can be chosen from [Black] (Default), [White], [Red], [Green], or [Blue].)

- Sensors with Monochrome Cameras (or for a Color Gray Filter)
  - 1 Press [◀] [Binary level] on the right of the display.
  - 2 Specify the range of brightness to detect, and then press [OK].

Specify the range of brightness to convert to a binary image. Measurement is performed after the image taken by the camera in 256-color grayscale is converted to a binary image. Then, white pixels are measured.

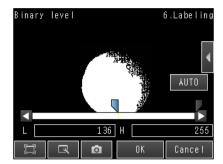

- 3 Press [OK].
- 4 Press [TEACH].
- 5 Press [Back] to end teaching.

Note

#### Making the Extraction Results Easier to Check

- You can invert the black/white extraction results.
  - Press [◀] [Reverse] and select [Yes].
- You can select whether to display a binary image.

Press [◀] – [Binary image display] and select [OFF] or [ON].

### **Changing the Label Detection Conditions**

You can fill in the labels detected through color extraction or binary conversion to perform a stable extraction of the labels and their characteristics or to mark only labels inside the measurement region for inspection.

- ▶ [Inspect] [Inspection] [Labeling] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 To enable filling up holes, press [Filling up holes] and select [Yes].
  - 2 To extract an image, press [Extract image] and select [Yes].



Parameter	Setting	Description
		Sets how to process areas surrounded by the specified color. If [Yes] is set, those areas are processed as the specified color.
Filling up holes	Yes	Input Image Filled Image
	No (Default)	
		Select this option if there are areas of the specified color inside the measurement region that you do not want to measure. If [Yes] is set, all areas outside the measurement region are cut out as the specified color.  Measurement region
Extract image	Yes No (Default)	Yes
		You need to know the position and area of this label.  You can find the position and area of the center label if you set the sort condition to sort by descending order of area. Areas outside the measurement region are set to the color for measurement.

### **Changing the Label Extraction Conditions**

Set the label extraction conditions. You can select to extract only labels that satisfy all four of the following: Number of labels, specified area, gravity X, and gravity Y conditions.

▶ [Inspect] – [Inspection] – [Labeling] – [Modify] – [Settings] Details – [Details] Tab Page – [Meas. Parameter] – [Extraction condition]

1 Press and set each of the parameters for the extraction conditions.



Parameter	Setting	Description
Number of labels	Range: 1 to 100 Default: 100	Set the maximum number of labels to detect.
Area	Range: 0 to 999,999,999.9999  Defaults: Upper limit: 999,999,999.9999  Lower limit: 0	Specify the area range to judge as a label.
Gravity X	Range: -99,999,999.9999 to 999,999,999.999 Defaults: Upper limit: 999,999,999.999, Lower limit: -999,999,999.9999	Specify the gravity X position to judge as a label.
Gravity Y	Range: -999,999,999.9999 to 999,999,999.999 Defaults: Upper limit: 999,999,999.999, Lower limit: -999,999,999.9999	Specify the gravity Y position to judge as a label.

### **Sorting Extracted Labels**

Set the sort condition and count for extracted labels. You can set the sort condition and the maximum number of detections for detection results.

- ▶ [Inspect] [Inspection] [Labeling] [Modify] [Details] Tab Page [Meas. Parameter]
  - 1 Press [Sorting method].
  - 2 Select the sorting method.



Parameter	Setting	Description
Sorting method	Area ascending order Area descending order (Default) Pos. X ascending order (ascending order of X coordinate) Pos. X descending order (descending order of X coordinate) Pos. Y ascending order (ascending order of Y coordinate) Pos. Y descending order (descending order of Y coordinate)	Set the condition to use for label number reassignment. When sorting by X or Y coordinates, the upperleft corner is the origin.

# **Reflect in Total Judgement**


You can specify whether to reflect the judgment results of an inspection item in the overall judgment. The Default is to reflect them.

▶ [Inspect] – [Inspection] – [Add item.] – [Labeling] – [Details] Tab Page – [Output parameter]

# **Editing the Measurement Region**

This section describes how to edit the measurement regions. You can edit the measurement region in the same way as for a search region.

Changing the Model Registration Region to a Shape Other Than a Rectangle: p. 225

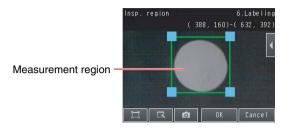

Important

If the measurement region is changed, perform teaching if required. p. 312

### **Increasing the Processing Speed**

Make the measurement region smaller to reduce the processing time.

Changing the Measurement Region p. 227

# Measurement Data That Can Be Used for External Outputs and Calculations

The following values can be used as measurement data and output to external devices via the Ethernet or used in calculations.

Expression text string	Data name	Description	Data range
JG	Judgement	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	This is the Labeling judgement results.
L	Number of labels	0 to 100	This is the number of labels found.
TAR	Total label area	0 to 999,999,999.9999	This is the total area of all labels found.
AR[0] to AR[99]	Area	0 to 999,999,999.9999	These are the areas of each individual label.
X[0] to X[99]	Gravity X	-99,999.9999 to 99,999.9999	-99,999.9999 to 99,999.9999 These are the X coordinates of the center of each label.
Y[0] to Y[99]	Gravity Y	-99,999.9999 to 99,999.9999	These are the Y coordinates of the center of each label.
ATH[0] to ATH[99]	Master angle	-180 to 180	These are the master angle of the center of each label.
SA	Reference area	0 to 999,999,999.9999	This is the reference area.
SX	Ref. position X (reference position X)	-99,999.9999 to 99,999.9999	This is the X coordinate of the reference position.
SY	Ref. position Y (reference position Y)	-99,999.9999 to 99,999.9999	This is the Y coordinate of the reference position.

<sup>4-18</sup> Calculations and Judgments Using Inspection Item Data p. 323 

# Measurement Data That Can Be Logged for Labeling

You can select to log any of the following values.

Measurement item	Range of value	Description
Judgement	0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	This is the measurement judgement results.
Number of labels	0 to 100	This is the number of labels.
Total label area	0 to 999,999,999.9999	This is the total area of all extracted labels.
Area	0 to 999,999,999.9999	This is the area of the detected label (100 max.).
Gravity center X	-99999.9999 to 99999.9999	This is the gravity coordinate X of the detected label (100 max.).
Gravity center Y	-99999.9999 to 99999.9999	This is the gravity coordinate Y of the detected label (100 max.).
Master angle	-180 to 180	This is the master angle of the detected label (100 max.).


When logging data is output, the data is output in the order of the above table. If more than one item is stored, results are output in order for each label.

#### Example:

[# of label] [Total label area] [Area 0.X] [Area 0.Y] [Gravity center 0.Y] [Gravity center 0.Y] [Mater angle 0.ATH] ... [Area N.X] [Area N.Y] [Gravity center N.X] [Gravity center N.Y] [Master angle N.ATH] ... [Number of Label (Count-1).X] [Number of Label (Count-1).Y] [Number of Label (Count-1).TH]

7-6 Logging Measurement Data and Image Data p. 392

# **Calculations and Judgments Using Inspection Item Data**

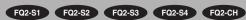

You can set inspection item judgment results and measurement data with the Calculation menu command to use them in basic arithmetic operations and functions. The judgment results of the calculations are reflected in the overall judgment.

#### Calculation

Use the Calculation menu command to set the calculation expressions and the judgment parameters for the calculation results.

#### **Expression**

You can get up to 32 expressions. You can also combine expressions.

You can use the following values in calculations.

- · Filter item and position compensation item data (measurement data, reference values, and judgment results)
- Inspection item data (measurement data, reference values, and judgment results)
- Constants
- · Other calculation results

#### **Judgment**


Upper and lower limit values are used for the judgment of calculation results (D00 to D31). If within the upper and lower limits, each calculation judgment result (J00 to J31) is OK. If all registered calculation results are judged OK, the judgment result (JG) is OK.

If there is at least one NG, the judgment result (JG) is NG. The judgment result (JG) of calculation can be reflected in the overall judgment.

(It is also possible to not reflect the judgment result in the output parameter(s) settings.)

#### **Outputting the Calculation Results**

The overall judgment (JG) of the calculations are reflected in the overall judgment of the inspection item. The calculation result of each expression (J00 to J31) and calculation data (D00 to D31) can be output via Ethernet or recorded as logging data.

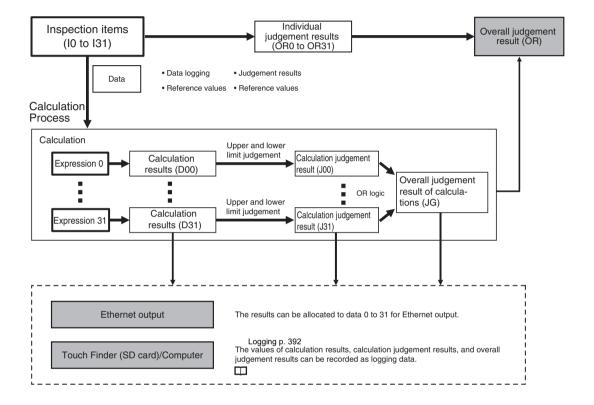


## **Examples for Calculation**

#### Example 1: Finding the distance between two measured points

This example finds edge position 2 by detecting the two edge positions of inspection item 0 and inspection item 1, and calculates the distance between the two points.


#### Calculate this distance.

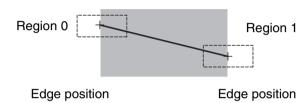

- Region 0 (edge position coordinates of inspection item 0): (I0.X,I0.Y)
- Region 1 (edge position coordinates of inspection item 1): (I1.X,I1.Y)
- Distance between two points = DIST (I0.X,I0.Y,I1X,I1.Y)

#### Example 2: Finding the lowest similarity of characters read with OCR inspection items


OCR items in inspection items 0 and 1 are used to find the lowest similarity of characters read.

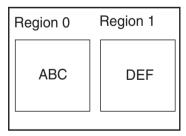

- Region 0 (similarity from OCR item in inspection item 0): (I0.SIM)
- Region 1 (similarity from OCR item in inspection item 1): (I1.SIM)
- Lowest similarity from OCR items in inspection items 0 and 1: min(I0.SIM,I1.SIM)


# **Procedure (Calculation)**

1 Press [Inspect] – [Calculation].

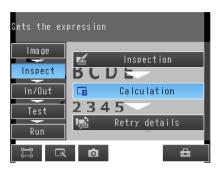

#### **Setting Expressions**

1 Press [Expression] on the [Settings] Tab Page.

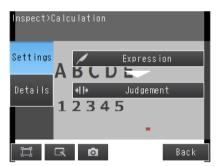

2 Press the expression number that you want to use.




### Press [Modify] on the menu.

Note

#### **Performing Similar Calculations At Different Locations**

- [Rename] The name of the calculation can be changed. (16 characters max.)
- [Copy] Previously registered calculation expressions can be copied.

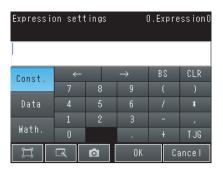

### Set the expression by selecting items from the [Data], [Const.], and [Math.] Tab Pages.

The expression will be displayed in the space under [Expression settings].

Do not exceed 255 characters in the expression.

Item	Description
Const.	Press this to input constants or a mathematical operator.  The following operators can be used: + (addition), – (subtraction), × (multiplication), and / (division).
Data	Press this to use measurement data, reference values, and judgment results of other items.
Math.	Press this to use functions.

#### **Expression Notation**

Expressions must have the following notation.

```
Text string corresponding to the item: position correction data, inspection item, or calculation settings.
For an item that has multiple measurement results such as search, shape search III, and labelling, you can use the array symbol and enter in the format X[0] to acquire individual data values.
Enter the data number to be referenced in [].

Filter item or position compensation item: Enter "P" and the item number.
Inspection item: Enter "I" and the inspection item number.
Calculation settings data: Enter "20". (Enter "Z1" for the FQ2-S4/CH.)
```

Example: Finding the distance between the centers of gravity of inspection item 1 and inspection item 2 using a function.

```
DIST(I1.X,I1.Y,I2.X,I2.Y)

Inspection item data
```

Example: Subtracting 120 from the calculation result of expression 0.

```
D00 - 120.00 Constant

Mathematical operator

Result of expression 0
```

Example: Adding the judgement result of inspection items 0 and 1.

```
IO.JG + I1.JG

Judgement result for inspection item 1

Mathematical operator

Judgement result for inspection item 0
```

Example: Using an array to add the area of label 0 and the area of label 1 for inspection item 0 (labeling).

# **Function List**


The following functions can be used in calculations.

Function	Description
SIN	Finds the sine. The result is a value between –1 and 1. The angle in the expression is in degrees. SIN(angle)
cos	Finds the cosine. The result is a value between –1 and 1. The angle in the expression is in degrees. COS(angle)
ATAN	Finds the arctangent of the value (Y component, X component). The result is a radian value between $-\pi$ and $\pi$ .  ANGL(Y_component,X_component)  Example: Finding the angle between the straight line joining the centers of region 0 and region 1 and horizontal.  ATAN(R1.Y-R0.Y,R1.X-R0.X)  If the two arguments are both 0, the result is 0 and the judgement is NG.
AND	Finds the logical AND.  If one of the arguments is 0, the calculation result is 0. Otherwise it is –1.  AND(argument_1,argument_2)
OR	Finds the logical OR.  If both of the arguments are 0, the calculation result is 0. Otherwise it is –1.  OR(argument_1, argument_2)
NOT	Applies a logical NOT operation.  If the argument is 0, the calculation result is –1. Otherwise it is 0.  NOT(argument)
ABS	Finds the absolute value.  ABS(argument)
MAX	Returns the larger of the two arguments.  MAX(argument_1, argument_2)
MIN	Returns the smaller of the two arguments.  MAX(argument_1, argument_2)
	Finds the angle of the straight line joining two points (the center of gravity and center of the model). The angle against the horizontal is found. The result is a value between –180 and 180.  ANGL(Y_component,X_component)
ANGL	Example: Finding the angle of the straight line joining the centers of region 0 and region 1 ANGL(R1.Y-R0.Y,R1.X-R0.X)
	First point
	Second point
	If the two arguments are both 0, the result is 0 and the judgement is NG.
MOD	Finds the remainder after dividing a non-ordinal number with an ordinal number.  MOD(non-ordinal, ordinal)  If any of the arguments are real numbers, the decimals are rounded off before calculating the remainder.  The remainder is the result of dividing integers.  Example: MOD(13,4) Result: 1 (remainder when 13 is divided by 4)  MOD(25.68,6.99) Result: 5 (remainder when 26 is divided by 7)


Function	Description
SQRT	Finds the square root.  If the argument is negative, the result is 0. The judgement will be NG.  SQRT(argument)
	Finds the distance between two points (the center of gravity and the center of the model).  DIST(first_position_X, first_position_Y, second_position_X, second_position_Y)
	Example: Finding the distance between the centers of gravity of region 0 and region 1 DIST(R0.X,R0.Y,R1.X,R1.Y)
DIST	The following calculation is performed internally.
	$\sqrt{(R1.X-R0.X)^2+(R1.Y-R0.Y)^2}$
	• Finds the length of a perpendicular line from point (x,y) to line ax + by + c = 0.  DIST (X_coordinate_of_point, Y_coordinate_of_point, coefficient_a_of_line, coefficient_b_of_line, coefficient_c_of_line)
TJG	Returns a Overall Judgment Results of the inspection items and position compensation items. Returns -1 if NG somewhere in the inspection items or position compensation items. Returns 0 if all of those items are OK. Calculation judgment is not included.

### **Setting Judgment Parameters for Expressions**

1 Press [Judgement] on the [Settings] Tab Page.

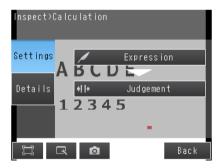

- **2** Press an expression between 0 to 31 and set the corresponding judgement parameters using the slider.
- 3 Press the [OK] Button.

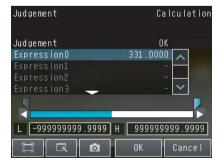

#### Reflecting the Judgment Results for Expressions to the Overall Judgment Results

You can specify whether to reflect the judgment results of a calculation in the overall judgment. (The Default is to reflect them.)

#### ▶ [Inspect] – [Calculation] – [Details] Tab Page – [Output parameter] – [Reflect]

#### Inspection Item Data That Can Be Used in Expressions

Inspection item	Data name	Expression text string	Data range	Default
Filter (FQ2-S1/S2/S3/S4/CH)	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	-2
	Judgement	JG	<ul><li>-2: No judgement (not measured)</li><li>0: Judgement is OK</li><li>-1: Judgement is NG</li></ul>	-2
	Scroll X	DX	-99999.9999 to 99999.9999	0
	Scroll Y	DY	-99999.9999 to 99999.9999	0
	Scroll θ	DT	-180 to 180	0
Shape Sear. pos. comp.	Position X	X	-99999.9999 to 99999.9999	0
(FQ2-S1/S2/S3/S4/CH)	Position Y	Y	-99999.9999 to 99999.9999	0
	Angle	TH	-180 to 180	0
	Reference X	SX	-99999.9999 to 99999.9999	0
	Reference Y	SY	-99999.9999 to 99999.9999	0
	Reference angle	ST	-180 to 180	0
	Correlation	CR	0 to 100	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	-2
	Scroll X	DX	-99999.9999 to 99999.9999	0
Search position comp.	Scroll Y	DY	-99999.9999 to 99999.9999	0
(FQ2-S1/S2/S3/S4/CH)	Position X	X	-99999.9999 to 99999.9999	0
	Position Y	Y	-99999.9999 to 99999.9999	0
	Reference X	SX	-99999.9999 to 99999.9999	0
	Reference Y	SY	-99999.9999 to 99999.9999	0
	Correlation	CR	0 to 100	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	-2
Edge position comp.	Scroll X	DX	-99999.9999 to 99999.9999	0
(FQ2-S1/S2/S3/S4/CH)	Scroll Y	DY	-99999.9999 to 99999.9999	0
·	Ref. position X	X	-99999.9999 to 99999.9999	0
	Ref. position Y	Y	-99999.9999 to 99999.9999	0
	Reference X	SX	-99999.9999 to 99999.9999	0
	Reference Y	SY	-99999.9999 to 99999.9999	0

Inspection item	Data name	Expression text string	Data range	Default
	Judgement	JG	<ul><li>-2: No judgement (not measured)</li><li>0: Judgement is OK</li><li>-1: Judgement is NG</li></ul>	-2
	Scroll X	DX	-99999.9999 to 99999.9999	0
	Scroll Y	DY	-99999.9999 to 99999.9999	0
	Edge0 position X	X0	-99999.9999 to 99999.9999	0
	Edge0 position Y	Y0	-99999.9999 to 99999.9999	0
	Edge1 position X	X1	-99999.9999 to 99999.9999	0
2Edge position comp.	Edge1 position Y	Y1	-99999.9999 to 99999.9999	0
(FQ2-S1/S2/S3/S4/CH)	Edge0 ref. position X (edge 0 reference position X)	SX0	-99999.9999 to 99999.9999	0
	Edge0 ref. position Y (edge 0 reference position Y)	SY0	-99999.9999 to 99999.9999	0
	Edge1 ref. position X (edge 1 reference position X)	SX1	-99999.9999 to 99999.9999	0
	Edge1 ref. position Y (edge 1 reference position Y)	SY1	-99999.9999 to 99999.9999	0
	Judgement	JG	<ul><li>-2: No judgement (not measured)</li><li>0: Judgement is OK</li><li>-1: Judgement is NG</li></ul>	-2
	Scroll X	DX	-99999.9999 to 99999.9999	0
	Scroll Y	DY	-99999.9999 to 99999.9999	0
	Edge0 position X	X0	-99999.9999 to 99999.9999	0
	Edge0 position Y	Y0	-99999.9999 to 99999.9999	0
	Edge1 position X	X1	-99999.9999 to 99999.9999	0
	Edge1 position Y	Y1	-99999.9999 to 99999.9999	0
	Midpoint X	MX	-99999.9999 to 99999.9999	0
2Edge midpoint comp. (FQ2-S1/S2/S3/S4/CH)	Midpoint Y	MY	-99999.9999 to 99999.9999	0
(1 42-0 1/02/03/04/011)	Edge0 ref. position X (edge 0 reference position X)	SX0	-99999.9999 to 99999.9999	0
	Edge0 ref. position Y (edge 0 reference position Y)	SY0	-99999.9999 to 99999.9999	0
	Edge1 ref. position X (edge 1 reference position X)	SX1	-99999.9999 to 99999.9999	0
	Edge1 ref. position Y (edge 1 reference position Y)	SY1	-99999.9999 to 99999.9999	0
	Ref. midpoint X (reference midpoint X)	SMX	-99999.9999 to 99999.9999	0
	Ref. midpoint Y (reference midpoint Y)	SMY	-99999.9999 to 99999.9999	0

Inspection item	Data name	Expression text string	Data range	Default
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	-2
	Scroll θ	DT	-180 to 180	0
	Edge0 position X	X0	-99999.9999 to 99999.9999	0
	Edge0 position Y	Y0	-99999.9999 to 99999.9999	0
	Edge1 position X	X1	-99999.9999 to 99999.9999	0
Edge rot. pos. Comp. (FQ2-S1/S2/S3/S4/CH)	Edge1 position Y	Y1	-99999.9999 to 99999.9999	0
(1 42 0 1/02/00/01/011)	Angle	TH	-180 to 180	0
	Edge0 ref. position X (edge 0 reference. position X)	SX0	-99999.9999 to 99999.9999	0
	Edge0 ref. position Y (edge 0 reference. position Y)	SY0	-99999.9999 to 99999.9999	0
	Edge1 ref. position X (edge 1 reference. position X)	SX1	-99999.9999 to 99999.9999	0
	Edge1 ref. position Y (edge 1 reference. position Y)	SY1	-99999.9999 to 99999.9999	0
	Reference angle	STH	-180 to 180	0
	Judgement	JG	-2: No judgment (not measured) 0: Judgement is OK -1: Judgement is NG -15: Out of range error	-2
	Position correction X	DX	-99999.9999 to 99999.9999	0
	Position correction Y	DY	-99999.9999 to 99999.9999	0
Numerical Position Compensation	Position correction $\theta$	DT	-180 to 180	0
(FQ2-S1/S2/S3/S4/CH)	Measurement coordinate X	Х	-99999.9999 to 99999.9999	*1
	Measurement coordinate Y	Y	-99999.9999 to 99999.9999	*1
	Measurement angle	TH	-180 to 180	0
	Reference coordinate X	SX	-99999.9999 to 99999.9999	*1
	Reference coordinate Y	SY	-99999.9999 to 99999.9999	*1
	Reference angle  Judgement	JG	-180 to 180  -2: No judgment (not measured) 0: Judgement is OK -1: Judgement is NG -16: Measurement timeout error -17: Format not entered error	90 –2
	Index	IN	-2: No verification pastern, or reading error -1: Verification is NG 0 to 31: Master data No.	-2
	Number of read characters	N	0 to 128	0
OCR (FQ2-S4/CH only)	Similarity	SIM	0 to 100	0
(1 42 07/011011ly)	Stability	STB	0 to 100	0
	Number of read characters (line 1) N1	N1	32 characters max.	0
	Number of read characters (line 2) N2	N2	32 characters max.	0
	Number of read characters (line 3) N3	N3	32 characters max.	0
	Number of read characters (line 4) N4	N4	32 characters max.	0

Inspection item	Data name	Expression text string	Data range	Default
	Individual similarity	SMC	0 to 100	0
OCR (FQ2-S4/CH only)	Individual stability	SBC	0 to 100	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -16: Measurement timeout error	-2
Bar code (FQ2-S4 only)	Index No.	IN	-2:No verification pastern or reading error -1: Verification is NG, 0 to 31: Master data No.	-2
	Num. of char.	N	0 to 1024	0
	Judgement	JG	-2: No judgement (not measured), 0: Judgement is OK -1: Judgement is NG -16: Measurement timeout error	-2
	Index No.	IN	<ul><li>-2: Verification OFF or reading error</li><li>-1: Verification is NG</li><li>0 to 31: Master data No.</li></ul>	-2
	Num. of char.	N	0 to 1024	0
	Overall quality	GD0	0 to 4	0
2D-code	Decode	GD1	0 to 4	0
(FQ2-S4 only)	Cell contrast	GD2	0 to 4	0
	Cell modulation	GD3	0 to 4	0
	Fixed pattern damage	GD4	0 to 4	0
	Axial nonuniformity	GD5	0 to 4	0
	Grid nonuniformity	GD6	0 to 4	0
	Unused err. Corr.	GD7	0 to 4	0
	Print scale	GD8	0 to 4	0
	Print scale X	GD9	0 to 4	0
	Print scale Y	GD10	0 to 4	0

Print scale Y GD10 0 to 4

\*1:Depends on the model. Refer to Compensating for Position Offset (Position Compensation Items): p. 102.

Inspection item	Data name	Expression text string	Data range	Default
	Judgement	JG	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-16: Measurement timeout error</li> </ul>	-2
	Index No.	IN	−2: Verification OFF or reading error, −1: Verification is NG, 0 to 31: Master data No.	-2
	Num. of char.	N	0 to 1024	0
	Cell Recog. Rate	E	0 to 100	0
	Contrast	С	0 to 100	0
2D-code (DPM)	Focus	F	0 to 100	0
(FQ2-S4 only)	Cell size	Р	Depends on the size of the code being read	0
	Overall quality	GDA0	0 to 4	0
	Decode	GDA1	0 to 4	0
	Cell contrast	GDA2	0 to 4	0
	Cell modulation	GDA3	0 to 4	0
	Fixed pattern damage	GDA4	0 to 4	0
	Axial nonuniformity	GDA5	0 to 4	0
	Grid nonuniformity	GDA6	0 to 4	0
	Unused err. Corr.	GDA7	0 to 4	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2
	Correlation	CR[0] to CR[31]	0 to 100	0
	Position X	X[0] to X[31]	-99999.9999 to 99999.9999	0
	Position Y	Y[0] to Y[31]	-99999.9999 to 99999.9999	0
Search	Angle	TH[0] to TH[31]	-180 to 180	0
(FQ2-S1/S2/S3/S4 only)	Reference X	SX	-99999.9999 to 99999.9999	0
	Reference Y	SY	-99999.9999 to 99999.9999	0
	Reference angle	ST	-180 to 180	0
	Detection X	RX	-99999.9999 to 99999.9999	0
	Detection Y	RY	-99999.9999 to 99999.9999	0
	Count	С	0 to 32	0

Inspection item	Data name	Expression text string	Data range	Default
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2
Shape Search II	Correlation	CR	0 to 100	0
Shape Search III	Position X	X	-99999.9999 to 99999.9999	0
(FQ2-S1/S2/S3/S4 only)	Position Y	Y	-99999.9999 to 99999.9999	0
	Angle	TH	-180 to 180	0
	Reference X	SX	-99999.9999 to 99999.9999	0
	Reference Y	SY	-99999.9999 to 99999.9999	0
	Reference angle	ST	-180 to 180	0
	Detection X	RX	-99999.9999 to 99999.9999	0
	Detection Y	RY	-99999.9999 to 99999.9999	0
	Count	С	0 to 32	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2
	Correlation	CR	0 to 100	0
	Density		Color image: 0 to 221	0
		DV	Monochrome image: 0 to 127	0
	Position X	X	-99999.9999 to 99999.9999	0
	Position Y	Y	-99999.9999 to 99999.9999	0
	Angle	TH	-180 to 180	0
	Detection X	RX	-99999.9999 to 99999.9999	0
Sensitive Search	Detection Y	RY	-99999.9999 to 99999.9999	0
(FQ2-S1/S2/S3/S4 only)	Ref. position X (reference position X)	SX	-99999.9999 to 99999.9999	0
	Ref. position Y (reference position Y)	SY	-99999.9999 to 99999.9999	0
	Reference angle	ST	-180 to 180	0
	NG sub-region	СТ	0 to 100	0
	Sub-region number	AN	1 to 99	0
	Sub-region number(X)	ANX	0 to 9	0
	Sub-region number(Y)	ANY	0 to 9	0
	Sub-region pos.X (sub-region position X)	DX	-99999.9999 to 99999.9999	0
	Sub-region pos.Y (sub-region position Y)	DY	-99999.9999 to 99999.9999	0
	Correlation (sub-region)	CRN[0] to CRN[80]	0 to 100	0
		DVN[0] to	Color image: 0 to 221	0
	Deviation (sub-region)	DVN[80]	Monochrome image: 0 to 127	0

Inspection item	Data name	Expression text string	Data range	Default
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2
Edge Position (FQ2-S1/S2/S3/S4 only)	Position X	Х	-99999.9999 to 99999.9999	0
(1 QZ 0 1/02/00/04 011ly)	Position Y	Υ	-99999.9999 to 99999.9999	0
	Ref. position X (reference position X)	SX	-99999.9999 to 99999.9999	0
	Ref. position Y (reference position Y)	SY	-99999.9999 to 99999.9999	0
	Offset amount	DF	-99999.9999 to 99999.9999	0
Edge Width (FQ2-S1/S2/S3/S4 only)	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2
	D. edge width	DF	0 to 99999.9999	0
	Ref. edge width	SW	0 to 99999.9999	0
	Edge width	W	0 to 99999.9999	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2
	Edge pitch	N	0 to 999	0
	Average pitch	Р	0 to 99999.9999	0
Edge Pitch	Max. pitch (maximum pitch)	PH	0 to 99999.9999	0
(FQ2-S1/S2/S3/S4 only)	Min. pitch (minimum pitch)	PL	0 to 99999.9999	0
	Average width	W	0 to 99999.9999	0
	Max width (maximum width)	WH	0 to 99999.9999	0
	Min width (minimum width)	WL	0 to 99999.9999	0
	Judgement	JG	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -10: Image error -20: Other error	-2
	R average	AR	0 to 255	0
Color Data	G average	AG	0 to 255	0
(FQ2-S1/S2/S3/S4 only)	B average	AB	0 to 255	0
	Color diff./dens. Av. (color difference/density average)	AD	Color difference: 0 to 442 Density average: 0 to 255	0
	CIr deviat. (color deviation/density deviation)	DV	Color difference: 0 to 221 Density deviation: 0 to 217	0

Inspection item	Data name	Expression text string	Data range	Default
	Judgement	JG	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	-2
Area	Area	AR	0 to 999999999999	0
(FQ2-S1/S2/S3/S4 only)	Gravity X	X	-99999.9999 to 99999.9999	0
	Gravity Y	Y	-99999.9999 to 99999.9999	0
	Reference area	SA	0 to 999999999	0
	Ref. position X (reference position X)	SX	-99999.9999 to 99999.9999	0
	Ref. position Y (reference position Y)	SY	-99999.9999 to 99999.9999	0
	Judgement	JG	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	-2
	Number of labels	L	0 to 100	0
	Area	AR[0] to AR[99]	0 to 99999999999	0
Labeling (FQ2-S1/S2/S3/S4 only)	Gravity X	X[0] to X[99]	-99999.9999 to 99999.9999	0
(FQZ-31/32/33/34 0111y)	Gravity Y	Y[0] to Y[99]	-99999.9999 to 99999.9999	0
	Reference area	SA	0 to 99999999999	0
	Ref. position X (reference position X)	SX	-99999.9999 to 99999.9999	0
	Ref. position Y (reference position Y)	SY	-99999.9999 to 99999.9999	0
	Total label area	TAR	0 to 99999999999999	0
	Master angle	ATH[0] to ATH[99]	-180 to 180	0

# **Testing and Saving Settings**

5-1 Performing Test Measurements	340
5-2 Shortening the Measurement Takt Time	342
5-3 Adjusting the Judgment Parameters	346
5-4 Checking a List of All Inspection Item Results	349
5-5 Saving Data to the Sensor	350

# 5-1 Performing Test Measurements



After completing the settings in the [Image], [Inspect], and [In/Out] Tab Pages, move to the [Test] Tab Page. The displayed image is measured automatically. This is called a test measurement.

A test measurement is used to verify that the settings that have been made will produce stable results and, if necessary, to fine-tune the settings. An overall judgment of all inspection items can be performed.

Test measurements can be performed for through images (Default) or saved images.

# **Performing Test Measurements with Samples**

- ▶ [Test] [Continuous test]
  - 1 Press [Graphics+Details].
  - 2 Input an image of a previously prepared object. Check the judgement results.
  - **3** When you finish checking the results, press [Back].



Note

The same five types of displays are available for the [Continuous test] on the [Test] Tab Page, i.e., [Graphics], [Graphics + Details], [All results/region], [Trend monitor], and [Histogram]. Press the [Back] Button to access the menu to change the display.

Changing the Run Mode display: p. 354

[Trend monitor] and [Histogram] are shown when the File Logging function is enabled.

Enabling File Logging: p. 399

# Performing Test Measurements with Saved Images (Re-measuring)

This Sensor can save measured images in the Sensor's built-in memory or on an SD card. Test measurements can be performed using these saved images.

This function is useful for adjusting the judgment parameters when objects are not available.


#### ► [Test] – [Continuous test] – (Any display)

1 Press 🖳 – 📑 .



#### 2 Select one of the following.

- [Log]: Images that are logged in the Sensor's internal memory.
- [Logging image file]: Images that are logged in the SD card.
- [Camera image file]: Images that were saved as logged images with the (Log Image) Button.

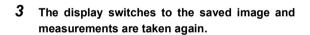


Saving images: p. 421






# 5-2 Shortening the Measurement Takt Time

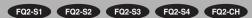


## **Checking the Measurement Takt Time**

The measurement time of this Sensor can be checked from the Setup or Run Mode display.

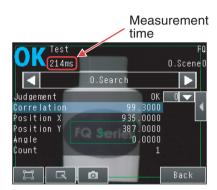

The measurement time is the time taken from when a trigger is input until when all measurement processes are executed.

During the measurement time, this Sensor will not accept the next trigger. This means that the measurement time is the basic measurement takt time.

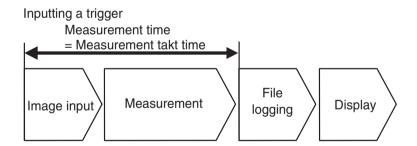

### **Increasing Image Input Speed**

With the partial input function, it is possible to input only images that are in the region that is necessary for measurements.

The image measurement region becomes smaller and therefore the image input time is shortened.

Consider the offset in the measurement object when you set the range.

The image in the input range will be displayed in the inspection item setting displays and measurement displays.

#### • FQ2-S3/S4

#### ► [Image] – [Camera setup]

- Press [◄] [Partial input] on the right side of the display.
- Press [Y] and set the input range along the Y axis by setting the Y coordinate of the partial input start point and the Y coordinate of the partial input end point.
- Partial input

  Partial input Y end line


  Y coordinate of the partial input start point

  Partial input Y end line

  Y coordinate of the partial input end point

Partial input Y start line

- 3 Press [X] and set the input range along the X axis by setting the X coordinate of the partial input start point and the X coordinate of the partial input end point.
- 4 Press [OK].

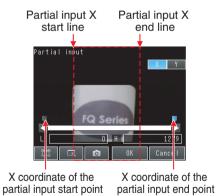

Parameter	Setting	Description
X coordinate of the partial input start point	FQ2-S0-08_ Range: 176 to 1,088, Default: 176	
	FQ2-Spp-ppp Range: 0 to 1,264, Default: 0	Specify the partial input range
X coordinate of the partial input end point	FQ2-S00000-0800 Range: 191 to 1,103, Default: 1,103	along the X axis.
	FQ2-Spp-pp-pp-pp-pp-pp-pp-pp-pp-pp-pp-pp-pp	
	FQ2-S00000/FQ2-S00000-M Range: 0 to 472, Default: 0	
Y coordinate of the partial input start point	FQ2-S08_ Range: 98 to 918, Default: 98	
	FQ2-S□□-□□□ Range: 0 to 1,016, Default: 0	Specify the partial input range along the Y axis.
	FQ2-S00000/FQ2-S00000-M Range: 7 to 479, Default: 479	
Y coordinate of the partial input end point	FQ2-S====================================	
	FQ2-S□□□□ Range: 7 to 1,023, Default: 1,023	

#### Note

- The minimum input widths are 16 for the X axis and 8 for the Y axis.
- The values of the monitor display positions are displayed for the coordinates in the measurement results.
- The coordinate values will not change as a result of the partial input settings.

#### Important

- FQ2-S1/S2/CH
- ▶ [Image] [Camera setup]
  - 1 Press [◄] [Partial input] on the right side of the display.
  - 2 Change the input size.
  - 3 Press [OK].
  - 4 Press [Back].



# **Changing the Image Input Mode**

Pixel sampling can be applied to the input image to reduce image input time.


► [Image] – [Camera setup] – ◀ – [Image input mode]

Parameter	Setting	Description
Image Input Mode	High-speed Standard (Default)	Pixel sampling can be applied to the input image to reduce image input time.

#### Important

If you change the image input mode, perform teaching again.


# 5-3 Adjusting the Judgment Parameters

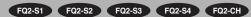

## **Adjusting Judgment Parameters While Looking at Measurement Results**

If correct judgments are not possible, you can move directly from the Setup Mode display to the judgment parameters display to make adjustments.

- ▶ [Test] [Continuous test] (Either display)
  - 1 Press [◄] [Adjust judgement] on the right of the display.
  - 2 Press the parameters and adjust the values of the judgment conditions for them.

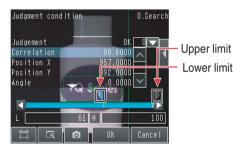


# **Setting Up the Best Judgement Parameters Automatically**

The judgment parameters of the selected inspection items can be automatically adjusted by using actual workpieces which are considered as good and faulty products.

#### ► [Test] – [Continuous test]

- 1 Move to the inspection item for which you want to automatically adjust the judgement parameters and press [◄] [Adjust judgement] on the right side of the display.
- 2 Press [◄] [Auto adjustment].
- 3 Display a sample image of a good object and press [OK Teach]. Display a sample image of a bad object and press [NG Teach].

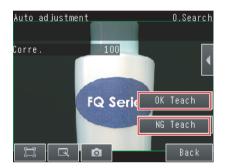

- 4 Repeat these steps for at least three samples each.
- 5 Press [Back].

The best judgement parameters will be set automatically.

6 Press [OK].

#### Important

There are no judgment condition settings for the following inspection items.


- Bar code and 2D-code (FQ2-S4 series only)
- Labelling and Edge pitch (FQ2-S1/S2/S3/S4 series only)

#### Note


You can select one of the following three patterns as the judgment method.

#### ▶ [◄] – [Select the method.] on the right side of the display

- 1) Threshold (minimum): The lower limit of the variations between OK object is used as the judgment condition.
- 2) Threshold (average): The median value between the OK object variations and NG object variations is used as the judgement condition.
- 3) Threshold (maximum): The upper limit of the variations between NG object is used as the judgment condition.

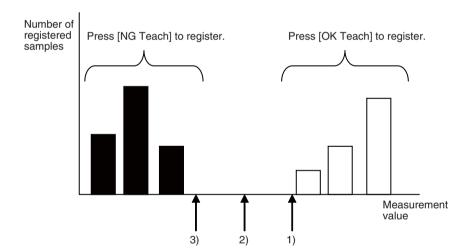

# 5-4 Checking a List of All Inspection Item Results

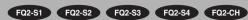

Individual judgment results for all inspection items can be checked in a list. The individual inspection items can be selected to change the judgment parameters.


#### ► [Test] – [Continuous test]

1 Press [All results/region] to display the list.




Note

Judgement parameters can also be changed from this display. Select an inspection item and press [◄] – [Adjust judgement].

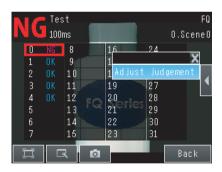

# 5-5 Saving Data to the Sensor

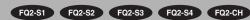

Until you have saved your settings explicitly to the memory in the FQ2 Sensor, the settings are only stored temporarily. They will be lost if the power is turned OFF. Execute [Save data] after you have finished making your settings.

The FQ2 Sensor will remind you to do so with a message if you switch from Setup Mode to Run Mode. You can use this feature to keep the previous settings and discard the new settings if desired, but keep in mind that all settings that are not saved explicitly are replaced by the settings that are stored in the memory of the FQ2 Sensor the next time you turn ON the FQ2 Sensor.

#### Important

Do not turn the power supply OFF while data is being saved. The data that is being saved may become corrupted.

#### ▶ [Test]

- 1 Press [Save data].
- 2 Press [Yes].



#### Note

- The data that are saved by this operation are scene data, system data, calibration data, touch finder data, and dictionary data\*1.
- \*1: Only supported on the FQ2-S4/CH Series.
- Scene data and system data details: p. 407
- · Measurement data and image data cannot be saved in this way.
  - Logging measurement data: p. 392
- Settings data can also be backed up to an external memory.
  - Saving settings: p. 406

# **Operation**

6-1 Starting Operation	52
6-2 Configuring the Run Mode Display	54
6-3 Checking the Trend of Measurement Results with Graphs 35	58
6-4 Adjusting Judgement Parameters during Operation 36	32
6-5 Editing the Model Region / Measurement Region	
from Run Mode	33


# 6-1 Starting Operation



When test measurements and adjustments in Setup Mode have been finished, change to Run Mode and begin actual measurements. In Run Mode, the Sensor operates stand-alone and outputs the measurement judgment results on the I/O lines accordingly to the settings. If the Touch Finder or the PC Tool is connected via network to the Sensor, the operation of the Sensor can be monitored in the following ways.

### **Run Mode Display**

352

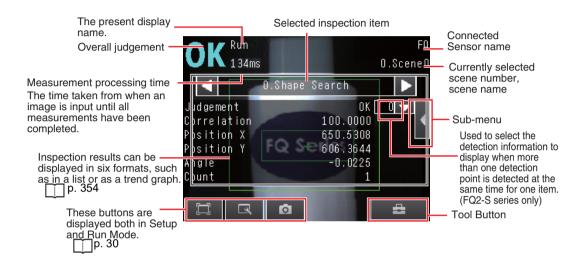

Starting Operation FQ2-S/CH User's Manual

## **Moving to Run Mode**

You can move from Setup Mode to Run Mode by using the following procedure.

- 1 Press [Run].
- 2 Press [Switch to Run mode.].



3 Press [Yes].
If you press [No], the setting will not be saved and you will move to Run Mode.




Note

• Returning to Setup Mode

Press = and press [Sensor settings].

Signal Status When Moving to Run Mode
 When moving to Run Mode, the signal will change as shown below and data can be input from and output to an external device.

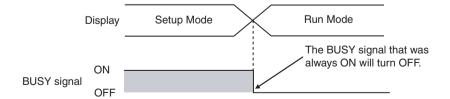

# 6-2 Configuring the Run Mode Display










There are six types of displays that can be used, as shown below. Select the display as desired.

Checking the Judgement Results of Inspection Items

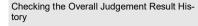

Graphics



The image and region currently being measured will appear.

Graphics + Details



In addition to [Graphics] display, individual judgement results and measurement values of selected inspection items will appear.

Statistical data



The currently measured image and history of the overall judgement results (measurement count, NG count, and NG rate) will appear.

Checking the Judgements of All Inspection Items in a List

All results/region



The judgement results of all inspection items can be checked in a list.

Displaying Measurement Result Histories

Trend monitor



The statistical data for the currently selected inspection item can be checked against time.

p. 358

Histogram



The distribution of measurement results of the currently selected inspection item can be checked.

p. 360



Note

The two conditions below are required in order to display the trend monitor / histograms in Run Mode.


Enabling File Logging: p. 399

Setting Logging Conditions: p. 395

The following displays are convenient if more than one Sensor is connected.

Multi sensor

Hulti sensor

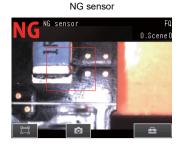


Displays the measurement results of all connected Sensors.
Green display: OK, Red display: NG

Automatically changes to the display for any Sensor with an NG result.


### 

When multiple sensors are connected, switching from [Sensor monitor] to [Single Sensor], [Multi sensor], or [NG sensor] is possible.

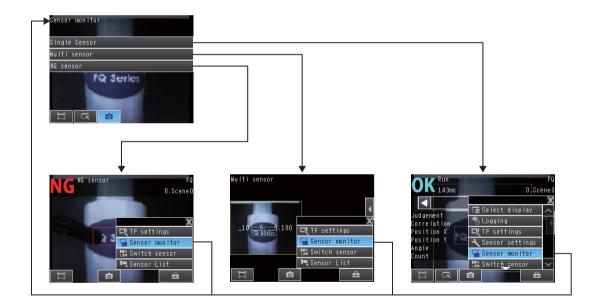

#### Specifying the Startup Run Mode Display

The display that appears when power supply is turned ON can be set. The Default setting is [Graphics + Details]. This only appears when [Start screen type] under [Startup display] is set to [Single sensor].

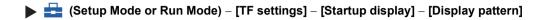


#### Note

- You can set the scene to be displayed when the power supply is turned ON.
  - Setting the Startup Scene: p. 368
- The Default display setting for startup can be changed.
  - Selecting the Display When More Than One Sensor Is Connected: p. 389

#### Displaying the Inspection Item Results

You can scroll though the measurement results of all the configured inspection items by using the following operations.

Switches to the previous inspection item.

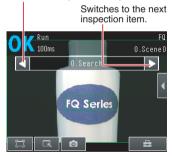

#### Note

The following are also displayed in addition to the measurement results for each inspection item.

- · Filter item: The results of a filter item is displayed.
- · Camera input: The image that is being measured is displayed.
- Position comp.: The result of position compensation is displayed.
- · All Region: The measurement regions for all inspection items are displayed.
- · Calculation: The calculation result of each expression registered in the inspection settings is displayed.

You can clear the measurement results of all the configured inspection items by using the following operations.





#### Selecting the Displayed Image


You can select the displayed image when you use the Area or Labeling Inspection items,





The selectable image will be changed depending on the Sensor type.

Color type Monochrome type

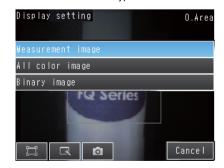

You can select from Measurement image, All color image and Binary image. (Default : Measurement image)



You can select from Measurement image and Binary image. (Default : Measurement image)

# 6-3 Checking the Trend of Measurement Results with Graphs



Measurement result histories can be checked using the trend monitor and histograms.

To display trend monitors or histograms in Run Mode, you must make the following setting in advance in Setup Mode.

(Setup Mode) – [TF settings] – [Logging setting] – [ON]

#### **Trend Monitor**

Changes in the measurement values of the selected inspection item against time can be observed from the graph. It becomes possible to predict when malfunctions may occur or to analyze the cause of the malfunction by checking the trends in the measurement values. The most recent 1,000 measurement values are displayed on the graph.

#### • [Trend monitor] Display



Changes in the measured value of the selected inspection item are displayed against time in a graph.

### **Arranging the Trend Monitor Display**

The display range for the vertical axis and display conditions for the horizontal axis can be changed. To change the display range of the vertical axis, [Auto display] must be set to OFF.

Note

You can display only one parameter in the Trend Monitor. You cannot display multiple parameters at the same time.

- Disabling Automatic Adjustment of the Display Range (Default: ON)
  - 1 Press [◄] [Auto display] on the right of the trend monitor.
  - 2 Press [OFF].
- Changing the Display Range of the Vertical Axis
  - 1 Press [◄] [Display range] on the right of the trend monitor.
  - 2 Set the minimum and maximum values of the measurement values.
- Changing the Number of Values That Are Displayed
  - 1 Press [◄] [Number of data] on the right of the trend monitor.
  - 2 Select the number of values from 200, 400, and 1,000.

#### Note

- Trend monitor data is held until the power supply is turned OFF.
- You can select whether to display all data on the trend monitor or only data for which the overall judgement is NG. Logging settings are applied to the trend monitor as well.


However, they are not applied to trend monitor when it is displayed in Setup Mode.

$\Box$	Check recent	measurement	trends	(recent	results	logging): p	401
	Officer recent	mododicinon	ucnac	(1000111	recuire	ioggiiig). P	

## **Histograms**

The distribution of each measurement value can be checked on a histogram.

The most recent 1,000 measurement values are displayed on a graph.

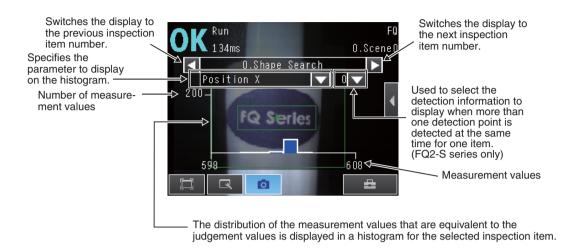

▶ 🖶 (Run Mode) – [Select display] – [Histogram]

### **Arranging Histogram Display**

The display range on the horizontal axis and the number of data on the vertical axis of the histogram can be changed. To change the display range of the vertical axis, [Auto display] must be set to OFF.

- Disabling Automatic Adjustment of the Display Range (Default: ON)
  - 1 Press [◀] [Auto display] on the right of the histogram.
  - 2 Press [OFF].
- Changing the Display Range of the Horizontal Axis
  - 1 Press [◀] [Display range] on the right of the histogram.
  - 2 Select the maximum measurement value, the minimum measurement value, and the class.
- Changing the Number of Data on the Vertical Axis
  - **1** Press [◀] [Number of data] on the right of the histogram.
  - 2 Select the maximum number of data to display.

#### Note

- Histogram data is held until the power supply is turned OFF.
- You can select whether to display all data in the histogram or only data for which the overall judgment is NG. Logging settings are applied to the histogram as well.

However, they are not applied to histograms displayed in Setup Mode.

$\overline{}$	Check recent	measurement	trends	(recent	results	logging)	n	401
	CHECK IECEIN	III Casal Cilicil	uciius	(100011L	resuits	ioggirig).	ν.	TU

# 6-4 Adjusting Judgement Parameters during Operation



This Sensor enables judgment parameters to be adjusted while measurements are being performed. Downtime can be eliminated with this feature because the production line does not have to be stopped while making adjustments.

### **Preparations**

This function is switched OFF as a Default to prevent it from inadvertently working during operation. Turn ON the function if you want to use it.

- ▶ 🖶 (Setup Mode) [Sensor settings] [Adjustment mode in Run]
  - 1 Press [ON].

## **Changing the Judgment Parameters in Run Mode**

This section describes how to change the judgment parameters without stopping measurement in Run Mode.

- ▶ Run Mode
  - 1 Select the inspection item or position compensation item for which you want to adjust the judgment parameters using the and Buttons.
  - 2 Press [◄] [Adjust judgement].



- 3 Press the parameters and change the values of the judgment conditions for them with the slider.
- 4 Press [OK].
  The judgement results with the changed judgment parameters will appear.



#### Important

The changed judgment parameters will not be reflected in the measurement result until [OK] is pressed.

# 6-5 Editing the Model Region / Measurement Region from Run Mode



With this Sensor, you can move from Run Mode to the model edit / measurement region edit display. This eliminates the need to move to Setup Mode, making it easier to edit the model region / measurement region. The procedure for editing the model region are explained below. The measurement region can be edited in the same way.

## **Preparations**

In the Default state, this function is turned OFF to prevent accidental operation in Run Mode. To use the function, first turn it ON.

- (Setup Mode) [Sensor settings] [Adjustment mode in Run]
  - 1 Press [ON].


## **Editing the Model Region from Run Mode**

The procedure for editing the model region from Run Mode is explained below.

- 1 Use the and Buttons to select the inspection item whose model region you want to adjust.
- **2** Press [◀] [Model region].



- 3 Change the model region.
- 4 Press [OK].

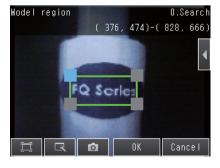

#### Important


The BUSY signal is ON during model region editing. Take care that this does not affect the line.

MEMO

# **Convenient Functions**


7-1 Changing the Scene to Change the Line Process	366
7-2 Calibration	369
7-3 Display Functions	380
7-4 Monitoring the Signal I/O Status	385
7-5 Connecting to More Than One Sensor	386
7-6 Logging Measurement Data and Image Data	392
7-7 Saving Sensor Settings	406
7-8 SD Card Operations	409
7-9 Convenient Functions for Operation	413
7-10 Convenient Functions for Setup	421
7-11 Setting the Retry Function	423
7-12 Functions Related to the System	428

# 7-1 Changing the Scene to Change the Line Process

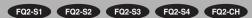

#### What Are Scenes?

With an FQ2 Sensor, the inspection items that can be processed at the same time are registered as scenes. A command input from an external device or a touch panel operation can be used to select a certain scene. If a scene is registered for each type of measurement object or inspection, the line process can be changed simply by changing the scene when the measurement object or inspection changes.

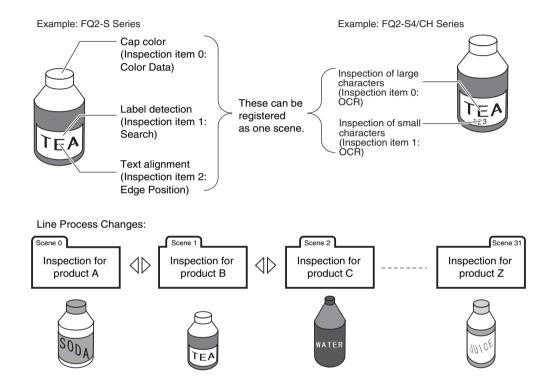

#### Maximum Number of Scenes

Item	FQ2-S2/S3/S4/CH Series	FQ2-S1 Series	
Number of scenes	32	8	

#### Settings Included with Scenes

The settings that are changed by switching scenes are the Camera image ([Image] Tab Page) and Inspection Items ([Inspect] Tab Page) output data settings. Settings related to external I/O specifications and the system settings for the Sensor are used in common for all scenes.

Refer to the following information for the data that is included in the scene data.

9-1 Menu Tables: p. 442

## **Creating New Scenes**


The Default scene number is 0. To create another scene, use the following procedure to switch the scene and then make the settings.

- (Setup Mode) [Select scene]
  - Press the number of the scene to change to and then press [Select].
  - The scene will change. Make the settings for the scene.



## **Changing Scene Names, Copying Scenes, and Deleting Scenes**

- · 🖶 (Setup Mode) [Select scene]
  - Press the number of the scene and then press [Rename], [Copy], or [Clear].
  - To change the name, enter a new scene name in 15 alphanumeric characters or less. To copy a scene, press the number of the scene to copy.

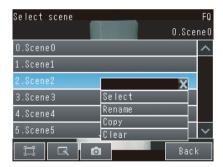

# **Switching Scenes from an External Device**

· Changing Scenes by Parallel Input Command				
	Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) Section 2 Controlling Operation and Outputting Data with a Parallel Connection			
• Chang	ing Scenes by PLC Link Command			
	Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) 3-2 Controlling Operation and Outputting Data with PLC Link Communications			
• Chang	ing Scenes by EtherNet/IP Command			
	Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) 3-1 Controlling Operation and Outputting Data with EtherNet/IP Communications			
• Chang	ing Scenes by TCP No-protocol Command or a UDP No-protocol Command			
	Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) 3-4 Control and Output in No-protocol (TCP) / No-protocol (UDP)			
• Chang	ing Scenes by FINS/TCP No-protocol Command			
Ш	Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) 3-5 Controlling Operation and Outputting Data with FINS/TCP No-protocol Commands			
• Chang	ing scenes by PROFINET command			
Ш	Vision Sensor FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338) 3-3 Outputting Data and Controlling Operation through PROFINET			

# **Setting the Startup Scene**

▶ 🖶 (Setup Mode) – [Sensor settings] – [Startup settings]

The following items can be set.

Item	Purpose	Setting range
Startup mode	Select whether the startup scene number is set manually.	ON OFF (The scene number when the settings were saved will be the startup scene number. The startup mode is set to OFF in the Default settings.)
Startup scene	Set the scene number to use at startup.	Standard models: 0 to 31 Single-function models: 0 to 8, Default: 0

# 7-2 Calibration




### Calibration


Calibration is used to convert Camera coordinates into actual coordinates.


You can set calibration to output the detected position in the actual coordinates.

You can convert pixels to actual dimensions and then output them.

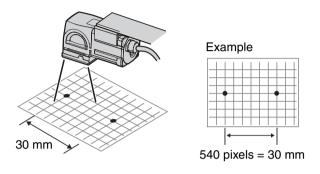

You can also compensate for offsets in the origin and coordinate system.

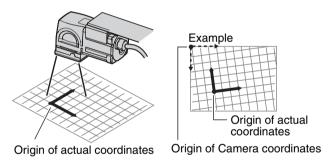

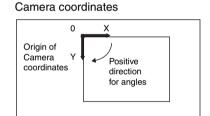

#### Calibration Conversion Methods

There are the following three conversion methods for calibration.

Point specification: You can enter the actual pixel coordinates of any position.

Reference: You can measure a registered model and then enter the actual coordinates of the model.

Parameter: You can enter the calibration values directly.

FQ2-S/CH User's Manual Calibration

#### Setting Calibration

Use the following procedure to set calibration.

#### 1 Set the conversion method to use for calibration.

Select the calibration method (point specification, reference, or parameter) and enter the actual coordinates or other values that are suitable for the selected method.

You can register up to 32 calibration patterns.

Calibration type	Description	
Specify point (point specification)	Specify from three to nine points and enter their actual coordinates.	p. 371
Reference sampling (reference)	Search for a registered model and enter the actual coordinates of the position where the model is detected.	p. 374
Parameter	Enter the numeric values of the parameters directly to calculate the calibration data.	p. 377

## 2 Select the calibration pattern to use.

Select the calibration pattern to use from the calibration settings.

Selecting the Calibration Pattern to Use: p. 379

Note

You can set the calibration setting for each scene.

You can use the same calibration setting for different scenes or use a different calibration setting for each scene.

Calibration FQ2-S/CH User's Manual

## **Setting the Calibration Pattern**

### **Point Specification**


Set the pixel coordinates of positions to set the calibration pattern.

When you enter the actual coordinates of the specified positions, the calibration parameters are automatically calculated.

You can register the coordinates of up to nine positions.

#### • Different Magnifications in X and Y Directions

Specify three positions.

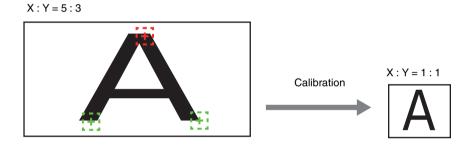


Note

Calibration cannot be performed using two places. Specify at least three places.

# Getup Mode) – [Calibration]

- 1 Select the data region to set from [Calibration data 0] to [Calibration data 31].
- 2 Press [Modify].
- 3 Press [◄] [Specify point] on the right of the display.

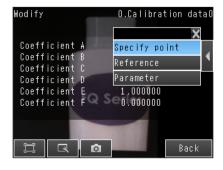

371

4 Press [No. 1] and then press [Modify].



5 Press the Camera coordinates to register on the display to select them.

A cross mark will be displayed on the selected position.



#### Note

372


- · You can enlarge the display.
  - Image Zoom: p. 380
- You can fine-tune the coordinates that are set.

Press [◀] – [Console] on the right of the display to display the console.

Press the Cross Key on the console to change the coordinates one pixel at a time.

- 6 Press [OK].
- 7 Enter the actual coordinates of the specified po-

Press  $[\blacktriangleleft]$  – [Actual coord.] on the right of the display.

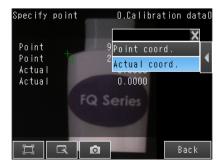

Calibration FQ2-S/CH User's Manual

- 8 Enter the actual X and Y coordinates, and then press [OK].
- 9 Repeat the above steps 4 to 8 to set the coordinates of the remaining positions.




When you have finished setting the coordinates for all of the positions, press [Generate parameters].



11 The calibration parameters will be displayed.

The items in the calibration parameters are listed in the following table.

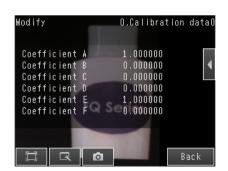

Item	Setting	Description
Α	Calculated value	These are the calibration conversion values.
В	Calculated value	These values are used to convert the Camera coordinates to the actual coordi-
С	Calculated value	nates. The following formulas are used to convert to actual coordinates.
D	Calculated value	(X,Y): Camera coordinates of measurement position, Unit: pixels
E	Calculated value	(X',Y'): Converted coordinates (actual coordinates)  X' = A × X + B × Y + C
F	Calculated value	$Y' = D \times X + E \times Y + F$


FQ2-S/CH User's Manual Calibration 373

#### Reference

With this method, the calibration settings are based on measurement results.

When you enter the actual coordinates of the position that results from searching for a registered model, the calibration parameters are calculated automatically.

(The position resulting from the search is found at the subpixel level.)

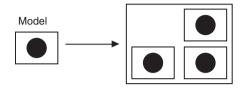


Measure three positions and enter the actual coordinates of them.



- 1 Select the data region to set from [Calibration data 0] to [Calibration data 31].
- 2 Press [Modify].

374

3 Press [◄] – [Reference] on the right of the display.

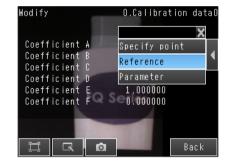


4 Press [No. 1] and then press [Modify].



Calibration FQ2-S/CH User's Manual

Move the rectangular frame to specify the model region.

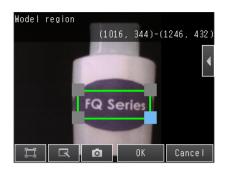

Note

- You can edit the model region.
  - The procedure is the same as that for the search function.
  - Editing the Model and Measurement Regions: p. 224
    - Press [OK].
    - Press a reference sample to get the Camera coordinates.
    - Enter the actual coordinates of the specified position.

Press [◀] - [Actual coord.] on the right of the display.




Calibration

9 Enter the actual X and Y coordinates and press [OK].




10 Repeat the above steps 4 to 8 to set the coordinates of the remaining positions.

11 When you have finished setting the coordinates for all of the positions, press [Generate parameters].

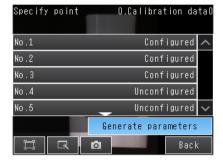

**12** The calibration parameters will be displayed. The items in the calibration parameters are the same as those for point specification.

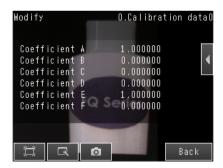

Calibration FQ2-S/CH User's Manual

### **Parameter**

With this method, you directly enter values to set calibration.


The calibration parameters will be automatically calculated when you enter the following three parameters.

Parameter	Setting	Description
Coordinate (coordinate system)	Righthand     Lefthand (Default)	Lefthand: The positive direction is clockwise when coordinates are specified.     Righthand: The positive direction is counterclockwise when coordinates are specified.  Lefthand Coordinate System  Y Positive direction  Positive direction  Y Positive direction
Origin	Upperleft (Default)     Lowerleft     Center	Select the location of the origin of the coordinate system.  Upper left  Center  Lower left
Magnification	0.0001 to 9.9999 Default: 1.0000	Set the actual dimension that corresponds to one pixel.

377 Calibration FQ2-S/CH User's Manual

# ► **=** (Setup Mode) – [Calibration]

- 1 Select the data region to set from [Calibration data 0] to [Calibration data 31].
- 2 Press [Modify].
- 3 Press [◄] [Parameter] on the right of the display.

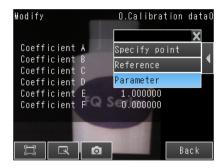

- 4 Set the following parameters: [Coordinate], [Origin], and [Magnification].
- 5 Press [OK].

Coordinate Lefthand

Origin Upperleft


Magnificat 1.0000

C OK Cancel

O.Calibration dataO

Parameter

**6** The calibration parameters will be displayed. The items in the calibration parameters are the same as those for point specification.

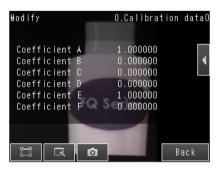

378

# **Selecting the Calibration Pattern to Use**


In the Camera setup, select the calibration pattern to use.

Note

You can select the calibration pattern for each scene.

#### ▶ [Image] – [Camera setup]

- 1 Press [◄] [Calibration] on the right of the display.
- 2 Select the calibration pattern from [Calibration data 0] to [Calibration data 31].

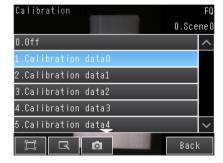


3 Press [Back].

Note

If the selected calibration data has not been set yet, a message will be displayed asking if you want to go to the calibration setting display.

FQ2-S/CH User's Manual Calibration 379

# 7-3 Display Functions

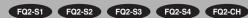


The procedures given in this section can be used to make the Sensor easier to use and the display easier to see.

## **Image Zoom**

The display can be zoomed in or out to make the image easier to see.

► 【 (Setup Mode or Run Mode)

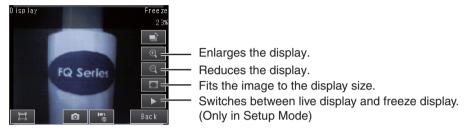

Press [Back] to end setting the display.

## Displaying a Live Image

You can display a live image to check the image that is input by the Sensor in realtime.

- - 1 Press \_\_\_\_.
  - 2 Press [Camera].
  - 3 Press [Live].
  - 4 Press the [Back] Button to return to the [Display] Display.



Note

380

This can also be set with the [Live] button ( ) in the display settings display.

Display Functions FQ2-S/CH User's Manual

# Displaying a Frozen Image

You can display a frozen image to stop image refreshing and display the last image that was input.

- - 1 Press \_\_\_\_.
  - 2 Press [Camera].
  - 3 Press [Freeze].
  - **4** Press the [Back] Button to return to the [Display] Display.



Note

This can also be set with the [Freeze] button ( ) in the display settings display.

# **Displaying a Saved Image**

You can display an image that was saved in internal memory in the Sensor or in an SD card. This can be done to configure inspection items or to check measurements using saved images.

- ► **(Setup Mode)** 
  - 1 Press \_\_\_\_.
  - You can select one of the following types of images to display.



- [Log]: Images that are logged in the Sensor's internal memory
- [Logging image file]: Images that are logged in the SD card
- [Camera image file]: Images that were logged with [12] (Logging Button)
  - Saving the Currently Displayed Camera Image: p. 416
- 3 Press the [Back] Button to return to the [Display] Display.

Note

Refer to the following information for the procedures to save images.

Logging Measurement Data: p. 392

Display Functions FQ2-S/CH User's Manual

## Updating the Display and Measurement Results Only for NG Measurement

#### Results

In Run Mode, you can specify updating the display of the image and measurement results only when the measurement result is NG.

- - 1 Press .
  - 2 Press [Last NG image].
  - 3 Press [Back].



Change the following setting to display the last NG image after restarting.

- ▶ **=** (Setup Mode or Run Mode) [TF Settings] [Startup display] [Display update mode]
  - 1 Press [Last NG image].



Note

If an operation to change the display is performed (e.g., if the display pattern is changed or the inspection item is changed) when displaying images for NG results is set, the display will change to refreshing the most recent measurement results and the most recent NG display will disappear.

To ensure that you can check the NG results, log the NG results.

Checking Recent Measurement Trends (Recent Results Logging): p. 401

383

## Automatically Changing to the Display for Any Sensor with an NG Result

You can change the settings to automatically display the Sensor for which the measurement result is NG if more than one Sensor is connected.

## **Hiding the Menu**

To view an image that is hidden behind the menu, or to set a shape to full screen display, you can display only the image in the touch finder or on your computer.

If you press the icon again, the menu will be displayed.

▶ [ (Setup Mode or Run Mode)

## **Turning ON/OFF the Touch Finder Backlight**

You can use Eco Mode to turn OFF the LCD backlight and reduce the power consumed by the Touch Finder whenever there is no operation on the Touch Finder for 30 seconds or longer. The LCD backlight will turn ON whenever any part of the touch panel is pressed.


▶ 🖶 (Setup Mode or Run Mode) – [TF settings] – [LCD Backlight] – [ECO mode]

# **Changing the Brightness of the Touch Finder**

The brightness of the LCD backlight can be changed to any of five levels.

Display Functions FQ2-S/CH User's Manual

# 7-4 Monitoring the Signal I/O Status

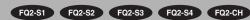


You can check if the I/O connections are working normally.

**▶** [In/Out] – [I/O monitor] – [I/O monitor]

- 1 The I/O status of the external devices will be displayed.
- 2 Press the [OK] Button to return to the [Communication check] Display.

Input Signals (TRIG and IN0 to IN5) Signals that are displayed in red are currently being input from the external devices to the Sensor.

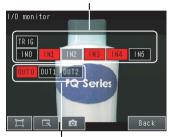

Output Signals (OUT0, OUT1, and OUT2) Signals that are displayed in

Signals that are displayed in red are currently being output from the Sensor to the external devices.

You can turn the signals ON and OFF by pressing them to test the outputs.

Note

When the Sensor Data Unit is connected, the I/O status of the following signals are displayed.

FQ-SDU1: TRIG, DSA, RST, IN0 to IN7,

RUN, OR, BUSY, ERR, STG, SHT, ACK, GATE, and D0 to D15

FQ-SDU2: TRIG, RST, IN0 to IN5,

RUN, OR, BUSY, ERR, STG, SHT, and ACK

# 7-5 Connecting to More Than One Sensor



Up to eight sensors can be connected to one Touch Finder or a computer used for PC Tool. This sections describes how to connect more than one Sensor to a Touch Finder or computer.

## **Setting the Sensors to Connect**

Use the following setting to connect more than one Sensor to a Touch Finder.

### **Automatically Connecting Sensors**

The Touch Finder can detect Sensors and automatically connect to them in the order that it detects them. The Touch Finder can detect up to 32 Sensors and it can connect to up to eight Sensors at the same time. Set this parameter to [OFF] to connect to only a specific Sensor.

- ▶ 🖶 (Setup Mode or Run Mode) [TF settings]
  - 1 Set [Auto sensor detection] to [ON].


Note

If there are more than eight Sensors available for connection, use [Sensor List] to select the Sensors to connect.


Selecting the Sensors to Connect: p. 388

You can set any of the Sensors for connection to the Touch Finder and register them.

- - 1 Press any line and then press [Add].

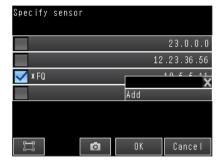

- 2 Enter the IP address.
- 3 Press the IP address that you entered, and then press [Comm. test] to confirm that connection is possible.

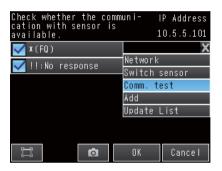

## **Selecting the Sensors to Connect**

You can select the Sensors to connect to the Touch Finder from a list.

▶ 🖶 (Run Mode) – [Sensor List]

1 Press the check boxes of the Sensors to connect to select them.



#### Note

- Sensors that are logged are indicated by "\*" in before the sensor name.
- The names of Sensors that are on the same network as the Touch Finder are given in parentheses.
- If a sensor's IP address is abnormal, "!" will appear in front of the sensor name.
- "!!:No response" will appear in the sensor name of a sensor that is not responding.
- "!!:Unknown device" will appear if the device is not an FQ2 sensor.
- · Automatically assigned IP addresses appear in gray.
- · Manually set IP addresses appear in white.
- The IP address of the touch finder appears at the upper right.

# Selecting the Display When More Than One Sensor Is Connected

## **Selecting the Display When More Than One Sensor Is Connected**

You can select the display to appear on the Touch Finder when more than one Sensor is connected.

▶ 🖶 (Setup Mode or Run Mode) – [TF Settings] – [Startup display] – [Startup screen type]

1 Select one of the following display types.

Display type	Description
Multi Sensor	Simultaneously displays the images from up to eight detected Sensors.  The display positions for Sensors that are not connected will remain blank.  The Sensors are connected in the order that they are detected. You can change the display positions of the Sensors.  Specifying Sensor Display Positions for Multiple Sensors ([Multi Sensor] or [Auto] Only): p. 390  If there are more than eight Sensors that can be connected, select the Sensors to connect from the list of Sensors  Selecting the Sensors to Connect: p. 388  Register the Sensor to connect to display a specific Sensor.  Registering the Sensors to Connect: p. 387
NG sensor	Of the connected Sensors, displays the image from the Sensor that most recently had an NG result.
Single sensor	Displays the image from only one Sensor.  Of the Sensors, the image from only the Sensor that is specified in [Sensor selection] is displayed.  If a Sensor is not specified in [Sensor selection], the image from the first Sensor that is detected will be displayed.  Specifying the Sensors to Connect Continuously: p. 417
Auto (Default)	Automatically adjusts the display according to the number of Sensors that are detected. If more than one Sensor is detected, the images from up to eight Sensors are displayed at the same time.  If eight Sensors are connected, the display is the same as that for [Multi sensor].

### Specifying Sensor Display Positions for Multiple Sensors ([Multi Sensor] or [Auto] Only)


If [Startup screen type] is set to [Multi sensor] or [Auto],\*1 you can specify the position of the image on a split display for each Sensor that is displayed.

\*1 This can only be specified when at least two Sensors have been connected.

▶ 🖶 (Run Mode) – [Sensor monitor] – [Multi sensor]

▶ 🖶 (Run Mode) – [Switch sensor]

- Press [◄] [Display position] on the right of the display.
- Press the display of the Sensor for which to specify the display position. A list of numbers for the display positions will be displayed.

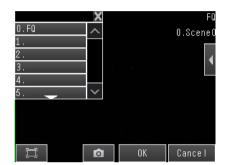

3 Select a number from the list of display positions. The display for the Sensor will be displayed in the position that corresponds to the specified number.

#### Note

The display positions that are set with [Display position] are cleared when the power supply to the Touch Finder is turned OFF.

However, if the Sensor status is changed (by changing from Setup Mode to Run Mode), the current settings for [Display position] are saved in the Touch Finder. Therefore, the next time the same Sensors are connected, they will be displayed in the same positions.

If a previously connected Sensor is not detected, either the display position will be blank, or if [Auto sensor detection] is set to [ON], the Touch Finder will display another Sensor that it has detected.


If a previously connected Sensor is then detected by the Touch Finder, it will display the image from it in the previous display position.

### Displaying information of individual sensors when multiple sensors are connected

The information of individual sensors can be displayed in the "Multi sensor" display and the "Switch sensor" display.

"OFF", "IP address", or "Sensor name" can be selected for the information that is displayed. The Default is "IP address".


- ▶ 🖶 (Run Mode) [Sensor monitor] [Multi sensor] or 🖶 (Run Mode) [Switch sensor]
  - 1 Press [◄] [Setting disp. info.] at the right of the display.

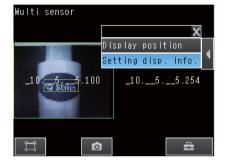

2 Press the connected sensor information you want to display.



# **Logging Measurement Data and Image Data**

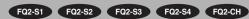

There are two ways to log data.

Recent results logging: Data is temporarily saved in memory inside the Sensor.

Large amounts of data are saved in SD cards or other external media. File logging:

The amounts and types of data that can be logged depend on the logging method that is used, as shown in the following table.


	Logged quantity			
Logged data	Recent results logging*1	File logging		
Statistical data	One value (The average value of the measurement results in the collected measurement data is continuously updated.)	Not possible.		
Measurement data	1,000 measurement values max.*2	Up to the capacity of the external memory		
Image data	20 images max.			

<sup>\*1:</sup> For recent results logging, the oldest data is overwritten when the maximum number of saved data items is exceeded.
\*2: This limit is for one data item.

If more than one data item is logged at the same time, logging can be performed as long as the total number of data items in all logged data is 32,000 or less.


## **Logging Procedure**

Use the following procedure to log data.

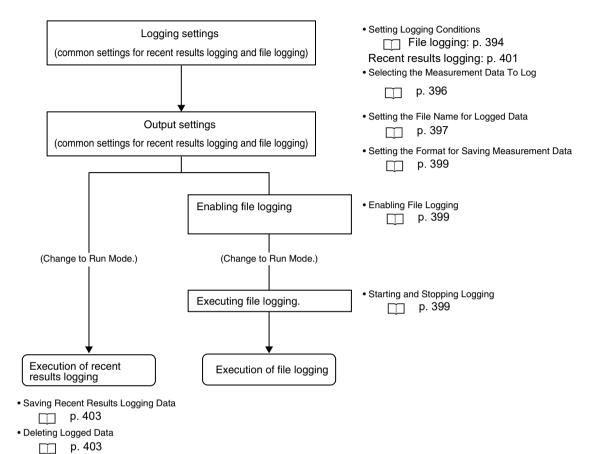

# **Logging All Data (File Logging)**

Large amounts of measurement and image data can be saved in files in external memory (SD cards or computer).

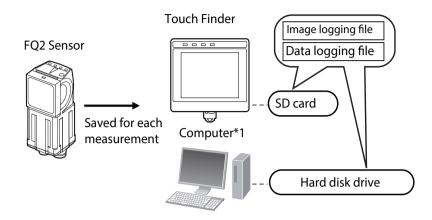

\*1: Image data and measurement data can be logged in the same way as for the Touch Finder by installing the PC Tool for FQ.

System Configuration: p. 32

Note

Only the data for the Sensor that is currently being displayed will be logged even if more than one Sensor is connected.

If multiple sensors are displayed, or if the most recent NG sensor is displayed, only the results of the sensor that was displayed before changing to the other sensor monitor screen will continue to be logged. Simultaneous logging of the results of multiple sensors is not possible.

#### **Setting Logging Conditions**

Use the following procedures to set the conditions to log data.

- ► [In/Out] [Log setting]
- Image Data
  - 1 Press [Image logging].
  - 2 Change the logging conditions, and then press [Back].



- Measurement Data
  - 1 Press [Data logging] [Condition].
  - 2 Change the logging conditions, and then press [Back].



Item	Description
Image logging	All: All images will be logged regardless of the measurement results.  Only NG: Only images for which the overall judgment was NG will be logged.
(image data)	None: No images will be logged (Default).
Data logging (measurement data)	All: All measurement data (Measured values and calculation results) will be logged regardless of the measurement results.  Only NG: Only measurement data (Measured values and calculation results) for which the overall judgment was NG will be logged.
(measurement data)	None: No measurement data (Measured values and calculation results) will be logged (Default).

Note

The logging parameter settings are the same for recent results logging.

#### Selecting the Measurement Data To Log

Use the following procedure to select the measurement data to log.

- ▶ [In/Out] [Log setting] [Measurement data] [Select data]
  - Press the measurement pre-processing, inspection item, or calculation that has the parameter to be logged.



2 Press the parameter for which to log data to select it.



Note

The procedure to select the measurement data to log is the same for recent results logging.

#### Storage Locations and File Names for Logged File Data

	Storage	location	
Data	TouchFinder	TouchFinder for PC	File name
Image logging	\sensor name\	\My Documents\ OMRON FQ\SDCard/	img_Scnxxx_YYYY_MM_DD-HH_MM_SS(n)_Mea- surementID_OverallJudgementResult.IFZ*3,*4,*5  Example: The following name would be used for mea- surements performed at 10:10:21 pm on May 10, 2012
(image data)	LOGIMAGE\number *1, *2	Sensorname\ LOGIMAGE\	when Scene1 is set, and it's measurement result is OK. Then Image logging (image data) is as below.
			img_Scn001_2012_05_10-
			22_10_21(0)_0000_OK.IFZ.IFZ
Data logging	\sensor_name\	\My Documents\ OMRONFQ\SDCard\	YYYY_MM_DD-HH_MM_SS.CSV*6
(measurement data)	LOGDATA\number *1, *2	Sensor name\ LOGDATA\	Example: The following name would be used for measurements performed at 10:10:21 pm on May 10 2012: 2012_05_10-22_10_21.CSV


- A five-digit number is assigned as a name to the image data storage folder in the order of folder creation as shown below. Up to 100 images are stored in each folder. 00000
  - 00001
- Files are stored in the following folder when the PC Tool is used.
  - \My Documents\OMRON FQ\SDCard
- "n" is a serial number that is added when images are logged at the same time.
- You can change the "img" at the beginning of the file name.
- You can add a character string to the beginning of the file name.
- Measurement ID is a value equal to the measurement count minus 1.
  - When launching the FQ2, the count starts from zero.

#### Note

- TouchFinder file save capacity is limited by capacity of SD card.
- TouchFinder for PC's file save capacity is limited by the specifications of the PC.
- Setting the File Name for Logged Data

You can set a character string to add to the beginning of the file name for logged data.

Image data: You can change the "img\_" at the beginning of the file name for logged data to another text string. Measurement data: You can add a character string to the beginning of the file name for logged data.

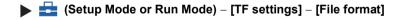

- 1 Select the item for which to add to or change the file name and then press [Logging image file] or [Logging data file].
- 2 Press [File name prefix].
- Enter the file name (up to 15 alphanumeric characters) and press [OK].
- Press [OK].

#### **File Format**

Image data: Image data is saved in a special format for OMRON Sensors.

(The file name extension is IFZ.)

Measurement data: Measurement data is saved in the following CSV format.

Data	Time	Measurement ID	Scene No.	Judge	ı	10.CR0	10.X0	•••	I0.CR1	 II.Diff	Zn.D00	
yyyy_mm_do	hh_mm_ss	100	0		0	85	152		79	578	58	
yyyy_mm_do	hh_mm_ss	150	0	-	-1	88	155		82	581	61	
<b>+</b>	1 <del>1</del>	1 1	<b>†</b>	1								
I			ı	- 1					$\overline{}$		$\neg \gamma$	
1)	2)	3)	4)	5)				6	5)		7)	

	Item	Format	Description
1)	Date <sup>*1</sup>	YYYY/MM/DD	This is the date that the measurement data was obtained from the Sensor.*1
2)	,		This is the time that the measurement data was obtained from the Sensor.
3)	Measurement ID		This is the measurement ID information.*2
4)	Scene No.		Scene number
5)	Judge		Overall judgment 0: OK, -1: NG, -2: NC (not measured)
6)	Inspection item region	I(inspection_item_number).(measure-ment_item)(detection_point)  Example 1: The correlation of the second detection point in a search for inspection item number 0 would be given as follows: I0.CR2  Example 2: The judgement result of OCR of inspection item No. 0 would be given as follows: I0.JG	The data selected for logging in the [Measurement data] under [Log setting] is output.  If multiple results are detected, only the maximum number of data items that is set in the [Measurement data] are output.
7)	Expression region	Zn.J**,Zn.D**  Example: The fourth registered expression would be: Z0.J04,Z0.D04 (FQ2-S1)	The judgement result and calculation result of each expression are output.  ** indicates 00 to 31.  Zn (expression variable):  Z0 for FQ2-S1/S2/S3, Z1 for FQ2-S4/CH.

The data and time are not recorded with the measurement data. Therefore, this is not the date that the measurement was executed. This is the date that the PC Tool or the Touch Finder obtained the data from the Sensor.

Measurement ID is a value equal to the measurement count minus 1.

When launching the FQ2, the count starts from zero. \*1:

<sup>\*2:</sup> 

#### **Changing the Format for Saving Measurement Data**

The output CSV file format can be changed according to the external device.

- ▶ 🖶 (Setup Mode or Run Mode) [TF settings] [File format] [Logging data file]
  - 1 Press [Output format].
  - 2 Change the required items in the CSV format.
  - 3 Press [Back].

Item	Symbol
Field separator	None, comma (Default), tabs, space, colon, semicolon, CR, or CR+LF
Decimal symbol	None, point (Default), or comma
Record separator	None, comma, tabs, space, colon, semicolon, CR, or CR+LF (Default)

#### **Enabling File Logging**

You must enable file logging before you can execute it.

- - 1 Press [ON].

#### **Starting and Stopping Logging**

After logging is started (i.e., set to ON), the specified image data and measurement data will be saved in the SD card or computer hard disk each time measurements are performed.

- Run Mode)
  - 1 Press [Logging].
  - 2 Press [Image logging] or [Data logging].
  - **3** Press [ON] to start logging. Press [OFF] to stop logging.
  - 4 Press [Back].

Note

To save logged data, you must first select either [All] (all data is saved) or [Only NG] (only NG data is saved) in the logging parameters.


Setting Logging Conditions: p. 395

# **Ensuring That All Measurement Results Are Logged in External Memory**

To ensure that all measurement results are actually saved, change the settings so that the BUSY signal remains ON until logging has been completed. During operation, do not input the next trigger until the BUSY signal turns OFF.

#### ▶ [In/Out] – [I/O setting] – [I/O terminals] – [Output] Tab Page – [BUSY output]

Change the BUSY output parameter to [Data logging].

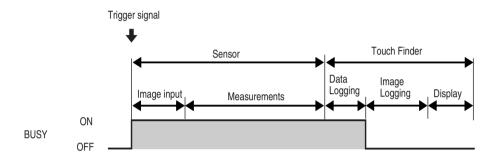

#### Note

- File logging cannot be used when performing continuous measurements.
- If you use the PC Tool, the logging time may vary by up to 100 ms depending on the application conditions of your computer.
- If logging data to an SD card, the write time varies depending on the amount of the available space on the SD card.


Reference value: For SDHC class 4, the time required to write image data is approx. 200 to 800 ms.

# **Checking Recent Measurement Trends (Recent Results Logging)**

The most recent measurement results can be logged inside the Sensor.

Even if data is not logged in external memory, such as an SD card, trends in measurement results can be easily checked on the Touch Finder.

However, if the power supply is turned OFF, this data will be lost.

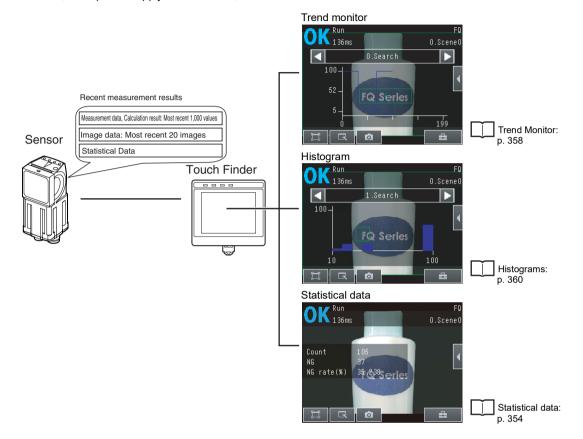

#### **Setting Logging Conditions**

Use the following procedure to set the conditions for the measurement data, image data, and statistical data that will be logged.

Some of these operations and settings are the same as for file logging.

Setting Logging Conditions: p. 395

Item	Description
Statistical data	Statistical data, such as the number of measurements, the number of NG overall judgments, and the NG rate, since the power supply was turned ON will be logged.
	ON : Statistical data will be displayed (Default). OFF: Statistical data will not be displayed.
Logging image (image data)	These are the same as for file logging.
Logging data (measurement data)	These are the same as for the logging.

Note

The logging parameters for image data and measurement data are the same as those for file logging.

#### **Selecting the Measurement Data To Log**

With recent results logging, you can select the measurement pre-processing, measurement data, or calculation items to be logged. These settings also apply to file logging.

Selecting the Measurement Data To Log: p. 396

#### **Starting Logging**

Logging will be started as soon as the conditions for logging have been set.

If the settings are saved, logging will start automatically the next time the power supply is turned ON.

#### Checking the Results of Logging

The results of logging can be checked using the trend monitors, histograms, or statistical data.

6-2 Configuring the Run Mode Display: p. 354

Use the following menu command to check the image data.

· 闻 (Setup Mode) – 📑

#### **Deleting Logged Data**

The logged data will be deleted when the power supply to the Sensor is turned OFF. The logged data can also be deleted without turning OFF the power supply.

- Setup Mode
- ▶ [In/Out] [Log setting]
  - 1 Press [Delete Log].

#### Saving Logged Recent Results Data in a File


Although the logged recent results data will be deleted when the power supply is turned OFF, it can be saved in a file in external memory.

The most recent 1,000 measurement values and the most recent 20 images at the time save is executed will be saved in the file. (When the logging data number is one. When more than one, logging can be performed until the total number of values of all logging data is 32,000.)

- (Setup Mode) [Save to file] [Logging] Tab Page
  - Press the data to save.



#### The following display will appear if [Logging image] is pressed.

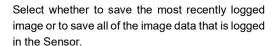



The file storage locations and file format are given in the following table.

Item	Storage location	File name
Statistical data		YYYY_MM_DD-HH_MM_SS_record.CSV*2
Logging data (measurement data)	\sensor_name\LOGDATA <sup>*1</sup>	Example: The following name would be used for measurements performed at 10:10:21 pm on May 10, 2012: 2012_05_10-22_10_21_record.CSV
		img_Scn0**_YYYY_MM_DD-HH_MM_SS(n)_ MeasurementID_OverallJudgementResult.IFZ*3*4*5
Logging image (image data)	\sensor_name\LOGIMAGE*1	Example: The following name would be used for measurements performed at 10:10:21 pm on May 10, 2012: img_2012_05_10-22_10_21(0)_0000_OK.IFZ

<sup>\*1:</sup> Files are stored in the following folder when the PC Tool is used. \My Documents\OMRON FQ\SDCard

#### File format

Statistical data: The data is saved in the following CSV format.

Number of measurements, number of OKs, number of NGs, OK rate, NG rate (delimiter)

Image data is saved in a special format for OMRON Sensors. Image data

(The file name extension is IFZ.)

Measurement data is saved in CSV format. Measurement data:

Index	Measurement	Scene No.	Judge	I0.CR1	10.X0		I1.JG		Zn.J00	Zn.D00	
1	0	0	0	85	152		0		0	58	
2	1	0	-1	88	155		0		0	61	
3	2	0	-1	88	155		0		0	61	
	·			1	1	<u> </u>	'	_	'	<u> </u>	,
1)	2)	3)	4)			5)	1			6)	

<sup>\*2:</sup> You can add a character string to the beginning of the file name.
\*3: "n" is a serial number that is added when images are logged at the same time.

<sup>\*4:</sup> You can change the "img" at the beginning of the file name.

<sup>\*5:</sup> You can add a character string to the beginning of the file name,

<sup>\*6:</sup> Measurement ID is a value equal to the measurement count minus 1. When launching the FQ2, the count starts from zero.

	Item	Format	Content				
1)	Index	-	Index				
2)	Measurement ID	-	Measurement ID Information*1				
3)	Scene No.	-	Scene Number				
4) Judge		-	Overall judgment result 0: OK -1: NG -2: NC (means unmeasured)				
5)	Inspection item region	Inspection item No., Measurement item, Inspection point  Example 1 When Search is executed with inspection item No,0, the second correlation value is I0, CR1.  Example 2 Judgment result in OCR of inspection item No,1 is I1, JG	Outputs a data selected as a logging item in [Measurement data] of [Logging setting].  When multiple results in Search are detected, outputs the maximum data that set in [Measurement data].				
6)	Arithmetic expression region	Example Arithmetic expression judgment registered the fist: Z0.J00,Z0.D00?FQ2-S1?	Zn.J**, Zn.D**  Example The fourth registered arithmetic expression is Z0.J04.Z0.D04 when you use FQ2-S1.				

<sup>\*1</sup> Measurement ID is calculated -1 from measurement counts. This ID is counted from zero at launch of FQ2.

#### Note

- The saved recent measurement data cannot be loaded back into the Sensor and displayed on a trend monitor or histogram.
- The data and time are not recorded with the measurement data.

  The file name is created from the time when the file is saved. It does not indicate when the measurement was made.

#### Important

The recent log data will be cleared if the scene is changed.

#### **Changing the Format for Saving Measurement Data**


The output CSV file format can be changed according to the external device.

Changing the Format for Saving Measurement Data: p. 399

#### **Displaying Image Data**

- Images Saved in Internal Sensor Memory
- Image Files in an SD Card
- ▶ 🔃 (Setup Mode) 📑 [Logging image file] or [Camera image file]
  - Displaying a Saved Image: p. 382

# 7-7 Saving Sensor Settings

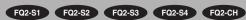


The Sensor settings are saved in flash memory inside the Sensor.

This section describes how to back up the settings in and restore them from an SD card or other external memory.

# **Backing Up Settings in External Memory**

- ▶ 🖶 (Setup Mode) [Save to file] [Setting] Tab Page
  - 1 Press the data to save.
  - 2 Enter the file name in 15 characters or less.

After entering the file name, press [OK]. The data will be saved and the display will return to [Save to file].

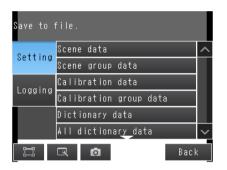

# **Applicable Data**

Data	Storage location*1	Description
Scene data (The file name extension is SCN.)	\sensor_name\SCN	The following data are backed up for each scene.  Settings for all inspection items Order of inspection items
Scene group data* <sup>2</sup> (The file name extension is SGP.)	\sensor_name\SGP	All scene data are backed up.
Calibration data (file name extension: CLB)	\sensor_name\CLB	The calibration data are backed up.
Calibration group data (file name extension: CGP)	\sensor_name\CGP	All calibration data are backed up.
Dictionary data* <sup>2</sup> (The file name extension is DIC.)	\sensor_name\DIC	Dictionary data are backed up.
All dictionary data (The file name extension is DGP.)	\sensor_name\DGP	All dictionary data are backed up.
Code data*2 (file name extension: .csv)	\sensor_name\CODE	Code data will be backed up.
Sensor system data (The file name extension is SYD.)	\sensor_name\SYD	All system data in the Sensor are backed up. The system data are the same for all scenes.
All Sensor data (The file name extension is BKD.)	\sensor_name\BKD	All settings in the Sensor (scene group data, Sensor system data, calibration group data, and all dictionary data <sup>*2</sup> ) are backed up.
Touch Finder data (The file name extension is MSD.)	WSD	All settings in the Touch Finder are backed up.


For the PC Tool, data will be saved in the following folder: \\..\My Documents\OMRON FQ\SDCard\ Only supported on the FQ2-S4/CH Series.

# **Restoring Data to the Sensor from External Memory**

- ▶ = (Setup Mode) [Load from file]
  - 1 Press the data to be restored.

2 The selected data will be read from external memory and displayed.

Press the file to load.

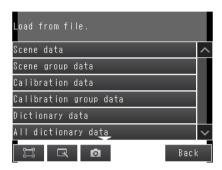



# **SD Card Operations**



With an FQ2 Sensor, the following folders are automatically created in the SD card according to the data that is saved. The specified data is saved in files in these folders.

Storage folder*1	Data
Storage loider	Data
\sensor_name\SCN	Scene data (The file name extension is SCN.)
\sensor_name\SGP	Scene group data (The file name extension is SGP.)
\sensor_name\DIC*2	Dictionary data (The file name extension is DIC.)
\sensor_name\DGP*2	All dictionary data (The file name extension is DGP.)
\sensor_name\CODE <sup>*2</sup>	All dictionary data (The file name extension is CSV.)
\sensor_name\SYD	Sensor system data (The file name extension is SYD.)
\sensor_name\BKD	All sensor data (The file name extension is BKD.)
\sensor_name\CLB	Calibration data (The file name extension is CLB.)
\sensor_name\CGP	Calibration data (The file name extension is CGP.)
\MSD	Touch Finder data (The file name extension is MSD.)
\sensor_name\LOGIMAGE	Image data (The file name extension is IFZ.)
\sensor_name\LOGDATA	Statistical data and measurement data (The file name extension is CSV.)
\CAPTURE	Captured images (The file name extension is BMP.) Camera image data (The file name extension is IFZ.)

 $<sup>^{\</sup>star}1$  : For the PC Tool, data will be saved in the following folder: \\..\My Documents\OMRON FQ\SDCard\  $^{\star}2$  : Only supported on the FQ2-S4/CH Series.

#### Note

- The PC Tool does not support SD card operations.
- To display an image file saved in an SD card, refer to the following.
- Use SD card formatted as FAT or FAT32. Touch Finder will not recognize other formats.




Display Functions - Displaying a Saved Image: p. 382


# **Inserting and Removing SD Cards**

# Inserting an SD Card in the Touch Finder

Open the cover to the SD card slot on the top of the Touch Finder.

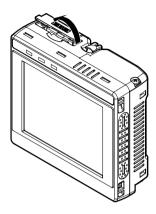

2 Insert the SD card with the back of the SD card facing the front of the Touch Finder and press it in until it clicks into place.

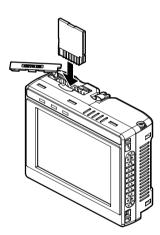

3 Close the cover to the SD card slot.

SD Card Operations FQ2-S/CH User's Manual

- 1 Open the cover to the SD card slot on the top of the Touch Finder.
- 2 Press in on the SD card until you hear a click.
- 3 Pull out the SD card.
- 4 Close the cover to the SD card slot.
- Never remove the SD card while data is being saved or read. The data on the SD card may be corrupted.

#### Important

Do not restart or turn OFF the power supply to the Sensor or Touch Finder while a message is being displayed saying that data is being saved to or read from the SD card. The settings or system data may be corrupted.

# Checking the Available Space on the SD Card

Before saving data to the SD card, use the following display to make sure that there is sufficient space available on the SD card.

- - 1 The following information in the SD card inserted in the Touch Finder can be checked.



# Formatting an SD Card

- ▶ 🖶 (Setup Mode or Run Mode) [TF settings] [SD card] [Format]
  - 1 Press [Yes] to start formatting.



SD Card Operations FQ2-S/CH User's Manual

# Convenient Functions

# 7-9 Convenient Functions for Operation



This section describes the functions that can be used during Sensor operation.

# **Setting a Password to Prevent Unwanted Changes**

A password can be set to prevent unwanted changes to settings.

If a password is set, you cannot change from Run Mode to Setup Mode without entering the password.

#### Setting a Password

- - Press [Password on/off] and press [ON].
  - 2 Press [Enter password].
  - Enter a password containing up to 15 characters and press [OK].

#### Clearing the Password

🕨 垚 (Setup Mode) – [Sensor settings] – [Password settings]

Press [Password on/off] and press [OFF].

#### Entering the password when switching from [Run] Mode to [Setup] Mode.

- 1 If a password is set and you try to change from Run Mode to Setup Mode, the following password entry display will appear.
- 2 Setup Mode) [Sensor settings]
- 3 Press the text box. A keyboard display will appear. Enter the password and press [OK]. If the password is correct, the Setup Mode will be displayed.



#### Important

- This password restricts only the operation to switch from Run Mode to Setup Mode. It does not restrict other operations.
- If you forget the password, contact your OMRON representative for the procedure to clear the password.
- The password is deleted when the Sensor is initialized.

# **Capturing the Displayed Image**

The current display on the Touch Finder or PC Tool can be captured and used in text files and other files on the computer.

The captured images are saved in external memory\*1 as bit maps.

\*1: Images captured on the Touch Finder are saved in the SD card. Images captured with the PC Tool are saved in the computer's hard disk

# ▶ **(Setup Mode or Run Mode)**

The image that is being displayed when the button is pressed is saved in external memory.

#### • Storage Location and File Names

Storage location	File name
\CAPTURE	YYYY_MM_DD-HH_MM_SS.BMP  Example: The following name would be used for an image that was captured at 10:10:21.350 pm on March 10, 2010. 2010_03_10-22_10_21_350.BMP

#### Important

Make sure an SD card is inserted in the Touch Finder before capturing display images.

Note

For the PC Tool, data will be saved in the following folder:\\..\My Documents\OMRON FQ\SDCard\

# **Saving the Currently Displayed Camera Image**

You can save the Camera image that is displayed on the Touch Finder or computer.

▶ 🔃 (Setup Mode) – 📑 – 🖳 (Log Image Button)

The Camera image that is being displayed when the Button is pressed is saved in external memory.

#### Storage Location and File Names

Storage location	File name
\CAPTURE	YYYY_MM_DD-HH_MM_SS.IFZ
	Example: The following name would be used for an image that was captured at 10:10:21.350 pm on March 10, 2010: 2010_03_10-22_10_21_350.IFZ

#### Important

Make sure an SD card is inserted in the Touch Finder before capturing display images.

Note

For the PC Tool, data will be saved in the following folder: \...\My Documents\OMRON FQ\SDCard\

# **Setting the Startup Run Display Pattern**

You can select the startup run display pattern. This only appears when [Start screen type] under [Startup display] is set to [Single sensor].

- ▶ 📥 (Setup Mode or Run Mode) [TF settings] [Startup display] [Display pattern]
  - 1 Select from the following: [Graphics], [Graphics + Details], [Statistical data], [All results/region], [Trend monitor], or [Histogram].

Note

The Default display setting for startup can be changed.

Selecting the Display When More Than One Sensor Is Connected: p. 389

# **Specifying the Sensors to Connect Continuously**

You can specify one Sensor to connect to the Touch Finder.

The Touch Finder will connect to that Sensor each time the Touch Finder is started.

- - 1 Set [Specify sensor] to [ON].
  - 2 Set [Sensor selection] to the IP address of the Sensor.

Note

If the Touch Finder cannot connect to the specified Sensor when the Touch Finder is started, it will continue to retry until a connection is made.


If connection to the specified Sensor is not possible, press the [Sensor List] Button to cancel connecting to the specified Sensor.

# Monitoring and Setting Up a Sensor from Two Touch Finders

You can monitor and set up the same Sensor from two Touch Finders.

You can simultaneously monitor the Sensor from both Touch Finders.

You can set up the Sensor only from one of the two Touch Finders at any one time.

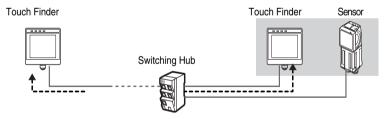

You can monitor the same Sensor at the same time from a locally installed Touch Finder and a remotely installed Touch Finder.

# **Operations during Simultaneous Connection of Two Touch Finders**

The following restrictions apply to operations when two Touch Finders are simultaneously connected to the same Sensor.

Operation	Sensor status	Changes
Editing model regions in Run Mode	Monitor	Operation is possible with only one of the Touch Finders.  Operation will be possible from the Touch Finder where [Model region] was pressed first.
Run Mode operations	Setup	When either of the Touch Finders changes to Setup Mode, operation will no longer be possible from the other Touch Finder.  When that occurs, a message will be displayed on the other Touch Finder saying that another Touch Finder is currently setting up the Sensor.  A (Switch sensor) icon will be displayed on the lower right of the display.  When Run Mode operations are possible again, Run Mode will be displayed in the initial status.
Logging	Monitoring or setup	Logging (including file logging and recent results logging) can be performed by only one of the Touch Finders.  If logging is enabled on both of the Touch Finders, logging will be performed only on the Touch Finder that was connected to the Sensor first.  An error will be displayed on the other Touch Finder when it connects to the Sensor and logging will automatically be disabled.  If logging is disabled on both of the Touch Finders when they are connected, logging will be performed only on the Touch Finder for which logging is enabled first.  You can use the following parameter to enable and disable logging.  Enabling File Logging: p. 399
Trend monitors and histograms	Monitoring or setup	Trend monitors and histograms can be displayed only if logging is enabled. Therefore, they can be displayed only on the Touch Finder for which logging is enabled as described above.


# Checking the cause of a sensor NG from the multisensor display

It is easy to check the cause of a sensor NG when multiple sensors are connected.

You can immediately move between the detailed result display of a sensor, the multi-sensor display, and the result list display.



1 Press the [Multi sensor button] in [Display setting in Run mode].

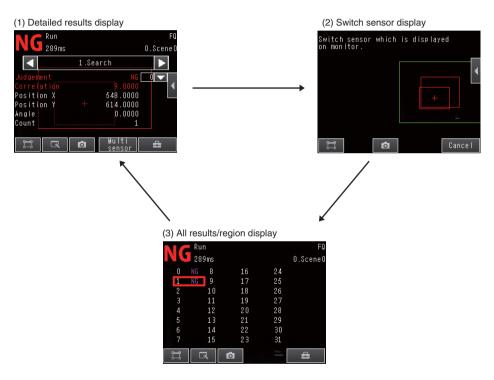

- (1) Press [Multi sensor] in the detailed results display to move to the Switch sensor display.
- (2) In the switch sensor display, press the sensor whose results you want to check. The result list display of that sensor appears.
- (3) In the result list display, press the inspection item for which the NG occurred. The detailed results display of the selected inspection item appears.

# Do not display the Sensor List to prevent erroneous operation

When multiple Sensors and Touch Finders are on the same network, if one of the sensors cannot connect for some reason, this prevents field workers from unintentionally connecting to a different sensor.

▶ 🖶 (Setup Mode or Run Mode) – [TF settings] – [Startup display]

1 Set [Sensor List] to [Do not display].

# 7-10 Convenient Functions for Setup



This section describes the functions that can be used when setting inspection items.

# **Making Settings with Stored Images**

With an FQ2 Sensor, judgment parameters can be set by using the following images.

- · Images saved in internal Sensor memory.
- Image files in an SD card

Note
------

You can also use images that were captured on the display.

Capturing the Displayed Image: p. 415

#### **Saving Image Data**

• Temporarily Saving Images in the Sensor

The measured images can be temporarily saved inside the Sensor.

These images are held until the Sensor power supply is turned OFF.

- ▶ [In/Out] [Log setting] [Image logging]
  - Setting Logging Parameters for Image Data: p. 401

#### · Saving Images in the Sensor to an SD Card

The images that are temporarily saved inside the Sensor can be saved to an SD card.

- ▶ 🖶 (Setup Mode) [Save to file] [Logging] Tab Page
  - 1 Press [Logging image].
  - 2 Select whether to save the most recently logged image or to save all of the data that is logged in the Sensor.

Storage location	File name
\sensor name\LOGIMAGE	Img_Scn0**_YYYY_MM_DD-HH_MM_SS(n)_MeasurementID_OverallJudge-mentResult.IFZ*
	Example: The following name would be used for files saved at 10:10:21 pm on March 10, 2010.  Img_Scn000_2010_03_10-22_10_21(0)_0000_OK.IFZ

<sup>\*</sup> Measurement ID is a value equal to the measurement count minus 1. When launching the FQ2, the count starts from zero.

#### • Saving Images in an SD Card

The image data can be saved in the SD card each time measurements are performed.

- ▶ 🖶 (Run Mode) [Logging]
  - Logging All Data (File Logging): p. 394

You can also save the data in Setup Mode by using (Display Arrangement) - (Log Image Button).

#### **Displaying Image Data**

- Images Saved in Internal Sensor Memory
- ► 【 (Setup Mode) Log]
- Image Files in a SD Card
- Setup Mode) Logging image file] or [Camera image file]
  - Display Functions Displaying a Saved Image: p. 382

# 7-11 Setting the Retry Function



# **Retry Function**

This function repeats the Scan (with a single measurement trigger) until the overall judgment is OK. (\*1) The retry function has four modes: normal retry, exposure retry (\*2), scene retry, and trigger retry.

- \*1: The retry function does not work for the judgment result of the calculation. The retry function does not work with PC Tool.
- \*2: The brightness (exposure) depends on the shutter speed and gain. When HDR is ON, the shutter speed and gain are automatically adjusted for the optimum exposure. When HDR is OFF, the gain is fixed.
- ▶ 🖶 (Setup Mode) [Sensor settings] [Retry details] [Retry mode]
  - 1 Select the retry mode.



Retry mode	Description
Normal retry	This function repeats the Scan at the specified interval and count until the overall judgment is OK.  Sets the repeat count and imaging interval.  These settings are set from Retry settings of each Scenes.
Exposure retry	Scanning is repeated the specified number of times while varying the exposure (when HDR is OFF, the shutter speed is varied) until the entire code is successfully scanned. The brightness step (shutter speed step when HDR is OFF), increment count, and decrement count are specified. The settings are configured in the retry settings of each scene.
Scene retry	This function repeats the scan at the specified count while switching the Scenes until the overall judgment is OK.  [Auto] or [Fixed] is selected for the switch order.  [Auto]: Switches through the scenes in the order of highest frequency of use.  [Fixed]: Switches scenes in the set order.
Trigger retry	This function repeats the reading procedure until the overall judgment is OK when IN5 signal of parallel is ON.  To use trigger retry, the I/O input mode must be set to expanded mode.  FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)
None (Default)	Retry is not performed.

#### Combining retry modes

Normal retry, exposure (shutter speed) retry, scene retry, and trigger retry cannot be used at the same time. When scene retry is ON, the normal retry and exposure retry modes in the same scene are OFF. When normal retry, exposure retry, or scene retry is ON, trigger retry is OFF.

#### **Setting normal retry**

- Set the retry mode to [Normal retry] in "Retry details".
- ▶ = (Setup Mode) [Sensor settings] [Retry details]
  - 1 Press [Normal retry] for the retry mode.
  - 2 Press OK.
- Specify the maximum count and interval.
- ▶ [Inspect] [Retry details]
  - 1 Set the maximum count and interval.



Parameter	Settings	Description
Max count	0 to 20, (Default: 4)	Sets the maximum number of retries.
Interval	32 to 999 (Default: 100)	Sets the capture interval (msec).

- Set the retry mode to [Exposure retry] in "Retry details".
- ▶ 📥 (Setup Mode) [Sensor settings] [Retry details]
  - 1 Press [Exposure retry] for the retry mode.
- Set the brightness (shutter speed) step, increment count, and decrement count.
- ► [Inspect] [Retry details]
  - 1 Set the brightness (shutter speed) step, increment count, and decrement count.



Parameter	Settings	Description
Brightness (shutter speed) step	Brightness: 1 to 20 (Default: 5) Shutter speed: 0.01 to 1.00 (Default: 0.30)	Sets the brightness or shutter speed step (msec).
Increment count	0 to 10 (Default: 2)	Sets the brightness (shutter speed) increment count.
Decrement count	0 to 10 (Default: 2)	Sets the brightness (shutter speed) decrement count.

# Setting scene retry


- Set the retry mode to [Scene retry] in "Retry details".
- ▶ 🖶 (Setup Mode) [Sensor settings] [Retry details]
  - 1 Press [Scene retry] for the retry mode.
  - 2 Set the switch order.
  - 3 Set the scenes that are switched through.



Parameter	Settings	Description
Switch Order	Auto (Default) Fixed	Sets the scene switching order.  Auto: Switches through the scenes in the order of highest frequency of use.  Fixed: Switches through the scenes in the order that the scenes were registered for scene switching.
Retry scene	1st to 32nd	Register the scenes for scene switching. Register the scenes to switch in order from "1st" If there are any scenes for scene switching that are not registered, the remaining scenes are ignored.

The scanning procedure when the sort order is set to auto is shown below.

1st : The last Scene which was scanned successfully.
2nd and following: Scene order by most successful scans

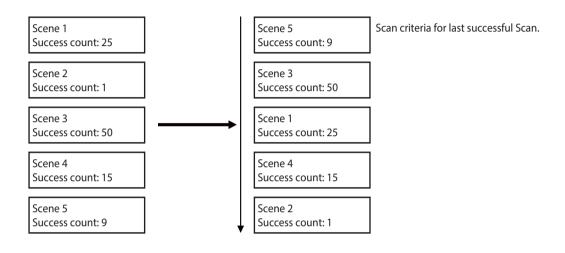

- In the Default state, the order is the order of the scene numbers.
- If the power is interrupted or the sensor is restarted, the success counts are initialized when adjust mode is entered.

Note

For the timing chart, refer to the following manual:

FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)

# 7-12 Functions Related to the System



This section describes system settings.

#### Turning OFF the Integrated Sensor Lighting (Only Sensors with Built-in Lighting)

The internal light can be turned OFF to use external illumination.

▶ [Image] – [Camera setup] – [◄] – [Lighting control] Press [OFF].

#### **Switching the Display Language**

Any of the following languages can be selected for display on the Touch Panel or PC Tool.

Japanese, English, German, French, Italian, Spanish, Traditional Chinese, Simplified Chinese, or Korean

▶ 🖶 (Setup Mode or Run Mode) – [TF settings] – [Language]

Press the language to be displayed.

# Setting the Time on the TouchFinder

You can set the date and time.

▶ 🖶 (Setup Mode or Run Mode) – [TF settings] – [Time settings]

# **Setting the Day and Time Information**

Sensor does not have day and time information.

When you want to use Calender Matching in OCR, day and time setting is required.

Set or Acquire the Date and Time: p. 167

# Initializing the Sensor and Touch Finder

- Initializing the Sensor
- ▶ 🖶 (Setup Mode) [Sensor settings] [Initialize]
- Initializing the Touch Finder
- ▶ = (Setup Mode or Run Mode) [TF settings] [Initialize]

# **Restarting the Sensor and Touch Finder**

- Restarting the Sensor
- ▶ 🖶 (Setup Mode) [Sensor settings] [Restart]
- Restarting the Touch Finder

#### **Checking Versions**

- Checking the Sensor Version
- (Setup Mode) [Sensor settings] [Information]
- Checking the Touch Finder Version
- ▶ 🖶 (Setup Mode or Run Mode) [TF settings] [Information]

# **Checking the Touch Finder Battery Level**

- Checking the Sensor Version
- ▶ 🖶 (Setup Mode or Run Mode) [TF settings] [Battery level]

#### Important

- The battery level is displayed only for a Touch Finder with a DC/AC/battery power supply (FQ2-D31).
- The settings will be lost if the battery runs out while you are making the settings. If the battery level is low, save the settings and charge the battery immediately.

# **Changing the Sensor Name**

An alphanumeric name can be assigned to a Sensor to make it easier to recognize. This is convenient when more than one Sensor is connected.

▶ = (Setup Mode) – [Sensor settings] – [Information] – [ ◀ ] – [Rename]

# **Checking Available Memory in the Sensor**

If a setting cannot be made, check the amount of memory that is available in the Sensor.

► = (Setup Mode) – [Sensor settings] – [Information] – [ ◀ ] – [Memory state]

Scene

Displays the available memory of the folder for saving scene data.

#### Application

This is a memory used for all applications.

This is a memory area that is used temporarily by applications. By confirming available memory, this provides a rough standard for confirming status while operating. The user has no access to it.

# **Correcting the Touch Screen Positions of the Touch Finder**

Use this function to correct the touch screen positions if they are offset from the opposite position.

(Setup Mode) – [TF settings] – [Touch screen calib]

# Setting the Resolution of Measurement Objects Displayed on the PC Tool

Use this function to set the resolution of measurement object that are displayed on the Touch Finder on the computer.

(Run Mode) – [TF settings] – [Resolution]

# **Changing the Sensor's BUSY Indicator**

You can change the BUSY indicator to a RUN indicator.

[In/Out] – [In/Out setting] – [In/Out setting] – [Output] – [BUSY LERD]

### Setting the Inspection Timeout Time (FQ2-S4 series or FQ2-CH series only)

The time after which inspection times out can be set (msec).

# **Troubleshooting**

8-1 Error Histories	. 434
8-2 Error Messages	. 437
8-3 Basic Troubleshooting	. 438

## 8-1 Error Histories



Error histories are stored with the PC Tool and in the Sensor and in the Touch Finder. Up to 100 errors will be stored in the error history in the Sensor or Touch Finder.

### **Errors Stored in the Error History**

434

Error code	Cause	Points to check	Measures to perform
TRIG input error FERR (Error code (hex): 01040302)	A TRIG signal was input when the BUSY signal for Sensor measurement was ON.	Check the program in the PLC or other host to see if an inter- lock or similar measure has been implemented.	Program interlocks to control the TRIG so that they do not turn ON while the BUSY signal is ON.
		<ul> <li>If a relay or other device with contacts is being used as the input device, see if chattering has occurred.</li> </ul>	Switch from a device with contacts (e.g., relay) to a device without contacts (e.g., SSR or PLC transistor output).
IN input error FERR (Error code (hex): 11020900)	A parallel command was input while the BUSY signal was ON.	Is an interlock or other counter- measure provided, e.g., in a ladder program in the PLC?     Is the wiring appropriate?	Interlock so that a parallel command is not input when the BUSY signal is ON in a ladder or otherwise.
		o no ming appropriate	Malfunctioning will occur if the power ground level of the FQ- S is different from the power ground level of the connected IO device. Short the two power GNDs together.
Scene data error FERR (Error code (hex): 01030800)	The scene data to switch to is corrupted.		The scene data to be switched to is corrupted. Reset the scene data from the beginning.
Model error (Error code (hex): 01050405 or 01050500)	A model was re-registered with an image with low contrast.	Check the image to see if the contrast is too low to register the model.	Increase the image contrast and try again to register the model.
Logging error (Error code (hex): 02160702 or 02160703)	Some data was not saved when logging data to files on an SD card.	Check to see if the BUSY output parameter is set to <i>Measurement</i> .	Set a sufficiently long measure- ment interval or set the BUSY output condition to [Data logging] or [Image logging].
Comm. error (Error code (hex): 01010100)	After EtherNet/IP communication or PROFINET communication was established, normal communication could not be performed.	Check to see if communications were cut off with the data link partner device and to see if a cable is broken.	Check the cable connection to the data link partner device.
Communication error (Error code (hex): 01010101, 11090101)	A timeout occurred in processing to output the measurement results via EtherNet/IP, PROF-INET, or PLC Link.	Make sure that handshake pro- cessing is being performed by the master. Also, make sure that the measurement interval is long enough.	Check the measurement interval and handshake processing. Change the timeout time so that it is suitable for the ladder program processing time.
Data out buffer overflow (Error code (hex): 01010701, 11090801)	An output data buffer overflow occurred during output processing of measurement results for EtherNet/IP, PROFINET, or PLC Link.	Make sure that handshake processing is being performed by the master.     Check the measurement interval to see if it is long enough.	Check the measurement interval and handshake processing.

Error Histories FQ2-S/CH User's Manual

Error code	Cause	Points to check	Measures to perform
SD card error (Error code (hex): 02130900, 02130901, 02130902, 02130903)	SD card is not inserted. A write to the SD card failed. An attempt was made to save more data than the available space on the SD card.	Is the SD card inserted correctly?     Check to see if the SD card is locked.     Check to see if there is sufficient space available on the SD card.     Verify that the SD card's format is FAT/ FAT32.	Insert the SD card correctly. Unlock the SD card. Delete unnecessary files on the SD card. Make the SD card's format FAT or FAT32 using a PC.
Item addition error (Error code (hex): 01030701, 01030702)	The unit registration has exceeded the limit. Failed to copy the unit.		Take corrective action for the cause.
Item deletion error (Error code (hex): 01030703)	Failed to delete the unit.		Take corrective action for the cause.
Auto adjust error (Error code (hex): 01040300, 01040301)	The result of camera auto- adjustment is too bright. The result of camera auto- adjustment is too dark.		Take corrective action for the cause.
Image input error (Error code (hex): 01040800)	It is an error of camera image input.		Take corrective action for the cause.
Teaching error (Error code (hex): 01050300, 01050301, 01050302, 01050303, 01050304, 01050305, 01050402)	Low contrast Color area 0 Reference value setting failure 2D code teaching failure Barcode teaching failure OCR teaching failure Other failures		Take corrective action for the cause.
Region setting error (Error code (hex): 01050502, 01050503, 01050504, 01050505, 01050706)	The model registration figure is only in the NOT area. The start angle and end angle of the arc of the model registration figure are the same. The start point and end point of the wide straight line of the model registration figure are the same. The same coordinates exist at the vertices of the polygon of the model registration figure. Model registration process failed. The figure is out of the area.		Take corrective action for the cause.
Password error (Error code (hex): 01080604)	Password mismatch.		Take corrective action for the cause.
Setting error (Error code (hex): 01080700)	Failed to allocate memory.		Take corrective action for the cause.
Scene copy error (Error code (hex): 01080701)	Scene copy failed.		Take corrective action for the cause.
Obsolete message (Error code (hex): 02140605)	The file path is too long.		Take corrective action for the cause.
System error (Error code (hex): 12160901, 12160902)	System error		Please contact us.

Note: FRR If an error that is indicated by this icon occurs, the ERROR operation indicator will light and the ERROR signal will turn ON.

#### Note

You cannot check the error codes from the Touch Finder. Use the command to acquire the most recent error information for the connection method.

FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338)

435 **Error Histories** FQ2-S/CH User's Manual

#### **Checking the Error Histories**

- Checking the History of Errors That Have Occurred in the Sensor
- ▶ **=** (Setup Mode) [Sensor settings] [Error history] [View history]

Errors will be displayed in order with the most recent ones on top.




- Checking the Log of Errors That Have Occurred in the Touch Finder
- ▶ **=** (Setup Mode or Run Mode) [TF settings] [Error history] [View history]

### **Clearing the Error Histories**

- Deleting the History of Errors That Were Detected in the Sensor
- Deleting the History of Errors That Were Detected in the Touch Finder
- (Setup Mode or Run Mode) [TF settings] [Error history] [Delete history]

Error Histories FQ2-S/CH User's Manual

## **Error Messages**

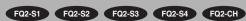

If an error occurs while making settings on the PC Tool or the Touch Finder, an error message will appear on the display.

For these errors, the ERR indicator on the Sensor will not light, the ERROR signal will not be output, and the error will not be recorded in the error history.

Follow the instructions that are given in the error message.

If the following messages appear, the hardware may be faulty.

Contact your OMRON representative.

- System error.
- Application system error. Please reboot.
- Failed to startup.


437 Error Messages FQ2-S/CH User's Manual

# **Basic Troubleshooting**



438



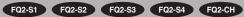



Problem	Measures to perform	
The Sensor or Touch Finder will not start.	Check the power supply capacity to see if it is sufficient.	
	Check the Ethernet cable to see if it is connected correctly.	
	Check the Ethernet settings to see if they are correct between the devices.	p. 67
	If you do not know the IP address of the sensor, execute [TF settings] - [Re-assign IP forcibly]. The sensor IP address will be assigned based on the network settings of the computer.	p. 439
The Sensor cannot be detected.	Check the communications cable to see if it is disconnected.	
	Check the switching hubs to see if any of them are faulty. (If switching hubs are used.)	
	No more than a combined total of two PC Tool / Touch Finder units can be connected at once. If the PC Tool or Touch Finder is already connected to the Sensor, disconnect it.	
The Setup Mode display opens.	Check if an inspection item is set in the scene of the connected FQ. If an inspection item is set in the scene of the connected FQ, the Run Mode display will open at startup. If the Touch Finder is started when the scene of the connected FQ does not have an inspection item set, the Setup Mode display will open.	p. 29
The judgement result JG is -15 (out of range error) during measurement.	An area where the image does not exist is included in the inspection region due to position compensation or partial input. Change the settings so that the area where the image exists is the inspection region.	
"Touch Finder setting version error" appears when switching Sensors or switching between the Run Mode and Setup Mode displays at startup (Sensor software version 1.91 or later).	This appears when the Touch Finder software version is older than the Sensor software version. Functions not supported by the Touch Finder are shown as "XXX". Update the Touch Finder software to the latest version.	p. 578
The area of the discolor of the design of th	Check to see if the TRIG signal is being correctly input to the Sensor.	p. 385
The results display is not updated.	Check to see if the most recent NG result is being displayed.	p. 383
	If other devices are connected to the same network as the Sensor, disconnect the other devices from the network and check the update speed.  If the update speed returns to normal, check the specifications of the disconnected devices and take suitable measures.	
Updating the results display is slow.	If there are power lines running in parallel with the Ethernet cable or if there are inverters or other sources of noise near the communications cable, separate the communications cable from them and check the update speed.  Noise may be adversely affecting the communications response.	
Data is not larged properly	Check to see if the logging setting in the Sensor are correct.	p. 392
Data is not logged properly.	If logging to an SD card is not possible, check the available space on the SD card and check to see if the SD card is write-protected.	p. 409
The ERROR indicator lights.	Check the error history to see what error has occurred and take suitable measures.	p. 434
The measurement trigger is not input.	Check to see it the measurement trigger is set correctly.	
The image brightness does not stabilize. FQ2-S1aaaaa/FQ2-S2aaaaa/FQ2-S3aaaaa-M/FQ2-S3aaaaa-M/FQ2-S4aaaaaM/FQ2-CH only)	Turn ON the brightness correction mode. When the Brightness Correction Mode is ON, the timing when images are taken changes. Check that the images of the measured objects taken when the Brightness Correction Mode is ON are appropriate.	p. 78
Software update error is displayed and the version cannot be updated.	In the case of sensors with hardware version B, it is not possible to update the Sensor software version to version 2.22 or earlier. Check the hardware version of the Sensor.	p. 429 p. 578

**Basic Troubleshooting** FQ2-S/CH User's Manual

### **Restoring a Sensor Connection**

If you cannot connect to a sensor because the sensor is not detected in the [Sensor List] and the IP address set in the sensor is unknown, you can execute [Re-assign IP forcibly] to forcibly change the IP address of the sensor and connect.

The sensor' IP address will be re-assigned as shown below based on the IP address settings of the Touch Finder (PC Tool) that is connected to the sensor.

Example: Settings on computer Settings on FQ2

 [IP]
 : 10.5.5.50
 [IP]
 : 10.5.5.XXX

 [Subnetmask]
 : 255.255.255.0
 ►
 [Subnetmask]
 : 255.255.255.0

 [Defaultgateway]
 : 10.5.5.1
 [Defaultgateway]
 : 10.5.5.1

XXX: The host part is automatically assigned

#### Important

- Execute this function with the Touch Finder (PC Tool) in a one-to-one connection with the sensor. If connected to multiple sensors, IP address assignment will be performed for all sensors and reconnection will not take place normally.
- The reassign IP address function is valid for Version 1.84 and later sensors.
  - 1 Configure the network settings (IP address, subnet mask, and Default gateway) of the Touch Finder (PC Tool).
  - 2 Connect the sensor and the Touch Finder (PC Tool) in a one-to-one connection.

    (If the sensor is connected via a network, disconnect the sensor from the network.)
  - 3 Press (Run Mode) [TF settings] [Re-assign IP forcibly].



4 Make sure that the sensor and Touch Finder are connected in a one-to-one connection, and press [Yes].




MEMO

440

# **Appendices**

9-1 Menu Tables	2
9-2 External Reference Parameters	1
9-3 Specifications and Dimensions	0
9-4 Updating the Software 57	7
Index	8
Revision History	4

# **Menu Tables**

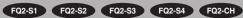









### **Image Tab Page**

		Menu command	Description	Setting range	Data	
Camera setup		Focus	The value shown here is used as a reference when adjusting the focus with the focus adjustment screw.			p. 76
Cam	4	Image mode	Pixel sampling can be applied to the input image to reduce image input time.	Normal (Default)     Fast	Scene	p. 345
		Shutter speed (Normal mode)	Sets the shutter speed for Normal Mode.	FQ2-S4 1/1 to 1/4,155  FQ2-S3, FQ2-S4 Built-in lighting off: 1/1 to 1/4,155 Built-in lighting or: 1/250 to 1/60,000 (control by lighting emission time)  FQ2-S1, FQ2-S2, FQ2-S4, FQ2-S4	Scene	p. 80
		Gain (Normal mode)	If the gain is high, the image will be bright. If the gain is low, the image will be dark.	FQ2-S3, FQ2-S40000-080, FQ2-S40000 Range: 0 to 10 (Default: 10)     FQ2-S1, FQ2-S2, FQ2-S4000000, FQ2-CH Range: 16 to 64 (Default: 16)	Scene	p. 80
		Brightness correction (When HDR mode is OFF.)	Use to stabilize the brightness.	ON OFF (Default)	System	p. 78
		Brightness (HDR mode)	Sets the brightness level of the image for HDR Mode.	1 to 100	Scene	p. 81
		Brightness correction (HDR mode)	Use to stabilize the brightness.	ON OFF (Default)	System	p. 78
		HDR	Suppresses reflections and differences in brightness.	OFF (Default)     Level 1 to Level4	Scene	p. 83
		White balance	Corrects differences in coloring between the image and the actual object.	• AUTO • R: 0.001 to 7.999 • G: 0.001 to 7.999 • B: 0.001 to 7.999	Scene	p. 85

ဖ

~
$\overline{}$
æ
_
$\circ$
=
$\overline{}$
~
ന
Š
U,

	Me	enu comi	mand	Description	Setting range	Data	
1	Partial input			Used to make the image input range smaller.	752×8 to 752×480     FQ2-S1====================================	Scene	p. 34
	Ro	tate 180		You can rotate the Camera image by 180°.	ON OFF (Default)	Scene	p. 86
	Ca	libration	setting	Sets a registered calibration pattern.	Off (Default)     Calibration Data 0 to 31	Scene	p. 37
	Lig	hting co	ntrol	Turns off built-in lighting when external lighting is used.	ON (Default) OFF	Scene	p. 42
	Lightning control	Strobe	output delay	Sets the delay time for the strobe output signal (STGOUT) in response to the trigger signal.	0 to 65,535 μs (Default: 0 μs)	Scene	*1
	Lightni	Strobe	output time	Sets the output time of the strobe output signal (STGOUT).	0 to 65,535 μs (Default: 1,000 μs)	Scene	*1
Tri	Trigger delay  Add filter			Adjusts the time until the Camera shutter opens after the trigger signal is received. Only valid for external triggers.	0 to 163 ms (Default: 0)	System	p. 87
Tri			filter  These commands are used to add, mod-		Color Gray Filter Weak Smoothing Strong Smoothing Dilate Erosion Median Extract Edges Extract Horiz Edges Extract vertical edges Enhance edges Background Suppression	Scene	p. 94
			Model	ify, delete, copy, or change the name of filter items and position compensation items.	Shape Sear III. pos. comp     Shape Sear. pos. comp     Search position comp	Scene	p. 10
	ld po mp.	os.	Edge		Edge position comp     2Edge position comp     2ed. midp. comp     Edge rot. pos. Comp	Scene	p. 10
		Value			Position compensation (Image rotation,Parameter)	Scene	p. 10
Мс	odify						p. 94
De	elete						p. 94
Со	ру						p. 94
Rename			1	15 alphanumeric characters	Scene	p. 94	

	Me	enu con	nmand	Description	Setting range	Data		
Image adjustment	ray Filter)	Filter t	уре	You can specify the ranges of colors to which the Color Gray Filter item is applied.	RGB (Default)     HSV	Scene	p. 96	
Image a	(Color Gray	Filter s	ettings	Select the type of color filter to use.	Red filter (Default) Green filter Blue filter Cyan filter Magenta filter Yellow filter Brgt.F. (R+G+B) Brgt.F. (R+2G+B) Custom filter	Scene	p. 96	
		Source	e image	You must set the image to which the filter is to be applied.	Camera     Prev. (Default)	Scene	p. 95	
	Gray Filter)	Filter r	egion	You can specify the region to which to apply the filter.		Scene	p. 95	
	(Items other than Color	Source	e image	You must set the image to which the filter is to be applied.	Camera     Prev. (Default)	Scene	p. 95	
	(Items othe	(for Ba Suppre Only)	ession level ackground ession Item	The range in which to enhance the contrast and the brightness range to extract are set for the Background Suppression item.		Scene	p. 98	
Basic	Teach	nape nape ation	Model region			Scene		
8	<u>∓</u>	ompensation, SI ensation, and SI tion III Compensi	Add  Delete Copy Console OR/NOT  Model region  Add  Used to specify the region of the image to register as the model with a combination of figures.		Rectangle     Ellipse     Wide circle     Polygon	Scene		
		tion C Comp	Delete	Used to specify the region of the image to register as the model with a combination of figures.		Scene		
		Posi Sition	Сору			Scene		
		Search Sh Pos	Console			Scene		
		for Searc	OR/NOT		• OR (Default) • NOT	Scene		
			One/All		One (Default) All	Scene		
			Insp. region	Adjusts the size and position of the measurement region.		Scene		
			Detection point	You can specify which part of the model to detect as coordinates during inspections.		Scene		

ဖ

ದ
ਨੂੰ:
Se

	Me	enu cor	nmand	Description	Setting range	Data										
Basic	Teach	for Edge Position Compensation	Insp. region	Adjusts the size and position of the measurement region, changes the measurement direction, etc.		Scene										
		dge Position	Color ON/ OFF	Sets whether to specify an edge color.	• ON • OFF (Default)	Scene										
Basic		for E	Set color.	Specifies the color of the image for edge detection (i.e., the border between the measurement object and background).	• R: 0 to 255 • B: 0 to 255 • G: 0 to 255	Scene										
			Color pal- ette	Displays a palette for color specification.												
			Detection mode OUT	Specifies whether to detect a change in color as an edge.	Color IN (Default)     Color	Scene										
		dge Midpoint compensation	Edge 0 region, Edge 1 region	Adjusts the size and position of the measurement region, changes the measurement direction, etc.		Scene										
		for Two-edge Position Compensation, Two-edge Midpoint Compensation, and Edge Rotation Position Compensation	nsation, Two-etion Position C	Edge 0 clr ON/OFF Edge 1 clr ON/OFF	Sets whether to specify an edge color.	ON OFF (Default)	Scene									
			Edge 0 set color. Edge 1 set color.	Specifies the color of the image for edge detection (i.e., the border between the measurement object and background).	• R: 0 to 255 • B: 0 to 255 • G: 0 to 255											
			for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	for Two-edge F Compensation,	Two-edge P	Color pal- ette	Displays a palette for color specification.	Scene	
												Detection Specifies whether to dete color as an edge.	Specifies whether to detect a change in color as an edge.	Color IN (Default)     Color OUT		
			Edit Ref. angle (Edge Rota- tion Position Compensa- tion only)	Set the reference angle.	–180 to 180° (Default:0)	Scene										
	Judgement			Shape Search III Position Compensation pensation Item, and Search Position C Almost the same as for the Shape Sea inspection item.  Edge Position Compensation, Two-edg Midpoint Compensation, and Edge Rol Almost the same as for the Edge Position.	ompensation Item rch III, Shape Search II, and Search ge Position Compensation, Two-edge ration Position Compensation	Scene										

	Ме	enu coi	mmand	Description	Setting range	Data		
Details	Model parameters (Shape Search and Shape Search III Posi- tion Compensation Items only)			Shape Search Position Compensation tion Item     Almost the same as for the Shape Se inspection item.     However, the [Sub-pixel] and [Multi-po inspection item do not exist.	arch III, Shape Search II, and Search	Scene		
	Ме	as. Pa	rameter	· ·		Scene		
	Ou	tput pa	arameter	Edge Position Compensation, Two-edge point Compensation, and Edge Rotation The settings for the Edge Position Com those for the Edge Position inspection	Position Compensation pensation item are almost the same as	Scene		
	Scroll parameter	Sourc	e image	You can select the image to which to apply the results of position compensation processing.	Camera     Prev. (Default)	Scene	p. 10	
	S	Interp	olation	You can select the precision of position compensation.	Bilinear     None (Default)	Scene	p. 10	
arameter)	Image rotation			Select to correct the position by rotating the image around the center of the screen.	-180° to 180° (Default: 90°)	Scene	p. 12	
otation, Pa	Parameter	Reference position	Reference position X coordinate	Sets the X coordinate of the reference position.	-99999 to 99999 (Default: p. 127)	Scene		
ın (Image	_	Referenc	Reference position Y coordinate	Sets the Y coordinate of the reference position.	-99999 to 99999 (Default: p. 127)	Scene		
nsatic			Reference angle	Sets the reference angle $\theta$ .	-180 to 180 (Default: 90)	Scene		
for Position Compensation (Image rotation, Parameter)			Measurement position	Measure- ment posi- tion X coordinate	Sets the X coordinate of the measurement position.	-99999 to 99999 (Default: p. 127)	Scene	– p. 12
▲ for Pos		Measurem	Measure- ment posi- tion Y coordinate	Sets the Y coordinate of the measurement position.	-99999 to 99999 (Default: p. 127)	Scene		
			Measure- ment angle	Sets the measurement angle $\theta$ .	-180 to 180 (Default: 0)	Scene		
correction	Ref. position  Meas. position		ion	Sets the reference position.		Scene	p. 12	
for Linear Correction			sition	Sets the measurement position.		Scene	p. 12	
<b>f</b> c	Filt	er regi	on	You can specify the range over which position correction is performed.		Scene	p. 13	
	So	urce in	nage	You must set the image to which the filter is to be applied.	Camera     Prev. (Default)	Scene	p. 13	
	Inte	erpolat	ion	You can select the precision of position compensation.	None     Bilinear (Default)	Scene	p. 13	

<sup>\*1</sup> Refer to FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338).

### Inspect Tab Page

		Me	enu	com	mand	Description	Setting range	Data						
Inspection	Item selected			Add	d item	Used to add, modify, delete, copy, or change the name of an inspection item.	• OCR*4  • Bar code*3  • 2D-code (DPM)*3  • Search*2  • Shape Search III *2  • Shape Search III*2  • Sensitive Search*2  • Edge Position*2  • Edge Width*2  • Edge Pitch*2  • Color Data*2  • Area  • Labeling*2		p. 138					
				М	odify				p. 139					
				De	elete									
				С	ору				p. 139					
				Rei	name		15 alphanumeric characters	Scene						
		Settings	Teach	To	each Mode	Set the Teach Mode.	Simple Teach (Default)     Correct String	Scene	p. 142					
		S			Ir	nsp. region	Moves the measurement region or adjusts the size of the measurement region.		Scene	p. 141				
				Format	L.1 to L.4	Sets the character format for recognition.	32 alphanumeric characters	Scene	p. 141					
				Correct String	L.1 to L.4	Sets the character format for recognition.	32 alphanumeric characters	Scene	p. 141					
				Can	nera setup	Same as Camera adjustments on the I	mage Tab Page.	Scene	p. 76					
									Parameter B	Reading Speed	Set the Reading Speed.	Normal (Default)     Fast	Scene	p. 156
				Meas.	Character color	Sets the color of the characters to detect.	Black (Default)     White	Scene						
					Printing type	Sets the type of printing of the characters to detect.	Solid character     Dot character (Default)	Scene						
					Dot ver. interval	Adjusts the vertical dot interval of the characters to detect. This parameter is enabled only when [Printing type] is set to [Dot character].	0 (Default) to 30	Scene						
					Dot hor. interval	Adjusts the horizontal dot interval of the characters to detect. This parame- ter is enabled only when [Printing type] is set to [Dot character].	0 (Default) to 30	Scene	p. 156					
					Char. thick. th.	Sets the thickness of the characters. Negative numbers indicate thinner characters. Positive numbers indicate thicker characters.	-128 to 128 (Default: 0)	Scene						
					Boundary correction	Treats dark areas at the edges of the measurement region as noise and removes them from the read candidates.	ON (Default)    OFF	Scene						

FQ2-S/CH User's Manual Menu Tables 447

		Me	enu	com	mand	Description	Setting range	Data	
Inspection	Settings	Teach	for OCR*4	Parameter	Rotation compensa- tion	Turned ON when characters on the workpiece are rotated because the workpiece itself is rotated. Correction is possible in a rotation range of ±15°.	ON OFF (Default)	Scene	p. 156
			4	Meas.	Slant compensation	Used when the characters are at a slant. Correction is possible in a rotation range of $\pm 15^{\circ}$ .	ON OFF (Default)	Scene	
					Hyphen height upp. th.	Sets the upper limit of the height of the region to treat as a hyphen or other symbol.	0 to 100 (Default: 30)	Scene	
					Hyphen height low. th.	Sets the lower limit of the height of the region to treat as a hyphen or other symbol.	0 to 100 (Default: 70)	Scene	
					Slender char. th.	Sets the ratio of the height to the width of the detection rectangle to judge as thin characters (I, J, 1, :, and /).	1 to 10 (Default: 3)	Scene	p. 156
					Max Width Setting	Set the Max Width Setting.	ON OFF (Default)	Scene	
					Max Width	specify the max width for attempted character string.	0 to 9,999 (Default: 0)	Scene	
					Max Height	Specify the max height of the character to be read.	0 to 9,999 (Default: 0)	Scene	
					Min Height	Specify the min height of the character to be read.	0 to 100 (Default: 50)	Scene	
					Reading Length	If character strings with a variable number of characters are to be read, specify variable.	Variable (Default) Fixed  Fixed	Scene	
				Con	tinuous test	Same as [Continuous test] on the [Test	i] Tab Page.		p. 340
			for Bar code*3	lr	nsp. region	Moves the measurement region or adjusts the size of the measurement region.		Scene	
			٦	Can	nera setup	Same as Camera adjustments on the I	nage Tab Page.	Scene	p. 76
			`	Meas. Parameter	Code type	Sets the type of code to read.	JAN/EAN/UPC (Default)     Code39     Codebar     ITF     Code93     Code128 / GS 1-128     GS1 DataBar     Pharmacode	Scene	p. 186
					Code color	Sets the color of the code to be read.	Black (Default)     White	Scene	p. 186
					Composite codes on/ off	Sets whether or not composite codes are supported. (Only valid for Code128/GS1-128, GS1 Databar)	Yes    No (Default)	Scene	
					Check digit on/off (Except for Pharmac- ode)	Sets whether there is a check digit.	Yes (Default)    No	Scene	
					Direction (For Phar- macode only)	Sets the direction in which to read.	Horizontal mode (Default)     Vertical mode	Scene	
					Reverse on/off (For Pharmac- ode only)	Sets whether to use Reverse Mode.	Yes    No (Default)	Scene	

448

Œ
泵
≌
$^{\circ}$
ä
٠,

		enu	com	mand	Description	Setting range	Data										
Settings	Teach	✓ for Bar code*3	Meas. Parameter	Timeout	Sets the timeout time for read processing.	1 to 9999 ms (Default: 9999)	Scene										
			Con	tinuous test	Same as [Continuous test] on the [Test	] Tab Page.		p. 34									
			Ir	nsp. region	Moves the measurement region or adjusts the size of the measurement region.		Scene										
			Ca	mera setup	Same as Camera adjustments on the I	mage Tab Page.	Scene	p. 76									
			Meas. Parameter	Code type	Sets the type of code to read.	JAN/EAN/UPC (Default)     Code39	Scene										
			2	Reverse (Other than PDF417, Micro- PDF417)	Sets a normal or reverse image.	Normal (Default)     Reverse	Scene										
				Code color (Other than PDF417, Micro- PDF417)	Sets the code color.	Black (Default)     White	Scene	p. 19									
				Grid correction (Micro QR Codes only)	Set whether grid correction is ON or OFF.	ON OFF (Default)	Scene										
				Shape (for DataMatrix Only)	Sets the code shape.	Square (Default)     Square     Rect.	Scene										
				Print quality (Data Matrix only)	Sets print quality evaluation ON/OFF.	ON OFF (Default)	Scene										
				Timeout	Sets the timeout time for read processing.	1 to 9999 ms (Default: 9999)	Scene										
			Con	tinuous test	Same as [Continuous test] on the [Test	I ] Tab Page.		p. 34									
		(DPM)*3	Insp	. region	Moves the measurement region or adjusts the size of the measurement region.		Scene										
			Can	nera setup	Same as Camera adjustments on the li	mage Tab Page.	Scene	p. 76									
		▲ for 2D-c		tor 2D-cc	s. Parameter B	s. Parameter	Is. Parameter	IS. Parameter	Is. Parameter	s. Parameter	8	Is. Parameter B	Code type	Sets the type of code to read.	DataMatrix (Default)     QR     MicroQRCode     PDF417     MicroPDF417	Scene	
			Me	Shape (for DataMatrix only)	Sets the code shape.	Square (Default)     Rectangle	Scene										
				QR Code Model (for QR Code only)	Sets the QR code model.	Model 1     Model 2     Auto (Default)	Scene	p. 21									
				ECC Level (for QR Code only)	Sets the error correction level (i.e., the ECC level).	L (7%) M (15%) Q (25%) H (30%) Auto (Default)	Scene										

		Me	enu	comi	mand	Description	Setting range	Data																																	
Inspection	Settings	Teach	for 2D-code (DPM)*3	Meas. Parameter	Tor 2D-code (DPM)**  Meas. Parameter	for 2D-code (DPM)*3  Meas. Parameter	Cell (for DataMatrix and QR Code only)	Sets the number of cells in the code.	For QR codes 21 × 21, 25 × 25, 29 × 29, 33 × 33, 37 × 37, 41 × 41, 45 × 45, 49 × 49, 53 × 53, 57 × 57, or Auto (defalut)  For square data matrices 10 × 10, 12 × 12, 14 × 14, 16 × 16, 18 × 18, 20 × 20, 22 × 22, 24 × 24, 26 × 26, 32 × 32, 36 × 36, 40 × 40, 44 × 44, 48 × 48, 52 × 52, 64 64, or Auto (Default)  For rectangular data matrices 8 × 18, 8 × 32, 12 × 26, 12 × 36, 16 × 36, 16 × 48, or Auto	Scene																															
					Auto length (Except for when the number of cells is set to automatic for data matrices or QR codes.)	Sets whether the code size is detected automatically.	Yes (Default)    No	Scene																																	
					Reverse	Sets a normal or reverse image.	Normal     Reverse     Auto (Default)	Scene																																	
					Code color	Sets the code color.	Black     White     Auto (Default)	Scene	p. 210																																
																																					Grid correction	Set whether grid correction is ON or OFF.	ON OFF (Default)	Scene	
																											Fast mode	Sets whether to use the Fast Mode. Reading time is reduced if Fast Mode is used.	Yes    No (Default)	Scene											
					DPM print quality (Data Matrix only)	Sets print quality evaluation ON/OFF.	ON OFF (Default)	Scene	-																																
					Timeout	Sets the timeout time for read processing.	0 to 9999 ms (Default: 9999)	Scene																																	
				Con	tinuous test	Same as [Continuous test] on the [Test	Tab Page.		p. 340																																

App
ěn
ppendices
Š
U

451

	Me	enu	command	Description	Setting range	Data							
Settings	Teach	search* <sup>2</sup> )	Model region			Scene	p. 22 p. 24 p. 22						
		Shape search III* <sup>2</sup> , Sensitive search* <sup>2</sup>	Add	Used to specify the region of the image to register as the model with a	Rectangle     Ellipse     Wide circle     Polygon	Scene	p. 22						
		earc	Delete	combination of figures.		Scene							
		s adı	Сору			Scene							
			Console			Scene	p. 22						
		'ch II* <sup>2</sup> ,	OR/NOT		OR (Default)     NOT	Scene	p. 22						
		Shape search II* <sup>2</sup> ,	One/All		One (Default)    All	Scene							
		(Search* <sup>2</sup> , Sh	Insp. region	Adjusts the size and position of the measurement region.		Scene	p. 22						
		s) •	Detection point	You can specify which part of the model to detect as coordinates during inspections.		Scene	p. 22						
		Edge Pitch* <sup>2</sup>	Insp. region	Adjusts the size and position of the measurement region, changes the measurement direction, etc.		Scene	p. 2 p. 2 p. 2						
		Edge Width* <sup>2</sup> , and	Mask size  Edge level auto	Select the pixel size to be used at  The [Edge level] can be set automatically by selecting ON. If edge recognition results are not good with this setting, set to OFF.	• 3 × 3(Default) • 5 × 5 • 7 × 7 • ON (Default) • OFF	_							
		for Edge Position* <sup>2</sup> ,	Edge level	This function will be enabled if you uncheck [Auto] check box. Set the lower limit to recognize the [Edge level]. Edges higher than set value are recognized. Decrease the setting value when it is difficult to find edges. Increase the setting value when the effect of noise is high.	0 to 1024 (Default: 20)	Scene	p. 23						
			Noise Removal Level	Spesify the upper value to remove noise.	0 to 100 (Default: 0)								
			Disp. Image Selection	Select the displayed image.	Meas. Img.     Meas. Img.+Model Img (Default)     Edge Image     Edge Img.+ Model Img.								
			Insp. region	Adjusts the size and position of the measurement region, changes the measurement direction, etc.		Scene							
										Color ON/OFF (for Edge width and Edge position Only)	Sets whether to specify an edge color.	ON OFF(Default)	

	Me	enu	command	Description	Setting range	Data	
Inspection	Teach	Edge Pitch*2	Set color	Specifies the color of the image for edge detection (i.e., the border between the measurement object and background).			
		Edge Width*2, and	Color palette	Displays a palette for color specification.	R: 0 to 255 B: 0 to 255 G: 0 to 255		
		for Edge Position* <sup>2</sup> ,	Detection mode	Select the situation when the Edge is detected.	Color IN (Default)     Color OUT		
		Labeling* <sup>2</sup>	Insp. region	Adjusts the size and position of the measurement region.		Scene	p. 308 p. 320
			Set color	The color for which to find the area is specified.		Scene	
		for Area* <sup>2</sup> ,	Color palette	Displays a palette for color specification.	Hue: 0 to 359     Saturation: 0 to 255     Brightness: 0 to 255     Exclusion: ON or OFF     Color inv.: Yes or No (Default)	Scene	p. 305
			Display Setting	Specifies the type of image to display on the color specification display to check on the image the color that was set for the reference color.	Measurement Image,     All Color Image (Default)     Selected Color Image     Binary Image	Scene	p. 314
			Background color	Specifies the background color of the extracted image.	Black (Default)     White     Red     Green     Blue	Scene	
		for Color Data*2	Insp. region	Moves the measurement region or adjusts the size of the measurement region.		Scene	p. 299
	Juc	lge	ment			Scene	
		(OCR*4)	Similarity	Sets the similarity of the read characters that is to be judged as OK.	0 to 100 (Defaults: lower limit: 60 upper limit: 100)	Scene	
			Stability	Sets the stability of the read characters that is to be judged as OK. If there is more than one candidate for the same character, the difference between the first and second candidates is numerically expressed by the stability.	0 to 100 (Defaults: lower limit: 10 upper limit: 100)	Scene	p. 146
			Read Char. Str L1 to Read Char. Str L4	Display the read character string.		Scene	
			Verif. Str L1 to Verif. Str L4	Display the verification string.		Scene	
			Character Count	Set the number of character that judgment is OK.	0 to 32 (Defaults: lower limit: 0 upper limit: 32)	Scene	

		Me	enu	command	Description	Setting range	Data	
Inspection	Settings	Judgement	2D-code	Num. of char.	Displays the number of characters that were read.			
lnsp	Š	Judg	2D	Characters	Displays the character string that was read.			
				Overall quality	Displays the evaluation value of overall quality.	0 to 4		
				Decode	Displays the evaluation value of decode.			
				Cell Contrast	Displays the evaluation value of cell contrast.			
				Cell Modulation	Displays the evaluation value of cell modulation.			
				Fixed pattern damage	Displays the evaluation value of fixed pattern damage.			p. 193
				Axial nonunifor- mity	Displays the evaluation value of axial nonuniformity.			-
				Grid nonunifor- mity	Displays the evaluation value of grid nonuniformity.			
				Unused err. Corr.	Displays the evaluation value of unused error correction.			
				Print scale	Displays the evaluation value of the print scale.			
				Print scale X	Displays the evaluation value of print scale X.			
				Print scale Y	Displays the evaluation value of print scale Y.			
			2D-code(DPM)*3	Contrast	Sets the upper and lower limits of the contrast that is to be judged as OK.	0 to 100 (Defaults: lower limit: 0 upper limit: 100)	Scene	
			2D-code	Focus	Sets the upper and lower limits of the focus that is to be judged as OK.	0 to 100 (Defaults: lower limit: 0 upper limit: 100)	Scene	
				Cell Recog. Rate	Sets the upper and lower limits of the cell recognition rate that is to be judged as OK.	0 to 100 (Defaults: lower limit: 0 upper limit: 100)	Scene	
				Num. of char.	Displays the number of characters that were read.			
				Characters	Displays the character string that was read.			
				Cell size	Outputs the number of pixels per cell of the scanned code.			
				Overall quality	Displays the evaluation value of overall quality.	0 to 4		p. 205
				Decode	Displays the evaluation value of decode.			
				Cell Contrast	Displays the evaluation value of cell contrast.			
				Cell Modulation	Displays the evaluation value of cell modulation.			
				Fixed pattern damage	Displays the evaluation value of fixed pattern damage.			
				Axial nonunifor- mity	Displays the evaluation value of axial nonuniformity.			
				Grid nonunifor- mity	Displays the evaluation value of grid nonuniformity.			
				Unused err. Corr.	Displays the evaluation value of unused error correction.			

	М	enu	command	Description	Setting range	Data					
Settings	Judgement	search*2)	Correlation	Sets the correlation OK range.	0 to 100 (Defaults: Lower limit: 60 Upper limit: 100)	Scene					
_	3	Sensitives	Position X	Sets the position OK range.	(Defaults: Lower limit: -99,999.9999 Upper limit: 99,999.9999)	Scene					
			Position Y	Joels the position of Tange.	(Defaults: Lower limit: -99,999.9999 Upper limit: 99,999.9999)	Scene					
		Shape search II*2, Shape search II*2,	Density deviat. (Sensitive search only)	Set the density deviation OK range.	Color image     Range: 0 to 221     Defaults: Upper limit: 221     Lower limit: 0      Monochrome image     Range: 0 to 127     Defaults: Upper limit: 127     Lower limit: 0	Scene	p. 218 p. 234 p. 262				
				(Search* <sup>2</sup> , Sha	Angle	Sets the angle OK range.	-180 to 180 (Defaults: Lower limit: -180 Upper limit: 180)	Scene			
			Count	Sets the count OK range.	0 to 32 (Default: 0)	Scene					
		position*2)	Offset amount (Edge position only)	Sets the upper/lower limit range for the amount of position deviation considered to be OK.	-99,999.9999 to 99,999.9999 (Defaults: Lower limit: -1,640 Upper limit: 1,640)	Scene					
		(Edge pc	(Edge p	l egba)	egba)	(Edge	Position X	Sets the position OK range.	-99,999.9999 to 99,999.9999 (Defaults: Lower limit: -99,999.9999 Upper limit: 99,999.9999)	Scene	p. 27
						Position Y		-99,999.9999 to 99,999.9999 (Defaults: Lower limit: -99,999.9999 Upper limit: 99,999.9999)	Scene		
		(Edge width* <sup>2</sup> )	Edge width	Sets the Edge width OK range.	When the result type is set to absolute value: Range: 0.0000 to 99,999.9999 Defaults: Upper limit: 99,999.9999, Lower limit: 0.0000  When the result type is set to relative values: Range: -99,999.9999 to 99,999.9999 Defaults: Upper limit: 99,999.9999 Lower limit: -99,999.9999  When the result type is set to ratios: Range: 0.000 to 999.9999(%) Defaults: Upper limit: 999.9999 Lower limit: 0.000	Scene	p. 284				

W
⊐
d
Ξ.
ö
Ö

ဖ

		Me	enu	command	Description	Setting range	Data	
Inspection	Settings	Judgement	Edge pitch*2)	Edge pitch		Range: 0 to 1000 Defaults: Lower limit: 0 Upper limit: 1000	Scene	
Ë		Juc	(Edge	Average pitch			Scene	
				Max. pitch (maximum pitch)			Scene	
				Min. pitch (minimum pitch)	Sets the Edge pitch OK range.	Range: 0.0000 to 99,999.9999 Defaults: Lower limit: 0.0000	Scene	p. 289
				Average width		Upper limit: 99,999.9999	Scene	
				Max. width (maximum pitch)			Scene	
				Min. width (minimum pitch)			Scene	
			(Color Data*2)	Color difference (Color images only)	Sets the upper and lower limits of the difference between the average color and reference color that is to be judged as OK.	0.0000 to 442.0000 (Defaults: Lower limit: 0 Upper limit: 442)	Scene	
			Õ	Color deviation (Color images only)	Set the upper and lower limits of the range of the deviation in the region that is to be judged as OK.	0.0000 to 221.0000 (Defaults: Lower limit: 0 Upper limit: 221)	Scene	
				R average (Color images only)	Set the difference in the average value of the R (red) component that is to be judged as OK.	0.0000 to 255.0000 (Defaults: Lower limit: 0 Upper limit: 255)	Scene	
				G average (Color images only)	Set the difference in the average value of the G (green) component that is to be judged as OK.	0.0000 to 255.0000 (Defaults: Lower limit: 0 Upper limit: 255)	Scene	p. 296
				B average (Color images only)	Set the difference in the average value of the B (blue) component that is to be judged as OK.	0.0000 to 255.0000 (Defaults: Lower limit: 0 Upper limit: 255)	Scene	
				Density average (monochrome images only)	Sets the upper/lower limit range for the density average in the measurement region.	0 to 255 (Defaults: Lower limit: 0 Upper limit: 255)	Scene	
				Density deviat. (monochrome images only)	Sets the upper/lower limit range for the density deviation in the measurement region.	0 to 127 (Defaults: Lower limit: 0 Upper limit: 127)	Scene	
			(Area* <sup>2</sup> )	Area	Set the upper and lower limits for an OK judgement.	When the result type is set to absolute value: Range: 0.0000 to 999,999,999.9999 Defaults: Upper limit: 999,999,999.9999 Lower limit: 0.0000  When the result type is set to relative values: Range: -999,999,999.9999 Defaults: Upper limit: 999,999,999.9999 Lower limit: -999,999,999.9999  When the result type is set to ratios: Range: 0.0000 to 999.9999(%) Defaults: Upper limit: 999.9999 Lower limit: 0.0000	Scene	p. 30:
				Gravity X	Set the upper and lower limits of the range of gravity X that is to be judged as OK.	Range: -99,999.9999 to 99,999.9999 Defaults: Upper limit: 99,999.9999 Lower limit: -99,999.9999	Scene	
				Gravity Y	Set the upper and lower limits of the range of the gravity Y that is to be judged as OK.	Range: -99,999.9999 to 99,999.9999 Defaults: Upper limit: 99,999.9999 Lower limit: -99,999.9999	Scene	

		Me	enu	command	Description	Setting range	Data			
nspection	Settings	Judgement	(Labeling*2)	Number of labels	Set the upper and lower limits of the number of labels for an OK judgement.	0 to 100 (Defaults: Upper limit: 100 Lower limit: 0)	Scene			
느		ηſ	(La	Total label area	Set the upper and lower limits of the total label area for an OK judgement.	0 to 999,999,999,999 (Defaults: upper limit: 999,999,999,999 lower limit: 0)	Scene			
				Area	Sets the upper and lower limits of the area for an OK judgement.	0 to 999,999,999,999 (Defaults: upper limit: 999,999,999.999 lower limit: 0)	Scene			
				Gravity X	Set the upper and lower limits of the gravity X for an OK judgement.	-99,999.9999 to 99,999.9999 (Defaults: upper limit: 99,999.9999 lower limit: -99,999.9999)	Scene	p. 313		
				Gravity Y	Set the upper and lower limits of the gravity Y for an OK judgement.	-99,999.9999 to 99,999.9999 (Defaults: upper limit: 99,999.9999 lower limit: -99,999.9999)	Scene			
				Master angle	Sets the upper and lower limits of the master angle for an OK judgement.	-180 to 180 (Defaults: upper limit: 180 lower limit: -180)	Scene			
			4	Result type (Except for OCR, 2D-code (DPM), Edge Pitch, and Label- ing)	You can change the output form of the measurement values.	Absolute value (Default)     Relative value     Ratio (Edge Position or Area only)	Scene	p. 218 p. 234 p. 262 p. 274 p. 284 p. 303		
						Display setting	You can change the parameters of the judgment conditions.	The names of the judgment conditions are displayed.	Scene	p. 218 p. 234 p. 262 p. 274 p. 284 p. 303
									Auto adjustment (Except for Labeling and Edge Pitch)	Automatically adjusts the judgment parameters by using actual workpieces which are considered as good or faulty products.
				Judgment Mode (Only for OCR)	Select the Judgment mode.	All (Default)     Individual	Scene	p. 146		
				Verif. master data	Sets whether to verify the read character string against a character string that is registered in the master data. Sets the character string to use to verify the read character string against the master data.	OFF (Default)     Master data 0 to 31	Scene	p. 148		

σ	
=	
$\circ$	
Œ	
ഗ	
-	

		Me	enu	com	man	nd	Description	Setting range	Data								
Inspection	Settings	Verification*4	(OCR*4)	Mat	chin	g Mode	Register the loaded strings to verify with the specified string.	Direct Input (Default)     Calender Matching     Code Matching	Scene	p. 148							
=		Veri		Mas regi (onli	st. y Di	data rect	Registers a character string in the master data.	Master data 0 to 31 • OFF	Scene								
				[MENU]	•	Auto	Reads a character string from an input										
				[W]	4	Insp. region	image and registers it in the master data.		Scene								
									Manual	L.1 to L.4	A character string is entered directly in the master data.	32 alphanumeric characters	Scene	p. 148			
								Item ref.	Ref. data	Registers the immediately preceding read results as a verification character string.		Scene					
																L.1 verif. range to L.4 verif. range	Sets the beginning and end characters to verify.
						Сору	Copies or clears registered master data.										
						Delete	- uaia.										
				Au	to te	each No.	Sets the character string in the master data in which to automatically register the read result for teaching from an external device.	OFF     Master data 0 to 31	Scene								
				ist. ( dar l	ist. (	ist. (	ist. (	(only	data reg- y Calen- ching)	Registers the Master data.		Scene					
								L1	L1	to L	_4	Enter the Master data.					
					(only	data reg- y Code g)	Registers the Master data.										
					aste gist.	r data	Registers the latest result as a verification string.		Scene								
					erif. I elect	Line	Select the Line to verify.	Check     Unchecked (Default)	Scene								
											artial to L	verif _4	Set the beginning and end lines to verify.	1 to 1024 (Defaults: beginning: 1, end: 1024)	Scene		

457 Menu Tables

	М	enu	com	man	nd	Description	Setting range	Data	
Settings	Verification*4	<sup>43</sup> , 2D-code (DPM)* <sup>3</sup> )	Veri data		aster	Sets whether to verify the read character string against a character string that is registered in the master data. Sets the character string to use to verify the read character string against the master data.	OFF All master data (Default) Master data 0 to 31	Scene	
		*3, 2D-code*3,	Mas ist.	ster	data reg-	Registers a character string in the master data.	Master data 0 to 31	Scene	
		(Bar code*3,	[MENU]	4	Auto Insp. region	Reads a character string from an input image and registers it in the master data.		Scene	
				Manual	L.1 to L.4	Registers a character string directly in the master data.	32 alphanumeric characters	Scene	p. 182 p. 194 p. 207
				of.	Ref. data	Registers the immediately preceding read results as a verification character string.		Scene	
				Item ref.	Line 1 verif. range to Line 4 verif. range	Sets the beginning and end characters to verify for each line.	1 to 1024 (Defaults: beginning: 1 end: 1024)	Scene	
					Copy	Copies or clears registered master data.			
Details	(OCR*4)	Ме	Meas. Parameter			Same as [Teach] – [Meas. Parameter] under [Modify] or [Inspection].		Scene	p. 156
٥	Ö	Dic	tiona	onary param.		Sets the model dictionary to register custom characters.		Scene	
			Dict	iona	ary ref.	Sets the dictionary data to use for character recognition.	None (Default) Dictionary data 0 to 31	Scene	
			Indi	vidu	al char.				_
				umbe phat		When you have number, alphabet, or symbol that want to exclude, touch	0 to 9 A to Z	Scene	
				mbo		Individual char, and then unchecked the attempt character,	: (colon) / (slash) () (parentheses)		p. 169
		Da	te Pa	aram	neters				
			etting		Year		0 to 99 (Default: 0)	Scene	1
			Period Setting		Month	Set the period setting of the current	0 to 99 (Default: 0)		1
			Peric		Day	date and time.	-999 to 999 (Default: 0)		

	Me	enu	com	mand	Description	Setting range	Data	
Details	(**4	Da	te Pa	arameters				
Details	(OCR*4)			Zero Sup- press	Select the method for Zero Suppress.	0 (Default)     Blank		
			Date Setting	Date Calc. Order	Select the calculate method when the Period Setting is set,	<ul> <li>Month → Day (Default)</li> <li>Day → Month</li> </ul>		
			Date 8	Month end adjust	Select the adjust method when not exist day is calculated.	Last day of current month (Default)     First day of next month     Gap day of next month		
			Setting	Auto Update	Set the Update method.	Don't Update     Fist Update     Always Update (Default)	Scene	p. 159
			Common Setting	Back Margin	Set the Time Margin that is before the current time.	0 to 99 (Default: 0)		
			ပိ	Ahead Margin	Set the Time Margin that is after the current time.	0 to 99 (Default: 0)		
		Со	Code data File name		Displays the file name of code data.		Scene	
		Output parameter	Refl	lect	Specifies whether to reflect the judgment results of an inspection item in the overall judgment.	Yes (Default)     No	Scene	p. 146
		Out	Erro	or string	Sets the character string that is output for read errors.	20 alphanumeric characters (Default: NG)	Scene	p. 158
		N	leas.	. Parameter	Same as [Teach] – [Meas. Parameter] under [Modify] or [Inspection].		Scene	p. 186
	(Bar code*3)	Output parameter	Refl	lect	Specifies whether to reflect the judgment results of an inspection item in the overall judgment.	Yes (Default)    No	Scene	p. 185
	(E	Output	Erro	or string	Sets the character string that is output for read errors.	20 alphanumeric characters (Default: NG)	Scene	p. 187
		N	leas.	. Parameter	Same as [Teach] – [Meas. Parameter] under [Modify] or [Inspection].		Scene	p. 196
	(2D-code*3)	Output parameter	Refl	lect	Specifies whether to reflect the judgment results of an inspection item in the overall judgment.	Yes (Default)    No	Scene	p. 196
	3)	Output	Erro	or string	Sets the character string that is output for read errors.	20 alphanumeric characters (Default: NG)	Scene	p. 198
		N	leas.	. Parameter	Same as [Teach] – [Meas. Parameter]	under [Modify] or [Inspection].	Scene	p. 210
	(2D-code (DPM)*3)	Output parameter	Refl	lect	Specifies whether to reflect the judgment results of an inspection item in the overall judgment.	Yes (Default)    No	Scene	
	(2D-code	Outpu	Erro	or string	Sets the character string that is output for read errors.	20 alphanumeric characters (Default: NG)	Scene	p. 212
						1		

Sets the character string that is output for read errors.

Scene p. 212

FQ2-S/CH User's Manual

Sets the character string that is output (Default: NG)

Menu Tables

		Me	enu	command	Description	Setting range	Data					
Inspection	Details	Search*2)	parameter	Rotation	Sets the angle range for the registered model.	No (Default)     Yes	Scene	p. 222				
lsul		eS)	Model par	Angle range		-180 to 180 (Defaults: Lower limit: -180 Upper limit: 180)	Scene	p. 222				
			ν	Stability	Sets whether priority is given to measurement stability or speed.	1 to 15 (Default: 12)	Scene	p. 223				
				Accuracy	Sets whether priority is given to measurement position accuracy or speed.	1 to 3 (Default: 2)	Scene	p. 223				
			Meas. Parameter	Sub-pixel	You can increase the accuracy of measurement positioning.	No (Default)     Yes	Scene	p. 219				
			Parameter	Extraction condition			Scene					
			Meas. Para	Candidate level	Sets the detection target to only objects with a correlation above the specified candidate level.	0 to 100 Default: 80	Scene					
			M	Extraction X	Results are output only for objects with a measured X coordinate that is within this range.	-999,999,999,999 to 999,999,999999 (Defaults: Lower limit: -999,999,999,9999) Upper limit: 999,999,999,999)	Scene	p. 221				
				Extraction Y	Results are output only for objects with a measured Y coordinate that is within this range.	-999,999,999,999 to 999,999,999999 (Defaults: Lower limit: -999,999,999,9999) Upper limit: 999,999,999,999)	Scene					
					Detection count Sets the maximum number of detection results to output.  Upper limit: 999,999,9 1 to 32 Default: 32		Scene					
										Multi-point out- put	Sets whether to output only the result with the highest correlation, or to output all results that meet the specified extraction conditions.	ON (Default) OFF
				Sorting method	Sets the sort condition to use when multiple measurement results meet the extraction conditions.	Corr. ascending order Corr. descending order (Default) Pos.X ascending order Pos.X descending order Pos.Y ascending order Pos.Y descending order Pos.Y descending order	Scene	p. 220				
			Output parameter	Reflect	You can specify whether to reflect the ment results of an inspection item in the overall judgement.	None     Yes (Default)	Scene	p. 222				

enc
dice
es
9

		Me	enu	command	Description	Setting range	Data					
nspection	Details	search III*2)	parameter	Rotation (Only for Shape Search III)	Sets the angle range for the registered model.	No     Yes (Default)	Scene	p. 238				
		Shape	Model p	Angle range		-180 to 180 (Defaults: Lower limit: -180 Upper limit: 180)	Scene	p. 238				
	C	search II*2		Model mode	You can change to a mode that makes it easier to search for images similar to a model.	Fast     Stable (Default)	Scene	p. 223				
		Shape se	Parameter	Extraction condition			Scene					
		(Sh	Meas. Parar	Candidate level	Sets the detection target to only objects with a correlation above the specified candidate level.	0 to 100 Default Shape Search II: 80 Shape Search III: 50	Scene					
				Extraction X	Results are output only for objects with a measured X coordinate that is within this range.	-999,999,999.9999 to 999,999,999.9999 (Defaults: Lower limit: -999,999,999.9999, Upper limit: 999,999,999.9999)	Scene	p. 237				
				Extraction Y	Results are output only for objects with a measured Y coordinate that is within this range.	-999,999,999.9999 to 999,999,999.9999 (Defaults: Lower limit: -999,999,999.9999, Upper limit: 999,999,999.9999)	Scene					
				Detection count	Sets the maximum number of detection results to output.	1 to 32 Default : 1	Scene					
				Sorting method	Sets the sort condition to use when multiple measurement results meet the extraction conditions	Corr. ascending order Corr. descending order (Default) Pos.X ascending order Pos.X descending order Pos.Y ascending order Pos.Y descending order	Scene	p. 235				
				Overlay Judgment (only for Shape Search III)	When you want to find the detected result when the detected result is overlapped, set this parameter to ON.	ON OFF (Default)	Scene	000				
				Overlay Rejection (only for Shape Search III)	Set the range to remove overlapped target.	0 to 100 (Default: 100)	Scene	p. 236				
				Edger level auto (only for Shape Search III)	The [Edge level] can be set automatically by selecting ON. If edge recognition results are not good with this setting, set to OFF.	ON (Default) OFF	Scene					
							(	Edge level (only for Shape Search III)	This function will be enabled if you uncheck [Auto] check box. Set the lower limit to recognize the [Edge level]. Edges higher than set value are recognized. Decrease the setting value when it is difficult to find edges. Increase the setting value when the effect of noise is high.	0 to 1024 (Default: 70)	Scene	p. 239
				Acceptable Dist. Level (only for Shape Search III)	Set the acceptable level of distortion.	Low     Medium     High	Scene	p. 240				
			Output parameter	Reflect	You can specify whether to reflect the judgement results of an inspection item in the overall judgement.	No     Yes (Default)	Scene	p. 238				

M	1en	u command	Description	Setting range	Data	
Details arch* <sup>2</sup> )	meter	Rotation		No (Default)     Yes	Scene	p. 266
Details Sensitive search* <sup>2</sup> )	Model parameter	Angle range	Sets the angle range for the registered model.	-180 to 180 (Defaults: Lower limit: -180 Upper limit: 180)	Scene	p. 266
(Se		Sub-model num- ber	You can change the number of divisions of the registered model.	• 3 × 3 • 5 × 5 (Default) • 9 × 9	Scene	p. 26
		Plain inspection	Enables or disables inspecting plain sections.	Yes     No (Default)	Scene	p. 21
	Darameter	Sub-pixel	You can increase the accuracy of measurement positioning.	No (Default)     Yes	Scene	p. 26
	Mage Dara	Candidate level	Sets the detection target to only objects with a correlation above the specified candidate level.	0 to 100 (Default: 70)	Scene	p. 26
	Output parameter	Reflect	You can specify whether to reflect the judgement results of an inspection item in the overall judgement.	No     Yes (Default)	Scene	p. 26
Edge pitch*2)	_		Sets the color density level of the edge.	Color difference (%):     0 to 100 (Default: 50) Color difference: 0 to 442 (Default: 20)	Scene	p. 27 p. 26 p. 27
	Maga D	Noise level (Color image only)	Sets the color density level to treat as noise.	0 to 442 (Default: 5)	Scene	p. 27 p. 26 p. 27
(Edge width* <sup>2</sup> , Edge position* <sup>2</sup> ,	200	Measurement method (mono- chrome image only)	Specifies the edge detection method.	Projection (Default)     Differentiation	Scene	p. 27 p. 26 p. 27
e width* <sup>2</sup> ,		Density change (monochrome image only)	Specifies the density direction that is detected.	Light to Dark (Default)     Dark to Light	Scene	p. 27 p. 26 p. 27
(Edg	81	Edge level (monochrome image only)	Specifies the density level that is regarded as an edge.	Density diff. (%): 0 to 100 (Default: 50) Density diff.: 0 to 255 (Default: 20)	Scene	p. 27 p. 26 p. 27
		Noise level (monochrome image only)	Specifies the density change level that is regarded as an edge.	0 to 255 (Default: 5)	Scene	p. 27 p. 26 p. 27
	Output parameter	Reflect	You can specify whether to reflect the judgment results of an inspection item in the overall judgment.	No     Yes (Default)	Scene	p. 27 p. 26 p. 27
(Color Data*2)			You can specify whether to reflect the judgement results of an inspection item in the overall judgement.	No     Yes (Default)	Scene	

		Me	enu	command	Description	Setting range	Data							
Inspection	Details	(Area* <sup>2</sup> )	Meas. Parameter	Fill profile	You can set how to process holes for an Area inspection item.	None (Default)     Filling up holes     Fill Outline	Scene	p. 308						
			Output parameter	Reflect	You can specify whether to reflect the judgement results of an inspection item in the overall judgement.	No     Yes (Default)	Scene	p. 319						
	•	ing*²)	Parameter	Filling up holes	Sets how to process areas surrounded by the specified color.	Yes    No (Default)	Scene	p. 308						
		(Labeling* <sup>2</sup> )	Meas. Para	Extract image	Select this option if there are areas of the specified color inside the measurement region that you do not want to measure.	Yes    No (Default)	Scene	p. 317						
				Extraction condition			Scene							
				Number of labels	Set the maximum number of labels to detect.	Range: 1 to 100 Default: 100	Scene	_						
				Area	Specify the area range to judge as a label.	Range: 0 to 999,999,999.9999 (Defaults: Lower limit: 0 Upper limit: 999,999,999.9999)	Scene	p. 317						
				Gravity X	Specify the gravity X position to judge as a label.	Range: -99,999,999.9999 to 999,999,999.999 (Defaults: Lower limit: 0 Upper limit: 999,999,999.9999)		040						
										Gravity Y	Specify the gravity Y position to judge as a label.	Range: -999,999,999.9999 to 999,999,999.999 (Defaults: Lower limit: 0 Upper limit: 999,999,999.9999)		- p. 218
				Sorting method	Set the condition to use for label number reassignment.	Area ascending order Area descending order (Default) Pos. X ascending order Pos. X descending order Pos. Y ascending order Pos. Y descending order	Scene	p. 319						
			utput parameter	Reflect	You can specify whether to reflect the judgement results of an inspection item in the overall judgement.	No     Yes (Default)	Scene	p. 319						

		Me	enu	command	Description	Setting range	Data	
Calculation	Settings	Expression	[MENU]	Expression 0 to expression 31	Sets the number of the expression for which to set a calculation.		Scene	
Calcu	Se	Expre	<u>N</u>	Expression set- tings	Sets the expressions.		Scene	- p. 323
				Data	Uses the measurement result of other items.	Inspection item calculation symbols ( ( ) / * . , + TJG)	Scene	p. 330
				Const.	Inputs constants or mathematical operators.	0 to 9, ., calculation symbol (()/*?, + TJG)	Scene	p. 330
				Math.	Uses functions in expressions.	SIN, COS, ATAN, AND, OR, NOT ABS, MAX, MIN, MOD, SQRT, ANGL (angle of straight line joining two points (center of gravity and model center)), DIST (distance between two points), calculation symbols ( ( ) /*., + TJG)	Scene	p. 330
				Rename	Deletes/copies the expression or changes the expression name.		Scene	
				Сору	- Glanges the expression hame.			p. 330
				Delete				
		Jud	lgei	ment	Specifies the parameters for judgment of results.		Scene	p. 323
	Details	Output parameter	Re	flect	You can specify whether to reflect the judgment results of a calculation in the overall judgment.	No     Yes (Default)	Scene	p. 323
Retry details		хС		etry)	Sets the number of retries.	0 to 20 Default: 4	Scene	
Retry o		erva		etry)	Sets the retry interval (msec).	32 to 999 Default: 100	Scene	
	Brig spe (Exp	eed	ste	s step or Shutter p retry)	Sets the exposure time step (msec).	Brightness step: 1 to 20, Default 5     shutter speed step: 0.01 to 1.00 (Default: 0.30)	Scene	*1
				count retry)	Sets the increment count for the brightness (shutter speed) step.	0 to 10 (Default: 2)	Scene	
				t count retry)	Sets the decrement count for the brightness (shutter speed) step.	0 to 10 (Default: 2)	Scene	

Refer to FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338). Not supported on the FQ2-CH Series. Not supported on the FQ2-S1/S2/S3 Series or FQ2-CH Series. Not supported on the FQ2-S1/S2/S3 Series. \*1 \*2 \*3 \*4

### In/Out Tab Page

	N	Иen	u comm	and	Description	Setting range	Data	
Log setting	Sta	ıtisti	ical data		Sets whether to record the number of measurements and the number of NG overall judgments.	ON (Default) OFF	System	p. 402
	lma	age	logging		Sets the parameter to log measurement image data.	All     Only NG     None (Default)	System	p. 395 p. 402
	Dat gin	ta lo		dition	Sets the parameter to log measurement data from inspection items.	All     Only NG     None (Default)	System	p. 395
			Select data		You can select the parameters to log from the parameters in the filter items, position compensation items, inspection items and expression that are set.	Parameter names for the filter items position compensation items, inspection items and expression that are set	System	p. 396
	Del	lete	Log		Resets the log data without turning OFF the power supply.			p. 403
I/O setting	I/O setting	Output	OUT0 to OUT2	Control signal	Specify the output signal to OUT0 to OUT2.  When model FQ-SDU is connected, OUT0 to OUT2 are not displayed.	OR (Total judgement (Default assignment: OUTO)) BUSY ERROR (Default assignment: OUT2) READY (Default assignment: OUT1) RUN STG  OR0 (Item0 judgement) to OR31 (Item31 judgement)	System	*1
				JT2 Item When model FQ-SDU is connected,				
			OR out	out	OK: ON NG: ON (Default)		System	*1
			Output mode		You can set the output mode for the OR signal and for output signals to which judgements are assigned.	One-shot output     Level output (Default)	System	*1
		٠	Output	delay	When one-shot output mode is selected, this parameter sets the delay from when measurement processing is completed until when the OR signal turns ON.	0 to 1,000 ms (Default: 0 ms)	System	*1
			Output	time	When one-shot output mode is selected, this parameter sets the time that the OR signal is ON.	1 to 1,000 ms (Default: 5 ms)	System	
			BUSY o	output	Specifies when to turn OFF the BUSY signal after starting measurement processing.	Measurement (Default)     Data logging     Image logging     Result display	System	*1

FQ2-S/CH User's Manual Menu Tables 465

N	/len	u command	Description	Setting range	Data	
setting	Output	OUT0 Polarity	You can change the polarity of the output signals that are assigned to OUT0 to OUT2 (regardless of what signal is assigned to the output). When FQ-SDU is connected, OUT0 to 2	Positive (Default)     Negative	System	*1
9		OUT1 Polarity		Positive (Default)     Negative	System	
		OUT2 Polarity	⊣ will not appear.	Positive (Default)     Negative	System	
		BUSY LED	You can change the BUSY indicator to a RUN indicator.	BUSY (Default)     RUN	System	*1
		Output control	You can select the data output method. (Only when the FQ-SDU1□ is connected.)	None (Default) Handshaking Sync. Output	System	*1
		Output period	Sets the period for outputting measurement results. (Only when the FQ-SDU1 is connected.)	2.0 to 5,000.0 ms 10.0 ms (Default)	System	*1
		GATE ON delay	Sets the time from when the result is output to the parallel interface until the GATE signal turns ON. (Only when the FQ-SDU1 is connected.)	1.0 to 1,000.0 ms 1.0 ms (Default)	System	*1
		Output time	Sets the time to turn ON the GATE signal. (Only when the FQ-SDU1 is connected.)	1.0 to 1,000.0 ms 5.0 ms (Default)	System	*1
		Timeout	Sets the timeout time for output control. (Only when the FQ-SDU1 is connected.)	0.5 to 120.0 s 10.0 s (Default)	System	*1
		Number of delay	Set the number of times to ignore the TRIG signal turning ON between when the TRIG signal turns ON and the measurement results are output. (Only when the FQ-SDU1 is connected.)	1 (Default) to 15	System	*1
		ACK signal ON period	Sets the output time of the normal execution completion signal for parallel commands.  (Only when the FQ-SDU is connected.)	1.0 to 1,000.0 ms 5.0 ms (Default)	System	*1
		Output polarity	Sets the ON/OFF polarity for all of the output signals (Only when the FQ-SDU is connected.)	Positive (Default)     Negative	System	*1
	Input	Input mode	Specifies whether to use functions other than scene switching for external parallel commands.	Standard mode (Default)     Expanded mode	System	*1
setting	output	Output data set		Data 0 to data 31	Scene	
ta sel	Noprotocol data ou	Data settings Multi-data	Sets data to output to selected data number.	Text strings for the filter items, position compensation items, inspection items and expression that are set	Scene	
Output data		Multi-data setting			Scene	
		Rename	Changes the name of the selected data number.	The name can be changed to a name with up to 15 alphanumeric characters.	Scene	*1
		Сору	Copies the contents registered in the selected data number to another data number.		Scene	
		Delete	Clears the content of the selected data number.		Scene	

dices
9

467

	1	Men	u cc	mma	and	Description	Setting range	Data	
I/O setting	Output data setting	Ou	itput	char	acter set	Specifies the output settings for characters read by OCR, Bar code, 2D-code, and 2D-code (DPM).			
//	ıtput da		String output on/ off		utput on/	Selects whether the string that was read is output.	ON OFF (Default)	Scene	
	3		Pai off	rtial c	output on/	Selects whether part of the string is to be specified for output.	ON OFF (Default)	Scene	*1
			Ou set		string	Species the part of the string that is output.	1 to 1024 (Defaults: beginning: 1, end: 1024)	Scene	
				Strii on/o	ng out- off	Specifies whether NG strings are output.	ON OFF (Default)	Scene	
		Ou	tput	form	)				* <sup>1</sup>
			Pro	toco	form (No- I (TCP) Protocol only)	Selects the format of the data to be output.	ASCII (Default)     Binary	Scene	
			format is ASCII	Digits of integer of product of the		Sets the digits of the integer part, including the sign. However, + is not output for positive numbers.  Example: Setting 4-digit data: -5963 is output as -999.	1 to 10 (Default: 6)	Scene	
			Vhen output	Digit imal	ts of dec-	Sets the output digits for the decimal part. If it is set to 0, the decimal part is rounded off before the data is output.	0 to 4 (Default: 4)	Scene	
			>	Neg	ative	Selects what to display as the sign when the number is negative.	• – (Default) • 8	Scene	*1
				0 su	ppress	Selects the method to adjust unused digits on the left in output data.  Example: The following examples are for when five integer digits and three decimal digits are set and the data is 100.000.  ON: 00100.000 OFF: 100.000 (The underscore indi-	ON OFF (Default)	Scene	
		ocol data output	Output form	Format Is ASCII	Field separa- tor	cates a space.)  Selects the separator to use between output data.	None (Default) comma tab, space CR F CR CR+LF	Scene	*1
		Noprot		When Output	Record separa- tor	Selects the separator to use between sets of output data.	None (Default) comma tab space CR LF CR+LF	Scene	
				When output format is Binary	Deci- mal output form	Selects the numerical expression for binary output. Fixed-decimal-point data is multiplies by 1,000 and the result is output.	Floating-point decimal or fixed decimal (Default)	Scene	
				(No- (TCI No-I	out form Protocol P) and Protocol P) only)	Sets whether to output the data.	Floating-point decimal     Fixed decimal (Default)	Scene	*1

IV	/len	u cc	mmand	Description	Setting range	Data	
ting	output	Ou	tput data set			Scene	
data setting	s data ou		tput charac- set			Scene	
Output	Link data / Fieldbus data	Output format		The same as for no-protocol data output, above.		Scene	- *1
ed.)	Basic	Set	tings		Data0 to Data15	Scene	
connect	Θ	•	Settings	Sets the data from the inspection item to judge.	Inspection item text strings	Scene	
si 🗆			Rename			Scene	
DU1			Сору	Changes, copies, or clears the data.		Scene	
FQ-S			Delete			Scene	
Par. Jdg Output(Only when the FQ-SDU1□ is connected.		Judgement condition	Data 0 to Data 15	Sets the range of the output data to judge OK.	Range: –999,999,999.9999 to 999,999,999.999 Defaults: Upper limit: 999,999,999.999 Lower limit: –999,999,999.9999	Scene	*1
Par. Jdg	Details	parameter	Reflect	You can specify whether to reflect the judgment results of an inspection item in the overall judgment.	No     Yes (Default)	Scene	*
		Output p	Data output	Sets whether to output the judgment results.	No     Yes (Default)	Scene	*
ted.)	Basic	Da	ta settings		Data0 to Data31	Scene	
nnec	a		Data settings	Sets the output data.	Inspection item text strings	Scene	
is co		4	Rename			Scene	*
DU1 <sub>E</sub>			Сору	Changes, copies, or clears the data.		Scene	
FQ-S			Delete			Scene	
Par. Data Output (Only when the FQ-SDU1□ is connected.		Output format	Output for- mat	Sets the output form.	Binary(Default) or BCD	Scene	*1
Par. Data Output	Output parameter	Data output	Output form	Sets whether to output the data.	No     Yes (Default)	Scene	*
		nito	r	Used to check I/O connections.			p. 38

<sup>\*1</sup> Refer to FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338).

## **Test Tab Page**

ı	Menu command	Description	Setting range	Data	
ontin	uous test	Used to check the individual judgment results for the inspection items and to adjust the judgment parameters.			
Gra	aphic	Displays the input image.			p. 340
Gra	aphics + Details	Displays the inspection item individual judgment results and measurement values.			
All	results/Region	Displays the inspection item individual judgment results for all inspection items.			p. 34
Tre	end Monitor	Displays the individual judgment results saved in the Sensor in a trend monitor.			p. 34
His	stogram	Displays the individual judgment results saved in the Sensor in a histogram.			p. 35
	Model region	Same as for the Search item settings.		Scene	
4	Insp. region			Scene	
	Adjust judgement	Adjusts judgment parameters without stopping measurements.		0	p. 34
	Result type	Specifies the measurement result type.	Absolute value (Default)     Relative value     Ratio	Scene	p. 34
Top enormalismo	Display setting  Auto judgement con-	Specifies whether to display individual inspection results.  Automatically adjusts the judgment	Area, Labeling  Measurement image  All color image (Default)  Selected color image  Binary image  When the Shape Search III  Meas. Img.  Meas. Img.+Model Img.  Edge Image Edge Img.+ Model Img.  OK Teach	Scene	p. 341
	dition setting	parameters by using actual workpieces which are considered as good or faulty products.	NG Teach		
	Method	Selects the expression to use to automatically adjust the judgment parameters.	Threshold (minimum) Threshold (average) (Default) Threshold (maximum)		
	Auto display (trend monitor and histo- gram only)  Display range (trend monitor and histo-		for [Dur] Made		p. 35 p. 36
	Number of data (trend monitor only)	Same as the trend monitor and histogram	тог [кип] моде.		p. 35
	Number of data (histogram only)				p. 36
	Erase display				
	Save data	Saves scene data, Calibration data, and			p. 35

FQ2-S/CH User's Manual Menu Tables 469

# Run Tab Page (from Setup Display)

Menu command	Description	Setting range	Data	
Switch to Run mode	Switches to Run Mode.			p. 353

## **Tool**

### Setup Mode

470

		Men	u com	mand		Description	Setting range	Data	
Se	lect	ct scene							
	Se	lect				Switches to a registered scene.		Scene	=
	Re	Rename				Used to delete, copy, or change the name	15 alphanumeric characters		p. 366
	Со	ру				of a scene.			
	Cle	Clear							
nu*2	Se	lect				Sets a registered calibration pattern.	Calibration data 0 to 31		
Calibration*2	Мс	odify				Used to edit calibration data.	Calibration data 0 to 31	Calibra- tion data	
O		Sp	Specify point						p. 371
	1	Re	ferenc	е		Sets the type of calibration data to set.	Specify point (No. 1 to No. 9)		p. 374
		Pa	ramete	er					p. 377
		4	Modify			Sets the parameters for the calibration data.			
			(Specify point)	4	Specify point coord.	Sets the Camera coordinates.		Calibra- tion data	
					Actual coord.	Sets the Camera coordinates and the actual coordinates.	Point coordinate: 0 to 9999 Actual coordinate: 0 to 99999.9999	Calibra- tion data	p. 371
					Generate parameters	Used to create calibration parameters.		Calibra- tion data	

ndices
ဖ

	N	Men	u con	nmand		Description	Setting range	Data					
Calibration*2	•	4	(Reference sampling)	4	Model region	Used to edit the model regions. The procedure is the same as for setting the model region for a Search inspection item.		Calibra- tion data					
			(Refere		Insp. region	Changes the size and position of the measurement region.		Calibra- tion data	p. 374				
					Actual coord.	Sets the Camera coordinates and the actual coordinates.	Point coordinate: 0 to 9999 Actual coordinate: 0 to 99999.9999	Calibra- tion data					
			(Parameter) (Reference sampling)	Reference sampling)	(Reference sampling)	(Reference sampling)	(Reference sampling)		Generate parameters	Used to create calibration parameters.		Calibra- tion data	p. 374
			neter)	Coord	li-	Sets the positive direction when specifying coordinates.	Righthand     Lefthand (Default)	Calibra- tion data					
			(Paran	Origin	1	Select the location of the origin of the coordinate system.	Lowerleft     Upperleft (Default)     Center	Calibra- tion data	p. 377				
				Magn tion	ifica-	Set the actual dimension that corresponds to one pixel.	0.0001 to 9.9999 (Default:1.0000)	Calibra- tion data					
	Cle	ear				Clears the parameter settings for the calibration data.							
	Со	ру				Copies the calibration data.							
	Re	Changes the name of the calibration data.				Changes the name of the calibration data.	15 alphanumeric characters max.	Calibra- tion data					
Model dictionary*2	a 0 to 31	[MENU]		Modify		Used to edit the dictionary data in the model dictionary for character recognition using custom characters.		Dictionary data					
odel dic	Dictionary data 0 to		F	Rename	Э	Changes the name of dictionary data.	15 characters max.	Dictionary data	p. 175				
ž	iction			Сору		Copies dictionary data.							
	D		Clear			Clears the settings of dictionary data.							
Save to file	Setting	Sc	ene da	ata		Saves scene data with an SCN file name extension.							
Save	S		ene gi	roup da	ita	Saves all scene data with an SGP file name extension.							
		Са	libratio	on data	l	Saves calibration data with an CLB file name extension.							
		Ca dat		on grou	ıp	Saves calibration group data with an CGP file name extension.							
		Dic	ctionar	y data*	-2	Saves dictionary data with a DIC file name extension.			p. 406				
		All	dictio	nary da	ıta* <sup>2</sup>	Saves all dictionary data with a DGP file name extension.							
		Со	de da	ta* <sup>2</sup>		Saves all dictionary data with a DGP file name extension.							
		Se	nsor s	system	data	Saves system data with csv file name extension.							

	Menu con	nmand	Description	Setting range	Data	
2	All Sens	or data	Saves all Sensor data with a BKD file name extension.			p. 406
		nder data	Saves Touch Finder data with an MSD file name extension.			p. 400
	Statistica	al data	Saves statistical data with a CSV file name extension.			
-	Logging	image	Saves image data with an IFZ file name extension.			p. 403
	Logging	data	Saves measurement data with a CSV file name extension.			
S	cene data		Loads scene data.			
S	cene group	o data	Loads scene group data.			
S	Calibration of	lata	Loads calibration data.			
-	Calibration (	group data	Loads calibration group data.			
D	ictionary d	ata* <sup>2</sup>	Loads dictionary data.			
Α	II dictionar	y data* <sup>2</sup>	Loads all dictionary data.			p. 408
C	Code data*2	!	Loads all dictionary data with .csv file name extension.			
S	ensor syst	em data	Loads system data.			
Α	II Sensor d	ata	Loads all Sensor data.			
T	ouch Finde	r data	Loads Touch Finder data.			
i Ir	nformation		Used to check the Sensor information.			
lr lr	Model Version		Used to check the model, software version , and hardware version of the connected Sensor. (The hardware version can only be confirmed with software version 2.3 or later.)		System	*1
	Name		Displays the name of the connected Sensor.			
	MAC ad	dress	Used to check the MAC address of the connected Sensor.			
	4	Rename	Used to change the name of a connected Sensor.	15 alphanumeric characters max.		p. 367
		Memory state	Used to check the status of Sensor memory.			p. 367
Е	rror history	View his- tory	Displays a history of errors that have occurred in the Sensor.			p. 436
		Delete his- tory	Deletes the error history.			p. 436
	startup set- ngs	Startup mode	Sets whether the startup scene number is set manually.	ON OFF (Scene number when settings were saved is startup scene number.)	System	p. 368
		Startup scene	Set the scene number to use at startup.	Standard models: 0 to 31     Single-function models: 0 to 7 Default: 0	- System	μ. 300
	ensor Day	Current Day/Time	Confirms the current day and time information of Sensor.		System	p. 168
		Auto-Sync with TF	Synchronizes automatically the day and time setting of TouchFinder when the TouchFinder is connected.	ON OFF (Default)	- Gysteill	p. 167

ices	
•	

473

ı	Men	u com	ımand	Description	Setting range	Data	
	ssw		Password ON/OFF	Enables (ON) or disables (OFF) the password.	OFF (Default)     ON	System	p. 413
			Enter password	Sets a password.	15 characters max.	System	р. 410
Tin	neo	ut* <sup>2</sup>	Sets the timeout time during measurements.		100 to 30,000 ms (Default: 30,000 ms)	System	p. 367
Measurement retry*2	Re	try mo	ode	Sets the type of retry for measurements.	Normal retry     Expose retry     Scene retry     Trigger retry     None (Default)	System	p. 42
Measu			rder (for try only)	Sets the method for changing scenes.	Auto (Default)     Fixed	System	
			ene (for try only)	Changes the order in which to change the scenes. Scenes are registered in order from the first scene.	1st to 32nd	System	p. 420
Ad Ru	djustment mode in un			Sets whether to adjust measurement contents in Run Mode.	OFF (Default)     ON	System	p. 362
ngs	Eth	ernet					
Network settings		IP ad ting	dress set-	Sets the method to use to set IP addresses.	Auto (Default)     Fixed     DHCP	System	p. 67
S		IP ad	dress	Enter the IP address of the Sensor. (Valid only when the [IP address setting] is set to [Fixed].)	a.b.c.d a: 1 to 223 b: 0 to 255 c: 0 to 255 d: 2 to 254 (Default: 10.5.5.100)	System	p. 67
		Subn	et mask	Inputs the subnet mask. (Valid only when the [IP address setting] is set to [Fixed].)	0.0.0.0 to 255.255.255.255 (Default: 255.255.255.0)	System	p. 67
		Gate	way	Sets the Default gateway address. (When the [IP address setting] is set to [Fixed].)	1.0.0.1 to 223.255.255.254 (Default: 10.5.5.1)	System	p. 07
Data output	No-protocol data	Communication type		Sets the communications type to use to output no-protocol data.	No protocol (TCP) (Default) No protocol (FINS/TCP) No protocol (RS-232C)* No-protocol (UDP) * Displays by connecting FQ-SDU Sensor Data Unit.	System	*1
		tions ty	he communica- pe is TCP no- I, FINS/TCP no- I or UDP No-pro-				
			Connection mode	Sets whether to communicate with the communications devices as a server device or a client device.  * Cannot be specified when the communication type is no-protocol (UDP).	TCP server (Default) TCP client	System	*1
			IP address	Sets the IP address to which to output no- protocol data.  *Setting is not possible if the connection mode is set to a TCP server.	a.b.c.d a: 1 to 223 b: 0 to 255 c: 0 to 255 d: 1 to 254 (Default:10.5.5.111)	System	*1
			Output port No.	Sets the output port number.  * Setting is not possible if the connection mode is set to a TCP server.	0 to 65535 (Default: 9876 (FINS/TCP) 9600 No-protocol (UDP))	System	*1
			Input port No.	Sets the input port number.	0 to 65535 (Default: 9876 (FINS/TCP) 9600 No-protocol (UDP))	System	*1

FQ2-S/CH User's Manual Menu Tables

	1	Men	u com	mand		Description	Setting range	Data	
Sensor settings	Data output	No-protocol data			type				
Sen		No-p		Baud	rate	Set the baud rate to use for RS-232C communications.	2400, 4800, 9600, 19200, 38400, 57600, or 115200 (Default: 38400)	System	* <sup>1</sup>
				Data lengtl	h	Sets the data length.	7bit     8bit (Default: 8bit)	System	*1
				Parity	/	Sets the parity.	None Odd Even (Default: None)	System	* <sup>1</sup>
				Stop	bit	Sets the number of stop bits.	1bit 2bit (Default: 1bit)	System	*1
				Flow trol	con-	Sets the controls for the flow of communications with the software.	None Xon/Xoff (Default: None)	System	*1
				Delim	niter	Set the delimiter to add to the end of commands and responses.	CR LF CR+LF (Default:CR)	System	*1
			tions type o-protocol	Intervitimed (text)	ut	Timeout [s] Set the time in seconds to generate a timeout error.	1 to 120 s, 0: Not monitored. (Default: 0 s)	System	* <sup>1</sup>
			When the communications type is RS-232C no-protocol	Interval Int		Timeout [s] Set the time in seconds to generate a timeout error.	1 to 120 s, 0: Not monitored. (Default: 0 s)	System	*1
		Link data output	Comn	nunica	ation	Sets the communications type to use for EtherNet/IP outputs.	Invalid (Default) PLC link (SYSMAC) PLC link (MELSEC)	System	* <sup>1</sup>
			tings( comm	rea set- ngs(Only when ommunications /pe is PLC Link)					
				Sets the area to write come the Sensor. Control inputs, command of		Sets the area to write command data to the Sensor. Control inputs, command codes, and command parameters are written to this area.	PLC Link (SYSMAC CS/CJ/CP/One) CIO Area (CIO) (Default) Work Area (WR) Holding Bit Area (HR) Auxiliary Bit Area (AR) DM Area (DM) EM Area (EM0 to EMC)  PLC Link (MELSEC QnU/Q/QnAS) Data Register (Default) File Register Link Register	System	*1
					Address	Set the first address of the command area.	0 to 99,999 (Default: 0)	System	
				Response	Area type	Sets the area to write execution results from the Sensor. Control outputs, command codes, response codes, and response data	PLC Link (SYSMAC CS/CJ/CP/One) CIO Area (CIO) (Default), Work Area (WR), Holding Bit Area (HR), Auxiliary Bit Area (AR), DM Area (DM), EM Area (EM0 to EMC)  PLC Link (MELSEC QnU/Q/QnAS) Data Register (Default) File Register Link Register	System	*1
					Address	Set the first address of the response area.	0 to 99999 (Default: 100)	System	

	١	Men	u com	mand		Description	Setting range	Data	
Sensor settings	Data output	Link data output	Area settings	Area settings Output		Sets the area to write output data from measurements. Output data 0 to 31	PLC Link (SYSMAC CS/CJ/CP/One) CIO Area (CIO) (Default) Work Area (WR) Holding Bit Area (HR) Auxiliary Bit Area (AR) DM Area (DM) EM Area (EM0) EM Area (EM1) : EM Area (EMC) PLC Link (MELSEC QnU/Q/QnAS) Data Register Link Register	System	*1
					Address	Set the first address of the output area .	0 to 99999 (Default: 200)	System	
			Outpu	ut hand	d-	Sets whether to establish an interlock with the PLC when data is output.	No (Default)     Yes	System	*1
			Retry details			Enables or disables retrying communications.	ON (Default) OFF	System	*1
			Retry interval			Sets the interval for retrying communica- tions. This setting is enabled only when [Retry details] is set to [ON].	0 to 2,147,483,647 ms (Default:10,000 ms)	System	*1
			Max output data			Sets the upper limit of the number of output data to use for PLC Link outputs. Any output data that is beyond this value is discarded.	32 to 1024 (Default: 256)	System	*1
			Conn mode	ection		Sets the TCP connection mode.	TCP server (Default) TCP client	System	*1
			Data period	output d		Set the period for outputting measurement results. This parameter is displayed and can be set only when [Handshake setting] is set to [No].	2 to 5,000 ms (Default: 40 ms)	System	*1
			GATE signal ON period		I ON	Set the time to turn ON the GATE signal. This parameter is displayed and can be set only when [Handshake setting] is set to [No].	1 to 1,000 ms (Default: 20 ms)	System	*1
			IP address		Sets the IP address to which to output.  * Setting is not possible if the connection mode is set to a TCP server.		a.b.c.d a: 1 to 223 b: 0 to 255 c: 0 to 255 d: 1 to 254 (Default:10.5.5.111)	System	*1
			Outpo	ut port	No.	Sets the output port number.  * Setting is not possible if the connection mode is set to a TCP server.	0 to 65535 (Default: 9600)	System	*1
		t settings	Comr type	nunica	tion	Specifies the type of communication used for Fieldbus data output.	Invalid (Default) EtherNet/IP PROFINET	System	*1
		Fieldbus data output	Outpu	ut hand	d-	Sets whether to establish an interlock with the PLC when data is output. OFF: Outputs data regardless of the state of the signal from the PLC. Handshake: Outputs data after recognition of DSA from the PLC.	No Yes (Default)	System	*1
		Œ	Outpu	ut data	size	Sets the data size to output for EtherNet/ IP or PROFIBUS output. If the data size that is set is exceeded, data will be output in more than one transfer.	32 bytes (Default) 64 bytes 128 bytes 256 bytes	System	* <sup>1</sup>
			Refre	shing t	task	Set the communications cycle for cyclic tag data link communications for the Sensor.	1 to 10,000 ms (Default:10 ms)	System	*1

FQ2-S/CH User's Manual Menu Tables

475

	N	Men	u com	mand	Description	Setting range	Data	
ettings	output	settings	Timed	out	Sets the timeout time when handshaking is enabled.	0.1 to 120.0 s (Default: 10 s)	System	*1
Sensor settings	Data	Fieldbus data output s	Data period	output d	Set the period for outputting measurement results. This parameter is displayed and can be set only when [Handshake setting] is set to [No].	2 to 5,000 ms (Default: 40 ms)	System	*1
		Fieldbu	GATE	signal ON	Set the time to turn ON the GATE signal. This parameter is displayed and can be set only when [Handshake setting] is set to [No].	1 to 1,000 ms (Default: 20 ms)	System	* <sup>1</sup>
•	Init	ializ	e		Initializes the Sensor settings and saved data.			p. 429
	Re	star	t		Restarts the Sensor.			
	Up	date	•		Updates the Sensor system to the most recent data.			p. 577
TF settings	Info	orma	ation	Used to check the Touch Finder information				
片		Model			Used to check the Touch Finder model.		Touch	
		Version			Used to check the software version of the Touch Finder.		Finder data	p. 429
		MAC address			Used to check the MAC address of the Touch Finder.			
		•	Memo	ory state	Used to check the Touch Finder memory state.			p. 383
	Err	or h	istory	View history  Delete history	Displays a history of errors that have occurred in the Touch Finder.  Deletes the error history.			p. 438
1	Bat	ttery	/ level		Used to check the battery level.			p. 384
·	File format	file Logging image file	File name prefix File name prefix		You can set a character string to add to the beginning of the file name for logged data.		Touch Finder data	p. 397
		Logging data	Outpu	Pield separator  Decimal symbol  Record separator	Used to set the output format for output log data to a file.	None Comma (Default) Tab Space Colon Semicolon CR CR+LF None Point (Default) Comma  None Comma Tab Space Colon Semicolon CR CR+LF NORE COMMA TAB C	Touch Finder data	p. 398

ဖ

О
$\boldsymbol{\sigma}$
Ф
⊐
σ
Ξ.
Ω
Œ
S

Menu command		mand	Description	Setting ran	ge	Data		
SE	) card	SD card information	Displays the capacity and remaining memory in the SD card.			Touch Finder	p. 41	
informa-			Formats an SD card.			data	p. 41	
		screen	You can select the display to appear on the Touch Finder when more than one Sensor is connected.	Multi Sensor NG sensor Single sensor Auto (Default)			p. 38	
			You can specify one Sensor to connect to the Touch Finder.	ON OFF (Default)		Touch	p. 41	
			Sets the display to use in Run Mode. (Only appears when [Start screen type] under [Startup display] is set to [Single sensor].)	All results/Region Stat	istical data	Hinder data	p. 35 p. 41	
		update	Sets the image to update in Run Mode.	proper on a than one a		p. 38		
		Sensor List	Sets whether to display the Sensor List. Ver.2.3 or later			Touch Finder data		
	D back-	Brightness	Sets the brightness.	0 to 5			p. 38	
lig	nt	ECO mode	Enables (ON) or disables (OFF) ECO Mode.				p. 38	
Et							p. 67	
DHCP			Used to automatically connect to the IP address of the Touch Finder.				p. 67	
	IP address Subnet mask		Inputs the IP address of the Touch Finder. (Valid only when the [IP address setting] is set to [Fixed].)	a:1 to 223 b: 0 to 255 c: 0 to 255		Touch	p. 67	
			Inputs the subnet mask. (Valid only when the [IP address setting] is set to [Fixed].)			Finder	p. 67	
	Gateway		Sets the Default gateway address. (When the [IP address setting] is set to [Fixed].)				p. 67	
Αu	ito sensor	detection	The Touch Finder can detect Sensors and automatically connect to them in the order that it detects them.			Touch	p. 38	
Lo	gging sett	ing	You must enable file logging before you can execute it.			Finder	p. 39	
Language			Changes the language to display on the Touch Finder.	French, Italian, Spanish, Traditional Chinese Simplified Chinese Korean, Japanese (The Default language is selected at			p. 42	
Tir	Gateway  uto sensor detection  ogging setting		Used to set the current date and time.	Default: Selected at star	tup.		p. 42	
То	uch screei	n calib	Used when there is an offset between the touch screen positions and pointers.				p. 42	
Ini	tialize		Initializes the Touch Finder settings.				p. 42	
Re	estart		Restarts the Touch Finder.				p. 42	
Up	odate		Updates the Touch Finder system to the most recent data.				p. 57	
Re-assign IP forcibly		forcibly	Executed when a sensor on the same net- work cannot be detected and the sensor's IP address is not known.				p. 43	

Refer to FQ2-S/CH Series User's Manual for Communications Settings (Cat. No. Z338). Not supported on the FQ2-S1/S2/S3 Series. Not supported on the FQ2-CH Series.

#### **Run Mode**

	Menu command	Description	Setting range	Data	
Gr	aphic	Displays the input image.			
Gr	aphics + Details	Displays the inspection item individual judgement results and measurement values.			
Sta	atistical data	Displays the total number of measure- ments and the total number of NG overall judgements and the NG ratio from when the power supply was turned ON.			p. 35
All	results/Region	Displays the inspection item individual judgement results for all inspection items.			
Tre	end Monitor	Displays the individual judgement results saved in the Sensor in a trend monitor.			p. 35
Hi	stogram	Displays the individual judgement results saved in the Sensor in a histogram.			p. 36
4	Model region (Search, Shape Search III, Search, Shape Search II, and Sensi- tive Search only in [Adjustment mode in Run] to [ON])	Changes to Setup Mode to adjust the model region set for each inspection item.	 		
	Insp. region (Only in [Adjust- ment mode in Run] to [ON])	Changes to Setup Mode to adjust the inspection region set for each inspection item.			
	Select display image (Area and Labeling only)	Changes the display method of the extracted color.	For Area and Labeling Measurement image (Default) Color extraction image Binary image after extraction  For Area and Labeling Measurement image (Default) ImageMeas. Img. +Targ. Mdl. Edge Image Edge Image+Targ. Mdl.	Touch Finder data	
	Adjust judgement (Except for statistical data)	Adjusts judgement parameters without stopping measurements.			p. 36
	Auto display (trend monitor and histo- gram only)	Automatically sets the display range according to the measurement results.	OFF ON (Default)		p. 35 p. 36
	Display range (trend monitor and histo- gram only)	Changes the display range of measurement values.	Measurement value: -999,999,999 to 999,999,999 (Defaults: Lower limit: 0 Upper limit: 100) class: 5 to 100 (Default: 10) (Histograms only)		p. 35 p. 36
	Number of data (trend monitor only)	Changes the number of displayed measurement values.	200 400 1000 (Default: 200)	Touch Finder data	p. 35
	Number of data (histogram only)	Changes the number of displayed measurement values (i.e., the vertical display range of the histogram).	5 to 1,000		p. 36
	Clear results (graphic or graphic + details list)	Clears the measurement results of the inspection items.			
	Delete stats (total data)	Clears the Statistical data.			

	Ċ	1		
4	,		•	

	Menu command	Description	Setting range	Data	
ing	Image logging	Starts and stops logging in external mem-	ON: Start or OFF: Stop		200
Logging	Data logging	ory.	ON: Start or OFF: Stop		p. 399
	settings	The same as for Setup Mode. (This does not not resolution of the measurement image of			p. 428
Se	nsor setting	Switches to Setup Mode.			p. 353
nonitor	Single sensor	Displays the image of a sensor specified from among multiple connected sensors.		Touch	
Sensor monitor	Multi sensor	Simultaneously displays the images for multiple connected Sensors.		Finder data	
(C)	Display position	Specifies the display position when multiple sensors are connected.			
	Auto position	Resets the display position.			
	Setting disp. info.	Specifies the information displayed for the connected sensor.	OFF IP address (Default) Sensor name	Touch Finder	p. 389
	NG sensor	From multiple connected Sensors, displays the image of only the Sensors with NG results.		data	
Isor	Select	Switches to the selected Sensor.			
Switch sensor	Display position	Specifies the display position when multiple sensors are connected.		Touch	
Š	Setting disp. info.	Specifies the information displayed to identify the connected sensor.	OFF IP address (Default) Sensor name	Finder	
Se	nsor list	Specifies sensors to be connected.			
	Network	Changes the network settings of a sensor.			
	Switch sensor	Applies the connection settings and changes the displayed sensor.			
	Delete	Deletes a sensor from the sensor list.			
	Comm. test	Tests communication with the sensor.			p. 388
	Add	Adds a fixed IP address to the sensor list.			
	Update list	Updates the sensor list to the most recent state.			

479 Menu Tables

#### **Common Menu Commands**

N	Menu command	Description	Setting range	Data	
Or	nly-image Button	Hides text and displays only the image.			p. 384
Dis-	Zoom-in Button	Enlarges the image display.			
play Button	Zoom-out Button	Reduces the image display.			p. 380
	FIT Button	3 1 7			
	Live	Switches the camera image between a live image and a frozen image.	(Only in Setup Mode)		p. 380
	II Freeze	image and a nozen image.	(Crity in Setup Mode)	_	p. 381
	Display But- ton	Changes the image display method.	Setup Mode: Camera (Live, Freeze) Log Logging image file Camera image file Run Mode: Latest image or Last NG image		p. 380 p. 381 p. 383
	Log Image Button (Only in Setup Mode)	You can save the Camera image that is displayed on the Touch Finder or computer.			p. 382
Capture Button		Used to capture the current display and save it in external memory, e.g., an SD card.			p. 415

# 1-2 External Reference Parameters



### **Color Gray Filter (Color type only)**

External reference number	Category	Data name	Set/Get	Data range	Default	Expression text string	Logged data/ Judge- ment parameter
0	Measurement result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	
120		Source image	Set / Get	0: Camera image 1: Previous image	1		
121		Setting method	Set / Get	0: Filtering OFF, 1: Filtering ON	1		
122		Filter type	Set / Get	Filter type 0: RGB 1: HSV	0		
123	Measurement conditions	Color filter type	Set / Get	Color Filter Type 0: Red filter 1: Green filter 2: Blue filter 3: Cyan filter 4: Magenta filter 5: Yellow filter 6: Gray filter (R+G+B) 7: Gray filter (R+2G+B) 8: Gray filter (user-set)	0		
124		Color gray filter type	Set / Get	Color Gray Filter Type 0: High speed, 1: High precision	1		
125		RGB gain R	Set / Get	0.0001 to 9.9999	0.3		
126		RGB gain G	Set / Get	0.0001 to 9.9999	0.59		
127		RGB gain B	Set / Get	0.0001 to 9.9999	0.11		
128		Standard hue	Set / Get	0 to 359	0		
129		Hue range	Set / Get	10 to 180	90		
130		Chroma upper limit	Set / Get	0 to 255	255		
131		Chroma lower limit	Set / Get	0 to 255	0		

# Weak Smoothing

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	
120	Mea- sure- ment	Source image	Set / Get	0: Camera image 1: Previous image	1		
121	condi- tions	Setting method	Set / Get	0: Filtering OFF 1: Filtering ON	1		

# **Strong Smoothing**

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	
120	Mea- sure- ment	Source image	Set / Get	0: Camera image, 1: Previous image	1		
121	condi- tions	Setting method	Set / Get	0: Filtering OFF, 1: Filtering ON	1		

#### Dilate

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	<ul> <li>-2: No judgement (not measured),</li> <li>0: Judgement is OK,</li> <li>-1: Judgement is NG,</li> <li>-13: Teaching not performed error,</li> <li>-14: Figure not registered error,</li> <li>-15: Out of range error</li> </ul>	-2	JG	
120	Mea- sure- ment	Source image	Set / Get	0: Camera image, 1: Previous image	1		
121	condi- tions	Setting method	Set / Get	0: Filtering OFF, 1: Filtering ON	1		

# Erosion, Median, Extract Edges, Extract Horizontal Edges, Extract Vertical Edges, Enhance edges

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	
120	Mea- sure- ment	Source image	Set / Get	0: Camera image, 1: Previous image	1		
121	condi- tions	Setting method	Set / Get	0: Filtering OFF, 1: Filtering ON	1		

### **Background Suppression**

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Measure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	
120	Mea- sure- ment	Source image	Set / Get	0: Camera image 1: Previous image	1		
122	condi- tions	Image format	Set / Get	0: Binary image 1: Monochrome image 2: Color image	0		
123		Color setting mode	Set / Get	0: RGB common, 1: RGB individual	0		
124		Common color lower limit	Set / Get	0 to 255	0		
125		Common color upper limit	Set / Get	0 to 255	255		
126		R lower limit	Set / Get	0 to 255	0		
127		R upper limit	Set / Get	0 to 255	255		
128		G lower limit	Set / Get	0 to 255	0		
129		G upper limit	Set / Get	0 to 255	255		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
130	Mea- sure- ment	B lower limit	Set / Get	0 to 255	0		
131	condi- tions	B upper limit	Set / Get	0 to 255	255		
132		Grayscale lower limit	Set / Get	0 to 255	0		
133		Grayscale upper limit	Set / Get	0 to 255	255		

# Shape Search II (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Measure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged
5		Correlation	Get only	0 to 100	0	CR[0] to CR[31]	Logged
6		Position X	Get only	-99,999.9999 to 99,999.9999	0	Y[0] to Y[31]	Logged
7	1	Position Y	Get only	-99,999.9999 to 99,999.9999	0		Logged
8		Angle	Get only	-180 to 180	0		Logged
9		Reference X	Get only	-99,999.9999 to 99,999.9999	255		
10	1	Reference Y	Get only	-99,999.9999 to 99,999.9999	0		
11		Reference angle	Get only	-180 to 180	255		
12	-	Detection coordinate X	Get only	-99,999.9999 to 99,999.9999	0		
13		Detection coordinate Y	Get only	-99,999.9999 to 99,999.9999	255		
14		Count	Get only	0 to 32	0	С	
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Model	Rotation	Set / Get	0: No 1: Yes	0		
121	region	Rotation angle upper limit	Set / Get	-180 to 180	180		
122		Rotation angle lower limit	Set / Get	-180 to 180	-180		
133	Mea- sure- ment condi- tions	Candidate level	Set / Get	0 to 100	80		

Œ
⊐
Q
$\simeq$
Ж
ň
0,

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
134	Detec- tion point	Detection point X	Set / Get	0 to 9999	0		
135	coordi- nate	Detection point Y	Set / Get	0 to 9999	0		
136	Mea- sure- ment condition	Sort condition	Set / Get	O: Ascending order of correlation value, Descending order of correlation value, Ascending order of position X, Consider the second order of position X, Ascending order of position Y, Consider the second order of position Y	1		
138	Judge- ment condi-	Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
139	tions	Judgement lower limit for correlation	Set / Get	0 to 100	0		Judgement condition
140		Judgement upper limit for detection count	Set / Get	0 to 32	32		Judgement condition
141		Setting/Acquisition	Set / Get	0 to 32	0		Judgement condition
142		Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
143	-	Judgement lower limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	-99,999.999 9		Judgement condition
144		Judgement upper limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
145		Judgement lower limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	-99,999.999 9		Judgement condition
146		Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition
147		Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition
152	Mea- sure- ment	Extraction condition, X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
153	condi- tions	Extraction condition, X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.999 9		Judgement condition
154		Extraction condition, Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
155		Extraction condition, Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.999 9		Judgement condition
161		Detection count	Set / Get	1 to 32	32		
170		Number of data log records upper limit	Set / Get	0: Fast 1: Stable	0		
300		Number of data log records upper limit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
310		Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
312	Logging condi- tions	Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313	10113	Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for measurement angle	Set / Get	0: Data logging OFF 1: Data logging ON	1		
321		Data logging switch for detection count	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Correlation display	Set / Get	0: Display 1: Do not display	0		
701		Position X display	Set / Get	0: Display 1: Do not display	0		
702		Position Y display	Set / Get	0: Display 1: Do not display	0		
703		Measurement angle display	Set / Get	0: Display 1: Do not display	0		
704		Count display	Set / Get	0: Display 1: Do not display	0		
800		Position X display pattern	Set / Get	0: Absolute value 1: Relative value	0		
801	-	Position Y display pattern	Set / Get	0: Absolute value 1: Relative value	0		
802	-	Measurement angle display pattern	Set / Get	0: Absolute value 1: Relative value	0		

#### Shape Search III Position Compensation (FQ2-S1/S2/S3 series or FQ2-S4 series only)

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Measure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged data
5	1	Scroll X	Get only	-99999.9999 to 99999.9999	0	DX	Logged data
6	1	Scroll Y	Get only	-99999.9999 to 99999.9999	0	DY	Logged data
7		Scroll θ	Get only	-180 to 180	0	DT	Logged data
8	1	Position X	Get only	-99999.9999 to 99999.9999	0	Х	Logged data
9	1	Position Y	Get only	-99999.9999 to 99999.9999	0	Y	Logged data
10	1	Angle	Get only	-180 to 180	0	TH	Logged data
11		Reference X	Get only	0 to 9,999	0	SX	Logged data
12	1	Reference Y	Get only	0 to 9,999	0	SY	Logged data
13	1	Reference angle	Get only	-180 to 180	0	ST	Logged data
14	1	Correlation	Get only	0 to 100	0	CR	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Model	Position compensation precision	Set / Get	0: None 1: Bilinear	0		
122	region	Position compensation image	Set / Get	0: Camera image 1: Previous image	1		
123		Rotation	Set / Get	0: No rotation 1: Rotation	1		
124		Rotation	Set / Get	0 to 9,999	0		
125	Model	Reference X	Set / Get	0 to 9,999	0		
126	region	Reference Y	Set / Get	-180 to 180	0		
140	-	Reference angle	Set / Get	-180 to 180	180		
141		Rotation angle upper limit	Set / Get	-180 to 180	-180		
149	Mea sure- ment condition	Rotation angle lower limit	Set / Get	0 to 100	70		
150	Detec- tion point	Candidate level	Set / Get	0 to 9,999	0		
151	coordi- nate	Detection point X	Set / Get	0 to 9,999	0		
160	Judge- ment condi- tions	Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition



Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
161	Judge- ment condi-	Judgement lower limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
162	tions	Judgement upper limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
163		Judgement lower limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
164		Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition
165		Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition
166		Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
167		Judgement lower limit for correlation	Set / Get	0 to 100	60		Judgement condition
168		Position compensation X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
169		Position compensation X lower limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
170		Position compensation Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
171		Position compensation Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
172		Theta position compensation upper limit	Set / Get	-180 to 180	180		Judgement condition
173		Theta position compensation lower limit	Set / Get	-180 to 180	-180		Judgement condition
174	Judge con- dit6ion	Disp. Image Selection	Set / Get	0: Measurement image 1: Meas. Img.+Model Img. 2: Edge Image 3: Edge Img.+ Model Img.	1		
178		Edge Level	Set / Get	0: No 1: Yes	1		
179		Mask Size	Set / Get	0: 3 × 3 1: 5 × 5 2: 7 × 7	0		
182		Edge Level Auto	Set / Get	0: OFF 1: ON	1		
184		Acceptable Dist. Level	Set / Get	0: Low 1: Medium 2: High	2		
185		Noise Removal Level	Set / Get	0 to 100	0		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	0		
311	uons	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	0		
312		Data logging switch for scroll X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
313		Data logging switch for scroll Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
314		Data logging switch for scroll $\boldsymbol{\theta}$	Set / Get	0: Data logging OFF 1: Data logging ON	0		
315		Position compensation X display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
316		Position compensation Y display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
317		Theta position compensation display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
318		Correlation display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
319		Position X display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
320		Position Y display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
321		Measurement angle display	Set / Get	0: Data logging OFF 1: Data logging ON	0		
700	Display settings	Position compensation X display	Set / Get	0: Display 1: Do not display	0		
701		Position compensation Y display	Set / Get	0: Display 1: Do not display	0		
702		Theta position compensation display	Set / Get	0: Display 1: Do not display	0		
703		Correlation display	Set / Get	0: Display 1: Do not display	0		
704		Position X display	Set / Get	0: Display 1: Do not display	0		
705		Position Y display	Set / Get	0: Display 1: Do not display	0		
706		Measurement angle display	Set / Get	0: Display 1: Do not display	0		

# **Shape Search Position Compensation**

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0		Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged data
5	1	Scroll X	Get only	-99999.9999 to 99999.9999	0	DX	Logged data
6	Mea-	Scroll Y	Get only	-99999.9999 to 99999.9999	0	DY	Logged data
7	sure- ment	Scroll θ	Get only	-180 to 180	0	DT	Logged data
8	result	Position X	Get only	-99999.9999 to 99999.9999	0	Х	Logged data
9	1	Position Y	Get only	-99999.9999 to 99999.9999	0	Y	Logged data
10	1	Angle	Get only	-180 to 180	0	TH	Logged data
11	1	Reference X	Get only	0 to 9,999	0	SX	Logged data
12	1	Reference Y	Get only	0 to 9,999	0	SY	Logged data
13		Reference angle	Get only	-180 to 180	0	ST	Logged data
14		Correlation	Get only	0 to 100	0	CR	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Mea- sure-	Position compensa- tion precision	Set / Get	0: None 1: Bilinear	0		
121	ment condi- tions	Setting method	Set / Get	Cancel position compensation     Position compensation based on internal search	1		
122	-	Position compensa- tion image	Set / Get	0: Camera image, 1: Previous image	1		
123		Rotation	Set / Get	0: No rotation 1: Rotation	1		
124	-	Reference X	Set / Get	0 to 9,999	0		
125	Model	Reference Y	Set / Get	0 to 9,999	0		
126	region	Reference angle	Set / Get	-180 to 180	0		
140		Rotation angle upper limit	Set / Get	-180 to 180	180		
141		Rotation angle lower limit	Set / Get	-180 to 180	-180		
149	Mea- sure- ment condition	Candidate level	Set / Get	0 to 100	70		
150	Detec- tion point coordi-	Detection point X	Set / Get	0 to 9,999	0		
151	nate	Detection point Y	Set / Get	0 to 9,999	0		

	Ċ	1		
4	,		•	

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
156	Mea- sure- ment condition	Model mode	Set / Get	0: Stable 1: High-speed	0		
160	Judge- ment condi- tions	Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.999		Judgement condition
161	uons	Judgement lower limit for search coor- dinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.999 9		Judgement condition
162		Judgement upper limit for search coor- dinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.999		Judgement condition
163		Judgement lower limit for search coor- dinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.999 9		Judgement condition
164		Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition
165		Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition
166		Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
167	Judge- ment condi- tions	Judgement lower limit for correlation	Set / Get	0 to 100	60		Judgement condition
168	uons	Position compensation X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.999		Judgement condition
169		Position compensation X lower limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.999 9		Judgement condition
170		Position compensation Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.999		Judgement condition
171		Position compensation Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.999 9		Judgement condition
172		Theta position com- pensation upper limit	Set / Get	-180 to 180	180		Judgement condition
173		Theta position com- pensation lower limit	Set / Get	-180 to 180	-180		Judgement condition
310		Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	0		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	0		
312	Logging condi- tions	Data logging switch for scroll X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
313		Data logging switch for scroll Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
314		Data logging switch for scroll θ	Set / Get	0: Data logging OFF 1: Data logging ON	0		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
315	Logging	Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
316		Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
317	condi- tions	Data logging switch for measurement angle	Set / Get	0: Data logging OFF 1: Data logging ON	0		
321		Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	0		
700	Display settings	Position compensa- tion X display	Set / Get	0: Display, 1: Do not display	0		
701		Position compensa- tion Y display	Set / Get	0: Display, 1: Do not display	0		
702		Theta position compensation display	Set / Get	0: Display, 1: Do not display	0		
703		Correlation display	Set / Get	0: Display, 1: Do not display	0		
704		Position X display	Set / Get	0: Display, 1: Do not display	0		
705		Position Y display	Set / Get	0: Display, 1: Do not display	0		
706		Measurement angle display	Set / Get	0: Display, 1: Do not display	0		

# ö

# **Search Position Compensation**

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	Logged data
5	Mea- sure-	Scroll X	Get only	-99,999.9999 to 99,999.9999	0	DX	Logged data
6	ment result	Scroll Y	Get only	-99,999.9999 to 99,999.9999	0	DY	Logged data
8	resuit	Position X	Get only	-99,999.9999 to 99,999.9999	0	Х	Logged data
9		Position Y	Get only	-99,999.9999 to 99,999.9999	0	Y	Logged data
11		Reference X	Get only	-99,999.9999 to 99,999.9999	0	SX	Logged data
12		Reference Y	Get only	-99,999.9999 to 99,999.9999	0	SY	Logged data
14		Correlation	Get only	0 to 100	0	CR	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Mea- sure- ment	Position compensation precision	Set / Get	0: None 1: Bilinear	0		
122	condi- tions	Position compensation image	Set / Get	0: Camera image, 1: Previous image	1		
124	Model region	Reference X	Set / Get	0 to 99,999.9999	0		
125		Reference Y	Set / Get	0 to 99,999.9999	0		
145	Detec- tion coor- dinate	Detection point X	Set / Get	0 to 9,999	0		
146	dinate	Detection point Y	Set / Get	0 to 9,999	0		
147	Mea- sure- ment	Sub-pixel	Set / Get	0: No, 1: Yes	0		
148	condi- tions	Candidate level	Set / Get	0 to 100	70		
166	Judge- ment condi-	Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
167	tions	Judgement lower limit for correlation	Set / Get	0 to 100	60		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	0		
311	tions	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	0		
312		Data logging switch for scroll X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
313		Data logging switch for scroll Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
315		Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
316		Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
321		Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	0		
700	Display settings	Position compensation X display	Set / Get	0: Display 1: Do not display	0		
701		Position compensation Y display	Set / Get	0: Display 1: Do not display	0		
702		Correlation display	Set / Get	0: Display 1: Do not display	0		
703		Position X display	Set / Get	0: Display, 1: Do not display	0		
704		Position Y display	Set / Get	0: Display 1: Do not display	0		

# **Edge Position Compensation**

External reference number	Category	Data name	Get / Set	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged data
5		Scroll X	Get only	-99,999.9999 to 99,999.9999	0	DX	Logged data
6		Scroll Y	Get only	-99,999.9999 to 99,999.9999	0	DY	Logged data
7		Edge position X	Get only	-99,999.9999 to 99,999.9999	0	Х	Logged data
8		Edge position Y	Get only	-99,999.9999 to 99,999.9999	0	Y	Logged data
9		Standard position X	Get only	-99,999.9999 to 99,999.9999	0	SX	Logged data
10		Standard position Y	Get only	-99,999.9999 to 99,999.9999	0	SY	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes, 1: No	0		

ces	
9	

External reference number	Category	Data name	Get / Set	Data range	Default	Expression text string	Logged data/ Judgement parameter
120		Position compensation precision	Set / Get	0: None, 1: Bilinear	0		
122	Mea- sure-	Position compensation image	Set / Get	0: Camera image 1: Previous image	1		
140	ment condi- tions	Set color	Set / Get	0: No edge color specification, 1: Edge color specification	0		
141		Edge color red	Set / Get	0 to 255	255		
142		Edge color green	Set / Get	0 to 255	255		
143		Edge color blue	Set / Get	0 to 255	255		
147	Mea- sure- ment	Detection mode	Set / Get	0: Color IN 1: Color OUT	0		
149	condi-	Edge level	Set / Get	0 to 100	50		
150	tions	Noise level	Set / Get	0 to 442	5		
153		Monochrome density change	Set / Get	(Monochrome Cameras) 0: Light to Dark 1: Dark to Light	0		
154		Edge level absolute value	Set / Get	0 to 442	20		
155		Edge level specification method	Set / Get	0:%, 1: Absolute value	0		
157		Measurement method	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
158		Edge level absolute value (Monochrome Cameras)	Set / Get	0 to 255	20		
180	Judge- ment	Edge position X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
181	condi- tions	Edge position X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
182		Edge position Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
183		Edge position Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
184		Position compensation X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
185	-	Position compensation X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
186		Position compensation Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
187		Position compensation Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition

External reference number	Category	Data name	Get / Set	Data range	Default	Expression text string	Logged data/ Judgement parameter
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	0		
311	tions	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	0		
312		Data logging switch for scroll X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
313		Data logging switch for scroll Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
314		Data logging switch for detected edge position X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
315		Data logging switch for detected edge position Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
700	Display settings	Position compensation X display	Set / Get	0: ON 1: OFF	0		
701		Position compensation Y display	Set / Get	0: ON 1: OFF	0		
702		Detected edge position X display	Set / Get	0: ON 1: OFF	0		
703		Detected edge position Y display	Set / Get	0: ON 1: OFF	0		

# Two-edge Position Compensation

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0		Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged data
5		Scroll X	Get only	-99,999.9999 to 99,999.9999	0	DX	Logged data
6		Scroll Y	Get only	-99,999.9999 to 99,999.9999	0	DY	Logged data
7		Detected edge position X0	Get only	-99,999.9999 to 99,999.9999	0	X0	Logged data
8	Mea- sure- ment	Detected edge position Y0	Get only	-99,999.9999 to 99,999.9999	0	Y0	Logged data
9	result	Detected edge position X1	Get only	-99,999.9999 to 99,999.9999	0	X1	Logged data
10		Detected edge position Y1	Get only	-99,999.9999 to 99,999.9999	0	Y1	Logged data
11		Standard position X0	Get only	-99,999.9999 to 99,999.9999	0	SX0	Logged data
12		Standard position Y0	Get only	-99,999.9999 to 99,999.9999	0	SY0	Logged data
13		Standard position X1	Get only	-99,999.9999 to 99,999.9999	0	SX1	Logged data
14		Standard position Y1	Get only	-99,999.9999 to 99,999.9999	0	SY1	Logged data

ces	
9	

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120		Position compensation precision	Set / Get	0: None 1: Bilinear	0		
122	-	Position compensation image	Set / Get	0: Camera image 1: Previous image	0		
140		Edge color specification 0	Set / Get	0: No edge color specification, 1: Edge color specification	0		
141		Edge color R0	Set / Get	0 to 255	255		
142		Edge color G0	Set / Get	0 to 255	255		
143	Mea- sure-	Edge color B0	Set / Get	0 to 255	255		
147	ment condi- tions	Density change 0	Set / Get	0: Color IN 1: Color OUT	0		
149		Edge level 0	Set / Get	0 to 100	50		
150		Noise level 0	Set / Get	0 to 442	5		
153		Monochrome density change 0	Set / Get	(Monochrome Cameras) 0: Light to Dark 1: Dark to Light	0		
154		Edge level absolute value	Set / Get	0 to 442	20		
155		Edge level specification method	Set / Get	0:% 1: Absolute value	0		
157		Measurement method 0	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
158		Edge level absolute value (Monochrome Cameras)	Set / Get	0 to 255	20		
160		Edge color specification 1	Set / Get	0: No edge color specification, 1: Edge color specification	0		
161		Edge color R1	Set / Get	0 to 255	255		
162	Mea- sure-	Edge color G1	Set / Get	0 to 255	255		
163	ment condi-	Edge color B1	Set / Get	0 to 255	255		
167	tions	Density change 1	Set / Get	0: Color IN 1: Color OUT	0		
169		Edge level 1	Set / Get	0 to 100	50		
170		Noise level 1	Set / Get	0 to 442	5		
173		Monochrome density change 1	Set / Get	(Monochrome Cameras) 0: Light to Dark 1: Dark to Light	0		
177		Measurement method 1	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
180	Judge- ment	Edge position X upper limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
181	condi- tions	Edge position X lower limit 0	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
182		Edge position Y upper limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
183		Edge position Y lower limit 0	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
185		Edge position X upper limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
186		Edge position X lower limit 1	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
187	Judge- ment condi-	Edge position Y upper limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
188	tions	Edge position Y lower limit 1	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
190	-	Position compensation X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
191	-	Position compensation X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
192		Position compensation Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
193	-	Position compensation Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
310		Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	0		
311	-	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	0		
312	Logging condi-	Data logging switch for scroll X	Set / Get	0: Data logging OFF 1: Data logging ON	0		
313	tions	Data logging switch for scroll Y	Set / Get	0: Data logging OFF 1: Data logging ON	0		
314		Data logging switch for detected edge posi- tion X0	Set / Get	0: Data logging OFF 1: Data logging ON	0		
315		Data logging switch for detected edge posi- tion Y0	Set / Get	0: Data logging OFF 1: Data logging ON	0		
316	Logging condi- tions	Data logging switch for detected edge posi- tion X1	Set / Get	0: Data logging OFF 1: Data logging ON	0		
317		Data logging switch for detected edge posi- tion Y1	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
700		Position compensation X display	Set / Get	0: ON 1: OFF	0		
701	<b>.</b> .	Position compensation Y display	Set / Get	0: ON 1: OFF	0		
702	- Display settings	Detected edge position X0 display	Set / Get	0: ON 1: OFF	0		
703		Detected edge position Y0 display	Set / Get	0: ON 1: OFF	0		
704	Display settings	Detected edge position X1 display	Set / Get	0: ON 1: OFF	0		
705		Detected edge position Y1 display	Set / Get	0: ON 1: OFF	0		

# **Two-edge Midpoint Compensation**

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0		Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	Logged data
5		Scroll X	Get only	-99,999.9999 to 99,999.9999	0	DX	Logged data
6		Scroll Y	Get only	-99,999.9999 to 99,999.9999	0	DY	Logged data
7		Detected edge position X0	Get only	-99,999.9999 to 99,999.9999	0	X0	Logged data
8	Mea-	Detected edge position Y0	Get only	-99,999.9999 to 99,999.9999	0	Y0	Logged data
9	sure- ment result	Detected edge position X1	Get only	-99,999.9999 to 99,999.9999	0	X1	Logged data
10	rooun	Detected edge position Y1	Get only	-99,999.9999 to 99,999.9999	0	Y1	Logged data
11		Detected edge mid- point position X	Get only	-99,999.9999 to 99,999.9999	0	MX	Logged data
12		Detected edge mid- point position Y	Get only	-99,999.9999 to 99,999.9999	0	MY	Logged data
13		Standard position X0	Get only	-99,999.9999 to 99,999.9999	0	SX0	Logged data
14		Standard position Y0	Get only	-99,999.9999 to 99,999.9999	0	SY0	Logged data
15	-	Standard position X1	Get only	-99,999.9999 to 99,999.9999	0	SX1	Logged data
16		Standard position Y1	Get only	-99,999.9999 to 99,999.9999	0	SY1	Logged data
17		Standard midpoint position X	Get only	-99,999.9999 to 99,999.9999	0	SMX	Logged data
18		Standard midpoint position Y	Get only	-99,999.9999 to 99,999.9999	0	SMY	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120		Position compensation precision	Set / Get	0: None 1: Bilinear	0		
122		Position compensation image	Set / Get	0: Camera image 1: Previous image	0		
140	Mea-	Edge color specification 0	Set / Get	0: No edge color specification, 1: Edge color specification	0		
141	sure- ment condi-	Edge color R0	Set / Get	0 to 255	255		
142	tions	Edge color G0	Set / Get	0 to 255	255		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
143		Edge color B0	Set / Get	0 to 255	255		
147		Density change 0	Set / Get	0: Color IN, 1: Color OUT	0		
149	_	Edge level 0	Set / Get	0 to 100(Monochrome Cameras)	50		
150	-	Noise level 0	Set / Get	0 to 442	5		
153		Monochrome density change 0	Set / Get	(Monochrome Cameras) 0: Light to Dark 1: Dark to Light	0		
154		Edge level absolute value	Set / Get	0 to 442	20		
155		Edge level specification method	Set / Get	0:% 1: Absolute value	0		
157		Measurement method 0	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
158	Mea-	Edge level absolute value (Monochrome Cameras)	Set / Get	0 to 255	20		
160	sure- ment condi-	Edge color specification 1	Set / Get	No edge color specification,     Edge color specification	0		
161	- tions	Edge color R1	Set / Get	0 to 255	255		
162	-	Edge color G1	Set / Get	0 to 255	255		
163		Edge color B1	Set / Get	0 to 255	255		
167	-	Density change 1	Set / Get	0: Color IN 1: Color OUT	0		
169		Edge level 1	Set / Get	0 to 100	50		
170	_	Noise level 1	Set / Get	0 to 442	5		
173	_	Monochrome density change 1	Set / Get	(Monochrome Cameras) 0: Light to Dark 1: Dark to Light	0		
177	-	Measurement method 1	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
180	Judge- ment	Edge position X upper limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
181	condi- tions	Edge position X lower limit 0	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
182		Edge position Y upper limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
183		Edge position Y lower limit 0	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
185		Edge position X upper limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
186		Edge position X lower limit 1	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition

ces	
9	

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
187	Judge- ment condi-	Edge position Y upper limit 1	Set / Get	- 99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
188	tions	Edge position Y lower limit 1	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
190		Edge midpoint position X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
191		Edge midpoint position X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
192		Edge midpoint position Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
193		Edge midpoint position Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
194		Position compensation X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
195	-	Position compensation X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
196	-	Position compensation Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
197	-	Position compensation Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
310	Logging condi-	Data logging switch for entire unit	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
311	tions	Data logging switch for judgement	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
312		Data logging switch for scroll X	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
313		Data logging switch for scroll Y	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
314		Data logging switch for detected edge posi- tion X0	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
315		Data logging switch for detected edge posi- tion Y0	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
316		Data logging switch for detected edge posi- tion X1	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
317		Data logging switch for detected edge posi- tion Y1	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
318	Logging condi- tions	Data logging switch for detected edge mid- point position X	Set / Get	0: Data logging OFF, 1: Data logging ON	0		
319		Data logging switch for detected edge mid- point position Y	Set / Get	0: Data logging OFF, 1: Data logging ON	0		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
700	Display settings	Position compensation X display	Set / Get	0: ON, 1: OFF	0		
701		Position compensation Y display	Set / Get	0: ON, 1: OFF	0		
702		Detected edge mid- point position X display	Set / Get	0: ON, 1: OFF	0		
703		Detected edge mid- point position Y display	Set / Get	0: ON, 1: OFF	0		
704		Detected edge position X0 display	Set / Get	0: ON, 1: OFF	0		
705		Detected edge position Y0 display	Set / Get	0: ON, 1: OFF	0		
706		Detected edge position X1 display	Set / Get	0: ON, 1: OFF	0		
707		Detected edge position Y1 display	Set / Get	0: ON, 1: OFF	0		

# **Edge Rotation Position Compensation**

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0		Judgement	Get only	<ul> <li>-2: No judgement (not measured)</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	-2	ĴĠ	Logged data
5		Position compensation TH	Get only	-99,999.9999 to 99,999.9999	0	DT	Logged data
6	Меа-	Detected edge position X0	Get only	-99,999.9999 to 99,999.9999	0	X0	Logged data
7	sure- ment	Detected edge position Y0	Get only	-99,999.9999 to 99,999.9999	0	Y0	Logged data
8	result	Detected edge position X1	Get only	-99,999.9999 to 99,999.9999	0	X1	Logged data
9		Detected edge position Y1	Get only	-99,999.9999 to 99,999.9999	0	Y1	Logged data
10		Detected edge angle	Get only	-180 to 180	0	TH	Logged data
11		Standard position X0	Get only	-99,999.9999 to 99,999.9999	0	SX0	Logged data
12	-	Standard position Y0	Get only	-99,999.9999 to 99,999.9999	0	SY0	Logged data
13		Standard position X1	Get only	-99,999.9999 to 99,999.9999	0	SX1	Logged data
14	Mea-	Standard position Y1	Get only	-99,999.9999 to 99,999.9999	0	SY1	Logged data
15	sure- ment result	Standard edge angle	Get only	-180 to 180	0	STH	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes, 1: No	0		

ices
ဖ

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
120		Position compensation pre- cision	Set / Get	0: None, 1: Bilinear	0		
122		Position compensation image	Set / Get	0: Camera image, 1: Previous image	1		
140		Edge color specification 0	Set / Get	0: No edge color specification, 1: Edge color specification	0		
141		Edge color R0	Set / Get	0 to 255	255		
142		Edge color G0	Set / Get	0 to 255	255		
143		Edge color B0	Set / Get	0 to 255	255		
147		Density change 0	Set / Get	0: Color IN, 1: Color OUT	0		
149		Edge level 0	Set / Get	0 to 100	50		
150		Noise level 0	Set / Get	0 to 442	5		
153		Monochrome density change 0	Set / Get	(Monochrome Cameras) 0: Light to Dark, 1: Dark to Light	0		
154		Edge level absolute value	Set / Get	0 to 442	20		
155		Edge level specification method	Set / Get	0:% 1: Absolute value	0		
157		Measurement method 0	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
158	Mea- sure- ment	Edge level absolute value (Monochrome Cameras)	Set / Get	0 to 255	20		
160	condi- tions	Edge color specification 0	Set / Get	No edge color specification,     Edge color specification	0		
161		Edge color R1	Set / Get	0 to 255	255		
162		Edge color G1	Set / Get	0 to 255	255		
163		Edge color B1	Set / Get	0 to 255	255		
167		Density change 1	Set / Get	0: Color IN, 1: Color OUT	0		
169		Edge level 1	Set / Get	0 to 100	50		
170		Noise level 1	Set / Get	0 to 442	5		
173		Monochrome density change 1	Set / Get	(Monochrome Cameras) 0: Light to Dark 1: Dark to Light	0		
177		Measurement method 1	Set / Get	(Monochrome Cameras) 0: Projection 1: Differentiation	0		
180	Judge- ment	Edge position X upper limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition
181	condi- tions	Edge position X lower limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition
182		Edge position Y upper limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition
183		Edge position Y lower limit 0	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition
185		Edge position X upper limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.99		Judgement condition
186		Edge position X lower limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
187	Judge- ment condi-	Edge position Y upper limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition
188	tions	Edge position Y lower limit 1	Set / Get	-99,999.9999 to 99,999.9999	99,999.99 99		Judgement condition
190		Edge angle upper limit	Set / Get	-180 to 180	180		Judgement condition
191		Edge angle lower limit	Set / Get	-180 to 180	-180		Judgement condition
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	0		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	0		-
312		Data logging switch for position compensation TH	Set / Get	0: Data logging OFF 1: Data logging ON	0		
313		Data logging switch for detected edge position X0	Set / Get	0: Data logging OFF 1: Data logging ON	0		
314		Data logging switch for detected edge position Y0	Set / Get	0: Data logging OFF 1: Data logging ON	0		
315		Data logging switch for detected edge position X1	Set / Get	0: Data logging OFF 1: Data logging ON	0		
316	Logging condi- tions	Data logging switch for detected edge position Y1	Set / Get	0: Data logging OFF 1: Data logging ON	0		
317	-	Data logging switch for detected edge angle	Set / Get	0: Data logging OFF 1: Data logging ON	0		
700	Display settings	Position compensation theta display	Set / Get	0: ON 1: OFF	0		
701		Detected edge angle display	Set / Get	0: ON 1: OFF	0		
702	Display settings	Detected edge position X0 display	Set / Get	0: ON 1: OFF	0		
703		Detected edge position Y0 display	Set / Get	0: ON 1: OFF	0		
704		Detected edge position X1 display	Set / Get	0: ON 1: OFF	0		
705		Detected edge position Y1 display	Set / Get	0: ON 1: OFF	0		

# **Position Compensation (Image Rotation, Parameter)**

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter	
0	Measure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	-2	JG		
5		Scroll X	Get only	-99999.9999 to 99999.9999	0	DX		
6	_		Scroll Y	Get only	-99999.9999 to 99999.9999	0	DY	
7		Scroll θ	Get only	-180.0000 to 180.0000	0	DT		
8			Position X	Get only	-99999.9999 to 99999.9999	0	Х	
9				Position Y	Get only	-99999.9999 to 99999.9999	0	Y
10		Angle	Get only	-180.0000 to 180.0000	0	TH		
11		Reference X	Get only	-99999.9999 to 99999.9999	0	SX		
12		Reference Y	Get only	-99999.9999 to 99999.9999	0	SY		
13	=	Reference angle	Get only	-180.0000 to 180.0000	0	ST		
200	Measure- ment conditions	Ref. position X (reference position X)	Set / Get	-99999.9999 to 99999.9999	*1			
201	Conditions	Ref. position Y (reference position Y)	Set / Get	-99999.9999 to 99999.9999	*1			
202		Ref. position $\theta$ (reference position $\theta$ )	Set / Get	-180.0000 to 180.0000	90			
203		Measurement position X	Set / Get	-99999.9999 to 99999.9999	*1			
204		Measurement position Y	Set / Get	-99999.9999 to 99999.9999	*1			
205		Measurement position $\theta$	Set / Get	-180.0000 to 180.0000	0			

Depends on the model. Refer to Compensating for Position Offset (Position Compensation Items): p. 102.

#### **Linear Correction**

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG	-2	JG	
120	Mea- sure-	Position interpolation	Set / Get	0: None, 1: Bilinear	1		
122	ment condi- tions	Source image	Set / Get	0: Camera image, 1: Previous image	1		

## OCR (FQ2-S4 or FQ2-CH series only)

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -11: Model mismatch error -13: Teaching not performed error -16: Measurement timeout error -17: Format not entered error	-2	JG	Logged data
5		Index number	Get only	-2: No verification pattern or read was NG, -1: Verification result is NG 0 to 31: Master data number	0	IN	Logged data
6		Number of characters	Get only	0 to 128	0	N	Logged data
7		Read character string	Get only	128 characters max.		-	
8		Similarity	Get only	0 to 100	0	SIM	Logged data
9		Stability	Get only	0 to 100	0	STB	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
110	- tei	Reading speed	Set / Get	0: Normal 1: Fast	0		
120	Mea- sure- ment	Character color	Set / Get	0: Black 1: White	0		
121	condi-	Dot horizontal interval	Set / Get	0 to 30	0		
122	tions	Dot vertical interval	Set / Get	0 to 30	0		
123		Character thickness threshold	Set / Get	-128 to 128	0		
124		Boundary correction	Set / Get	0: OFF 1: ON	1		
126		Slender character threshold	Set / Get	1 to 10	3		
127		Hyphen height upper threshold	Set / Get	0 to 100	30		

	C	ľ	)	

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
128	Mea- sure- ment	Hyphen height lower threshold	Set / Get	0 to 100	70		
129	condi- tions	Printing type	Set / Get	0: Solid character 1: Dot character	1	-	
130		Rotation compensation	Set / Get	0: OFF 1: ON	0		
131		Slant compensation	Set / Get	0: OFF 1: ON	1		
132	Judge- ment condi-	Similarity judgement upper limit	Set / Get	0 to 100	100		Judgement condition
133	tions	Similarity judgement lower limit	Set / Get	0 to 100	60		Judgement condition
134	-	Stability judgement upper limit	Set / Get	0 to 100	100		Judgement condition
135	-	Stability judgement lower limit	Set / Get	0 to 100	10		Judgement condition
136	Output parame- ter	Line delimiter	Set / Get	0: None 1: Comma 2: Space	0		
138		String output ON/OFF	Set / Get	0: OFF 1: ON	0		
139		NG error code output	Set / Get	0: OFF 1: ON	1		
141 <sup>*1</sup>		Error string	Set / Get	20 characters max.	NG		
142		Partial output ON/OFF	Set / Get	0: No 1: Yes	0		
143		Output end digit	Set / Get	1 to 128	128		
144		Output beginning digit	Set / Get	1 to 128	1		
146	Mea- sure-	Reading speed	Set / Get	0: Fixed 1: Variable	1		
150 <sup>*1</sup>	ment condi-	Format character string 0	Set / Get	32 characters max.			
151 <sup>*1</sup>	tions	Format character string 1	Set / Get	32 characters max.			
152 <sup>*1</sup>	-	Format character string 2	Set / Get	32 characters max.			
153 <sup>*1</sup>	-	Format character string 3	Set / Get	32 characters max.			
154 <sup>*1</sup>	-	Teach mode	Set / Get	0: Simple teach 1: Correct string	1		
155 <sup>*1</sup>		Correct string (L.1)	Set / Get	32 characters max.			
156 <sup>*1</sup>	-	Correct string (L.2)	Set / Get	32 characters max.			
157 <sup>*1</sup>	1	Correct string (L.3)	Set / Get	32 characters max.			
158 <sup>*1</sup>		Correct string (L.4)	Set / Get	32 characters max.			
160	=	Dictionary reference	Set / Get	-1: None 0 to 31	-1		
170	Output charac-	String output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
171	ter set	NG error code output (memory link)	Set / Get	0: OFF 1: ON	1		
172		Partial output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
173	Output charac- ter set	Output end digit (memory link)	Set / Get	1 to 128	128		
174	ter set	Output beginning digit (memory link)	Set / Get	1 to 128	1		
195		Max width setting	Set / Get	0: OFF 1: ON	0		
196	Mea- sure-	Max width	Set / Get	0 to 9999	0		
197	ment	Max height	Set / Get	0 to 9999	0		
198	condition	Min height	Set / Get	0 to 100	50		
250	Judge- ment condi-	Number of characters upper limit (L.1)	Set / Get	0 to 32	32		
251	tions	Number of characters upper limit (L.2)	Set / Get	0 to 32	32		
252		Number of characters upper limit (L.3)	Set / Get	0 to 32	32		
253		Number of characters upper limit (L.4)	Set / Get	0 to 32	32		
260		Number of characters lower limit (L.1)	Set / Get	0 to 32	0		
261		Number of characters lower limit (L.2)	Set / Get	0 to 32	0		
262		Number of characters lower limit (L.3)	Set / Get	0 to 32	0		
263		Number of characters lower limit (L.4)	Set / Get	0 to 32	0		
300	Logging condi-	Data logging count	Set / Get	1 to 128	128		
310	tions	Data logging switch (unit)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311		Data logging switch (judgement)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch (minimum similarity)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch (minimum stability)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch (number of characters 1)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch (number of characters 2)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
316		Data logging switch (number of characters 3)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
317		Data logging switch (number of characters 4)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
318		Data logging switch (similarity (individual))	Set / Get	0: Data logging OFF 1: Data logging ON	1		
319	Logging condi- tions	Data logging switch (sta- bility (individual))	Set / Get	0: Data logging OFF 1: Data logging ON	1		

	C	1	)	
	,			

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
400	Verifica- tion con- ditions	Verification master data	Set / Get	-1: OFF 0: All master data, 1 to 32: Selected master data	-1		
401		Matching mode	Set / Get	Direct input     Calendar matching     Code matching	0		
410		Auto master data number	Set / Get	-1: OFF 0 to 31: Selected master data	-1		
420	Judge- ment condi-	Judgement mode	Set / Get	0: All 1: Individual	0		
450+N (N=0 to 9)	tions	Individual characters (number)	Set / Get	0: Disable 1: Enable	1		
450+N (N=10 to 35)		Individual characters (Alphabet)	Set / Get	0: Disable 1: Enable	1		
450+N (N=36 to 39)		Individual characters (Symbol)	Set / Get	0: Disable 1: Enable	1		
500	Verifica- tion con- ditions	Selected master data number	Set / Get	0 to 31	0		
700	settings	Similarity display	Set / Get	0: Display 1: Do not display	0		
701		Stability display	Set / Get	0: Display 1: Do not display	0		
702		Number of read characters display	Set / Get	0: Display 1: Do not display	1		
703		Character display	Set / Get	0: Display 1: Do not display	0		
704		Character count display Ver.2.10 or later	Set / Get		0		
705		Characters display Ver.2.10 or later	Set / Get	0: Display 1: Do not display	0		
706		Verification string display Ver.2.10 or later	Set / Get		0		
800+N (N=0 to 39)	Judge- ment conditions	Similarity upper limit	Set / Get	0 to 100	100		
850+N (N=0 to 39)		Similarity lower limit	Set / Get	0 to 100	60		
900+N (N=0 to 39)		Stability upper limit	Set / Get	0 to 100	100		
950+N (N=0 to 39)		Stability lower limit	Set / Get	0 to 100	10		
1001	Verificati on condi- tions	Reference unit number 0	Set / Get	-1: OFF 0 to 31	-1		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
1002+N × 2 (N = 0 to 3)	Verificati on condi- tions	Verification end digit 0N	Set / Get	1 to 1024	1024		
1003+N × 2 (N = 0 to 3)	lions	Verification beginning digit 0N	Set / Get	1 to 1024	1		
1011+N × 2 (N = 0 to 3)*1		Master data 0N	Set / Get	32 characters max.			
1021		Reference unit number 1	Set / Get	-1: OFF 0 to 31	-1		
1022+N × 2 (N = 0 to 3)		Verification end digit 1N	Set / Get	1 to 1024	1024		
1023+N × 2 (N = 0 to 3)		Verification beginning digit 1N	Set / Get	1 to 1024	1		
1031+N × 2 (N = 0 to 3)*1		Master data 1N	Set / Get	32 characters max.			
1041		Reference unit number 2	Set / Get	-1: OFF 0 to 31	-1		
1042+N × 2 (N = 0 to 3)		Verification end digit 2N	Set / Get	1 to 1024	1024		
1043+N × 2 (N = 0 to 3)		Verification beginning digit 2N	Set / Get	1 to 1024	1		
1051+N × 2 (N = 0 to 3)*1		Master data 2N	Set / Get	32 characters max.			
1061		Reference unit number 3	Set / Get	-1: OFF, 0 to 31	-1		
1062+N × 2 (N = 0 to 3)		Verification end digit 3N	Set / Get	1 to 1024	1024		
1063+N × 2 (N = 0 to 3)		Verification beginning digit 3N	Set / Get	1 to 1024	1		
1071+N × 2 (N = 0 to 3)*1		Master data 3N	Set / Get	32 characters max.			
1081		Reference unit number 4	Set / Get	-1: OFF 0 to 31	-1		
1082+N × 2 (N = 0 to 3)		Verification end digit 4N	Set / Get	1 to 1024	1024		
1083+N × 2 (N = 0 to 3)		Verification beginning digit 4N	Set / Get	1 to 1024	1		
1091+N × 2 (N = 0 to 3)*1		Master data 4N	Set / Get	32 characters max.			
1101		Reference unit number 5	Set / Get	-1: OFF 0 to 31	-1		

C	D	
4		٠

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data Judgement parameter
1102+N × 2 (N = 0 to 3)	on condi-	Verification end digit 5N	Set / Get	1 to 1024	1024		
1103+N × 2 (N = 0 to 3)	tions	Verification beginning digit 5N	Set / Get	1 to 1024	1		
1111+N × 2 (N = 0 to 3)*1		Master data 5N	Set / Get	32 characters max.			
1121		Reference unit number 6	Set / Get	-1: OFF, 0 to 31	-1		
1122+N × 2 (N = 0 to 3)		Verification end digit 6N	Set / Get	1 to 1024	1024		
1123+N × 2 (N = 0 to 3)		Verification beginning digit 6N	Set / Get	1 to 1024	1		
1131+N × 2 (N = 0 to 3)*1		Master data 6N	Set / Get	32 characters max.			
1141	-	Reference unit number 7	Set / Get	-1: OFF, 0 to 31	-1		
1142+N × 2 (N = 0 to 3)	-	Verification end digit 7N	Set / Get	1 to 1024	1024		
1143+N × 2 (N = 0 to 3)		Verification beginning digit 7N	Set / Get	1 to 1024	1		
1151+N × 2 (N = 0 to 3)*1		Master data 7N	Set / Get	32 characters max.			
1161		Reference unit number 8	Set / Get	-1: OFF, 0 to 31	-1		
1162+N × 2 (N = 0 to 3)		Verification end digit 8N	Set / Get	1 to 1024	1024		
1163+N × 2 (N = 0 to 3)		Verification beginning digit 8N	Set / Get	1 to 1024	1		
1171+N × 2 (N = 0 to 3)*1		Master data 8N	Set / Get	32 characters max.			
1181		Reference unit number 9	Set / Get	-1: OFF, 0 to 31	-1		
1182+N × 2 (N = 0 to 3)	1	Verification end digit 9N	Set / Get	1 to 1024	1024		
1183+N × 2 (N = 0 to 3)		Verification beginning digit 9N	Set / Get	1 to 1024	1		
1191+N × 2 (N = 0 to 3)*1	-	Master data 9N	Set / Get	32 characters max.			
1201		Reference unit number 10	Set / Get	-1: OFF, 0 to 31	-1		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter	
1202+N × 2 (N = 0 to 3)	Verificati on condi- tions	Verification end digit 10N	Set / Get	1 to 1024	1024		-	
1203+N × 2 (N = 0 to 3)		Verification beginning digit 10N	Set / Get	1 to 1024	1			
1211+N × 2 (N = 0 to 3)*1		Master data 10N	Set / Get	32 characters max.				
1221		Reference unit number 11	Set / Get					
1222+N × 2 (N = 0 to 3)		Verification end digit 11N	Set / Get	1 to 1024	1024			
1223+N × 2 (N = 0 to 3)		Verification beginning digit 11N	Set / Get	1 to 1024	1			
1231+N × 2 (N = 0 to 3)*1		Master data 11N	Set / Get	32 characters max.				
1241		Reference unit number 12	Set / Get	-1: OFF, 0 to 31	-1			
1242+N × 2 (N = 0 to 3)		Verification end digit 12N	Set / Get	1 to 1024	1024		1	
1243+N × 2 (N = 0 to 3)		Verification beginning digit 12N	Set / Get	1 to 1024	1			
1251+N × 2 (N = 0 to 3)*1		Master data 12N	Set / Get	32 characters max.				
1261		Reference unit number 13	Set / Get	-1: OFF, 0 to 31	-1			
1262+N × 2 (N = 0 to 3)		Verification end digit 13N	Set / Get	1 to 1024	1024		-	
1263+N × 2 (N = 0 to 3)		Verification beginning digit 13N	Set / Get	1 to 1024	1		-	
1271+N × 2 (N = 0 to 3)*1		Master data 13N	Set / Get	32 characters max.				
1281		Reference unit number 14	Set / Get	-1: OFF 0 to 31	-1			
1282+N × 2 (N = 0 to 3)		Verification end digit 14N	Set / Get	1 to 1024	1024			
1283+N × 2 (N = 0 to 3)	:		Verification beginning digit 14N	Set / Get	1 to 1024	1		
1291+N × 2 (N = 0 to 3)*1		Master data 14N	Set / Get	32 characters max.				
1301		Reference unit number 15	Set / Get	-1: OFF, 0 to 31	-1			
1302+N × 2 (N = 0 to 3)		Verification end digit 15N	Set / Get	1 to 32	32			

	ò	ř.	)	
(	ť	•	í	

Exter- nal ref-	Category	Data name	Set / Get	Data range	Default	Expres- sion text	Logged data/ Judgement
erence number						string	parameter
1303+N × 2 (N = 0 to 3)	Verifica- tion con- ditions	Verification beginning digit 15N	Set / Get	1 to 32	1		
1311+N × 2 (N = 0 to 3)*1		Master data 15N	Set / Get	32 characters max.			
1321		Reference unit number 16	Set / Get	-1: OFF 0 to 31	-1		
1322+N × 2 (N = 0 to 3)		Verification end digit 16N	Set / Get	1 to 1024	1024		
1323+N × 2 (N = 0 to 3)		Verification beginning digit 16N	Set / Get	1 to 1024	1		
1331+N × 2 (N = 0 to 3)*1		Master data 16N	Set / Get	32 characters max.			
1341		Reference unit number 17	Set / Get	-1: OFF, 0 to 31	-1		
1342+N × 2 (N = 0 to 3)		Verification end digit 17N	Set / Get	1 to 32	32		
1343+N × 2 (N = 0 to 3)		Verification beginning digit 17N	Set / Get	1 to 32	1		
1351+N × 2 (N = 0 to 3)*1		Master data 17N	Set / Get	32 characters max.			
1361		Reference unit number 18	Set / Get	-1: OFF, 0 to 31	-1		
1362+N × 2 (N = 0 to 3)		Verification end digit 18N	Set / Get	1 to 32	32		
1363+N × 2 (N = 0 to 3)		Verification beginning digit 18N	Set / Get	1 to 32	1		
1371+N × 2 (N = 0 to 3)*1		Master data 18N	Set / Get	32 characters max.			
1381		Reference unit number 19	Set / Get	-1: OFF, 0 to 31	-1		
1382+N × 2 (N = 0 to 3)		Verification end digit 19N	Set / Get	1 to 32	32		
1383+N × 2 (N = 0 to 3)		Verification beginning digit 19N	Set / Get	1 to 32	1		
1391+N × 2 (N = 0 to 3)*1		Master data 19N	Set / Get	32 characters max.			
1401		Reference unit number 20	Set / Get	-1: OFF, 0 to 31	-1		
1402+N × 2 (N = 0 to 3)		Verification end digit 20N	Set / Get	1 to 32	32		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
1403+N × 2 (N = 0 to 3)	Verifica- tion con- ditions	Verification beginning digit 20N	Set / Get	1 to 32	1		
1411+N × 2 (N = 0 to 3)*1		Master data 20N	Set / Get	32 characters max.			
1421		Reference unit number 21	Set / Get	-1: OFF, 0 to 31	-1		
1422+N × 2 (N = 0 to 3)		Verification end digit 21N	Set / Get	1 to 1024	1024		
1423+N × 2 (N = 0 to 3)		Verification beginning digit 21N	Set / Get	1 to 1024	1		
1431+N × 2 (N = 0 to 3)*1		Master data 21N	Set / Get	32 characters max.			
1441		Reference unit number 22	Set / Get	–1: OFF, 0 to 31	-1		
1442+N × 2 (N = 0 to 3)		Verification end digit 22N	Set / Get	1 to 1024	1024		
1443+N × 2 (N = 0 to 3)		Verification beginning digit 22N	Set / Get	1 to 1024	1		
1451+N × 2 (N = 0 to 3)*1		Master data 22N	Set / Get	32 characters max.			
1461		Reference unit number 23	Set / Get	–1: OFF, 0 to 31	-1		
1462+N × 2 (N = 0 to 3)		Verification end digit 23N	Set / Get	1 to 1024	1024		
1463+N × 2 (N = 0 to 3)		Verification beginning digit 23N	Set / Get	1 to 1024	1		
1471+N × 2 (N = 0 to 3)*1		Master data 23N	Set / Get	32 characters max.			
1481		Reference unit number 24	Set / Get	–1: OFF, 0 to 31	-1		
1482+N × 2 (N = 0 to 3)		Verification end digit 24N	Set / Get	1 to 1024	1024		
1483+N × 2 (N = 0 to 3)		Verification beginning digit 24N	Set / Get	1 to 1024	1		
1491+N × 2 (N = 0 to 3)*1		Master data 24N	Set / Get	32 characters max.			
1501		Reference unit number 25	Set / Get	-1: OFF, 0 to 31	-1		
1502+N × 2 (N = 0 to 3)		Verification end digit 25N	Set / Get	1 to 1024	1024		

(	1	)	
•	١.	•	

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
1503+N × 2 (N = 0 to 3)	Verifica- tion con- ditions	Verification beginning digit 25N	Set / Get	1 to 1024	1		
1511+N × 2 (N = 0 to 3)*1		Master data 25N	Set / Get	32 characters max.			
1521		Reference unit number 26	Set / Get	-1: OFF, 0 to 31	-1		
1522+N × 2 (N = 0 to 3)		Verification end digit 26N	Set / Get	1 to 1024	1024		
1523+N × 2 (N = 0 to 3)		Verification beginning digit 26N	Set / Get	1 to 1024	1		
1531+N × 2 (N = 0 to 3)*1		Master data 26N	Set / Get	32 characters max.			
1541	-	Reference unit number 27	Set / Get	-1: OFF, 0 to 31	-1		
1542+N × 2 (N = 0 to 3)		Verification end digit 27N	Set / Get	1 to 1024	1024		
1543+N × 2 (N = 0 to 3)		Verification beginning digit 27N	Set / Get	1 to 1024	1		
1551+N × 2 (N = 0 to 3)*1		Master data 27N	Set / Get	32 characters max.			
1561		Reference unit number 28	Set / Get	-1: OFF 0 to 31	-1		
1562+N × 2 (N = 0 to 3)		Verification end digit 28N	Set / Get	1 to 1024	1024		
1563+N × 2 (N = 0 to 3)		Verification beginning digit 28N	Set / Get	1 to 1024	1		
1571+N × 2 (N = 0 to 3)*1		Master data 28N	Set / Get	32 characters max.			
1582	-	Reference unit number 29	Set / Get	-1: OFF, 0 to 31	-1		
1582+N × 2 (N = 0 to 3)		Verification end digit 29N	Set / Get	1 to 1024	1024		
1583+N × 2 (N = 0 to 3)		Verification beginning digit 29N	Set / Get	1 to 1024	1		
1591+N × 2 (N = 0 to 3)*1		Master data 29N	Set / Get	32 characters max.			
1601		Reference unit number 30	Set / Get	-1: OFF, 0 to 31	-1		
1602+N × 2 (N = 0 to 3)		Verification end digit 30N	Set / Get	1 to 1024	1024		

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
1603+N × 2 (N = 0 to 3)	Verifica- tion con- ditions	Verification beginning digit 30N	Set / Get	1 to 1024	1		
1611+N × 2 (N = 0 to 3)*1		Master data 30N	Set / Get	32 characters max.			
1621		Reference unit number 31	Set / Get	-1: OFF 0 to 31	-1		
1622+N × 2 (N = 0 to 3)		Verification end digit 31N	Set / Get	1 to 1024	1024		
1623+N × 2 (N = 0 to 3)		Verification beginning digit 31N	Set / Get	1 to 1024	1		
1631+N × 2 (N = 0 to 3)*1		Master data 31N	Set / Get	32 characters max.			
1701		Reference unit number (in code matching mode)	Set / Get	-1: OFF 0 to 31			
1702+N ×2 (N=0 to 3)		Verification end digit Nth line (in calendar matching mode, or code matching mode)	Set / Get	1 to 1024	1024		
1703+N ×2 (N=0 to 3)		Verification beginning digit Nth line (in calendar matching mode, or code matching mode)	Set / Get	1 to 1024	1		
1711+N ×2 (N=0 to 3) to 1		Master data Nth line (in calendar matching mode, or code matching mode)	Set / Get	32 characters max.			
1720+N ×2 (N=0 to 3)		Verification line select Nth line (in code matching mode)	Set / Get	0: Disable 1: Enable	0		
1800*1	-	Code data file name	Set / Get	32 characters max.	code		
1825		Period setting: Year	Set / Get		0		
1826	-	Period setting: Month	Set / Get		0		
1827	-	Period setting: Day	Set / Get		0		
1828		Auto update	Set / Get	0: Don't update 1: First update 2: Always update	2		
1829		Zero suppress	Set / Get	0: 0 1: Space	0		
1830		Data calc. order	Set / Get	0: Month→Day 1: Day→Month	0		
1831		Month end adjust	Set / Get	0: Last day of current month 1: First day of next month 2: Gap day of next month	0		
1832		Ahead margin	Set / Get		0		
1833		Back margin	Set / Get	0 to 99	0		

č	r.	)	
c		(	

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
2000	Mea- sure- ment	Number of read characters on line 1	Get only	0 to 32	0		
2001	result	Number of read characters on line 2	Get only	0 to 32	0		
2002		Number of read characters on line 3	Get only	0 to 32	0		
2003		Number of read characters on line 4	Get only	0 to 32	0		
2100		Read character string on line 1	Get only	32 characters max.			
2101*1		Read character string on line 2	Get only	32 characters max.			
2102*1		Read character string on line 3	Get only	32 characters max.			
2103*1		Read character string on line 4	Get only	32 characters max.			
2500+N (N= 0 to 127*1		Individual read character	Get only	1 character			
3000+N (N= 0 to 127)		Individual similarity	Get only	0 to 100	0		
3500+N (N= 0 to 127)		Individual stability	Get only	0 to 100	0		

<sup>\*1:</sup> To acquire the detected text string, use the ITEMDATA2 command.

## Bar code (FQ2-S4 series only)

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, 1: Judgement is NG, -16: Measurement timeout error	-2	JG	Logged data
5		Index No.	Get only	-2: No verification pattern, or reading error -1: Verification is NG, 0 to 31: Master data No.	-2	IN	
6		Num. of characters	Get only	0 to 1024	0	N	Logged data
7*1		Characters	Get only	32 characters max.	0		
103	Output parame- ter	Reflect	Get only	0: Yes, 1: No	0		
121	Verifica- tion con- dition	Verified master data	Set / Get	-1: OFF 0: Verify all master data 1: Verify master data 0 2: Verify master data 1 31: Verify master data 31	-1		
122		Partial verif. on/off	Set / Get	0: No 1: Yes	0		

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
123	Verifica-	Last compared digit	Set / Get	1 to 1024	1024		
124	tion con- dition	First compared digit	Set / Get	1 to 1024	1		
125	Output parame-	String output on/off	Set / Get	0: None 1: Enable	0		
127 <sup>*1</sup>	ter	Error string	Set / Get	20 characters max	NG		
128	-	Partial output on/off	Set / Get	0: None 1: Enable	0		
129		Output last digit	Set / Get	1 to 1024	1024		
130		Output first digit	Set / Get	1 to 1024	1		
131	Mea- sure- ment condition	Code type	Set / Get	0: JAN/EAN/UPC 1: Code 39 2: Codabar 3: ITF 4: Code 93 5: Code128/GS1-128 6: GS1 DataBar 7: Pharmacode	0		
132		Timeout time (ms)	Set / Get	1 to 9999	9999		
133		Check digit on/off	Set / Get	0: None 1: Enable	1		
134		Composite codes on/off	Set / Get	0: None 1: Enable	0		
135	Mea- sure- ment	Direction	Set / Get	0: Horizontal mode 1: Vertical mode	0		
136	result	Reverse on/off	Set / Get	0: None 1: Enable	0		
141		Code color	Set / Get	0: Black 1: White	0		
150	Verifica- tion con- dition	Selected master num- ber	Set / Get	1 to 31	0		
152	dition	Auto master data number	Set / Get	0 to 31: Master data number -1: OFF	-1		
160	Output parame-	NG error code output	Set / Get	0: OFF 1: ON	1		
170	- ter	String output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
171		NG error code output (memory link)	Set / Get	0: OFF 1: ON	1		
172		Partial output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
173		Output end digit (memory link)	Set / Get	1 to 1024	1024		
174		Output beginning digit (memory link)	Set / Get	1 to 1024	1		
202+3N (N=0 to 31)	Verifica- tion con- dition	Master data N	Set / Get	32 characters max.	None		
300+N (N=0 to 31)		Reference unit number N	Set / Get	0 to 31	0		

	C		)	
(	C	•		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
410	Logging condi- tions	Data logging switch for unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
411	1.0710	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
412		Data logging switch for number of characters	Set / Get	0: Data logging OFF 1: Data logging ON	1		
500	Display setting	Number of characters display	Set / Get	0: OFF 1: ON	0		
501		Character display	Set / Get	0: ON 1: OFF	0		

<sup>\*1</sup> Use the ITEMDATA2 command to set and/or acquire a text string.

## 2D-code (FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: Not measured, 0: Judgement is OK, 1: Judgement is NG, -16: Measurement timeout error	-2	JG	Logged data
5		Index No.	Get only	-2: No verification pattern, or reading error -1: Verification is NG, 0 to 31: Master data No.	-2	IN	
6		Num. of characters	Get only	0 to 1024	0	N	Logged data
7 <sup>*1</sup>		Characters	Get only	32 characters max.	0		
50		Overall quality	Get only	0 to 4	0	GD0	Logged data
51	1	Decode	Get only	0 to 4	0	GD1	Logged data
52		Cell Contrast	Get only	0 to 4	0	GD2	Logged data
53		Cell Modulation	Get only	0 to 4	0	GD3	Logged data
54	-	Fixed pattern damage	Get only	0 to 4	0	GD4	Logged data
55	-	Axial nonuniformity	Get only	0 to 4	0	GD5	Logged data
56		Grid nonuniformity	Get only	0 to 4	0	GD6	Logged data
57		Unused err. Corr.	Get only	0 to 4	0	GD7	Logged data
58		Print scale	Get only	0 to 4	0	GD8	Logged data
59		Print Scale X	Get only	0 to 4	0	GD9	Logged data
60	=	Print Scale Y	Get only	0 to 4	0	GD10	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes, 1: No	0		

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
121	Verifica- tion con- dition	Verified master data	Set / Get	-1: OFF 0: Verify all master data 1: Verify master data 0 2: Verify master data 1 :	0		
122		Partial verif. on/off	Set / Get	0: No 1: Yes	0		
123		Last compared digit	Set / Get	1 to 1024	1024		
124		First compared digit	Set / Get	1 to 1024	1		
125	Output parame- ter	String output on/off	Set / Get	0: None 1: Enable	0		
126	tei	Error string size (bytes)	Set / Get	1 to 20	2		
127 <sup>*1</sup>		Error string	Set / Get	20 characters max.	NG		
128		Partial output on/off	Set / Get	0: None 1: Enable	0		
129		Output last digit	Set / Get	1 to 1024	1024		
130		Output first digit	Set / Get	1 to 1024	1		
131	Mea- sure- ment condition	Code type	Set / Get	0: Data Matrix 1: QR Code 2: MicroQR Code 3: PDF417 4: MicroPDF417	0		
132		Timeout time (ms)	Set / Get	1 to 9999	9999		
133		Reverse (Data Matrix, QR Code, Micro QR Code only)	Set / Get	0: Normal 1: Reverse	0		
134		Code color (Data Matrix, QR Code, Micro QR Code only)	Set / Get	0: Black 1: White 2: Auto	2		
135	Mea- sure- ment result	Shape (DataMatrix only)	Set / Get	0: Square 1: Square or Rect.	0		
150	Verifica-	Selected master number	Set / Get	0 to 31	0		
152	dition	Auto master data num- ber	Set / Get	0 to 31: Master data number -1: OFF	-1		
160	Output parame- ter	NG error code output	Set / Get	0: OFF 1: ON	1		
167	Judge- ment condi-	Print quality threshold upper limit	Set / Get	0 to 4	4		Judgement condition
168	tion threshold	Print quality threshold lower limit	Set / Get	0 to 4	0		Judgement condition

ces	
9	

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
170	Output parame- ter	String output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
171	tei	NG error code output (memory link)	Set / Get	0: OFF 1: ON	1		
172		Partial output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
173		Output end digit (memory link)	Set / Get	1 to 1024	1024		
174		Output beginning digit (memory link)	Set / Get	1 to 1024	1		
180	Mea- sure- ment	GS conversion	Set / Get	0: OFF 1: ON	0		
181	condition	Replacement character string	Set / Get	Maximum 16 characters	None		
186		Print quality	Set / Get	0: OFF 1: ON	0		
190		Grid correction (MicroQR Code)	Set / Get	0: OFF 1: ON	0		
202+3N (N=0 to 31)*1	Verifica- tion con- dition	Master data N	Set / Get	32 characters max.	None		
300+N (N=0 to 31)		Reference unit number N	Set / Get	0 to 31	0		
410	Logging condi-	Data logging switch for unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
411	lions	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
412		Data logging switch for number of characters	Set / Get	0: Data logging OFF 1: Data logging ON	1		
440		Data logging switch (overall quality)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
441		Data logging switch (decode)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
442		Data logging switch (cell contrast)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
443		Data logging switch (cell modulation)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
444		Data logging switch (fixed pattern damage)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
445		Data logging switch (axial nonuniformity)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
446		Data logging switch (grid nonuniformity)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
447		Data logging switch (unused error correction)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
448		Data logging switch (print scale)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
449		Data logging switch (print scale X)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
450		Data logging switch (print scale Y)	Set / Get	0: Data logging OFF 1: Data logging ON	0		

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter	
500	Display setting	Number of characters display	Set / Get	0: ON 1: OFF	0			
501		Character display	Set / Get	0: ON 1: OFF	0			
520		Display ON/OFF (over- all quality)	Set / Get	0: ON 1: OFF	0			
521		Display ON/OFF (decode)	Set / Get	0: ON 1: OFF	0			
522			Display ON/OFF (cell contrast)	Set / Get	0: ON 1: OFF	0		
523		Display ON/OFF (cell modulation)	Set / Get	0: ON 1: OFF	0			
524		Display ON/OFF (fixed pattern damage)	Set / Get	0: ON 1: OFF	0			
525		Display ON/OFF (axial nonuniformity)	Set / Get	0: ON 1: OFF	0			
526		Display ON/OFF (grid nonuniformity)	Set / Get	0: ON 1: OFF	0			
527		Display ON/OFF (unused error correction)	Set / Get	0: ON 1: OFF	0			
528		Display ON/OFF (print scale)	Set / Get	0: ON 1: OFF	0			
529		Display ON/OFF (print scale X)	Set / Get	0: ON 1: OFF	0			
530	1	Display ON/OFF (print scale Y)	Set / Get	0: ON 1: OFF	0			

<sup>\*1</sup> Use the ITEMDATA2 command to set and/or acquire a text string.

# 2D Codes (DPM) (FQ2-S4 series only)

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged
0	Mea- sure- ment result	Judgment	Get only	-2: No judgment (not inspected) 0: Judgment result OK -1: Judgment result NG -16: Inspection timeout error	-2	JG	Logged
5		Num. of char.	Get only	0 to 1024	0	N	Logged
6 <sup>*1</sup>		Characters	Get only	Text string			
8		Cell Recog. Rate	Get only	0 to 100	0	E	Logged
9		Contrast	Get only	0 to 100	0	С	Logged
10		Focus	Get only	0 to 100	0	F	
17		Index number	Get only	-2: No verification pattern or reading error -1: Verification is NG 0 to 31: Master data No.	-2	IN	
50		Overall quality	Get only	0 to 4	0	GDA0	Logged
51		Decode	Get only	0 to 4	0	GDA1	Logged
52		Cell Contrast	Get only	0 to 4	0	GDA2	Logged
53		Cell Modulation	Get only	0 to 4	0	GDA3	Logged
54		Fixed pattern damage	Get only	0 to 4	0	GDA4	Logged
55		Axial nonuniformity	Get only	0 to 4	0	GDA5	Logged
56		Grid nonuniformity	Get only	0 to 4	0	GDA6	Logged
57		Unused err. Corr.	Get only	0 to 4	0	GDA7	Logged
103	Output parame- ter	Reflect	Set / Get	0: Yes, 1: No	0		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged
120	Mea- sure- ment condition	Code type	Set / Get	0: Auto 1: DataMatrix 2: QR Code	0		
121	Condition	Code color	Set / Get	0: Auto 1: Black 2: White	0		
122		Cell (DataMatrix Square)	Set / Get	0: Auto 1: 10 × 10 2: 12 × 12  16: 16 × 64	0		
123		Cell (DataMatrix Rectangle)	Set / Get	0: Auto 1: 8 × 18 2: 8 × 32 3: 12 × 26 4: 12 × 36 5: 16 × 36 6: 16 × 48	0		
124		Cell (QR Code)	Set / Get	0: Auto 1: 21 × 21 2: 25 × 25  10: 57 × 57	0		
125		Code shape (DataMatrix)	Set / Get	0: Auto 1: Square 2: Rectangle	0		
127		Size	Set / Get	50 to 480	480		
128		Reverse	Set / Get	0: Auto 1: Normal 2: Reverse	0		
129		QR Code Model	Set / Get	0: Auto 1: Model 1 2: Model 2	0		
130	Mea- sure- ment result	Error Correction Level	Set / Get	0: Auto 1: M (15%) 2: L (7%) 3: H (30%) 4: Q (25%)	0		
131		Timeout time (ms)	Set / Get	1 to 9999	9999		
132		Fast mode	Set / Get	0: OFF 1: ON	0		
133	Output parame-	String output on/off	Set / Get	0: OFF 1: ON	0		
134	- ter	Partial output on/off	Set / Get	0: OFF 1: ON	0		
135		Output end digit	Set / Get	1 to 1024	1024		
136	1	Output starting digit	Set / Get	1 to 1024	1		
137	Mea- sure- ment result	Auto length	Set / Get	0: OFF 1: ON	1		
138	Output parame- ter	NG String output on/off	Set / Get	0: OFF 1: ON	0		
140	-5.	Error string	Set / Get	0: OFF 1: ON	0		

	C	D	
4		4	

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged
142	Verifica- tion con- dition	Verification master data	Set / Get	-1: OFF 0: All master data 1: Master data 0 verification 2: Master data 1 verification	-1		
				32: Master data 31 verification			
143		Partial verification ON/ OFF	Set / Get	0: No 1: Yes	0		
144		Verification end digit	Set / Get	1 to 1024	1024		
145		Verification beginning digit	Set / Get	1 to 1024	1		
150		Selected master num- ber	Set / Get	0 to 31	0		
152		Auto master data number	Set / Get	0 to 31: Master data number -1: OFF	-1		
161	Judge- ment condi-	Upper limit for cell recognition rate threshold	Set / Get	0 to 100	100		Judgement condition
162	tion	Lower limit for cell recognition rate threshold	Set / Get	0 to 100	0		Judgement condition
163		Contrast threshold upper limit	Set / Get	0 to 100	100		Judgement condition
164		Contrast threshold lower limit	Set / Get	0 to 100	0		Judgement condition
165		Focus threshold upper limit	Set / Get	0 to 100	100		Judgement condition
166		Focus threshold lower limit	Set / Get	0 to 100	0		Judgement condition
167		Threshold upper limit for print quality DPM	Set / Get	0 to 4	4		Judgement condition
168		Threshold lower limit for print quality DPM	Set / Get	0 to 4	0		Judgement condition
170	Output parame- ter	String output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
171	· tei	NG error code output (memory link)	Set / Get	0: OFF 1: ON	1		
172		Partial output ON/OFF (memory link)	Set / Get	0: OFF 1: ON	0		
173		Output end digit (memory link)	Set / Get	1 to 1024	1024		
174		Output beginning digit (memory link)	Set / Get	1 to 1024	1		
186	Mea- sure- ment	DPM print quality	Set / Get	0: OFF 1: ON	0		
190	condition	Grid correction (Data- Matrix)	Set / Get	0: OFF 1: ON	0		
191		Grid correction (QR codes)	Set / Get	0: OFF 1: ON	0		
202+3×N (N=0 to 31)*1	Verifica- tion con- dition	Master data N	Set / Get	32 characters max.			
300+N (N=0 to 31)		Reference unit number N	Set / Get	0 to 31	0		

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged
410	Logging condi- tions	Data logging switch for unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
411		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
412		Data logging switch for number of characters	Set / Get	0: Data logging OFF 1: Data logging ON	1		
413		Data logging switch for cell recognition rate	Set / Get	0: Data logging OFF 1: Data logging ON	1		
414		Data logging switch for contrast	Set / Get	0: Data logging OFF 1: Data logging ON	1		
415		Data logging switch for focus	Set / Get	0: Data logging OFF 1: Data logging ON	1		
440		Data logging switch (overall quality)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
441		Data logging switch (decode)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
442		Data logging switch (cell contrast)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
443		Data logging switch (cell modulation)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
444		Data logging switch (fixed pattern damage)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
445		Data logging switch (axial nonuniformity)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
446		Data logging switch (grid nonuniformity)	Set / Get	0: Data logging OFF 1: Data logging ON	0		
447		Data logging switch (unused error correction)	Set / Get	0: Data logging OFF 1: Data logging ON	0		

_	
co	

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged	
500	Display setting	Characters display	Set / Get	0: ON 1: OFF	0			
501		Character display	Set / Get	0: ON 1: OFF	0			
502		Cell recognition rate display	Set / Get	0: ON 1: OFF	0			
503		Contrast display	Set / Get	0: ON 1: OFF	0			
504		Focus display	Set / Get	0: ON 1: OFF	0			
520		Display ON/OFF (over- all quality)	Set / Get	0: ON 1: OFF	0			
521		Display ON/OFF (decode)	Set / Get	0: ON 1: OFF	0			
522		Display ON/OFF (cell contrast)	Set / Get	0: ON 1: OFF	0			
523		Display ON/OFF (cell modulation)	Set / Get	0: ON 1: OFF	0			
524		Display ON/OFF (fixed pattern damage)	Set / Get	0: ON 1: OFF	0			
525			Display ON/OFF (axial nonuniformity)	Set / Get	0: ON 1: OFF	0		
526		Display ON/OFF (grid nonuniformity)	Set / Get	0: ON 1: OFF	0			
527		Display ON/OFF (unused error correction) etected text string, use the	Set / Get	0: ON 1: OFF	0			

<sup>\*1</sup> To acquire the detected text string, use the ITEMDATA2 command.

# Search (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	<ul> <li>-2: No judgement (not measured),</li> <li>0: Judgement is OK,</li> <li>-1: Judgement is NG,</li> <li>-13: Teaching not performed error,</li> <li>-14: Figure not registered error,</li> <li>-15: Out of range error</li> </ul>	-2	JG	Logged data
5		Correlation	Get only	0 to 100	0	CR[0] to CR[31]	Logged data
6		Position X	Get only	-99,999.9999 to 99,999.9999	0	X[0] to X[31]	Logged data
7		Position Y	Get only	-99,999.9999 to 99,999.9999	0	Y[0] to Y[31]	Logged data
8		Angle	Get only	-180 to 180	0	TH[0] to TH[31]	Logged data
9		Reference X	Get only	-99,999.9999 to 99,999.9999	0	SX	
10		Reference Y	Get only	-99,999.9999 to 99,999.9999	0	SY	
11		Reference angle	Get only	-180 to 180	0	ST	
12	-	Detection coordinate X	Get only	-99,999.9999 to 99,999.9999	0	RX	
13		Detection coordinate Y	Get only	-99,999.9999 to 99,999.9999	0	RY	
14		Count	Get only	0 to 32	0	С	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
121	Model region	Rotation	Set / Get	0: Yes 1: No	0		
122		Rotation angle upper limit	Set / Get	-180 to 180	180		
123		Rotation angle lower limit	Set / Get	-180 to 180	-180		
126	-	Stability	Set / Get	1 to 15	12		
127	-	Precision	Set / Get	1 to 3	2		
132	Detec-	Detection point X	Set / Get	-99,999.9999 to 99,999.9999	0		
133	tion coor- dinate	Detection point Y	Set / Get	-99,999.9999 to 99,999.9999	0		
134	Mea- sure- ment condition	Sub-pixel	Set / Get	0: Yes 1: No	0		
136	Judge- ment	Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
137	condi- tions	Judgement lower limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
138		Judgement upper limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
139		Judgement lower limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
140		Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition

ices
ဖ

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
141	Judge- ment condi-	Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition
142	tions	Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
143		Judgement lower limit for correlation	Set / Get	0 to 100	60		Judgement condition
145		Search candidate level	Set / Get	0 to 100	70		
146	Mea- sure- ment condi- tions	Sort condition	Set / Get	For Multiple Searches 0: Ascending order of correlation value, 1: Descending order of correlation value, 2: Ascending order of position X, 3: Descending order of position X, 4: Ascending order of position Y, 5: Descending order of position Y	1		
148	Judge- ment	Judgement upper limit for detection count	Set / Get	0 to 32	32		Judgement condition
149	condi- tions	Judgement lower limit for detection count	Set / Get	0 to 32	0		Judgement condition
150	Mea-	Multiple output	Set / Get	0: No, 1: Yes	0		
152	ment condi-	Extraction condition, X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
153	tions	Extraction condition, X lower limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
154		Extraction condition, Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
155		Extraction condition, Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
160		Detection count	Set / Get	1 to 32	32		
300	Logging condi-	Number of data log records	Set / Get	1 to 32	32		
310	lions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313	Logging condi-	Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314	แบบอ	Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for measurement angle	Set / Get	0: Data logging OFF 1: Data logging ON	1		
321		Data logging switch for detection count	Set / Get	0: Data logging OFF 1: Data logging ON	1		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
700	Display settings	Correlation display	Set / Get	0: Display 1: Do not display	0		
701		Position X display	Set / Get	0: Display 1: Do not display	0		
702		Position Y display	Set / Get	0: Display 1: Do not display	0		
703		Measurement angle display	Set / Get	0: Display 1: Do not display	0		
704		Count display	Set / Get	0: Display 1: Do not display	0		
800		Position X display pat- tern	Set / Get	0: Absolute value 1: Relative value	0		
801		Position Y display pattern	Set / Get	0: Absolute value 1: Relative value	0		
802		Measured angle dis- play pattern	Set / Get	0: Absolute value 1: Relative value	0		

## Sensitive Search (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	Logged data
5		Correlation	Get only	0 to 100	0	CR	Logged data
6		Deviation	Get only	Color Camera: 0.000 to 219.9705 Monochrome Camera: 0.000 to 127.000	0	DV	Logged data
7		Measurement position X (search center position)	Get only	-99,999.9999 to 99,999.9999	0	Х	Logged data
8		Measurement position Y (search center position)	Get only	-99,999.9999 to 99,999.9999	0	Y	Logged data
9	=	Angle	Get only	-180 to 180	0	TH	Logged data
10	Mea-	Detection X	Get only	-99,999.9999 to 99,999.9999	0	RX	Logged data
11	sure- ment	Detection Y	Get only	-99,999.9999 to 99,999.9999	0	RY	Logged data
12	result	Reference position X	Get only	-99,999.9999 to 99,999.9999	0	SX	Logged data
13		Reference position Y	Get only	-99,999.9999 to 99,999.9999	0	SY	Logged data
14	-	Reference angle	Get only	-180 to 180	0	ST	Logged data
15		NG sub-region	Get only	0 to 100	0	СТ	Logged data
16		Sub-region number	Get only	0 to 99	0	AN	Logged data
17		Sub-region number (X)	Get only	0 to 9	0	ANX	Logged data

lices
ဖ

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
18	Mea- sure-	Sub-region number (Y)	Get only	0 to 9	0	ANY	Logged data
19	ment result	Measurement position X (sub-region)	Get only	-99,999.9999 to 99,999.9999	0	DX	Logged data
20		Measurement position Y (sub-region)	Get only	-99,999.9999 to 99,999.9999	0	DY	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
121	Model region	Rotation	Set / Get	0: No rotation 1: Rotation	0		
122		Rotation angle upper limit	Set / Get	-180 to 180	180		
123		Rotation angle lower limit	Set / Get	-180 to 180	-180		
132	Detec-	Detection point X	Set / Get	0 to 9999	0		
133	tion point coordi- nate	Detection point Y	Set / Get	0 to 9999	0		
134	Mea- sure-	Sub-pixel	Set / Get	0: No 1: Yes	0		
135	ment condi- tions	Candidate level	Set / Get	0 to 100	70		
136	Judge- ment	Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
137	condi- tions	Judgement lower limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
138		Judgement upper limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
139		Judgement lower limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
140		Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition
141		Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition
142	Judge- ment condi-	Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
143	tions	Judgement lower limit for correlation	Set / Get	0 to 100	60		Judgement condition
145		Density deviation upper limit	Set / Get	Color Cameras: 0 to 221 Monochrome Cameras: 0 to 127	Color Camera: 221 Monochrome Camera: 127		Judgement condition
146		Density deviation lower limit	Set / Get	Color Cameras: 0 to 221 Monochrome Cameras: 0 to 127	0		Judgement condition
147		NG sub-region upper limit	Set / Get	0 to 100	100		
148		NG sub-region lower limit	Set / Get	0 to 100	0		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
153	Mea- sure- ment	Plain inspection	Set / Get	0: No 1: Yes	0		
169	condi- tions	Gain setting	Set / Get	0: 3×3 sub-divisions 1: 5×5 sub-divisions 2: 9×9 sub-divisions	1		
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311	10113	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch for density deviation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
316		Data logging switch for measurement angle	Set / Get	0: Data logging OFF 1: Data logging ON	1		
320		Data logging switch for NG sub-region	Set / Get	0: Data logging OFF 1: Data logging ON	1		
321		Data logging switch for sub-region correla- tion	Set / Get	0: Data logging OFF 1: Data logging ON	1		
322		Data logging switch for sub-region density deviation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
323		Data logging switch for sub-region number	Set / Get	0: Data logging OFF 1: Data logging ON	1		
324		Data logging switch for sub-region number (X)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
325		Data logging switch for sub-region number (Y)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
326	Logging conditions	Data logging switch for measurement position X (sub-region)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
327		Data logging switch for measurement position Y (sub-region)	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Correlation display	Set / Get	0: Display 1: Do not display	0		
701		Position X display	Set / Get	0: Display 1: Do not display	0		
702		Position Y display	Set / Get	0: Display 1: Do not display	0		
703		Measurement angle display	Set / Get	0: Display 1: Do not display	0		
704		Density deviation display	Set / Get	0: Display 1: Do not display	0		

$\sim$
Œ
$\overline{}$
$\overline{}$
≌
0
m
č
U,

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
800	Mea- sure- ment	Position X display pattern	Set / Get	0: Absolute value 1: Relative value	0		
801	result display	Position Y display pat- tern	Set / Get	0: Absolute value 1: Relative value	0		
802		Measured angle dis- play pattern	Set / Get	0: Absolute value 1: Relative value	0		
1000+N (N=0 to 99)	Mea- sure- ment result	Sub-region correlation N	Get only	0 to 100	0	CRN	
1100+N (N=0 to 99)	rosult	Sub-region density deviation N	Get only	Sub-region density deviation N	0	DVN	

## Shape Search II (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	Logged data
5		Correlation	Get only	0 to 100	0	CR[0] to CR[31]	Logged data
6		Position X	Get only	-99,999.9999 to 99,999.9999	0	X[0] to X[31]	Logged data
7		Position Y	Get only	-99,999.9999 to 99,999.9999	0	Y[0] to Y[31]	Logged data
8		Angle	Get only	-180 to 180	0	TH[0] to TH[31]	Logged data
9	Mea- sure-	Reference X	Get only	-99,999.9999 to 99,999.9999	0	SX	
10	ment	Reference Y	Get only	-99,999.9999 to 99,999.9999	0	SY	
11	result	Reference angle	Get only	-180 to 180	0	ST	
12	-	Detection coordinate X	Get only	-99,999.9999 to 99,999.9999	0	RX	
13		Detection coordinate Y	Get only	-99,999.9999 to 99,999.9999	0	RY	
14		Count	Get only	0 to 32	0	С	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Model region	Rotation	Set / Get	0: Yes 1: No	0		
121		Rotation angle upper limit	Set / Get	-180 to 180	180		
122		Rotation angle lower limit	Set / Get	-180 to 180	-180		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
133	Mea- sure- ment condi- tions	Candidate level	Set / Get	0 to 100	80		
134	Detec- tion point	Detection point X	Set / Get	0 to 9999	0		
135	coordi- nate	Detection point Y	Set / Get	0 to 9999	0		
136	Mea- sure- ment condition	Sort condition	Set / Get	O: Ascending order of correlation value, 1: Descending order of correlation value, 2: Ascending order of position X, 3: Descending order of position X, 4: Ascending order of position Y, 5: Descending order of position Y	1		
138	Judge- ment condi-	Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
139	tions	Judgement lower limit for correlation	Set / Get	0 to 100	60		Judgement condition
140		Judgement upper limit for detection count	Set / Get	0 to 32	32		Judgement condition
141		Judgement lower limit for detection count	Set / Get	0 to 32	0		Judgement condition
142		Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
143		Judgement lower limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
144		Judgement upper limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
145	Judge- ment condi-	Judgement lower limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
146	tions	Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition
147		Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition
152	Mea- sure- ment	Extraction condition, X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
153	condi- tions	Extraction condition, X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
154		Extraction condition, Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
155		Extraction condition, Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
161		Detection count	Set / Get	1 to 32	32		
170		Model mode	Set / Get	0: Fast 1: Stable	0		
300	Logging condi-	Number of data log records upper limit	Set / Get	1 to 32	32		
310		Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		

endices
9

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
312	Logging condi- tions	Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313	uono	Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for measurement angle	Set / Get	0: Data logging OFF 1: Data logging ON	1		
321		Data logging switch for detection count	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Correlation display	Set / Get	0: Display 1: Do not display	0		
701		Position X display	Set / Get	0: Display 1: Do not display	0		
702		Position Y display	Set / Get	0: Display 1: Do not display	0		
703		Measurement angle display	Set / Get	0: Display 1: Do not display	0		
704		Count display	Set / Get	0: Display 1: Do not display	0		
800		Position X display pattern	Set / Get	0: Absolute value 1: Relative value	0		
801		Position Y display pattern	Set / Get	0: Absolute value 1: Relative value	0		
802		Measurement angle display pattern	Set / Get	0: Absolute value 1: Relative value	0		

## Shape Search III (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged data
5		Correlation	Get only	0 to 100	0	CR[0] to CR[31]	Logged data
6		Position X	Get only	-99,999.9999 to 99,999.9999	0	X[0] to X[31]	Logged data
7		Position Y	Get only	-99,999.9999 to 99,999.9999	0	Y[0] to Y[31]	Logged data
8		Angle	Get only	-180 to 180	0	TH[0] to TH[31]	Logged data

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
9	Mea- sure-	Reference X	Get only	-99,999.9999 to 99,999.9999	0	SX	
10	ment	Reference Y	Get only	-99,999.9999 to 99,999.9999	0	SY	
11	result	Reference angle	Get only	-180 to 180	0	ST	
12		Detection coordinate X	Get only	-99,999.9999 to 99,999.9999	0	RX	
13		Detection coordinate Y	Get only	-99,999.9999 to 99,999.9999	0	RY	
14		Count	Get only	0 to 32	0	С	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Model region	Rotation	Set / Get	0: No 1: Yes	0		
121		Rotation angle upper limit	Set / Get	-180 to 180	180		
122		Rotation angle lower limit	Set / Get	-180 to 180	-180		
123	Mea-	Edge level (model)	Set / Get	0 to 1024	20		
133	sure- ment condi- tions	Candidate level	Set / Get	0 to 100	50		
134	Detec- tion point	Detection point X	Set / Get	0 to 9999	0		
135	coordi- nate	Detection point Y	Set / Get	0 to 9999	0		
136	Mea- sure- ment condition	Sort condition	Set / Get	O: Ascending order of correlation value, 1: Descending order of correlation value, 2: Ascending order of position X, 3: Descending order of position X, 4: Ascending order of position Y, 5: Descending order of position Y	1		
138	Judge- ment	Judgement upper limit for correlation	Set / Get	0 to 100	100		Judgement condition
139	condi- tions	Judgement lower limit for correlation	Set / Get	0 to 100	60		Judgement condition
140		Judgement upper limit for detection count	Set / Get	0 to 32	32		Judgement condition
141		Judgement lower limit for detection count	Set / Get	0 to 32	0		Judgement condition
142		Judgement upper limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
143		Judgement lower limit for search coordinate X	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
144		Judgement upper limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
145	Judge- ment condi-	Judgement lower limit for search coordinate Y	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
146	tions	Judgement upper limit for search angle	Set / Get	-180 to 180	180		Judgement condition
147		Judgement lower limit for search angle	Set / Get	-180 to 180	-180		Judgement condition

ices
ဖ

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
150	Mea- sure-	Edge level (measurement)	Set / Get	0 to 1024	30		
152	ment condi- tions	Extraction condition, X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
153		Extraction condition, X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
154		Extraction condition, Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
155		Extraction condition, Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
160		Image type	Set / Get	0: Measurement image 1: Measurement image + Model image 2: Edge image 3: Edge image + Model image	1		
161		Detection count	Set / Get	1 to 32	32		
172		Edge level auto (measurement)	Set / Get	0: OFF 1: ON	1		
174		Mask size	Set / Get	0: 3 x 3 1: 5 x 5 2: 7 x 7	0		
178		Edge level auto (model)	Set / Get	0: OFF 1: ON	1		
180		Acceptable distortion level	Set / Get	0: Low 1: Middle 2: High	2		
181		Noise Removal Level	Set / Get	0 to 100	0		
188		Model mode	Set / Get	0: Stable 1: Fast	0		
229		Overlay judgement	Set / Get	0: No 1: Yes	0		
230		Overlay rejection	Set / Get	0 to 100	100		
300	Logging condi- tions	Number of data log records upper limit	Set / Get	1 to 32	32		
310	10113	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for correlation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch for position X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for position Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for measurement angle	Set / Get	0: Data logging OFF 1: Data logging ON	1		
321		Data logging switch for detection count	Set / Get	0: Data logging OFF 1: Data logging ON	1		

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
700	Display settings	Correlation display	Set / Get	0: Display 1: Do not display	0		
701		Position X display	Set / Get	0: Display 1: Do not display	0		
702		Position Y display	Set / Get	0: Display 1: Do not display	0		
703		Measurement angle display	Set / Get	0: Display 1: Do not display	0		
704		Count display	Set / Get	0: Display 1: Do not display	0		
800		Position X display pat- tern	Set / Get	0: Absolute value 1: Relative value	0		
801		Position Y display pattern	Set / Get	0: Absolute value 1: Relative value	0		
802		Measurement angle display pattern	Set / Get	0: Absolute value 1: Relative value	0		

## Edge Position (FQ2-S1/S2/S3 series or FQ2-S4 series only)

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured) 0: Judgement is OK -1: Judgement is NG -13: Teaching not performed error -14: Figure not registered error -15: Out of range error	-2	JG	Logged data
5		Edge position X	Get only	-99,999.9999 to 99,999.9999	0	Х	Logged data
6		Edge position Y	Get only	-99,999.9999 to 99,999.9999	0	Υ	Logged data
7		Standard position X	Get only	-99,999.9999 to 99,999.9999	0	SX	
8		Standard position Y	Get only	-99,999.9999 to 99,999.9999	0	SY	
9		Difference in position	Get only	-99,999.9999 to 99,999.9999	0	DF	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes, 1: No	0		
120	Set color	Set color	Set / Get	0: No edge color specification, 1: Edge color specification	0		
121		Edge color red	Set / Get	0 to 255	255		
122		Edge color green	Set / Get	0 to 255	255		
123		Edge color blue	Set / Get	0 to 255	255		
132	Mea- sure-	Edge level	Set / Get	0 to 100	50		
133	ment condi- tions	Noise level	Set / Get	0 to 442	5		

w
⋾
Q
ਨ:
Φ
ഗ

Exter- nal ref- erence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
136	Judge- ment condi-	Edge position X upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
137	tions	Edge position X lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
138		Edge position Y upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
139		Edge position Y lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
140	Mea- sure- ment	Detection mode for Monochrome Sensor	Set / Get	0: Light to Dark 1: Dark to Light	0		
141	condition	Edge level absolute value	Set / Get	0 to 442	20		
142		Edge level specification method	Set / Get	0:% 1:Absolute value	0		
144		Measurement method	Set / Get	0: Projection 1: Differentiation	0		
145	Judge- ment condi-	Edge position offset upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		Judgement condition
146	tions	Edge position offset lower limit	Set / Get	-99,999.9999 to 99,999.9999	-99,999.9999		Judgement condition
147	Mea- sure- ment condition	Edge level absolute value (Monochrome Cameras)	Set / Get	0 to 255	20		
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311	lions	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for detected edge position X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch for detected edge position Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
316		Data logging switch for scroll	Set / Get	0: Data logging OFF 1: Data logging ON	0		
700	Display settings	Edge position offset display	Set / Get	0: Display 1: Do not display	1		
701		Detected edge position X display	Set / Get	0: Display 1: Do not display	0		
702		Detected edge position Y display	Set / Get	0: Display 1: Do not display	0		
800		Detected edge position X display pattern	Set / Get	0: Absolute value 1: Relative value	0		
801		Detected edge position Y display pattern	Set / Get	0: Absolute value 1: Relative value	0		

# Edge Width (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	<ul> <li>-2: No judgement (not measured),</li> <li>0: Judgement is OK</li> <li>-1: Judgement is NG</li> <li>-13: Teaching not performed error</li> <li>-14: Figure not registered error</li> <li>-15: Out of range error</li> </ul>	-2	JG	
5		Edge width	Get only	0 to 99,999.9999	0	W	Logged data
6		Reference edge width	Get only	0 to 99,999.9999	0	SW	Logged data
7		Difference in edge width	Get only	0 to 99,999.9999	0	DF	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Mea- sure- ment condi- tions	Edge level specification method	Set / Get	0:% 1: Absolute value	0		
121	Set color	Set color	Set / Get	Edge color specification 0: Not specified, 1: Specified	0		
122	Mea- sure- ment	Measurement method	Set / Get	0: Projection 1: Differentiation	0		
131	condi-	Edge color red	Set / Get	0 to 255	255		
132	tions	Edge color green	Set / Get	0 to 255	255		
133		Edge color blue	Set / Get	0 to 255	255		
137	1	Edge level	Set / Get	0 to 100	50		
138		Edge level absolute value	Set / Get	0 to 442	20		
139		Noise level	Set / Get	5 to 442	5		
142		Density change	Set / Get	0: Light to Dark 1: Dark to Light	0		
143		Edge level absolute value (Monochrome Cameras)	Set / Get	0 to 255	20		
190	Judge- ment condi-	Edge width upper limit	Set / Get	-99,999.9999 to 99,999.9999	99,999.9 999		Judgement condition
191	tions	Edge width lower limit	Set / Get	-99,999.9999 to 99,999.9999	0		
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311	10113	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for edge width	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Edge width display	Setting/ Acquisition	0: Display 1: Do not display	0		
800		Wedge width display pattern	Setting/ Acquisition	0: Absolute value 1: Relative value 2: Percentage	0		

# Edge Pitch (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	Logged data
5		Edge pitch	Get only	0 to 999	0	N	Logged data
6		Average pitch	Get only	0 to 99,999.9999	0	Р	Logged data
7		Maximum pitch	Get only	0 to 99,999.9999	0	PH	Logged data
8		Minimum pitch	Get only	0 to 99,999.9999	0	PL	Logged data
9		Average width	Get only	0 to 99,999.9999	0	W	Logged data
10		Maximum pitch	Get only	0 to 99,999.9999	0	WH	Logged data
11		Minimum pitch	Get only	0 to 99,999.9999	0	WL	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
120	Mea- sure-	Edge color red	Set / Get	0 to 255	255		
121	ment	Edge color green	Set / Get	0 to 255	255		
122	condi- tions	Edge color blue	Set / Get	0 to 255	255		
127		Edge level	Set / Get	0 to 100	50		
128		Noise level	Set / Get	0 to 442	5		
130	Judge- ment condi-	Edge pitch upper limit	Set / Get	0 to 1,000	1,000		Judgement condition
131	tions	Edge pitch lower limit	Set / Get	0 to 1,000	0		Judgement condition
132		Average pitch upper limit	Set / Get	0 to 99,999.9999	99,999.9 999		Judgement condition
133		Average pitch lower limit	Set / Get	0 to 99,999.9999	0		Judgement condition
134		Pitch upper limit	Set / Get	0 to 99,999.9999	99,999.9 999		Judgement condition
135		Pitch lower limit	Set / Get	0 to 99,999.9999	0		Judgement condition
136		Average width upper limit	Set / Get	0 to 99,999.9999	99,999.9 999		Judgement condition
137		Average width lower limit	Set / Get	0 to 99,999.9999	0		Judgement condition
138		Width upper limit	Set / Get	0 to 99,999.9999	99,999.9 999		Judgement condition
139		Width lower limit	Set / Get	0 to 99,999.9999	0		Judgement condition

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
140	Mea- sure- ment	Edge enhancement level	Set / Get	0 to 442	100		
141	condi- tions	Color to count	Set / Get	(Monochrome Cameras) 0: White 1: Black	0		
142		Mode	Set / Get	(Monochrome Cameras) 0: Standard 1: Precise	0		
310	Logging condi-	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311	lions	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for edge pitch	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch for average pitch	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for maximum pitch	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for minimum pitch	Set / Get	0: Data logging OFF 1: Data logging ON	1		
316		Data logging switch for average width	Set / Get	0: Data logging OFF 1: Data logging ON	1		
317		Data logging switch for maximum width	Set / Get	0: Data logging OFF 1: Data logging ON	1		
318		Data logging switch for minimum width	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Edge pitch display	Set / Get	0: Display 1: Do not display	0		
701		Average pitch display	Set / Get	0: Display 1: Do not display	0		
702		Pitch display	Set / Get	0: Display 1: Do not display	0		
703		Average width display	Set / Get	0: Display 1: Do not display	0		
704		Width display	Set / Get	0: Display 1: Do not display	0		

## es **9**

# Area (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	
5	Mea- sure-	Area	Get only	0 to 999,999,999.9999	0	AR	
6	ment	Gravity X	Get only	-99,999.9999 to 99,999.9999	0	Х	Logged data
7	result	Gravity Y	Get only	-99,999.9999 to 99,999.9999	0	Y	Logged data
8		Reference area	Get only	0 to 999,999,999	0	SA	Logged data
9		Reference position X	Get only	-99,999.9999 to 99,999.9999	0	SX	
10		Reference position Y	Get only	-99,999.9999 to 99,999.9999	0	SY	
11		Area deviation	Get only	-999,999,999.9999 to 999,999,999.9999	0	DF	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No	0		
127	Mea- sure- ment condi- tions	Background color	Set / Get	0: Black 1: White 2: Red 3: Green 4: Blue	0		
128		Fill profile	Set / Get	0: No 1: Fill outline, 2: Filling up holes	0		
129		Area color inversion	Set / Get	0: None 1: Enabled The binary inversion is displayed for a Monochrome Camera.	0		
135	Judge- ment	Judgement upper limit for area	Set / Get	0 to 999,999,999.9999	999,999,999		
136		Judgement lower limit for area	Set / Get	0 to 999,999,999.9999	0		
137		Judgement upper limit for gravity X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
138		Judgement lower limit for gravity X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
139		Judgement upper limit for gravity Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
140		Judgement lower limit for gravity Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
141		Judgement upper limit for binary threshold	Set / Get	0 to 255	255		
142		Judgement lower limit for binary threshold	Set / Get	0 to 255	128		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
143	Mea- sure- ment condi-	Binary image display	Set / Get	(Monochrome Cameras) 0: No binary image display, 1: Binary image display	1		
144	tions	Image type	Set / Get	O: Measurement image, 1: Color extraction image, 2: Selected color image, 3: Binary image after extraction	1		
145		Enable/disable multi- ple selection	Set / Get	0: Enabled, 1: Disabled	1		
160+N×10 (N=0 to 3)		Registered color usage flag N	Set / Get	0: Not used 1: Used	1(N=0), 0(N=1 to 3)		
161+N×10 (N=0 to 3)		Registered color OR/ NOT flag N	Set / Get	0: OR, 1: NOT	0		
162+N×10 (N=0 to 3)		Registered color maxi- mum hue N	Set / Get	0 to 359	359		
163+N×10 (N=0 to 3)		Registered color mini- mum hue N	Set / Get	0 to 359	0		
164+N×10 (N=0 to 3)		Registered color maximum saturation N	Set / Get	0 to 255	255		
165+N×10 (N=0 to 3)		Registered color mini- mum saturation N	Set / Get	0 to 255	0		
166+N×10 (N=0 to 3)		Registered color maxi- mum brightness N	Set / Get	0 to 255	255		
167+N×10 (N=0 to 3)	Set color	Registered color mini- mum brightness N	Set / Get	0 to 255	0		
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311		Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for area	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch for gravity X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for gravity Y	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Area display	Set / Get	0: Display area 1: Do not display area	0		
701		Gravity X display	Set / Get	Display gravity X     Do not display gravity X	0		
702		Gravity Y display	Set / Get	Display gravity Y     Do not display gravity Y	0		
800		Area display pattern	Set / Get	0: Absolute value 1: Relative value 2: Percentage	0		
801		Gravity X display pat- tern	Set / Get	0: Absolute value 1: Relative value	0		
802		Gravity Y display pat- tern	Set / Get	0: Absolute value 1: Relative value	0		

# Color Data (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	0: Judgement is OK, -1: Judgement is NG, -10: Image error, -13: Teaching not performed e -14: Figure not registered erro -15: Out of range error, -20: Other error		-1: Judgement is NG, -10: Image error, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error,	-2	JG	
5		R average	Get only	0 to 255	0	AR	
6		G average	Get only	0 to 255	0	AG	
7		B average	Get only	0 to 255	0	AB	
8		Color difference	Get only	0 to 442 The density average is displayed for a Monochrome Camera.	0	AD	Logged data
9		Color deviation	Get only	0 to 221 The standard deviation of the density is displayed for a Monochrome Camera.	0	DV	
103	Output parame- ter	Reflect	Set / Get	0: Yes, 1: No	0		
124	Judge- ment condi-	Color difference upper limit	Set / Get	0 to 442	442		Judgement condition
125	tions	Color difference lower limit	Set / Get	0 to 442	0		
126	Mea- sure- ment	Color deviation upper limit	Set / Get	0 to 221	221		
127	condi- tions	Color deviation lower limit	Set / Get	0 to 221	0		
130		Density average upper limit	Set / Get	0 to 255	255		
131		Density average lower limit	Set / Get	0 to 255	0		
132		Density deviation upper limit	Set / Get	0 to 127	127		
133		Density deviation lower limit	Set / Get	0 to 127	0		
134		R average upper limit	Set / Get	0 to 255	255		
135		R average lower limit	Set / Get	0 to 255	0		
136	1	G average upper limit	Set / Get	0 to 255	255		
137	1	G average lower limit	Set / Get	0 to 255	0		
138	Mea-	B average upper limit	Set / Get	0 to 255	255		
139	sure- ment condi- tions	B average lower limit	Set / Get	0 to 255	0		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
310	Logging condi- tions	Data logging switch for entire unit	Set / Get	0: Data logging OFF 1: Data logging ON	1		
311	1013	Data logging switch for judgement	Set / Get	0: Data logging OFF 1: Data logging ON	1		
312		Data logging switch for average deviation/density average	Set / Get	0: Data logging OFF 1: Data logging ON	1		
313		Data logging switch for color deviation/density deviation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
314		Data logging switch for R average	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for G average	Set / Get	0: Data logging OFF 1: Data logging ON	1		
316		Data logging switch for B average	Set / Get	0: Data logging OFF 1: Data logging ON	1		
317		Data logging switch for reference average	Set / Get	0: Data logging OFF 1: Data logging ON	1		
318		Data logging switch for standard deviation	Set / Get	0: Data logging OFF 1: Data logging ON	1		
319		Data logging switch for density average difference	Set / Get	0: Data logging OFF 1: Data logging ON	1		
320		Data logging switch for density deviation difference	Set / Get	0: Data logging OFF 1: Data logging ON	1		
700	Display settings	Average color display	Set / Get	0: Display 1: Do not display	0		
701		Color deviation display	Set / Get	0: Display 1: Do not display	0		
702		R average display	Set / Get	0: Display 1: Do not display	1		
703		G average display	Set / Get	0: Display 1: Do not display	1		
704		B average display	Set / Get	0: Display 1: Do not display	1		
705		Density average display	Set / Get	0: Display 1: Do not display	0		
706		Density deviation display	Set / Get	0: Display 1: Do not display	0		

# Labeling (FQ2-S1/S2/S3 series or FQ2-S4 series only)

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
0	Mea- sure- ment result	Judgement	Get only	-2: No judgement (not measured), 0: Judgement is OK, -1: Judgement is NG, -13: Teaching not performed error, -14: Figure not registered error, -15: Out of range error	-2	JG	Logged data
5	-	Number of labels	Get only	0 to 100	0	L	Logged data
6		Area	Get only	0 to 999,999,999.9999	0	AR[0] to AR[99]	Logged data
7		Gravity center X	Get only	-99,999.9999 to 99,999.9999	0	X[0] to X[99]	Logged data
8		Gravity center Y	Get only	-99,999.9999 to 99,999.9999	0	Y[0] to Y[99]	Logged data
9		Reference area	Get only	0 to 999,999,999.9999	0	SA	
10		Reference position X	Get only	-99,999.9999 to 99,999.9999	0	SX	
11		Reference position Y	Get only	-99,999.9999 to 99,999.9999	0	SY	
15		Total label area	Get only	0 to 999,999,999.9999	0	TAR	Logged data
55		Master angle	Get only	-180 to 180	0	ATH[0] to ATH[99]	Logged data
103	Output parame- ter	Reflect	Set / Get	0: Yes 1: No			
127	Extracte d image display condition	Background color	Set / Get	t 0: Black 0 1: White 2: Red 3: Green 4: Blue			
131	Set color	Area color inversion	Set / Get	0: None	0		
	Binary		Set / Get	1: Enabled The binary value is displayed for a Monochrome Camera.			
132	Mea- sure- ment	Filling up holes	Set / Get	0: No 1: Yes	0		
133	condi- tions	Outside trimming	Set / Get	0: No 1: Yes	0		
136		Label sort condition	Set / Get	0: Ascending order of area, 1: Descending order of area, 2: Ascending order of gravity X, 3: Descending order of gravity X, 4: Ascending order of gravity Y, 5: Descending order of gravity Y	1		
146	Binary	Binary level upper limit	Set / Get	0 to 255	255		
147	level	Binary level lower limit	Set / Get	0 to 255	128		
148	Extracte d image display	Binary image display	Set / Get	0: No binary image display, 1: Binary image display	1		
149		Image type	Set / Get	O: Measurement image, 1: Color extraction image, 2: Selected color image 3: Binary image after extraction	1		

External reference number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
152	Mea- sure-	External reference label number	Set / Get	0 to 99	0		
156	ment condi- tions	Extraction condition, detection count	Set / Get	1 to 100	100		
160+N×10 (N=0 to 3)	Set color	Registered color usage flag N	Set / Get	0: Not used 1: Used	1		
161+N×10 (N=0 to 3)		Registered color exclusion flag N	Set / Get	0: OR 1: NOT	0		
162+N×10 (N=0 to 3)		Registered color maxi- mum hue N	Set / Get	0 to 359	359		
163+N×10 (N=0 to 3)		Registered color mini- mum hue N	Set / Get	0 to 359	0		
164+N×10 (N=0 to 3)		Registered color maximum saturation N	Set / Get	0 to 255	255		
165+N×10 (N=0 to 3)		Registered color mini- mum saturation N	Set / Get	0 to 255	0		
166+N×10 (N=0 to 3)		Registered color maxi- mum brightness N	Set / Get	0 to 255	255		
167+N×10 (N=0 to 3)		Registered color mini- mum brightness N	Set / Get	0 to 255	0		
300	Logging condi- tions	Number of data log records	Set / Get	1 to 100	100		
310		Data logging switch for entire unit	Set / Get		1		
311		Data logging switch for judgement	Set / Get		1		
312		Data logging switch for number of labels	Set / Get		1		
313		Data logging switch for area	Set / Get		1		
314		Data logging switch for gravity X	Set / Get	0: Data logging OFF 1: Data logging ON	1		
315		Data logging switch for gravity Y	Set / Get		1		
317		Data logging switch for Reference average	Set / Get		0		
319		Data logging switch for total label area	Set / Get		1		
326		Data logging switch for master angle	Set / Get		1		
503	Mea- sure- ment	Extraction condition, Upper limit (Area)	Set / Get	0.0000 to 999,999,999.9999	999,999,999		
504	condition	Extraction condition, Lower limit (Area)	Set / Get	0.0000 to 999,999,999.9999	0		
513		Extraction condition, Upper limit (gravity X)	Set / Get	-999,999,999.9999 to 999,999,999.9999	999999999. 9999		
514		Extraction condition, Lower limit (gravity X)	Set / Get	-999,999,999.9999 to 999,999,999.9999	999,999,999 .9999		
523		Extraction condition, Upper limit (gravity Y)	Set / Get	-999,999,999.9999 to 999,999,999.9999	999999999. 9999		
524		Extraction condition, Lower limit (gravity Y)	Set / Get	-999,999,999.9999 to 999,999,999.9999	999,999,999. 9999		

č	Ď		
•	•	,	

External refer- ence number	Category	Data name	Set / Get	Data range	Default	Expression text string	Logged data/ Judgement parameter
602	Judge- ment	Judgement upper limit for number of labels	Set / Get	1 to 100	100		
603		Judgement lower limit for number of labels	Set / Get	1 to 100	0		
612		Judgement upper limit for label area	Set / Get	0 to 999,999,999.9999	999,999,999		
613		Judgement lower limit for label area	Set / Get	0 to 999,999,999.9999	0		
622		Judgement upper limit for area	Set / Get	0 to 999,999,999.9999	999,999,999		
623		Judgement lower limit for area	Set / Get	0 to 999,999,999.9999	0		
632		Judgement upper limit for gravity X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
633		Judgement lower limit for gravity X	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
642		Judgement upper limit for gravity Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
643		Judgement lower limit for gravity Y	Set / Get	-99,999.9999 to 99,999.9999	99,999.9999		
652		Judgement upper limit for master angle	Set / Get	-180 to 180	180		
653		Judgement lower limit for master angle	Set / Get	-180 to 180	-180		
700	Display settings	Number of labels display	Set / Get	0: ON 1: OFF	0		
701		Total label area display	Set / Get	0: ON 1: OFF	0		
702		Area display	Set / Get	0: ON 1: OFF	1		
703		Gravity X display	Set / Get	0: ON 1: OFF	1		
704		Gravity Y display	Set / Get	0: ON 1: OFF	1		
705		Master angle display	Set / Get	0: ON 1: OFF	1		

# 9-3 Specifications and Dimensions



## Sensor

## **Specifications**

### FQ2-S1/S2/S3 Series

Item		Single-function models	Standard mod- els	High-resolution mo	odels					
Model	NPN	FQ2-S10====	FQ2-S20====	FQ2- S30===-08	FQ2- S30===-08M	FQ2-S30-13	FQ2-S30- 13M			
	PNP	FQ2-S15====	FQ2-S25====	FQ2- S35====-08	FQ2- S35===-08M	FQ2-S35-13	FQ2-S35- 13M			
Field of vie	·w	Refer to Table 1.	•	•		Lens is select	according to on and installa-			
Installation	distance	Refer to Table 1.				tion distance. I Optical Chart	Refer to the			
Main func- tions	Inspection items	Search, shape so labeling	earch II, sensitive	search, area, coloi	r data, edge positior	n, edge pitch, ed	lge width, and			
	Number of simultaneous measurements	1	32							
	Position compensation	Supported (360°	Model position co	ompensation, Edge	position compensa	tion, Linear con	rection)			
	Number of reg- istered scenes*1	8	32							
	Calibration	Supported	1							
Image input	Image process- ing method	Real color			Monochrome	Real color	Monochrome			
	Image filter	smoothing, stron vertical edges, e	g smoothing, dila	ay filter (Sensors with a sextract edges, extropression), polarizing tess correction	ract horizontal e	dges, extract				
	Image elements	1/3-inch color CN	MOS	1/2-inch color CMOS	1/2-inch Mono- chrome CMOS	1/2-inch color CMOS	1/2-inch Monochrome CMOS			
	Shutter	Built-in lighting not lit: 1/1 to 1/50,000		Built-in lighting lit: 1/250 to 1/60,000 Built-in lighting not lit: 1/20 to 1/ 4,155 *2	Built-in lighting lit: 1/250 to 1/60,000 Built-in lighting not lit: 1/1 to 1/ 4,155	1/20 to 1/ 4,155 * <sup>2</sup>	1/1 to 1/4,155			
	Processing resolution	752×480		928×828		1280×1024				
				Supported horizontally and vertically						
	Partial input function	Supported horizon	ontally only.	Supported norizon	itally and vertically					
			ontally only. ut/Fit Width/Rotat		itally and vertically					
	function				itally and vertically	C-mounts				
Lighting	function Image display			te 180°	itally and ventually					

₽.
O
Œ
S

ဖ

Item		Single-function models	Standard mod- els	High-resolution models						
Model	NPN	FQ2-S10====	FQ2-S20	FQ2- S30====-08	FQ2- S30====-08M	FQ2-S30-13	FQ2-S30- 13M			
	PNP	FQ2-S150000	FQ2-S250000	FQ2- S35====-08	FQ2- S35====-08M	FQ2-S35-13	FQ2-S35- 13M			
Data log- ging	Measurement data	In Sensor: 1,000 items (If a Touch Finder is used, results can be saved up to the capacity of an SD card.)								
	Images	In Sensor: 20 im card.)	ages (If a Touch l	Finder is used, ima	ges can be saved u	p to the capacit	y of an SD			
Auxiliary function					word function, simutions, trigonometric					
Measureme	ent trigger	Communications	(single or continu s trigger (Etherne NET, EtherNet/IP	t TCP no-protocol,	Ethernet UDP no-pr	otocol, Etherne	t FINS/TCP no-			
I/O specifi- cations	Input signals	_	rement input (TR nand input (IN0 to	,						
	Output signals	Overall judge:     Error output (I Note: The assign     to the folic     READ'     RUN     STG (S     OR (Ite	Control output (BUSY) Overall judgement output (OR) Error output (ERROR) Ote: The assignments of the three output signals (OUT0 to OUT2) can also be changed to the following. READY							
	Ethernet specifications	100Base-TX/10Base-T								
	Communica- tions	Ethernet TCP no-protocol, Ethernet UDP no-protocol, Ethernet FINS/TCP no-protocol, EtherNet/IP, or PLC Link PROFINET								
	I/O expansion			Possible by connecting FQ-SDU1□ Sensor Data Unit. 11 inputs and 24 outputs						
	RS-232C			Possible by conne 8 inputs and 7 ou	ecting FQ-SDU2□ S tputs	Sensor Data Uni	t.			
	Input specifications  Output specifications	Refer to Table 2.								
	Connection method	Special connector cables Power supply and I/O: 1 cable (FQ-WD  Touch Finder and computer: 1 cable (FQ-WN  Touch Finder and computer: 1								
Indications		BUSY indicator (BUSY, green), Judgment result indicator (OR, orange), error indicator (ERROR, red), Ethernet communications indicator (ETN, orange)  Note: The assignment of the BUSY indicator can be changed to a RUN indicator (display color: green).								
Ratings	Power supply voltage	21.6 to 26.4 VD0	C (including ripple	<del>)</del>						
	Insulation resistance	Between all lead	wires and case:	0.5 MΩ (at 250 V)						
	Current con- sumption	2.4 A max.				0.3 A max.				

Item		Single-function models	Standard mod- els	High-resolution mo	odels			
Model	NPN	FQ2-S10====	FQ2-S20====	FQ2- S3008 FQ2- S3008M		FQ2-S30-13	FQ2-S30- 13M	
	PNP	FQ2-S150000	FQ2-S25	FQ2- S35===-08	FQ2- S35===-08M	FQ2-S35-13	FQ2-S35- 13M	
Environ- mental immunity	Ambient temperature range	Operating: 0 to 5 Storage: -25 to 6 (with no icing or	65°C					
	Ambient humid- ity range	Operating and st	orage: 35% to 85	% (with no condens	sation)			
	Ambient atmo- sphere	No corrosive gas	3					
	Vibration resistance (destruction)	10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions 8 min each, 10 times						
	Shock resistance (destruction)	150 m/s <sup>2</sup> 3 times each in 6 direction (up, down, right, left, forward, and backward)						
	Degree of pro- tection	IEC 60529 IP67 or connector cap	IEC 60529 IP40					
Materials		Sensor: PBT, PC, SUS Mounting Bracket: PBT Polarizing Filter Attachment: PBT, PC Ethernet connector: Oil-resistance vinyl compound I/O connector: Lead-free heat-resistant PVC  Sensor: Zinc-plate Thickness: 0.6 n Case: Aluminum alloy (ADC-12) Mounting base: ate ABS					6 mm um diecast )	
Weight							without base, with base	
Accessories		Mounting Bracket (FQ-XL) (1) Polarizing Filter Attachment (FQ-XF1) (1) Instruction Manual Member Registration Sheet  Mounting Base (F Four Mounting Sc XLC) (M3×8 mm)( Instruction Manual Member Registration Sheet				g Screws (FQ-´ nm)(4) nual		
LED class	3	Risk Group 2						

<sup>\*1:</sup> Registration may not be possible for all scenes, depending on the settings.
\*2: In the case of hardware version A, the range is from 1/1.

Checking Versions: p.429

<sup>\*3:</sup> Applicable standards: IEC62471-2

Table 1

Single-function models		Standard models	Standard models				Weight	
NPN	PNP	NPN	PNP	(H×V) *4	tance	ber of LEDs		
FQ2-S10010F	FQ2-S15010F	FQ2-S20010F	FQ2-S25010F	7.5 × 4.7 to 13 × 8.2 mm	38 to 57 mm	4	Approx.	
FQ2-S10050F	FQ2-S15050F	FQ2-S20050F	FQ2-S25050F	13 × 8.2 to 53 × 33 mm	56 to 215 mm	4	-160 g	
FQ2-S10100F	FQ2-S15100F	FQ2-S20100F	FQ2-S25100F	53 × 33 to 240 × 153 mm	220 to 970 mm	8	Approx. 150 g	
FQ2-S10100N	FQ2-S15100N	FQ2-S20100N	FQ2-S25100N	29 × 18 to 300 × 191 mm	32 to 380 mm	8		

High-resolution models	Field of view		Num- ber of	Weight	
NPN	PNP	(H×V) *4 tance		LEDs	
FQ2-S30010F-===	FQ2-S35010F-000	7.5×6.7 to 13×11.6 mm	38 to 57 mm	4	Approx. 160 g
FQ2-S30050F-===	FQ2-S35050F-□□□	13×11.6 to 53×47.3 mm	56 to 215 mm	4	
FQ2-S30100F-===	FQ2-S35100F-000	53×47.3 to 240×214 mm	220 to 970 mm	8	Approx. 150 g
FQ2-S30100N-===	FQ2-S35100N-===	29×25.9 to 300×268 mm	32 to 380 mm	8	

<sup>\*4:</sup> Tolerance: ±10% max.

### Table 2

Item	NPN	PNP
	OFF: Open (leakage current: 0.1 mA max.)	ON: Shorted to power supply voltage, or power supply voltage -1.5 V max. OFF: Open (leakage current: 0.1 mA max.)
		PNP open collector 30 VDC, 50 mA max., residual voltage: 2.0 V max.

<sup>\*5:</sup> Do not allow the load current to exceed 50 mA. The output circuit may be damaged if the load current exceeds 50 mA.

## FQ2-S4 Series

Item		Inspection and ID models								
Model	NPN	FQ2-S400000	FQ2- S40===-M	FQ2- S40===-08	FQ2- S40===-08M	FQ2-S40-13	FQ2-S40- 13M			
	PNP	FQ2-S45====	FQ2- S45===-M	FQ2- S45===08	FQ2- S45===-08M	FQ2-S45-13	FQ2-S45- 13M			
Field of vie	w	Refer to Table 1.				Lens is select	according to on and installa			
Installation	distance	Refer to Table 1.				tion distance. Optical Chart	Refer to the			
Main func- tions	Inspection items				sition, Edge Width, ), and Model Diction		a, Color Data,			
	Number of simultaneous measurements	32								
	Position com- pensation	Supported (360°	Model position c	ompensation, Edge	position compensa	tion, Linear con	rection)			
	Number of reg- istered scenes*1	32								
	Calibration	Supported								
	Retrying	Normal retry, exp	osure retry, scen	e retry, and trigger	retry					
	Print quality		ISO/IEC TR 29158 (AIM DPM-1-2006) (Supports code : Datamatrix ECC200)							
lmage input	Image process- ing method	Real color	Monochrome	Real color	Monochrome	Real color	Monochrome			
	Image filter	High dynamic range (HDR), pre-processing (color gray filter (Sensors with Color Cameras only), weal smoothing, strong smoothing, dilate, erosion, median, extract edges, extract horizontal edges, extract vertical edges, enhance edges, and background suppression), polarizing filter (attachment), white bal ance (Sensors with Color Cameras only), and brightness correction								
	Image elements	1/3-inch color CMOS	1/3-inch Mono- chrome CMOS	1/2-inch color CMOS	1/2-inch Mono- chrome CMOS	1/2-inch color CMOS	1/2-inch Monochrome CMOS			
	Shutter	Built-in lighting lit: 1/250 to 1/50,000 Built-in lighting not lit: 1/1 to 1/50,000		Built-in lighting lit: 1/250 to 1/60,000 Built-in lighting not lit: 1/20 to 1/4,155 *2	Built-in lighting lit: 1/250 to 1/60,000 Built-in lighting not lit: 1/1 to 1/ 4,155	1/20 to 1/ 4,155 * <sup>2</sup>	1/1 to 1/4,155			
	Processing resolution	752×480		928×828	1	1,280×1,024				
	Partial input function	Supported horizon	ontally only.	Supported horizor	ntally and vertically	у				
	Image display	Zoom-in/Zoom-o	ut/Fit Width/Rota	te 180°						
	Lens mounts					C-mounts				
Lighting	Lighting method	Pulse				-				
	Lighting color	White				-				
Data log- ging	Measurement data	In Sensor: 1,000 card.)	items (If a Touch	Finder is used, res	ults can be saved u	p to the capacit	y of an SD			
	Images	In Sensor: 20 im card.)	ages (If a Touch I	Finder is used, imaç	ges can be saved up	to the capacity	of an SD			
Auxiliary fu	inction				word function, simul					
Measurement trigger				TCP no-protocol, E	Ethernet UDP no-pro	otocol, Ethernet	FINS/TCP no-			

9

О
$\boldsymbol{\sigma}$
Ф
$\neg$
Q
ices
٠,

Item		Inspection and ID models									
Model	NPN	FQ2-S40	FQ2- S40===-M	FQ2- S40===-08	FQ2- S40===-08M	FQ2-S40-13	FQ2-S40- 13M				
	PNP	FQ2-S450000	FQ2- S45===-M	FQ2- S4508	FQ2- S45□□□-08M	FQ2-S45-13	FQ2-S45- 13M				
I/O specifications	Input signals		signals • Single measurement input (TRIG) • Control command input (IN0 to IN5)								
	Output signals	Error output (     Note: The assign to the folic READ' RUN STG (SOUTH OF RUN)      OR (Ite	ment output (OR ERROR) nments of the thr owing. Y Strobe trigger)	ee output signals (  OR31 (Item31 jud	OUT0 to OUT2) can	a also be change	ed				
	Ethernet specifications	100Base-TX/10B	100Base-TX/10Base-T								
	Communica- tions	Ethernet UDP no	PLC Link, or								
	I/O expansion	Possible by connecting FQ-SDU1□ Sensor Data Unit. 11 inputs and 32 outputs									
	RS-232C	Possible by connecting FQ-SDU2□ Sensor Data Unit. 8 inputs and 7 outputs									
	Input specifica- tions	Refer to Table 2	Refer to Table 2.								
	Output specifications										
	Connection method	Power supply ar (FQ-WD□□□) Touch Finder an	Special connector cables Power supply and I/O: 1 cable (FQ-WD□□□) Touch Finder and computer: 1 cable (FQ-WN□□□)  Special connector cables Power supply I/O and Sensor Data Unit.s: 1 cable (FQ-WD□□□ an FQ-WU□□□) Touch Finder and computer: 1 cable (FQ-WN□□□)								
Indications		BUSY indicator (BUSY, green), Judgement result indicator (OR, orange), error indicator (ERROR, red), Ethernet communications indicator (ETN, orange) Note: The assignment of the BUSY indicator can be changed to a RUN indicator (display color: green).									
Ratings	Power supply voltage	21.6 to 26.4 VD0	C (including ripple	e)							
	Insulation resistance	Between all lead	I wires and case:	0.5 MΩ (at 250 V)	1						
	Current con- sumption	2.4 A max.				0.3 A max.					



Item		Inspection and ID models								
Model	NPN	FQ2-S40====	FQ2- S40===-M	FQ2- S40====-08	FQ2- S40====-08M	FQ2-S40-13	FQ2-S40- 13M			
	PNP	FQ2-S450000	FQ2- S45===-M	FQ2- S45===08	FQ2- S450000-08M	FQ2-S45-13	FQ2-S45- 13M			
Environ- mental immunity	Ambient temperature range	Operating: 0 to 4 Storage: –25 to 6 (with no icing or	65°C							
	Ambient humid- ity range	Operating and st	orage: 35% to 85	5% (with no conden	sation)					
	Ambient atmo- sphere	No corrosive gas	3							
	Vibration resistance (destruction)		10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions 8 min each, 10 times							
	Shock resistance (destruction)	150 m/s <sup>2</sup> 3 times each in 6 direction (up, down, right, left, forward, and backward)								
	Degree of pro- tection	IEC 60529 IP67 or connector cap		olarizing Filter Attacl	hment is mounted	mounted IEC 60529 IP40				
Materials		Sensor: PBT, PC Mounting Bracke Polarizing Filter / Ethernet connect I/O connector: Le	et: PBT Attachment: PBT, tor: Oil-resistance	Cover: Zinc-plated steel, Thickness: 0.6 mm Case: Aluminum diecast alloy (ADC-12) Mounting base: Polycarbon- ate ABS						
Weight		Depends on field	l of view and inst	Approx. 160 g without base, Approx. 185 g with base						
Accessories		Mounting Bracket (FQ-XL)(1) Polarizing Filter Attachment (FQ-XF1) (1) Instruction Manual Member Registration Sheet  Mounting Base Four Mounting S mm)(4) Instruction Manu Member Registration Sheet					Screws (M3×8 nual			
LED class	'3	Risk Group 2								

<sup>\*1:</sup> Registration may not be possible for all scenes, depending on the settings.
\*2: In the case of hardware version A, the range is from 1/1.

Checking Versions: p.429

<sup>\*3:</sup> Applicable standards:IEC62471-2

350,000-pixel Models		Field of view			Weight
NPN	PNP	(H×V) *4		ber of LEDs	
FQ2-S40010F-	FQ2-S45010F-	7.5 × 4.7 to 13 × 8.2 mm	38 to 57 mm	4	Approx. 160 g
FQ2-S40050F-	FQ2-S45050F-	13 × 8.2 to 53 × 33 mm	56 to 215 mm	4	
FQ2-S40100F-	FQ2-S45100F-	53 × 33 to 240 × 153 mm	220 to 970 mm	8	Approx. 150 g
FQ2-S40100N-	FQ2-S45100N-□	29 × 18 to 300 × 191 mm	32 to 380 mm	8	

		Field of view			Weight
NPN	PNP	(H×V) *4		ber of LEDs	
FQ2-S40010F-□□□	FQ2-S45010F-000	7.5×6.7 to 13×11.6 mm	38 to 57 mm	4	Approx. 160 g
FQ2-S40050F-000	FQ2-S45050F-000	13×11.6 to 53×47.3 mm	56 to 215 mm	4	
FQ2-S40100F-□□□	FQ2-S45100F-□□□	53×47.3 to 240×214 mm	220 to 970 mm	8	Approx. 150 g
FQ2-S40100N-□□□	FQ2-S45100N-000	29×25.9 to 300×268 mm	32 to 380 mm	8	

<sup>\*4:</sup> Tolerance: ±10% max.

Table 2

Item	NPN	PNP
	OFF: Open (leakage current: 0.1 mA max.)	ON: Shorted to power supply voltage, or power supply voltage -1.5 V max. OFF: Open (leakage current: 0.1 mA max.)
		PNP open collector 30 VDC, 50 mA max., residual voltage: 2.0 V max.

<sup>\*5:</sup> Do not allow the load current to exceed 50 mA. The output circuit may be damaged if the load current exceeds 50 mA.

## **FQ2-CH Series**

Item		Inspection and ID models
Model	NPN	FQ2-CH10===-M
	PNP	FQ2-CH150000M
Field of view		Refer to Table 1.
Installation dista	nce	Refer to Table 1.
Main functions	Inspection items	OCR, and Model Dictionary
	Number of simultaneous measurements	32
	Position compensation	Supported (360° Model position compensation, Edge position compensation, Linear correction)
	Number of registered scenes	32
	Retrying	Normal retry, exposure retry, scene retry, and trigger retry
Image input	Image processing method	Monochrome
	Image filter	High dynamic range (HDR), pre-processing (weak smoothing, strong smoothing, dilate, erosion, median, extract edges, extract horizontal edges, extract vertical edges, enhance edges, and background suppression), polarizing filter (attachment), and brightness correction
	Image elements	1/3-inch Monochrome CMOS
	Shutter	Built-in lighting lit: 1/250 to 1/50,000 Built-in lighting not lit: 1/1 to 1/50,000
	Processing resolution	752×480
	Partial input function	Supported horizontally only.
	Image display	Zoom-in/Zoom-out/Fit Width/Rotate 180°
Lighting	Lighting method	Pulse
	Lighting color	White
Data logging	Measurement data	In Sensor: 1,000 items (If a Touch Finder is used, results can be saved up to the capacity of an SD card.)
	Images	In Sensor: 20 images (If a Touch Finder is used, images can be saved up to the capacity of an SD card.)
Auxiliary function		Statistical data, test measurement, I/O monitor, password function, simulation software, sensor error history, math (arithmetic, calculation functions, trigonometric functions, and logic functions)
Measurement trigger		External trigger (single or continuous) Communications trigger (Ethernet TCP no-protocol, Ethernet UDP no-protocol, Ethernet FINS/TCP no-protocol, EtherNet/IP, PROFINET, or PLC Link)

idices
ဖ

Item		Inspection and ID models		
Model	NPN	FQ2-CH10::::-M		
	PNP	FQ2-CH15aaaM		
I/O specifica- tions	Input signals	7 signals • Single measurement input (TRIG) • Control command input (IN0 to IN5)		
	Output signals	3 signals		
	Ethernet specifications	100Base-TX/10Base-T		
	Communications	Ethernet TCP no-protocol, Ethernet UDP no-protocol, Ethernet FINS/TCP no-protocol, EtherNet/IP, PLC Link, or PROFINET		
	I/O expansion	Possible by connecting FQ-SDU1□ Sensor Data Unit. 11 inputs and 32 outputs		
	RS-232C	Possible by connecting FQ-SDU2□ Sensor Data Unit. 8 inputs and 7 outputs		
	Input specifications	Defeate Table 2		
	Output specifications	Refer to Table 2.		
	Connection method	Special connector cables Power supply and I/O: 1 cable (FQ-WD□□□) Touch Finder and computer: 1 cable (FQ-WN□□□)		
Indications		BUSY indicator (BUSY, green), Judgement result indicator (OR, orange), error indicator (ERROR, red), Ethernet communications indicator (ETN, orange)  Note: The assignment of the BUSY indicator can be changed to a RUN indicator (display color: green).		
Ratings	Power supply voltage	21.6 to 26.4 VDC (including ripple)		
	Insulation resistance	Between all lead wires and case: 0.5 M $\Omega$ (at 250 V)		
	Current consumption	2.4 A max.		
Environmental immunity	Ambient temperature range	Operating: 0 to 40°C Storage: –25 to 65°C (with no icing or condensation)		
	Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)		
	Ambient atmosphere	No corrosive gas		
	Vibration resistance (destruction)	10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions 8 min each, 10 times		
	Shock resistance (destruction)	150 m/s <sup>2</sup> 3 times each in 6 direction (up, down, right, left, forward, and backward)		
	Degree of protection	IEC 60529 IP67 (Except when Polarizing Filter Attachment is mounted or connector cap is removed.)		
Materials		Sensor: PBT, PC, SUS Mounting Bracket: PBT Polarizing Filter Attachment: PBT, PC Ethernet connector: Oil-resistance vinyl compound I/O connector: Lead-free heat-resistant PVC		
Weight		Depends on field of view and installation distance. Refer to Table 1.		

Item		Inspection and ID models
Model	NPN	FQ2-CH10aaaa-M
	PNP	FQ2-CH15====M
Accessories		Mounting Bracket (FQ-XL)(1) Polarizing Filter Attachment (FQ-XF1) (1) Instruction Manual Member Registration Sheet
LED class*1		Risk Group 2

<sup>\*1:</sup> Applicable standards:IEC62471-2

#### Table 1

, p		Field of view		Num- ber of	Weight
NPN	PNP	(H×V) *2	tance	LEDs	
FQ2-CH10010F-M	FQ2-CH15010F-M	7.5 × 4.7 to 13 × 8.2 mm	38 to 57 mm	4	Approx. 160 g
FQ2-CH10050F-M	FQ2-CH15050F-M	13 × 8.2 to 53 × 33 mm	56 to 215 mm	4	
FQ2-CH10100F-M	FQ2-CH15100F-M	53 × 33 to 240 × 153 mm	220 to 970 mm	8	Approx. 150 g
FQ2-CH10100N-M	FQ2-CH15100N-M	29 × 18 to 300 × 191 mm	32 to 380 mm	8	

<sup>\*2:</sup> Tolerance: ±10% max.

### Table 2

Item	NPN	PNP
	OFF: Open (leakage current: 0.1 mA max.)	ON: Shorted to power supply voltage, or power supply voltage –1.5 V max.  OFF: Open (leakage current: 0.1 mA max.)
	NPN open collector 30 VDC, 50 mA max., residual voltage: 2.0 V max.	PNP open collector 30 VDC, 50 mA max., residual voltage: 2.0 V max.

<sup>\*3:</sup> Do not allow the load current to exceed 50 mA. The output circuit may be damaged if the load current exceeds 50 mA.

FQ2-S10010F/-S10050F FQ2-S20010F/-S20050F (Unit: mm)

FQ2-S15010F/-S15050F FQ2-S25010F/-S25050F

FQ2-S40010F/-S40010F-M/-S40050F/-S40050F-M

FQ2-S45010F/-S45010F-M/-S45050F/-S45010F-M

FQ2-CH10010F-M/-CH10050F-M


FQ2-CH15010F-M/-CH15050F-M

FQ2-S30010F-08/-S35010F-08/-S30010F-08M/-S35010F-08M

FQ2-S30050F-08/-S35050F-08/-S30050F-08M/-S35050F-08M

FQ2-S40010F-08/-S45010F-08/-S40010F-08M/-S45010F-08M

FQ2-S40050F-08/-S45050F-08/-S40050F-08M/-S45050F-08M

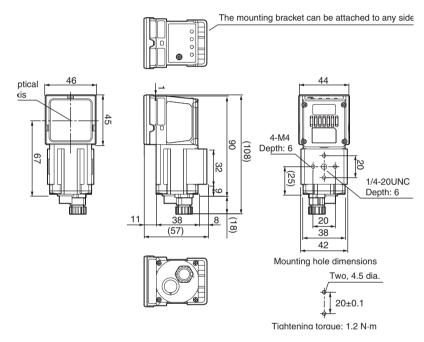

FQ2-S15100F/-S15100N/-S25100N FQ2-S25100F FQ2-S40100F/-S40100N/-S40100N FQ2-S45100F FQ2-S45100F/-S45100N/-S45100N FQ2-S45100F

FQ2-CH10100F-M/-CH10100N-M


FQ2-CH15100F-M/-CH15100N-M

FQ2-S30100F-08/-S35100F-08/-S30100F-08M/-S35100F-08M

FQ2-S30100N-08/-S35100N-08/-S30100N-08M/-S35100N-08M


FQ2-S40100F-08/-S45100F-08/-S40100F-08M/-S45100F-08M

FQ2-S40100N-08/-S45100N-08/-S40100N-08M/-S45100N-08M

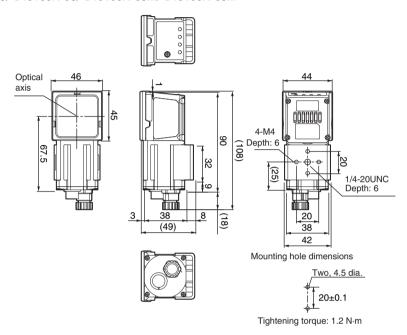



See the diagram below when mounting bracket FQ-XL2 is attached.


(Unit: mm)

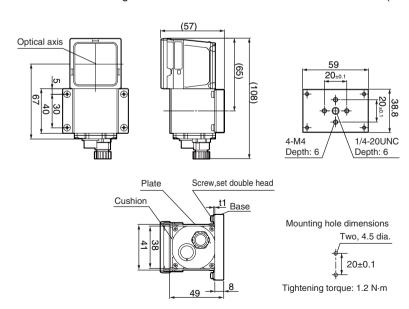


(Unit: mm)

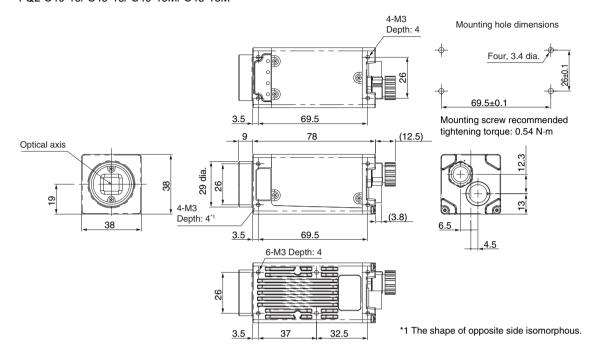

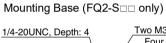

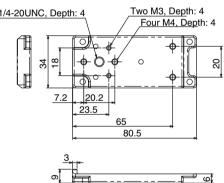

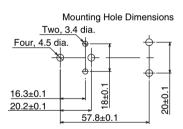

Mounting screw recommended tightening torque: 0.54 N·m

## **Touch Finder**

## **Specifications**

Item			Model with DC power supply	Model with AC/DC/battery power supply			
			FQ2-D30	FQ2-D31			
Number	Number of connectable Sensors		Number of sensors that can be recognized (switched): 32, number or sensor that can displayed on monitor: 8				
Main	Types of measurement displays		Last result display, last NG display, trend monitor, histograms				
func- tions	Types of display images		Through, frozen, zoom-in, and zoom-out in	nages			
	Data logging		Measurement results, measured images				
	Menu language		English, German, French, Italian, Spanish, Korean, or Japanese	Traditional Chinese, Simplified Chinese,			
Indications	LCD	Display device	3.5-inch TFT color LCD				
		Pixels	320 × 240				
		Display colors	16,777,216				
	Backlight	Life expec- tancy*1	50,000 hours at 25°C				
		Brightness adjustment	Provided				
		Screen saver	Provided (The time setting can be changed.)				
	Indicators		Power indicator (color: green): POWER Error indicator (color: red): ERROR SD card access indicator (color: yellow): SD ACCESS	Power indicator (color: green): POWER Error indicator (color: red): ERROR SD card access indicator (color: yellow): SD ACCESS Charge indicator (color: orange): CHARGE			
Opera-	Touch screen	Method	Resistance film				
tion interface		Life expec- tancy*3	1,000,000 operations				
Exter-	Ethernet		100BASE-TX/10BASE-T				
nal inter- face	SD card		SDHC-compliant, Class 4 or higher recom	mended, FAT/FAT32 formatted.			
Battery	Charging function	on	No	Yes* <sup>2</sup>			
Ratings	Power supply voltage		DC power connection: 21.6 to 26.4 VDC (including ripple)	DC power connection: 21.6 to 26.4 VDC (including ripple) AC adapter (manufactured by Sino-American Japan Co., Ltd) connection: 100 to 240 VAC, 50/60 Hz Battery connection: FQ-BAT1 Battery (1 cell, 3.7 V)			
	Continuous ope tery*4	eration on Bat-		1.5 h			
	Current consumption		DC power connection: 0.2 A max.	DC power connection: 0.2 A max., Charging battery: 0.4 A max.			
	Insulation resistance		Between all lead wires and case: 0.5 M $\Omega$ (	at 250 V)			

	۶	י	
	u	"	'
4	d	4	ø

Item		Model with DC power supply	Model with AC/DC/battery power supply		
		FQ2-D30	FQ2-D31		
Environ- mental immu- nity Ambient temperature range		Operating: 0 to 50°C Storage: –25 to 65°C (with no icing or condensation)	Operating: 0 to 50°C when mounted to DIN Track or panel 0 to 40°C when operated on a Battery Storage: –25 to 65°C (with no icing or condensation)		
	Ambient humidity range	Operating and storage: 35% to 85% (with r	no condensation)		
	Ambient atmosphere	No corrosive gas			
	Vibration resistance (destruction)	10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions 8 min each, 10 times			
	Shock resistance (destruction)	150 m/s <sup>2</sup> 3 times each in 6 direction (up, down, right, left, forward, and backward)			
	Degree of protection	IEC 60529 IP20			
Weight		Approx. 270 g (without Battery and hand strap)			
Dimensions		95 × 85 × 32.5 mm			
Materials		Case: ABS			
Accessories		Touch Pen (FQ-XT), Instruction Manual			

This is a guideline for the time required for the brightness to diminish to half the initial brightness at room temperature and humidity. No guarantee is implied. The life of the backlight is greatly affected by the ambient temperature and humidity. It will be shorter at lower or higher temperatures.

The battery can only be charged when the Touch Finder power is switched OFF.

This value is only a guideline. No guarantee is implied. The value will be affected by operating conditions.

This value is only a guideline. No guarantee is implied. The value will be affected by the operating environment and operating conditions.

\*2 \*3 \*4


### Battery Specifications

Item	FQ-BAT1
Battery type	Secondary lithium ion battery
Nominal capacity	1,800 mAh
Rated voltage	3.7 V
Dimensions	35.3 × 53.1 × 11.4 mm
Ambient temperature range	Operating: 0 to 40°C Storage: –25 to 65°C (with no icing or condensation)
Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)
Charging method	Charged in Touch Finder (FQ2-D31).
Charging time*1	2 h
Usage time*1	1.5 h
Battery backup life <sup>*2</sup>	300 charging cycles
Weight	50 g max.


This value is only a guideline. No guarantee is implied. The value will be affected by operating conditions
This is a guideline for the time required for the capacity of the Battery to be reduced to 60% of the initial capacity. No guarantee is implied. The value will be affected by the operating environment and operating conditions.

## FQ2-D30/-D31


(Unit: mm)

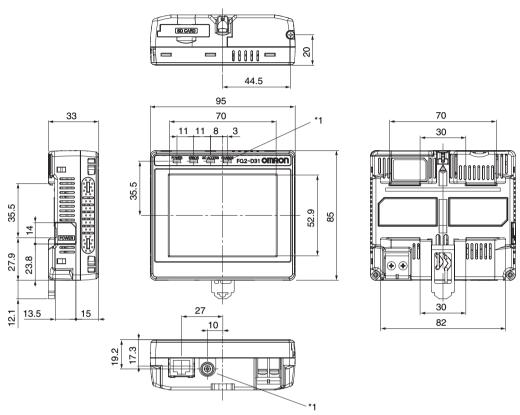

\*1: Provided on the FQ2-D31 only.

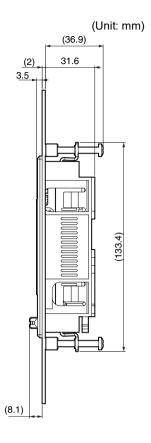

## Panel cutout dimensions

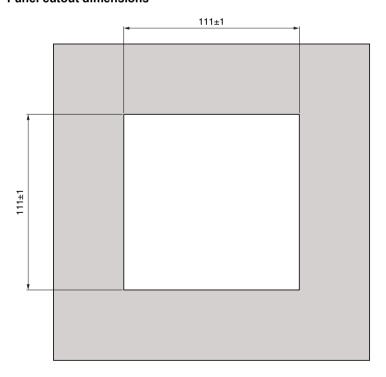

## **Sensor Data Units**

## **Specifications**


Item			Sensor Data Units			
			FQ-SDU1□□ Parallel Interface Sensor Data Unit (SDU10: NPN, SDU15: PNP) FQ-SDU2□ RS-232C Interface Sensor Data Unit (SDU20: NPN, SDU25: PNP)			
I/O specifi- cations	Parallel I/ O	SDU1□	11 inputs (TRIG, RESET, IN0 to IN7, and DSA) 24 outputs (GATE, D0 to D15, ACK, RUN, BUSY, OR, ERROR, STGOUT, and SHTOUT)			
odilons		SDU2□	8 inputs (IN0 to IN5, TRIG, and RESET) 7 outputs (ACK, RUN, BUSY, OR, ERROR, STGOUT, SHTOUT)			
	RS-232C		1 channel, 115,200 bps max. *FQ-SDU2□ only.			
	Sensor inte	rface	FQ2-S3, FQ2-S4, FQ2-CH connected with FQ-WU□□□): OMRON interface *Number of connected Sensors: 1			
	Input speci		Refer to Table 2.			
D-4			24 Ct+ 20 4 V/DO (in-shirling simple)			
Rat- ings	Power supply voltage 21.6 to 26.4 VDC (including ripple)					
	Insulation resistance		Between all DC external terminals and case: 0.5 MΩ min. (at 250 VDC)			
Current consumption		nsumption	2.5 A max. (FQ2-CH, FQ2-S====================================			
Envi-	ron- range mental		Operating: 0 to 50°C, Storage: –20 to 65°C (with no icing or condensation)			
immu-			u- Ambient humidity Oper		Operating and storage: 35% to 85% (with no condensation)	
	Ambient atı	mosphere	No corrosive gas			
	Vibration resistance (destruction) 10 to 150 Hz, single amplitude		10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions, 8 min each, 10 times			
	Shock resistance (destruction)		150 m/s <sup>2</sup> 3 times each in 6 directions (up, down, right, left, forward, and backward)			
	Degree of p	protection	IEC 60529 IP20			
Material	s		Case: PC + ABS, PC			
Size			62 × 90 × 65 (W×H×D) (Excluding connectors, DIN Track, and protrusions.)			
Weight			Approx. 150 g			
Accesso	ories		Instruction Manual			


## Table 1


Item	NPN	PNP
	ON: Shorted to 0 V, or 1.5 V max. OFF: Open (leakage current: 0.1 mA max.)	ON: Shorted to power supply voltage, or power supply voltage1.5 V max.  OFF: Open (leakage current: 0.1 mA max.)
	NPN open collector 30 VDC, 50 mA max., residual voltage: 1.2 V max.	PNP open collector 30 VDC, 50 mA max., residual voltage: 1.2 V max.

<sup>\*1:</sup> Do not allow the load current to exceed 50 mA. The output circuit may be damaged if the load current exceeds 50 mA.

FQ-SDU10/-SDU15

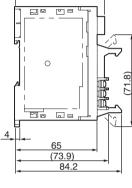


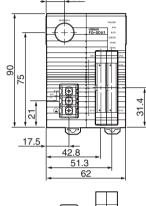

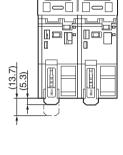



FQ-SDU20/-SDU25 (Unit: mm)

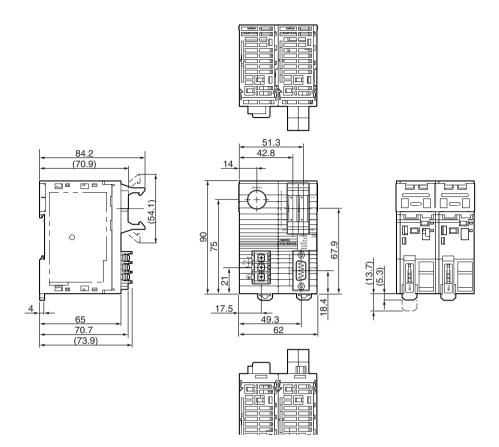

## System Requirements for PC Tool for FQ

The system requirements for the PC Tool are given in the following table.

Item	Requirement
OS	Microsoft Windows 7 Home Premium or higher (32-bit edition or 64-bit edition)     Microsoft Windows 8.1 Pro Edition or higher (32-bit edition or 64-bit edition)     Microsoft Windows 10 Home Editionor higher (32-bit edition or 64-bit edition)     Microsoft Windows 11 Pro (64-bit edition)
Hardware	CPU: Core 2 Duo 1.06 GHz or the equivalent or higher RAM: 1 GB min. HDD: 500 MB min. available space*1 Monitor: 1,024 x 768 dots min.

<sup>\*1.</sup> Available space is also required separately for data logging.

## **Options**

## **Specifications**

### I/O Cables

Item	Model	FQ-WD002	FQ-WD005	FQ-WD010	FQ-WD020	
Cable length		2 m 5 m		10 m	20 m	
Cable type Robot cable						
Wire gauge	Power line	AWG24		AWG24 to AWG20		
	Other lines	AWG28				
Cable diameter 6.4			6.4 to 6.7			
Minimum bending radius 41.4 mm						
Weight		100 g	250g	500 g	1500 g	

## • FQ Ethernet Cable

Item Model	FQ-WN002	FQ-WD005	FQ-WN010	FQ-WN020
Cable length	2 m	5 m	10 m	20 m
Cable type	Robot cable			
Minimum bending radius	40 mm			
Weight	125 g	310 g	620 g	1780 g

#### Parallel Cable for FQ-SDU1

Item Model	FQ-VP1002	FQ-VP1005	FQ-VP1010
Applicable Units	FQ-SDU1		
Cable length	2 m	5 m	10 m
Cable type	Flat cable		
Minimum bending radius	5.5 mm		
Weight	150 g	380 g	750 g

## Important

Do not bend any Cable beyond the specified minimum bending radius. Doing so may damage the Cable.

## • Parallel Cable for FQ-SDU2

Item Model	FQ-VP2002	FQ-VP2005	FQ-VP2010
Applicable Units	FQ-SDU2□		
Cable length	2 m	5 m	10 m
Cable type	Flat cable		
Minimum bending radius	5.5 mm		
Weight	80 g	200 g	400 g

## · Sensor Data Unit Cable

Item Model	FQ-WU002	FQ-WU005	FQ-WU010	FQ-WU020
Cable length	2 m	5 m	10 m	20 m
Cable type	Robot cable			
Cable diameter	7			
Minimum bending radius	35 mm			
Weight	200 g	400 g	800 g	1500 g

## Important


Do not bend any Cable beyond the specified minimum bending radius. Doing so may damage the Cable.

## AC Adapter

Item	Model	FQ-AC1	FQ-AC2	FQ-AC3	FQ-AC4	FQ-AC5	FQ-AC6
Plug type		Α	А	Α	С	BF	0
Certified standard	s	PSE	UL/CSA	CCC mark			
Input voltage		100 to 240 VAC	(90 to 264 VAC)		1	1	-
Input current		0.4 A max., 100 \	VAC, 50 Hz when	connected to max	kimum load		
Input frequency		47 to 63 Hz					
Output voltage		15 VDC±5%					
Output current		1 A max.					
Ambient temperat	ure		Operating: 0 to 40°C Storage: –20 to 65°C (with no icing or condensation)				
Ambient humidity	range	Operating and st	orage: 35% to 80	% (with no conder	nsation)		
Material		Case: PPE					
Cable length		1.5 m					
Dimensions		78 × 50 × 30 mm	(without power c	able)			
Weight		Approx. 270 g	Approx. 270 g				
Contents of label Adapter	on AC	SINO - AMERICAN MODEL/# 9: SA1158-15U SWITCHING ADAPTER SOCIETY NUTUTION: 100-240V OUTPUTING: 150-240V OUTPUTING: 150-240V OUTPUTING: 150-250V OUT					

## I/O Cables


## FQ-WD002/WD005

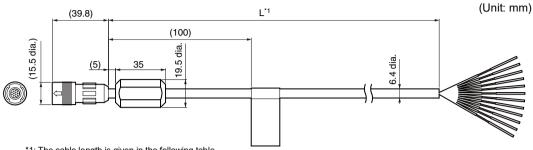

\*1: The cable length is given in the following table.

Model	Cable length
FQ-WD002	2 m
FQ-WD005	5 m

## FQ-WD010/WD020

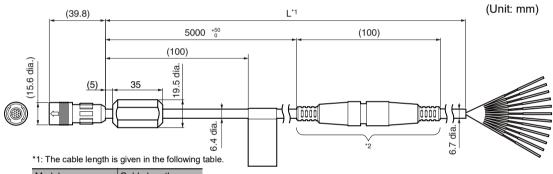


Model	Cable length
FQ-WD010	10 m
FQ-WD020	20 m

<sup>\*2:</sup> The relay connector does not have water-proofing.


### FQ Ethernet Cable

### FQ-WN002/WN005/WN010/WN020

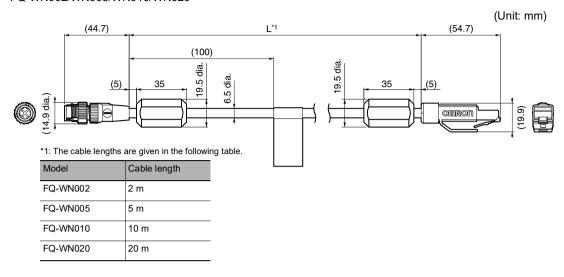


### • Ethernet CableSensor Data Unit Cable


FQ-WU002/WU005/WU010/WU020

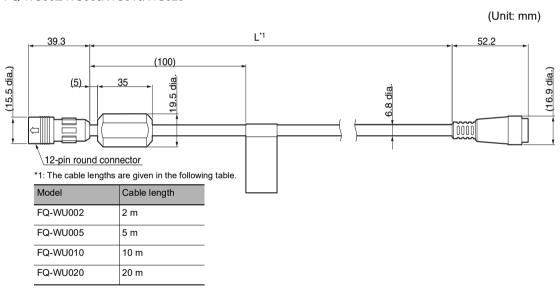

#### • Parallel Cable for FQ-SDU1

FQ-VP1002/VP1005/VP1010

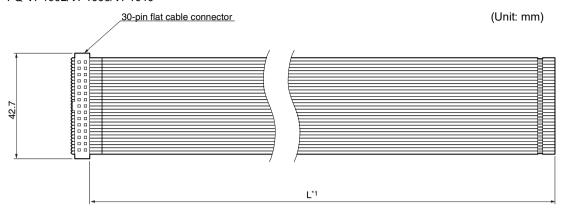

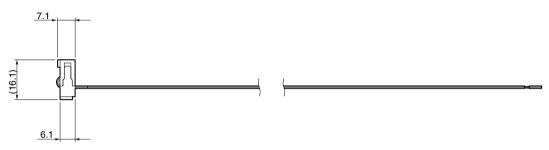



\*1: The cable lengths are given in the following table.

Model	Cable length
FQ-VP1002	2 m
FQ-VP1005	5 m
FQ-VP1010	10 m

#### • Parallel Cable for FQ-SDU2

#### FQ-VP2002/VP2005/VP2010

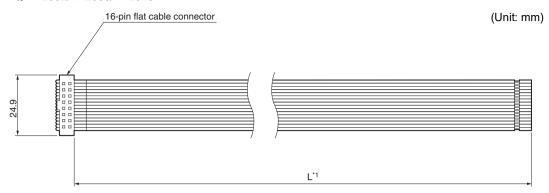

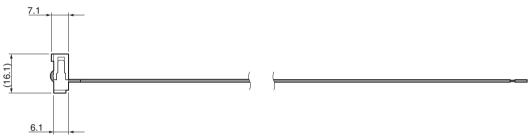



\*1: The cable lengths are given in the following table.

Model	Cable length
FQ-VP2002	2 m
FQ-VP2005	5 m
FQ-VP2010	10 m


## AC Adapter

#### FQ-AC1

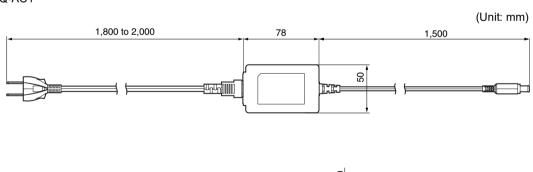

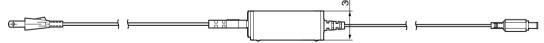

# **Updating the Software**

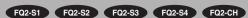

The most recent version of the software and PC Tool can be downloaded from the following website for OMRON members. Refer to the Member Registration Sheet that is enclosed with the Sensor.

http://www.omron-cxone.com/vison\_sys

After you download the software, use the following procedure to update.

When you update the software, always update the software for the Touch Finder or PC Tool first, and then update the software for the Sensor.

#### Important

In the case of sensors with hardware version B, it is not possible to update the Sensor software version to version 2.22 or earlier.

Checking Versions: p.429

## Step 1 Update the software for the PC Tool or Touch Finder.

Update the PC Tool

Install the PC Tool that was downloaded.

- · Update the software for the Touch Finder
  - 1 Place the update file that you obtained directly in the root folder of an SD card.
  - 2 Insert the SD card into the Touch Finder.
  - 3 Press 🖶 (Setup Mode or Run Mode) [TF settings] [Update].

# Step 2 Update the software for the Sensor.

- · Updating from the PC Tool
  - 1 Store the update file you obtained in the following directory.

\\....\My Documents\OMRON FQ\SDCard\UPDATE\SENSOR

- 2 To update the software in the Sensor, press 🖶 (Setup Mode) [Sensor settings] [Update].
- Updating from the Touch Finder
  - 1 Place the update file that you obtained directly in the root folder of the SD card.
  - Insert an SD card into the Touch Finder.
  - To update the software in the Sensor, press 📥 (Setup Mode) [Sensor settings] [Update].

The software will be updated automatically.

#### Important

Do not turn OFF the power supply until updating the software has been completed.

The Sensor or Touch Finder may not start normally if power is turned OFF during the update.

Appendices

# Index

578

umerics		C-mount cover	
2D Codes (DPM)	201	C-mount lens mounting surface	
2D-code	190	Code color	
	100	Code type	
<b>\</b>		Code type (2D-code)	
AC Adapter	572	Code type (Bar code)	
AC power supply connector		color	
Touch Finder	37	setting 278, 3	0
ACK	57, 60	color data	
adjusting parameters	000	Color deviation	
adjustment in Run Mode	362	color difference	
adjustment during operation	362	Color Gray Filter	
all color images	306, 315	Color ON/OFF	_
All Region	356	color palette 279, 3	
All Sensor data	407	COMINO	
Angle 218, 234,		COMIN1	,
Angle range 222, 238,		COMOUT	
Area	303, 313	COMOUT1	
area Auto length	210	COMOUT1	
Auto length Average pitch	290	Composite codes on/off configuration	
Average pitch Average width	290	connecting to more than one Senso	r
3	230	connection	ı
B average	297	automatic	
Background Suppression	94	connector cover	
backing up data	406	console	
backlig up data backlight	384	Contrast	
Bar code	179	Correlation 218, 234, 2	5(
basic troubleshooting	438	correlation	
Battery	65	Count 218, 2	34
specifications	565	CSV	
binary images	306, 315	D	
brightness	81, 295	D. Area	
brightness correction mode	78	D0 to D15	
Brightness step	425	data	
BUSY	57, 60	saving	
`		saving to file	
colibration	260	DC power supply connector	
calibration calibration data	369	Touch Finder	
	407	decimal symbol	
saving	407	Decrement count	
calibration group data	407	deleting log	
saving calibration pattern	371, 379	Density average	
The state of the s	416	Density deviat. (density deviation)	
camera image camera image file	382	Density deviation	
Camera input	356	deviation area	
camera input	76	Dilate	
capturing image	415	DIN Track mounting section	
Capturing image Cell	210	display elements	
Cell Recog. Rate	523	display language	
changing line process using scene		display patterns	
Character recognition	140	All color image 3	)(
Character recognition Characters	523	Binary image 3	
	186	Measurement image 3	
Check digit on/off	100		
Check digit on/off checking the error histories	436	Selected color image 3	•

Index FQ2-S/CH User's Manual

display types	354	Gravity X	303
displaying image data	422	Gravity Y	303
DSA	57	GUI	
E		language	428
ECO mode	384	Н	
edge level	276	HDR function	83
Edge pitch	290	hiding the menu	384
edge pitch	288	high dynamic range	83
edge position	271	histograms	360
= :	211	5	361
Edge position comp.	n) 102	auto display class	361
(edge position compensation			
edge position compensation		display range	361, 395
edge rotation position compo	ensation 122,	hue	295
	282	I	
edge width		I/O Cable	54
Edge width (edge in width)	284	connector	35, 36
Enhance edges	93	I/O Cables	571
Erosion	93	I/O indicators	38
ERROR	57, 60	232C_COM	38
Error Correction Level	210	BUSY	38
error histories	434	OR-NG	38
error history		OR-OK	38
deleting	436	POWER/ERROR	38
errors in error history	434	RUN	38
viewing	436	SENSOR	38
error messages	437	I/O monitor	385
errors stored in the error his	tory 434	image adjustment	91
Ethernet	67	image data	31
Ethernet cable	571		394
connector	35	logging	394
Ethernet port		image input	343
Touch Finder	37	increasing speed	
exposure retry	425	partial input	343, 345
external lighting	77, 89	image input mode	345
Extract Edges	93	images	202
Extract Horiz. Edges	93	displaying last NG image	383
Extract vertical edges	93	displaying saved images	382
		frozen 	381
F		live	380
Fast mode	210	updating .	383
field separator	399	zooming in	380
file format	399	zooming out	380
files		zooming to fit display	380
logging	394	IN0 to IN5	60
filter items	93	IN0 to IN7	57
Focus	523	Increment count	425
focus	76	initializing	429
adjustment screw	76	Sensor and Touch Finder	429
formatting an SD Card	412	Input mode	466
FQ Ethernet Cable	574	inputs	
frame ground	56, 59	IN0 to IN5	54
frozen images	381	TRIG	54
G		inspection items	134
_	207	Area	300
G average	297	color palette	306, 315
Gain	80, 81	Color Data	293
GATE	57	copying	139
Graphics	354	deleting	139
Graphics + Details	354	Edge Pitch	288
Gravity center X	313	Edge Position	272
Gravity center Y	313	color palette	279
		color parotto	2.0

FQ2-S/CH User's Manual Index

teaching errors	281	prevention	89
Edge Width	282	N	
teaching errors	287	noise level	277
labeling	310	normal retry	424
renaming	139	NPN	55, 62
	15, 230, 247, 259	Num. of char.	523
teaching errors	229, 246, 258	Number of labels	313
<u> </u>	15, 230, 247, 259		
installation	39	0	054
Interval	424	operation	351
IP address	67, 70	operation indicators	36
J		BUSY	35, 36
judgements		CHARGE	37
adjusting	347	ERROR	35, 36, 37
auto adjustment	347	ETN	35, 36
method	348	OR	35, 36
		POWER	37
L		SD ACCESS	37
Labeling	310	Touch Finder	37
language	428	Vision Sensor	35
LCD Backlight	384	optical charts	39
lens models	43	optical diagrams	42
Lens selection	42	OR	57, 60
live images	380	OR/NOT	226
Log	382	Output end digit	524
logging		Output starting digit	524
deleting log	403	outputs	
recent results	401	BUSY	54
selecting data to be log	gged 396	ERROR	54
settings	395	OR	54
starting and stopping	399	OUT0	54
Logging image file	382	OUT1	54
M		OUT2	54
MAC address	472, 476	P	
macro rings	472, 470 45	Panel Mounting Adapter	48, 567
=	226	Parallel Cable for FQ-SDU1	575
masking Master angle	313	Parallel Cable for FQ-SDU2	576
Max count	424	parallel I/O connector	38
		•	413
Max. pitch (maximum pitc	,	password	33. 571
Max. width (maximum pito	ch) 290	PC Tool	, -
measurement data	202	PNP	55, 62
logging	392	Polarizing Filter	0.4
measurement images	306, 315	using	84
measurement region	227, 256, 268	Position compensation	356
measurement time	342	position compensation items	102
Median	93		50, 263, 274
menus			50, 263, 274
hiding	384	power supply and	
Min. pitch (minimum pitch		ground terminal block	38
Min. width (minimum pitch		power supply switch	
Model (model position cor	•	Touch Finder	37
models	215	preventing mutual interference	
mounting		of multiple Sensors	89
control panel	48	Q	
DIN Track	47, 51, 52	QR Code Model	210
mounting base	36, 41		210
Mounting Bracket	35	R	
mounting holes	36	R average	297
Multi-point output	220	Record separator	399
mutual interference		RESET	57, 60

Index FQ2-S/CH User's Manual

580

restarting		sorting method 23	6, 251
Sensor and Touch Finde	r 429	source image	95
Retry Function	423	S .	6, 357
Reverse	210	startup mode	368
RS-232C connector	38	startup scene	368
RUN	57, 60	startup setting	368
S		Statistical data	354
saved images		statistical data	
displaying	382	logging	404
saving data	350, 406	STGOUT	57, 60
saving image data	421	straps	50
scene data		Strong Smoothing	93
saving	407	subnet mask	70
scene group data		Sub-pixel	219
saving	407	Switch Sensor	74
scene retry	426	Switching Hub	33
scenes		system configuration	07.04
changing	366	32, 74, 75, 76,	87, 91
changing names	367	Т	
copying	367	takt time	342
deleting	367	teaching errors	
SD card		sensitive search	270
available space	411	test measurements	
formatting	412	continuous test	340
information	411	performing	340
operations	410	threshold	
slot	37	average	348
SD card formatting	412	maximum	348
searching	000 047 050	minimum	348
•	, 230, 247, 259	time	400
selected color images	306, 315	Touch Finder	428
sensitive search	259	Total label area	313
Sensor connector	38	Touch Finder	564
Sensor data	407	information	429
saving all Sensor data Sensor Data Unit Cable	56, 59, 574	model with AC/DC/battery	564
Sensor Data Units	38, 568	power supply model with DC power supply	564
Sensor information	429	time settings	428
sensor monitor	355	Touch Finder data	720
Sensor selection	417	saving	407
Sensor system data	717	trend monitor	101
saving	407	Auto display	359
Sensors		Display range	359
single-function models	550	Number of data	359
specifications	550	TRIG	57
standard models	550	TRIG0	60
switching	74	trigger delay	88, 90
Sensors with Built-in Lightin	g 35	two Touch Finders connected	
Sensors with C-mounts	36	at the same time	417
Set color	278, 305, 314	two-edge midpoint compensation	118
Setting the Retry Function	423	two-edge position compensation	114
setting up Ethernet	67	U	
Shape	210	updating	
Shape Search II	230, 247	software version	577
shape search position comp	ensation 104,		
107		V	
SHTOUT	57, 60	versions	429
Shutter speed	80, 81	W	
Size	524	Weak Smoothing	93
slider	38	white balance	85


FQ2-S/CH User's Manual Index 581

width amount	284
wiring	54
Sensor	52, 54
Sensor Data Units	56
Touch Finder	63
Z	
zooming	380

Index FQ2-S/CH User's Manual

# **Revision History**

A manual revision code appears as a suffix to the catalog number at the bottom of the front and back covers of this manual.

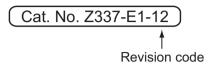

Revision code	Date	Revised contents		
01	December 2013	Original production		
02	July 2014	Corrected minor mistakes and added information on the numerical position compensation item.		
03	April 2015	Corrected minor mistakes and added linear correction items, etc. (Supports sensor version 2.0)		
04	August 2015	Additions corresponding to change of EN standard.		
05	January 2016	Corrected minor mistakes and added information on the shape search III inspection item.(Supports sensor version 2.1)		
06	November 2016	Corrected minor mistakes.  2D-code inspection item specification change. (sensor version 2.20)  2D-code (DPM) inspection item specification change. (sensor version 2.20)		
07	August 2017	Corrected minor mistakes.		
08	October 2021	Corrected minor mistakes.		
09	May 2022	Corrected minor mistakes.		
10	September 2022	Added information about Security Measures to Safety Precautions.		
11	January 2024	Corrected minor mistakes.		
12	October 2024	Corrected minor mistakes.  Added a function that does not display the Sensor List. (sensor version 2.31)  Added hardware version. (sensor version 2.31)  "Shutter" specification change. (hardware version B only)  Delete Section 9-5.  Supports Windows 11.		

Revision History FQ2-S/CH User's Manual

### **OMRON Corporation** Industrial Automation Company

Kyoto, JAPAN Contact: www.ia.omron.com

#### Regional Headquarters

#### OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31) 2356-81-300 Fax: (31) 2356-81-388

OMRON ASIA PACIFIC PTE. LTD.

438B Alexandra Road, #08-01/02 Alexandra Technopark, Singapore 119968 Tel: (65) 6835-3011 Fax: (65) 6835-3011

#### OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

#### OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-6023-0333 Fax: (86) 21-5037-2388

#### **Authorized Distributor:**

©OMRON Corporation 2013-2024 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. Z337-E1-12 1024