

Programmable Controller CPM1A-series

Replacement Guide From CPM1A to CP1E

A large blue rectangular button with a white border is positioned on the right side of the page. Inside the button, the words "Replace" and "Guide" are written in white, stacked vertically.

**Replace
Guide**

About this document

This document provides the reference information for replacing CPM1A PLC systems with CP1E series PLC.

This document does not include precautions and reminders ;please read and understand the important precautions and reminders described on the manuals of PLCs (both of PLC used in the existing system and PLC you will use to replace the existing PLC) before attempting to start operation.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.

(c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings

and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Microsoft products screen shot(s) reprinted with permission from Microsoft Corporation.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

■ Related Manuals

• CPM1A

| Man. No. | Model | Manual |
|----------|------------------|-----------------------------------------------------|
| W317 | CPM1A-□□CD□-□-V1 | CPM1A Operation Manual |
| W353 | CPM1A-□□CD□-□-V1 | CPM1/CPM1A/CPM2A/CPM2C/SRM1(-V2) Programming Manual |

• CP1E


| Man. No. | Model | Manual |
|----------|----------------------------------------------------------------------------------|---------------------------------------------|
| W479 | CP1E-E□□SD□-□ CP1E-N□□S□D□-□ CP1E-E□□D□-□ CP1E-N□□D□-□ CP1E-NA□□D□-□ | CP1E CPU Unit Hardware User's Manual |
| W480 | CP1E-E□□SD□-□ CP1E-N□□S□D□-□ CP1E-E□□D□-□ CP1E-N□□D□-□ CP1E-NA□□D□-□ | CP1E CPU Unit Software User's Manual |
| W483 | CP1E-E□□SD□-□ CP1E-N□□S□D□-□ CP1E-E□□D□-□ CP1E-N□□D□-□ CP1E-NA□□D□-□ | CP1E CPU Unit Instructions Reference Manual |

Table of Contents

| | |
|----------------------------------------------------------------------------------------------|----|
| Replacement flow | 2 |
| 1. Replacement model | 3 |
| 2. Main specifications and differences between CP1E and CPM1A | 5 |
| 2.1. Dimensions | 5 |
| 2.2. Mounting | 5 |
| 2.3. Expansion Units | 5 |
| 2.4. Supply voltage | 5 |
| 2.5. External power supply | 6 |
| 2.6. I/O memory backup time | 7 |
| 2.7. Wiring | 7 |
| 3. Converting program and settings | 13 |
| 3.1. Transferring program and settings of CPM1A | 13 |
| 3.1.1. Transferring user program | 13 |
| 3.1.2. Transferring Data Memory (DM) | 13 |
| 3.2. Converting program | 13 |
| 3.3. Checking error and warning report | 13 |
| Modifying program | 15 |
| 3.3.1. Modifying I/O memory area | 15 |
| 3.3.2. Allocations of Auxiliary Area and Special Area | 15 |
| 3.3.3. Allocation of Link Words | 15 |
| 3.4. Modifying instructions | 15 |
| 3.4.1. Converting instructions that are changed to different instructions for CP1E | 15 |
| 3.4.2. Modifying the CPM1A instructions that include changes of operand specifications | 15 |
| PLC Setup | 16 |
| 3.5. I/O memory | 16 |
| Converting when interrupt input is used | 17 |
| Converting when quick-response input is used | 18 |
| Converting when high-speed counter is used | 19 |
| 4. Transferring data | 21 |
| 5. Precaution | 21 |
| Appendix 1. Specification and performance comparison between CPM1A and CP1E | 22 |
| Appendix 2. Changes in Special Area | 26 |
| Appendix 3. Changes in Auxiliary Area | 27 |
| Appendix 4. Instructions changed by replacing CPM1A with CP1E | 28 |
| Appendix 5. Instruction specifications changed by replacing CPM1A with CP1E | 29 |
| Appendix 6. PLC Setup changed by replacing CPM1A with CP1E | 30 |
| Appendix 7. Expansion Units | 31 |

Replacement flow

The procedure to replace the CPM1A with the CP1E is as follows. (Each number shows the number of the section)

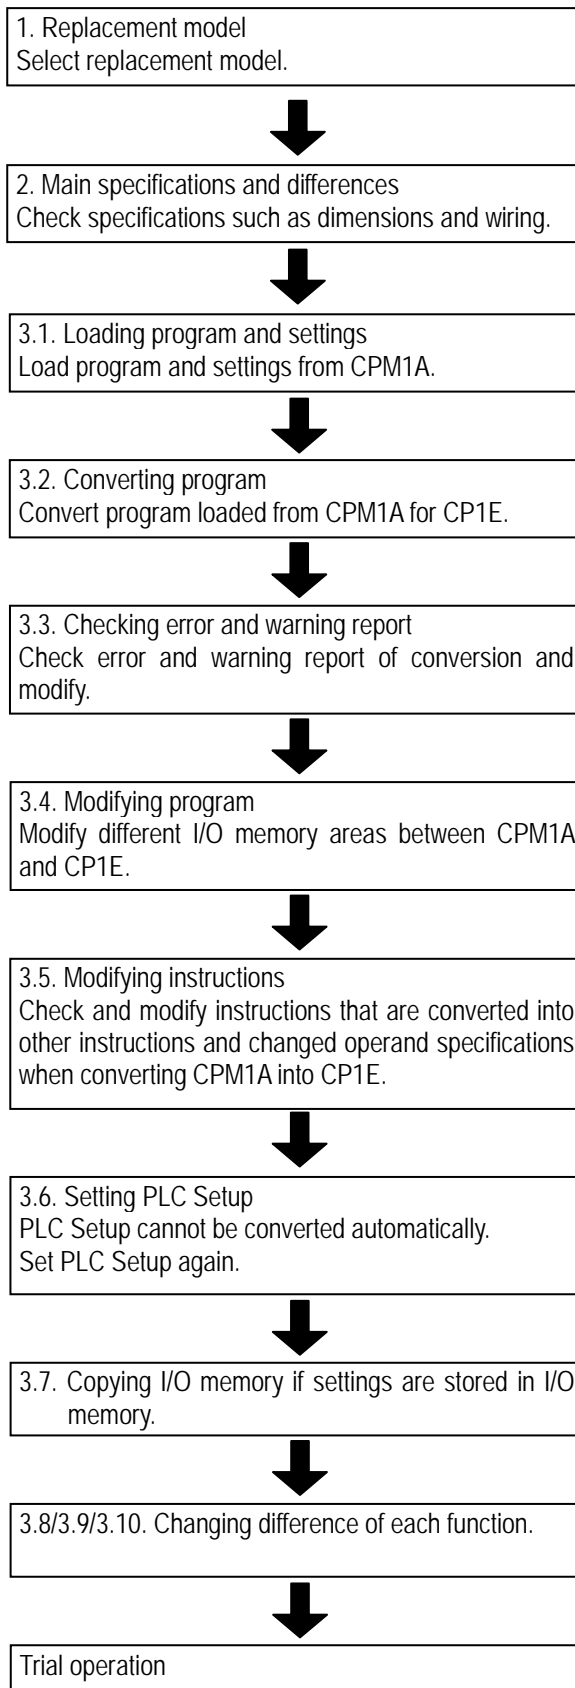

Note

After replacement, please perform trial operation before starting actual operation and check that the system operates correctly. This guide does not include sufficient specifications for replacement. Please refer to the manuals listed on the Related Manuals page and check the specifications before converting.

1. Replacement model

< Precaution for replacement >

The dimensions, specifications, program, settings, terminal arrangements and others are changed by replacing the CPM1A with the CP1E. Please refer to this replacement guide and the manuals of the CPM1A and CP1E for details.

Note:

This guide provides the procedure to replace the CPM1A with the CP1E. However, there are some differences in the functions and performance between the CPM1A and the CP1E, and all CPM1A cannot be replaced with the CP1E. Please refer to this guide and the manuals to examine replacement carefully.

Replacement configuration (example)

Using the only CPM1A CPU Unit without using the CPM1-CIF01 or CPM1-CIF11



RS-232C Communications (example)

Using the CPM1A CPU Unit in combination with the CPM1-CIF01



RS-422A/485 Communications (example)

Using the CPM1A CPU Unit in combination with the CPM1-CIF11

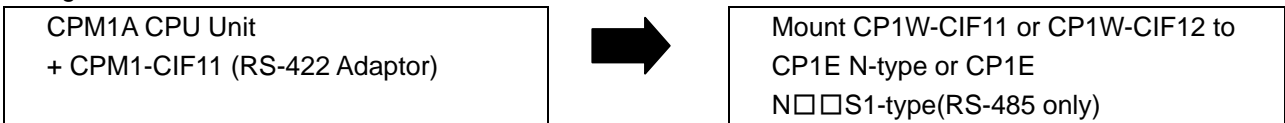


Table of replacement models (example)

| Power supply type | Output type | I/O points | Original Unit | Replacement Unit | |
|-------------------|-----------------------------|------------|------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------|
| | | | CPM1A-V1 | CP1E E-type | CP1E N-type N□□S: Built-in RS-232C N□□S1: Built-in RS-232C/RS-485 N□□S: RS-232C + Option Board slot |
| AC type | Relay output | 10 | CPM1A-10CDR-A-V1 | CP1E-E10DR-A | - |
| | | 20 | CPM1A-20CDR-A-V1 | CP1E-E20SDR-A CP1E-E20DR-A | CP1E-N20DR-A |
| | | 30 | CPM1A-30CDR-A-V1 | CP1E-E30SDR-A CP1E-E30DR-A | CP1E-N30SDR-A CP1E-N301SDR-A CP1E-N30DR-A |
| | | 40 | CPM1A-40CDR-A-V1 | CP1E-E40SDR-A CP1E-E40DR-A | CP1E-N40SDR-A CP1E-N401SDR-A CP1E-N40DR-A |
| | Transistor output (sinking) | 10 | CPM1A-10CDT-A-V1 | CP1E-E10DT-A | - |
| | | 20 | CPM1A-20CDT-A-V1 | - | CP1E-N20DT-A |
| | | 30 | CPM1A-30CDT-A-V1 | - | CP1E-N30SDT-D CP1E-N30S1DT-D CP1E-N30DT-A |
| | | 40 | CPM1A-40CDT-A-V1 | - | CP1E-N40SDT-D CP1E-N40S1DT-D CP1E-N40DT-A |

| | | | | | |
|------------|---------------------------------|----|-------------------|---------------|--------------------------------------------------|
| | Transistor output (sourcing) | 10 | CPM1A-10CDT1-A-V1 | CP1E-E10DT1-A | - |
| | | 20 | CPM1A-20CDT1-A-V1 | - | CP1E-N20DT1-A |
| | | 30 | CPM1A-30CDT1-A-V1 | - | CP1E-N30DT1-A |
| | | 40 | CPM1A-40CDT1-A-V1 | - | CP1E-N40DT1-A |
| DC type | Relay output | 10 | CPM1A-10CDR-D-V1 | CP1E-E10DR-D | - |
| | | 20 | CPM1A-20CDR-D-V1 | - | CP1E-N20DR-D |
| | | 30 | CPM1A-30CDR-D-V1 | - | CP1E-N30DR-D |
| | | 40 | CPM1A-40CDR-D-V1 | - | CP1E-N40DR-D |
| | Transistor output (sinking) | 10 | CPM1A-10CDT-D-V1 | CP1E-E10DT-D | - |
| | | 20 | CPM1A-20CDT-D-V1 | - | CP1E-N20DT-D |
| | | 30 | CPM1A-30CDT-D-V1 | - | CP1E-N30DT-D |
| | | 40 | CPM1A-40CDT-D-V1 | - | CP1E-N40DT-D |
| | Transistor output (sourcing) | 10 | CPM1A-10CDT1-D-V1 | CP1E-E10DT1-D | - |
| | | 20 | CPM1A-20CDT1-D-V1 | - | CP1E-N20DT1-D |
| | | 30 | CPM1A-30CDT1-D-V1 | - | CP1E-N30SDT-D CP1E-N30S1DT-D CP1E-N30DT1-D |
| | | 40 | CPM1A-40CDT1-D-V1 | - | CP1E-N40SDT-D CP1E-N40S1DT-D CP1E-N40DT1-D |

2. Main specifications and differences between CP1E and CPM1A

2.1. Dimensions

The dimensions of the CP1E are different from that of the CPM1A. Secure the depth of the control panel because the depth of the CPU Unit will increase. Dimension comparison table

| Power supply type | I/O | Dimensions (W x H x D) | | |
|-------------------|-----------|------------------------|-------------------------------------|-------------------------------------------|
| | | CPM1A-V1 | CP1E-E□□ CP1E-N□□ Normal-type | CP1E-E□□S CP1E-N□□S(1) Renewal-type |
| DC type | 10 points | 66 x 90 x 50 | 66 x 90 x 85 | - |
| | 20 points | 86 x 90 x 50 | 86 x 90 x 85 | 86x90x79 |
| | 30 points | 130 x 90 x 50 | 130 x 90 x 85 | 130x90x79 |
| | 40 points | 150 x 90 x 50 | 150 x 90 x 85 | 150x90x79 |
| AC type | 10 points | 66 x 90 x 70 | 66 x 90 x 85 | - |
| | 20 points | 86 x 90 x 70 | 86 x 90 x 85 | 86x90x79 |
| | 30 points | 130 x 90 x 70 | 130 x 90 x 85 | 130x90x79 |
| | 40 points | 150 x 90 x 70 | 150 x 90 x 85 | 150x90x79 |

2.2. Mounting

The DIN Track and mounting hole pitch of the CP1E are the same as those of the CPM1A though the depth is different.

2.3. Expansion Units

The Expansion Units that can be connected to the CPM1A are the CPM1A Expansion (I/O) Units, and the Expansion Units for the CP1E is the CP1W Expansion (I/O) Units. Refer to the **Appendix 7. Expansion Units** for the Expansion (I/O) Units to replace.

The Expansion Units cannot be used for the CPM1A CPU Units with 10 and 20 I/O points or the CP1E CPU Units with 10, 14 and 20 I/O points CPU Units.

2.4. Supply voltage

The power consumption depends on the model though the power supply voltage and operating voltage range of the CP1E and CPM1A are the same.

Change to an appropriate power supply if power supply capacity is insufficient.

Refer to the **Appendix 1. Specification and performance comparison between CPM1A and CP1E** for the current consumption specifications.

2.5. External power supply

The CP1E CPU Units with 10 and 20 I/O points do not provide an external power supply.

When the external power supply is used for the CPM1A CPU Unit with 10 or 20 I/O points, another 24 VDC power supply is required.

| Power supply type | I/O | External power supply specification | |
|-------------------|-----------|-------------------------------------|----------------------------------------------------------------------|
| | | CPM1A-V1 | CP1E |
| DC type | 10 points | Not provided | Not provided |
| | 20 points | | |
| | 30 points | | |
| | 40 points | | |
| AC type | 10 points | 24VDC 200mA max. | Not provided When using, another 24 VDC Power Supply is required. |
| | 20 points | | |
| | 30 points | 24VDC 300mA max. | 24VDC 300mA max. |
| | 40 points | | |


2.6. I/O memory backup time

The I/O memory backup time (to retain the contents of the DM Area and Holding Area, and Counter values) of the CP1E is shorter than that of the CPM1A.


Use the CP1E N-type CPU Unit with an optional Battery (CP1W-BAT01) mounted if the backup time of the CP1E is insufficient.

Note: The DM Area, Holding Area, and Counter Flags/PVs become unstable when power is interrupted for longer than the I/O memory backup time, which may cause the system to malfunction.

I/O memory backup time

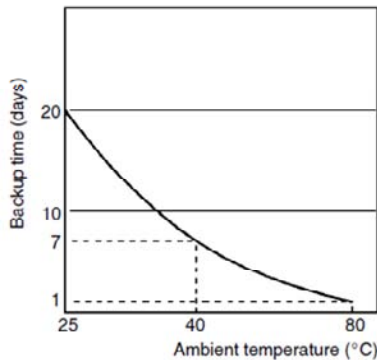

Capacitor backup time of CPM1A

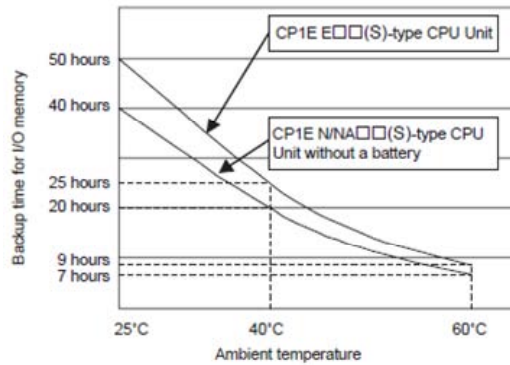

Capacitor backup time of CP1E

2.7. Wiring

Wire to the same I/O when the I/O is used as a normal I/O.

Note: Because both terminal blocks of the CPM1A-V1 and CP1E are fixed, rewiring is required. Review the wiring as the terminal arrangement is changed.



Method of terminal block and change in terminal arrangement

| I/O | Terminal block | | Change in terminal arrangement by replacing CPM1A with CP1E |
|-----------|----------------|-------|-------------------------------------------------------------|
| | CPM1A | CP1E | |
| 10 points | Fixed | Fixed | Changed |
| 20 points | Fixed | Fixed | Changed |
| 30 points | Fixed | Fixed | Changed |
| 40 points | Fixed | Fixed | Changed |



Terminal arrangements

- Terminal arrangements for CPU Units with 40 I/O points


CPM1A-40D□□-□-V1

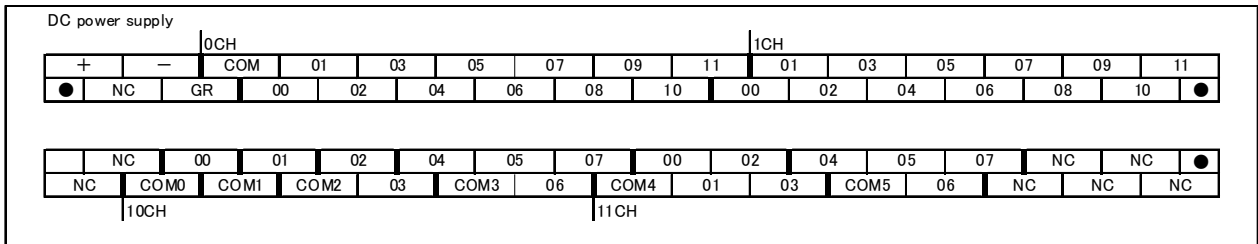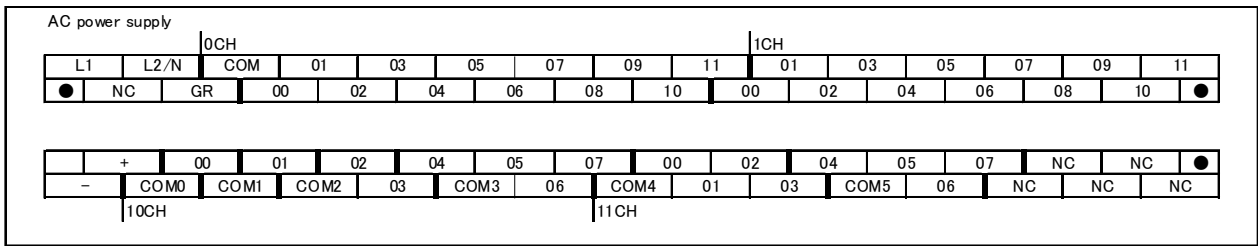


CP1E-□40(S□)D□□-□ (Except CP1E-N40S(1)DT-D, CP1E-N40S(1)DT1-D)

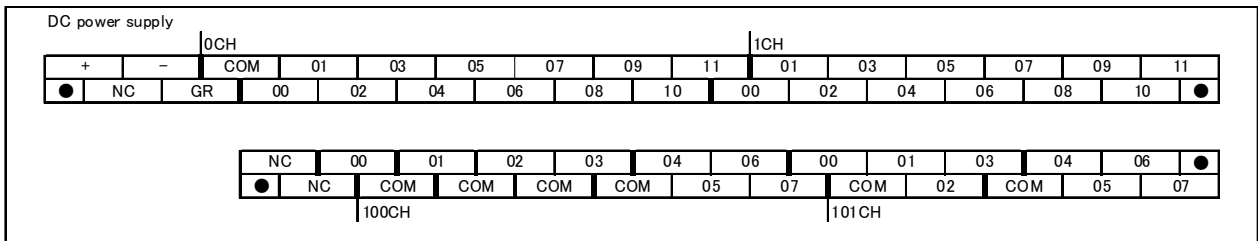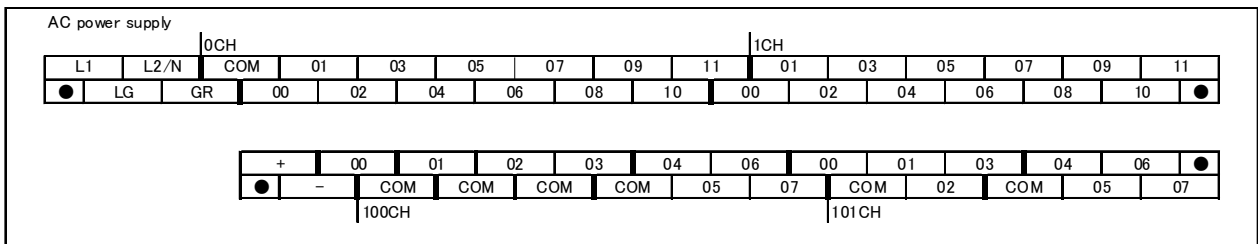

CP1E-N40S(1)DT-D


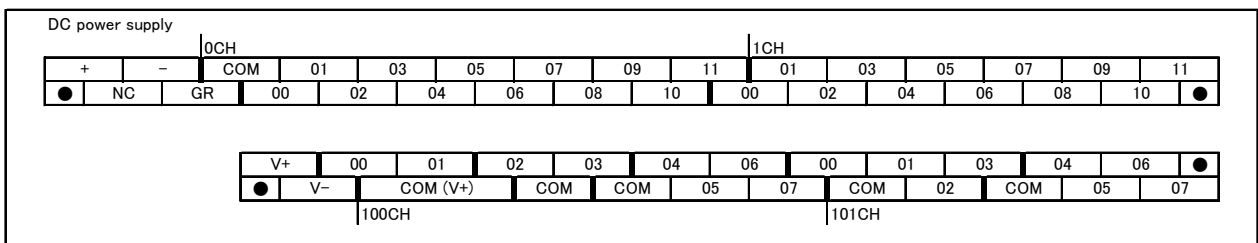


CP1E-N40S(1)DT1-D


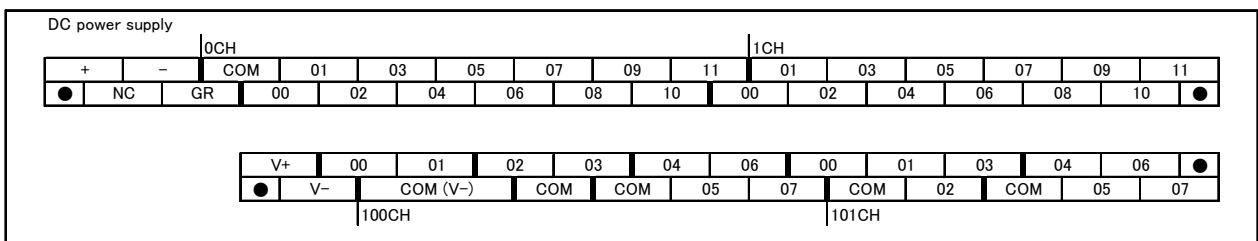


●Terminal arrangements for CPU Units with 30 I/O points


CPM1A-30D□□-□-V1

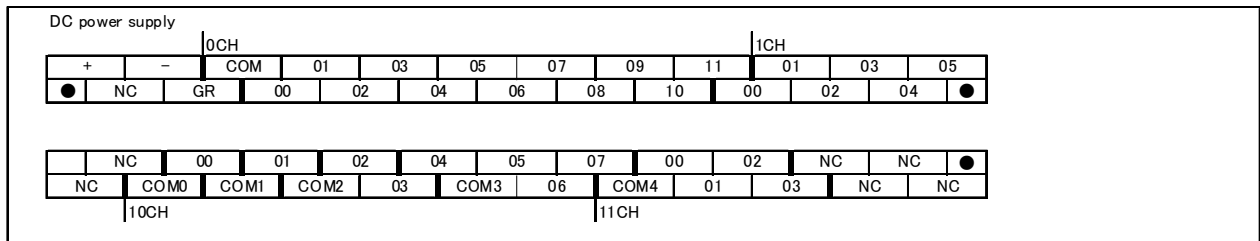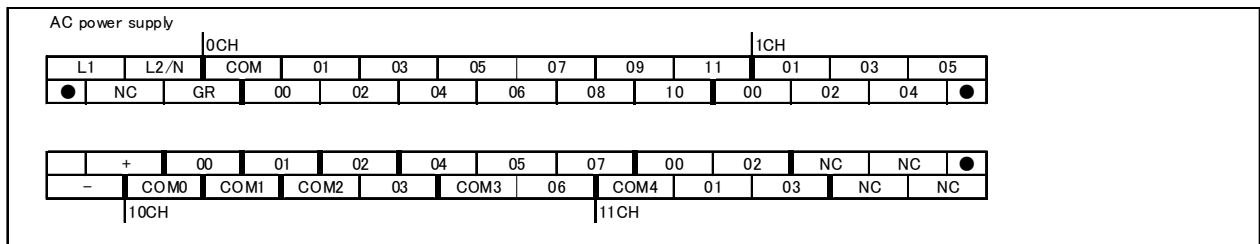


CP1E-□30(S□)D□□-□ (Except CP1E-N30S(1)DT-D, CP1E-N30S(1)DT1-D)

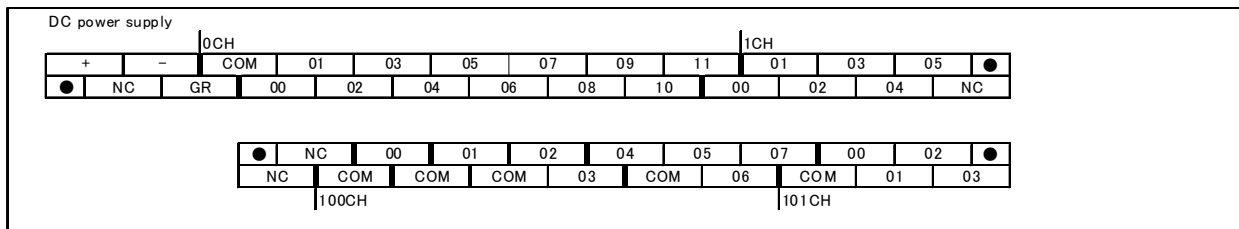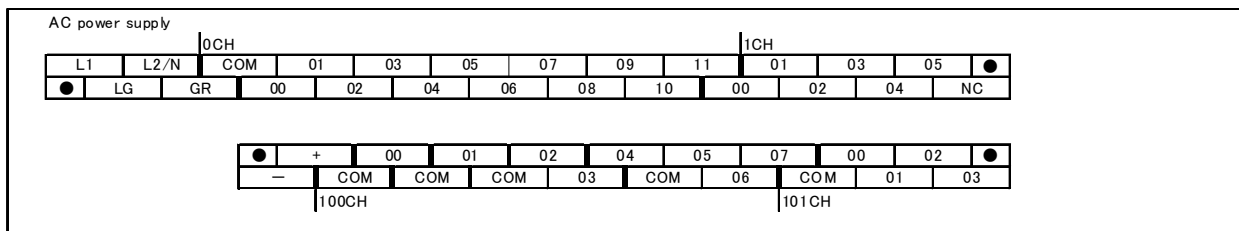

CP1E-N30S(1)DT-D


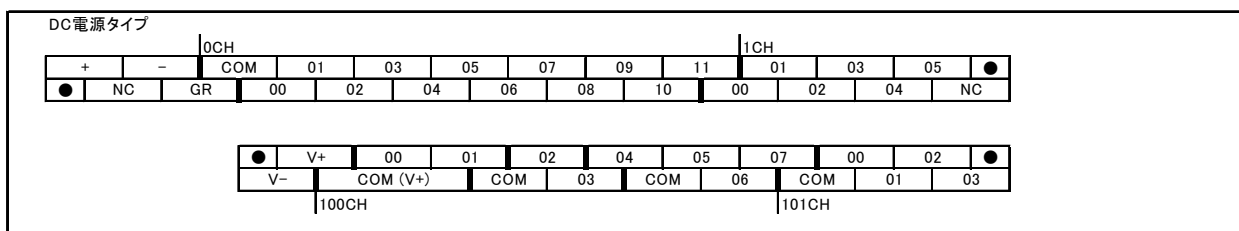


CP1E-N30S(1)DT1-D


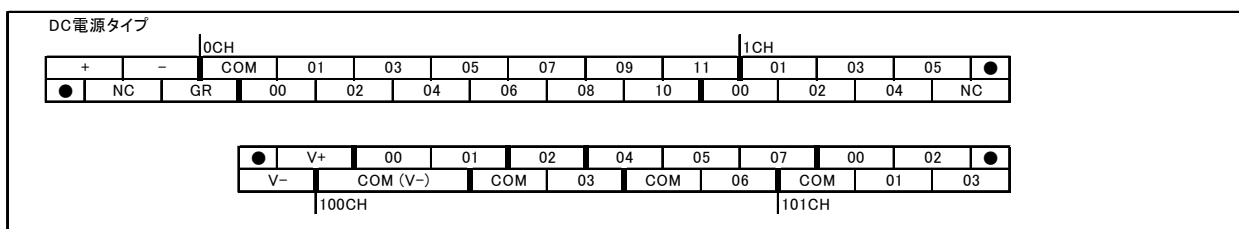


•Terminal arrangements for CPU Units with 20 I/O points

CPM1A-20D□□-□-V1

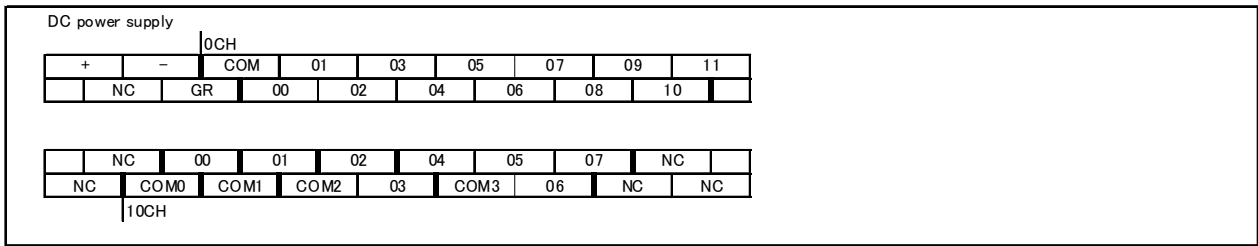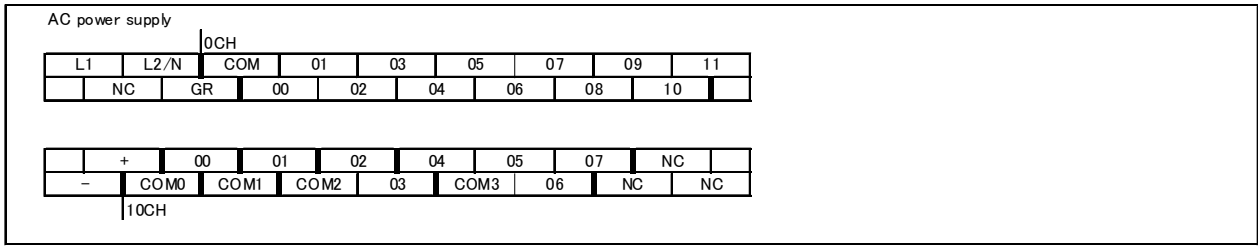


CP1E-□20(S)D□□-□

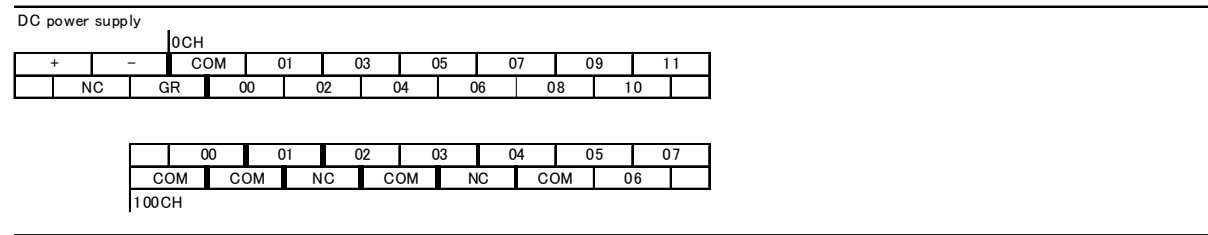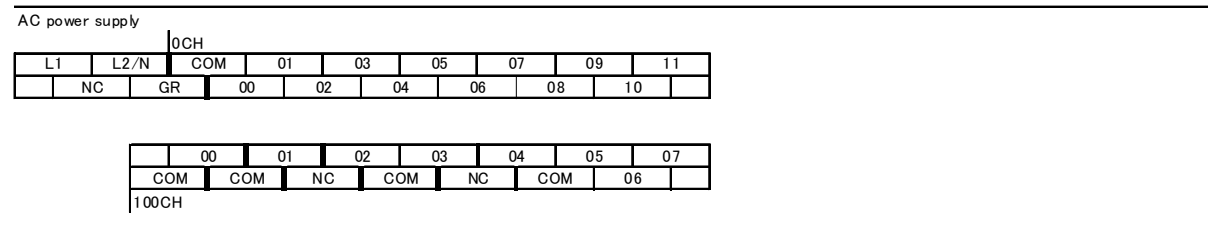


•Terminal arrangements for CPU Units with 10 I/O points

CPM1A-10D□□-□-V1

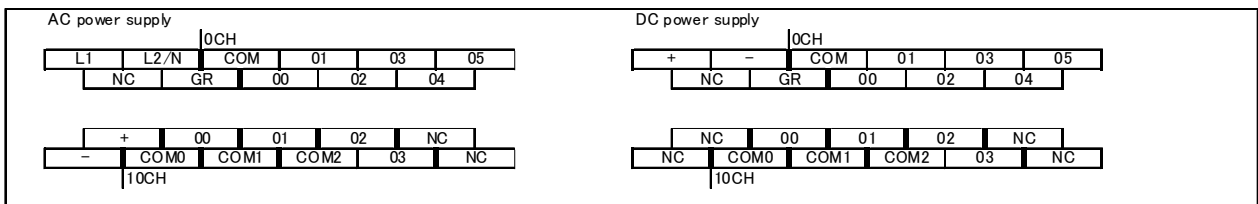

CP1E-E10D□□-□

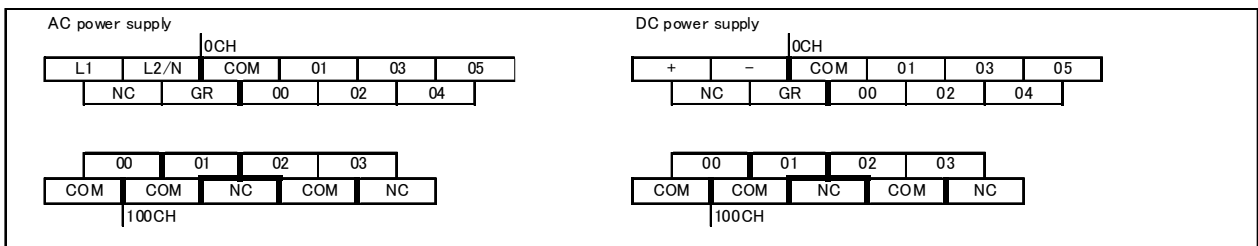

- Terminal arrangements for interrupt inputs, quick-response inputs, high-speed counter inputs, and pulse outputs

Note. As for the high-speed counter input and pulse output, the functions and terminal arrangement of the CP1E might be different from those of the CPM1A. Refer to this guide and the manuals and check that necessary functions can be performed before changing the wiring and programming for replacement.

(1) Using interrupt inputs and quick-response inputs

Note. Replacement of interrupt inputs and quick-response inputs requires to change ladder programs and PLC setup. Refer to the **3.8. Converting when interrupt input is used** and **3.9. Converting when quick-response input is used** to convert.

| CIO | CPM1A | CP1E |
|---------|---------------------------------------------|------------------------------------------|
| 0.00 | - | - |
| 0.01 | - | - |
| 0.02 | - | Interrupt input 2/Quick-response input 2 |
| 0.03 | Interrupt input 0/Quick-response input 0 | Interrupt input 3/Quick-response input 3 |
| 0.04 | Interrupt input 1/Quick-response input 1 | Interrupt input 4/Quick-response input 4 |
| 0.05 | Interrupt input 2/Quick-response input 2 *2 | Interrupt input 5/Quick-response input 5 |
| 0.06 *1 | Interrupt input 3/Quick-response input 3 | Interrupt input 6/Quick-response input 6 |
| 0.07 *1 | - | Interrupt input 7/Quick-response input 7 |

*1. The CPM1A or CP1E CPU Unit with 10 I/O points does not have CIO 0.06 and 0.07.

*2. CIO 0.05 of the CPM1A does not have the interrupt input 2/quick-response input 2 function.

(2) Using high-speed counter inputs

The terminal arrangement for high-speed counter inputs of the CPM1A is different from that of the CP1E.

- Using increment mode for CPM1A

Use the increment pulse input for the CP1E. However, the CP1E does not support the reset input for the increment pulse input.

When an external reset input is required in "increment mode" in the CPM1A, set to "up/down pulse input" in the CP1E, change the input from high-speed counter 0 (CIO 0.00) of the CPM1A to high-speed counter 0 up input (CIO 0.00) of the CP1E, and use reset input (CIO 0.04). In this case, connect nothing to high-speed counter 0 down input (CIO 0.01) of the CP1E.

When CIO 0.01 of the CPM1A is used, change the input to an unused input bit of the CP1E, and change the input bit in the ladder program.

- Using up/down mode for CPM1A

The input bit for phase Z/reset input is changed from CIO 0.02 of the CPM1A to CIO 0.04 of the CP1E.

When CIO 0.04 of the CPM1A is used, change the input to CIO 0.02 of the CP1E, and change the input bit in the ladder program.

Comparison of input arrangement of high-speed counter between CPM1A and CP1E

| CIO | CPM1A | | | CP1E | | |
|------|------------------------------|---------------------------------------|---|----------------------|--------------------------------------------|------------------------------------|
| | Increment mode | Up/down mode Differential phase x4 | - | Increment pulse | Differential phase or up/down | Pulse + direction |
| 0.00 | High-speed counter 0 | High-speed counter 0 (phase A) | - | High-speed counter 0 | High-speed counter 0 (phase A/up input) | High-speed counter 0 (pulse input) |
| 0.01 | - | High-speed counter 0 (phase B) | - | High-speed counter 1 | High-speed counter 0 (phase B/down input) | High-speed counter 1 (pulse input) |
| 0.02 | High-speed counter 0 (reset) | High-speed counter 0 (phase Z/reset) | - | High-speed counter 2 | High-speed counter 1 (phase A/up input) | High-speed counter 0 (direction) |
| 0.03 | - | - | - | - | High-speed counter 1 (phase B/down input) | High-speed counter 1 (direction) |
| 0.04 | - | - | - | High-speed counter 3 | High-speed counter 0 (phase Z/reset input) | High-speed counter 0 (reset input) |
| 0.05 | - | - | - | High-speed counter 4 | High-speed counter 1 (phase Z/reset input) | High-speed counter 1 (reset input) |
| 0.06 | - | - | - | High-speed counter 5 | - | - |

Shaded item: Allocation of the CPM1A is different from that of the CP1E.

Grayed item: The item is not used for replacement of the CPM1A.

Note. The input that is not used as a high-speed counter of the CP1E can be used as a normal input.

(3) Using pulse outputs

Note. As the CP1E does not have a single-phase pulse mode, use the pulse + direction mode.
In this case, do not use a direction signal and not wire anything.

| CIO CP1E (CPM1A) | CPM1A | CP1E-N *1 |
|------------------------|---------------------|---------------------------------------------|
| | Single-phase output | Pulse + direction *2 |
| 100.00 (10.00) | Pulse output 0 | Pulse output 0 (pulse) |
| 100.01 (10.01) | Pulse output 1 | Pulse output 1 (pulse) |
| 100.02 (10.02) | - | Pulse output 0 (direction) ⇒ Do not use. |
| 100.03 (10.03) | - | Pulse output 1 (direction) ⇒ Do not use. |

Shaded item: Output allocation is changed when replacing the CPM1A with the CP1E.

*1. The pulse output cannot be used with the CP1E-E type.

*2. Use without using a direction signal.

3. Converting program and settings

3.1. Transferring program and settings of CPM1A


3.1.1. Transferring user program

Transfer the user program and PLC Setup **from PLC to PC** with the CX-Programmer, and save them.

3.1.2. Transferring Data Memory (DM)

Transfer the DM data **from PLC to PC**, and save them.


PLC memory→Open **DM**→**File**→**Save to File**

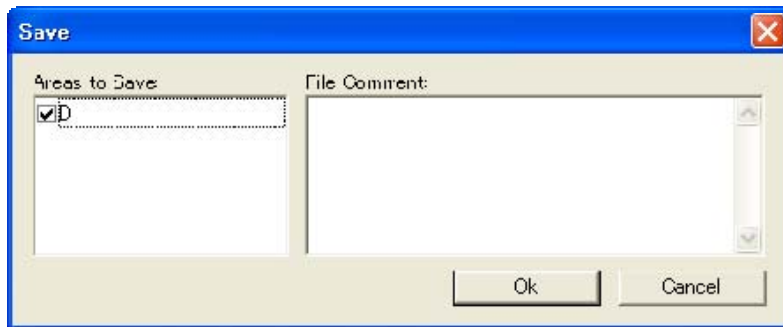

3.2. Converting program


Changing the PLC

Change the Device Type of the user program for the CPM1A from "CPM1 (CPM1A)" to "CP1E" with the CX-Programmer.

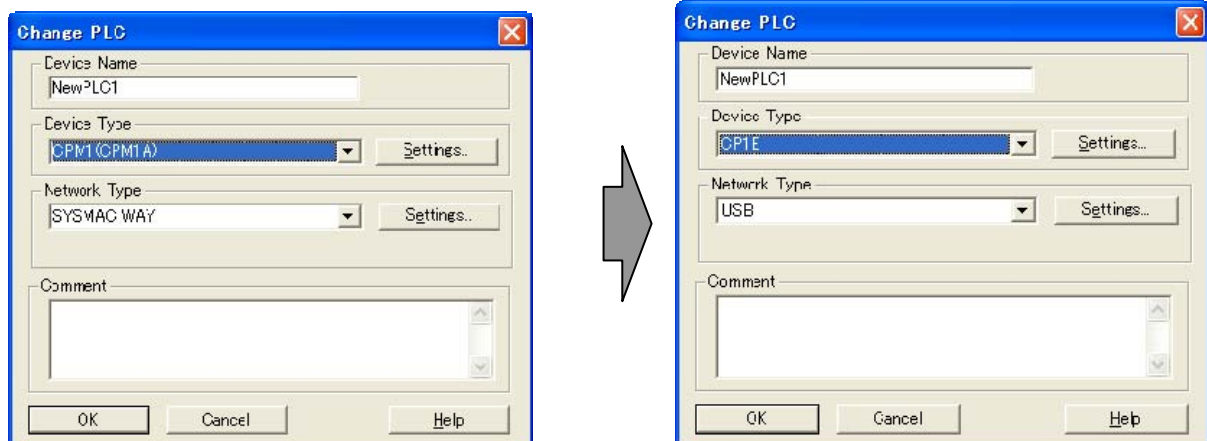


3.3. Checking error and warning report


Select **Program - Compile** to check the program.

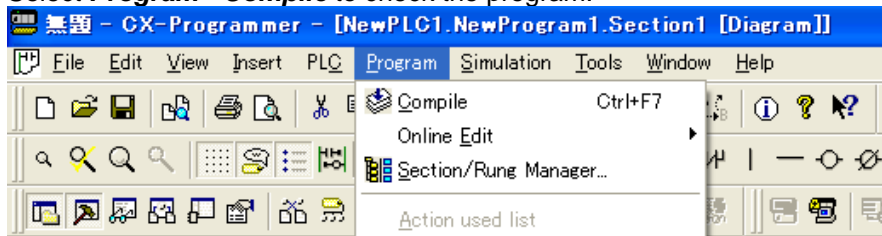

As the Output Window shows the errors and warnings, check them and modify the program.

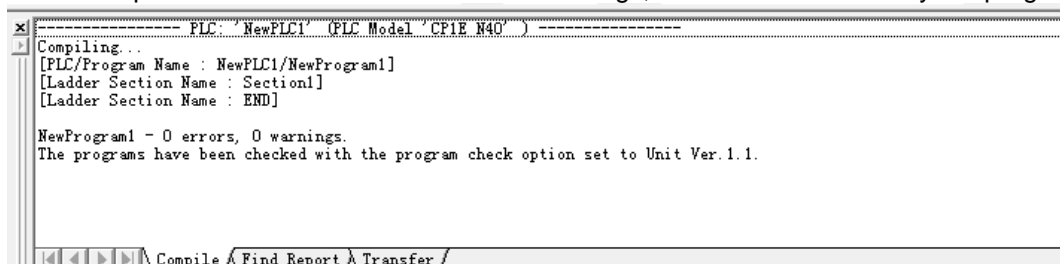

If a rung contains an error, a red line appears down the left-hand side of the ladder rung.

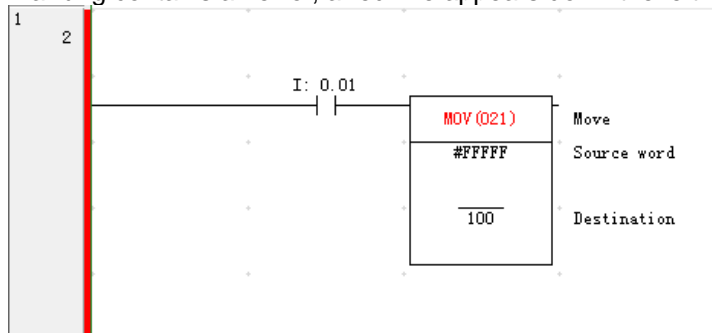

Compile can check the following contents.

- Illegal data
- Instruction support by PLC
- Operand ranges
- Program capacity for PLC
- Syntax
- Ladder diagram structure
- Output duplication
- Tasks

Note. Some errors might not be detected by the above-mentioned check with **Compile**.

Check the entire program to operate the system correctly after checking and modifying the contents in **3.4. Modifying program** and other sections

Modifying program

3.3.1. Modifying I/O memory area

Some I/O memory areas might be required to be changed.

If the address that does not exist in the CP1E is specified, an error will be displayed as a rung error in the Output Window of the CX-Programmer when converted. (The error instruction is displayed in red on the Ladder Program Window.)

Changing allocation of output bits

The output bits must be modified because the output bits of the CPM1A starting from CIO 10 changed to those of the CP1E starting from CIO 100.

| | CPM1A | CP1E |
|-------------|--------|---------|
| Output bits | CIO 10 | CIO 100 |
| | CIO 11 | CIO 101 |
| | ... | ... |
| | CIO 19 | CIO 119 |

Example: CPU Unit with 40 I/O points

CPM1A : 010.00 to 010.07, 011.00 to 011.07 (starting from CIO10)

CP1E : 100.00 to 100.07, 101.00 to 101.07 (starting from CIO100)

The allocation of input bits does not need to be changed.

Refer to the **I/O memory** of the **Appendix 1. Specification and performance comparison between CPM1A and CP1E** for the range of the CIO Area.

3.3.2. Allocations of Auxiliary Area and Special Area

Some bits and functions in the Auxiliary Area of the CP1E are different from those in the Auxiliary Area and Special Area of the CPM1A. The allocations of the Auxiliary Area and Special Area are not displayed as errors when converted. Refer to the Appendices 2 and 3, and reference manuals to change the bits and ladder program.

Note. The Special Area of the CPM1A is included in the Auxiliary Area in the CP1E.

Refer to the **Appendix 2. Changes in Special Area** for the difference of the Special Area.

Refer to the **Appendix 3. Changes in Auxiliary Area** for the difference of the Auxiliary Area.

3.3.3. Allocation of Link Words

Although the allocations of the Link Words of the CPM1A and the CP1E are different, the CX-Programmer does not convert. The Link Words are converted into the Work Area (W) for the CP1E as follows. If you use Serial Links with the CP1E, modify the Link Words to the Serial PLC Link Words of the CP1E.

| | Link Words of CPM1A | When converted with CX-Programmer | Serial PLC Link Words of CP1E |
|----------------------------------------------------|---------------------|-----------------------------------|-------------------------------|
| Link Words (CPM1A) Serial PLC Link Words (CP1E) | LR0 to LR15 | W0 to W15 | CIO 200 to CIO 289 |

3.4. Modifying instructions

3.4.1. Converting instructions that are changed to different instructions for CP1E

Some of the CPM1A instructions are changed to different instructions for the CP1E when converted.

Refer to the Instructions Reference Manuals in the reference manuals to modify the instructions for operations of the system.

Some instructions that exist in the CPM1A do not exist in the CP1E.

Modify or add the ladder program so that the system may work correctly by other methods.

Refer to the **Appendix 4. Instructions changed by replacing CPM1A with CP1E** for the instructions to be modified.

3.4.2. Modifying the CPM1A instructions that include changes of operand specifications

Some operand specifications of instructions that are supported by the CPM1A are changed for the CP1E.

Refer to the Instructions Reference Manual in the reference manuals to modify the operands for operations of the system. Review modified operands and all parts using the I/O memory that is used for the operands of the modified instructions, and check if operations are performed correctly.

Refer to the **Appendix 5. Instruction specifications changed by replacing CPM1A with CP1E** for the instructions changed the specifications and their details.

PLC Setup


The PLC Setup is not converted though the ladder program is converted by Change Model. The PLC Setup settings of the CP1E must be changed. Refer to the **Appendix 6. PLC Setup changed by replacing CPM1A with CP1E** for the difference in PLC Setup between the CPM1A and the CP1E.

3.5. I/O memory

When the data for the ladder program is set in the I/O memory (DM Area and Holding Area) of the CPM1A, it is necessary to copy it to the I/O memory area of the CP1E.

Open the screen of the PLC memory of the CPM1A, copy necessary data, and paste it onto the I/O memory of the CP1E.

(1) Select the necessary areas on the CPM1A PLC Memory Window, and right-click→**Copy**

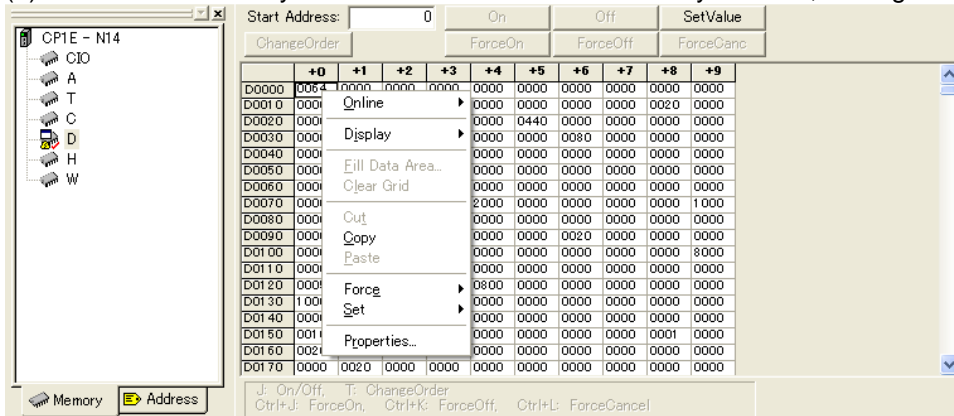

(2) Open the PLC Memory Window of the CP1E, and paste the areas.

Converting when interrupt input is used

When the interrupt input is used, it is necessary to change the ladder program and PLC Setup settings. The interrupt program operates in subroutine of the CPM1A and in the interrupt task of the CP1E. The subroutine program must be modified to the interrupt task.

(1) PLC Setup

When the model is changed from the CPM1A to the CP1E, the PLC Setup is not converted. Enter the settings for the interrupt input to be used from the PLC Setup.

(2) Changing the instruction for permitting interrupts

The CPM1A permits (enables) interrupt inputs with the INT instruction, but the CP1E with the MSKS instruction.

Note 1. When the model is changed, an error is output because the CP1E does not support the INT instruction. Change to the MSKS instruction.

Note 2. Specify the interrupt when the input turns ON, because the CP1E has two methods to execute the interrupt: when the input turns ON or when it turns OFF.

In the CPM1A, the interrupt is executed only when the input turns ON.

Note 3. Refer to the Instructions Reference Manuals for details of the instructions.

(3) Changing the interrupt ladder program

The ladder program of the CPM1A that is executed by the interrupt input is written between the subroutine instructions (between SBN and RET).

Copy the interrupt program in the cyclic task and paste it onto the interrupt task after changing the model to the CP1E.


Note 1. Allocate the task type when creating an interrupt task. If the task type is not allocated, the ladder program in the interrupt task is not checked by **compile** on the CX-Programmer.

Interrupt inputs, subroutine numbers, and interrupt task numbers

| CIO | CPM1A | CP1E |
|--------|------------------------------------------|---------------------------------------|
| 0.02 | - | Interrupt input 2 (Interrupt task 02) |
| 0.03 | Interrupt input 0 (Subroutine number 0) | Interrupt input 3 (Interrupt task 03) |
| 0.04 | Interrupt input 1 (Subroutine number 01) | Interrupt input 4 (Interrupt task 04) |
| 0.05 | Interrupt input 2 (Subroutine number 02) | Interrupt input 5 (Interrupt task 05) |
| 0.06 * | Interrupt input 3 (Subroutine number 03) | Interrupt input 6 (Interrupt task 06) |
| 0.07 * | - | Interrupt input 7 (Interrupt task 07) |

*The CP1E CPU Unit with 10 I/O points does not have CIO 0.06 and 0.07.

Example: Changing the CPM1A "0.03: Interrupt input 0" to the CP1E "0.03: Interrupt input 3"

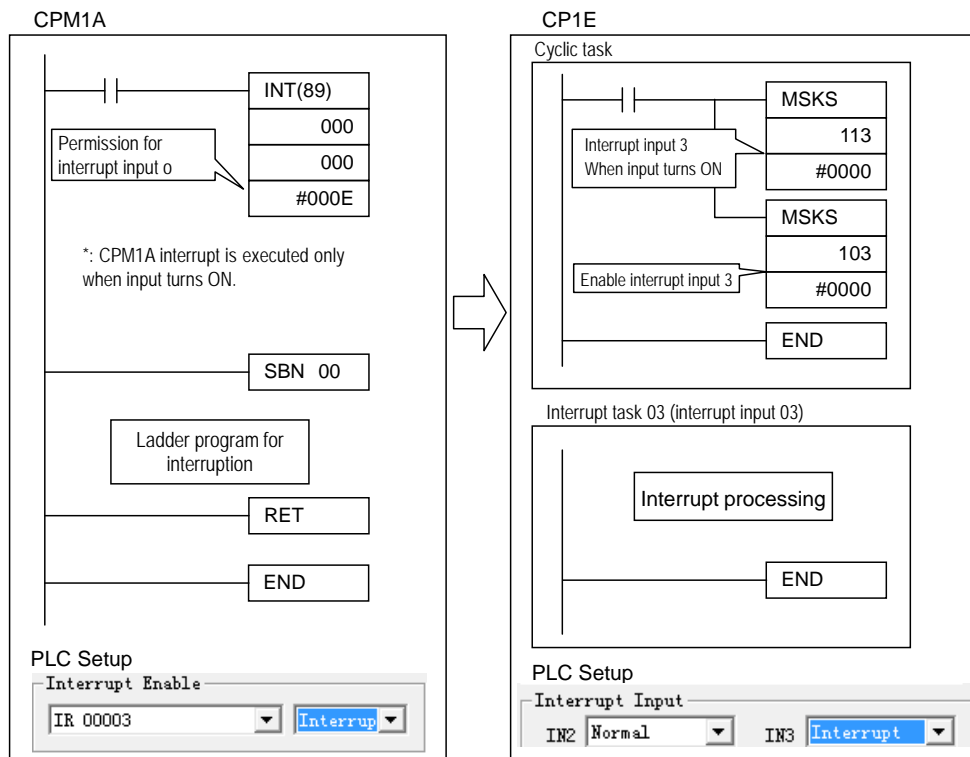

Converting when quick-response input is used

When the quick-response input is used, it is necessary to change the PLC Setup settings.

(1) PLC Setup

When the model is changed from the CPM1A to the CP1E, the PLC Setup is not converted. Enter the settings for the quick-response input to be used from the PLC Setup.


(2) Changing the instruction for permitting interrupts

The CPM1A permits (enables) quick-response inputs with the INT instruction, but the CP1E cannot permit with any instruction. Delete the INT instruction after changing the model.

Note 1. When the model is changed, an error is output because the CP1E does not support the INT instruction.

Note 2. The PLC Setup of the CP1E enables after the power supply is turned ON.

Example: Changing the CPM1A "0.03: Quick-response input 0" to the CP1E "0.03: Quick-response input 3"

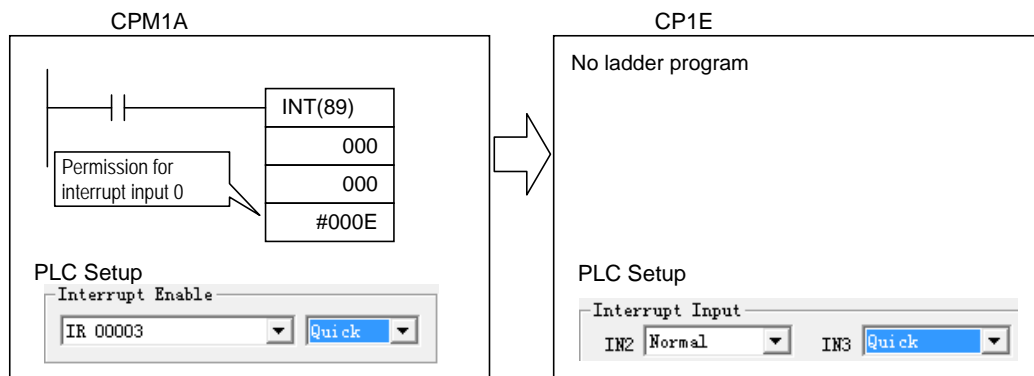

Converting when high-speed counter is used

As for the high-speed counter, "up/down mode" and "incremental mode" of the CPM1A correspond to "differential phase input" and "increment pulse input or up/down pulse input" of the CP1E.

Comparison of high-speed counter specifications

| Item | CPM1A | CP1E |
|-----------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Input mode | Up/down mode (differential phase inputs (x4)) | Differential phase inputs (x4) |
| | Incremental mode (single-phase inputs) | Increment pulse inputs or up/down pulse inputs *1 |
| | | Pulse + direction inputs |
| Counting mode | Linear mode only | Linear mode |
| | | Ring mode |
| Count values | Linear mode only Up/down mode: -32767 to +32767 Incremental mode: 0 to +65535 | Linear mode 80000000 to 7FFFFFFF Hex Ring mode 00000000 to Ring SV |
| Control method | Target matching: Up to 16 target values Range comparison: Up to 8 target values | Target matching: Up to 6 target values Range comparison: Up to 6 target values *2 |
| Input frequency | Up/down mode: 2.5kHz max. | Differential phase input: N-type 50kHz max. E-type 5kHz max. |
| | Single-phase input: 5kHz max. | Increment pulse input: N-type 100kHz max. E-type 10kHz max. |
| Reset method | Phase Z + software reset Software reset *3 | Phase Z + software reset Software reset *4 |

*1. Refer to the 2.6. (2) to select the mode when converting.

*2. Examine to reduce to six or less target values on the system or to change to a high-end model such as the CP1L when seven or more target values are set in the CPM1A.

*3. The comparison operation is always being executed.

*4. The comparison operation can be set to be being executed or stopped.

(1) PLC Setup

When the model is changed from the CPM1A to the CP1E, the PLC Setup is not converted.
Enter the settings for the high-speed counter from the PLC Setup.

(2) Changing the comparison table of the high-speed counter comparison instruction (CTBL instruction)

Although the specifications of the CTBL instructions of the CPM1A and CP1E are same, the data formats of the comparison tables are different.

It is necessary to change target values of comparison tables (change from BCD to BIN) and to change from subroutine numbers to interrupt task numbers.

Note. Allocate the task type when creating an interrupt task. If the task type is not allocated, the ladder program in the interrupt task is not checked by **compile** on the CX-Programmer.

Target value comparison table

| Item | CPM1A | CP1E |
|------------|---------------------------------|---------------------------------|
| S | Number of target values | Number of target values |
| S+1 to S+2 | Lower word of target value: BCD | Lower word of target value: BIN |
| S+3 to S+4 | Upper word of target value: BCD | Upper word of target value: BIN |
| S+5 | Subroutine number | Interrupt task number |

Range comparison table

| Item | CPM1A | CP1E |
|----------------|---------------------------------|---------------------------------|
| S to S + 1 | Lower word of target value: BCD | Lower word of target value: BIN |
| S + 2 to S + 3 | Upper word of target value: BCD | Upper word of target value: BIN |
| S + 4 | Subroutine number | Interrupt task number |

(3) Changing the ladder program for interrupt processing


The ladder program for interrupt processing of the CPM1A is written between the subroutine instructions (between SBN and RET).

Copy the interrupt processing program in the cyclic task and paste it onto the interrupt task after changing the model to the CP1E.

Example

Change the CPM1A "up/down mode: registers a range comparison table and performs one comparison" to the CP1E "differential phase input: registers a range comparison table and performs one comparison".

Two comparison tables are "1500 to 3000" and "14500 to 16000".

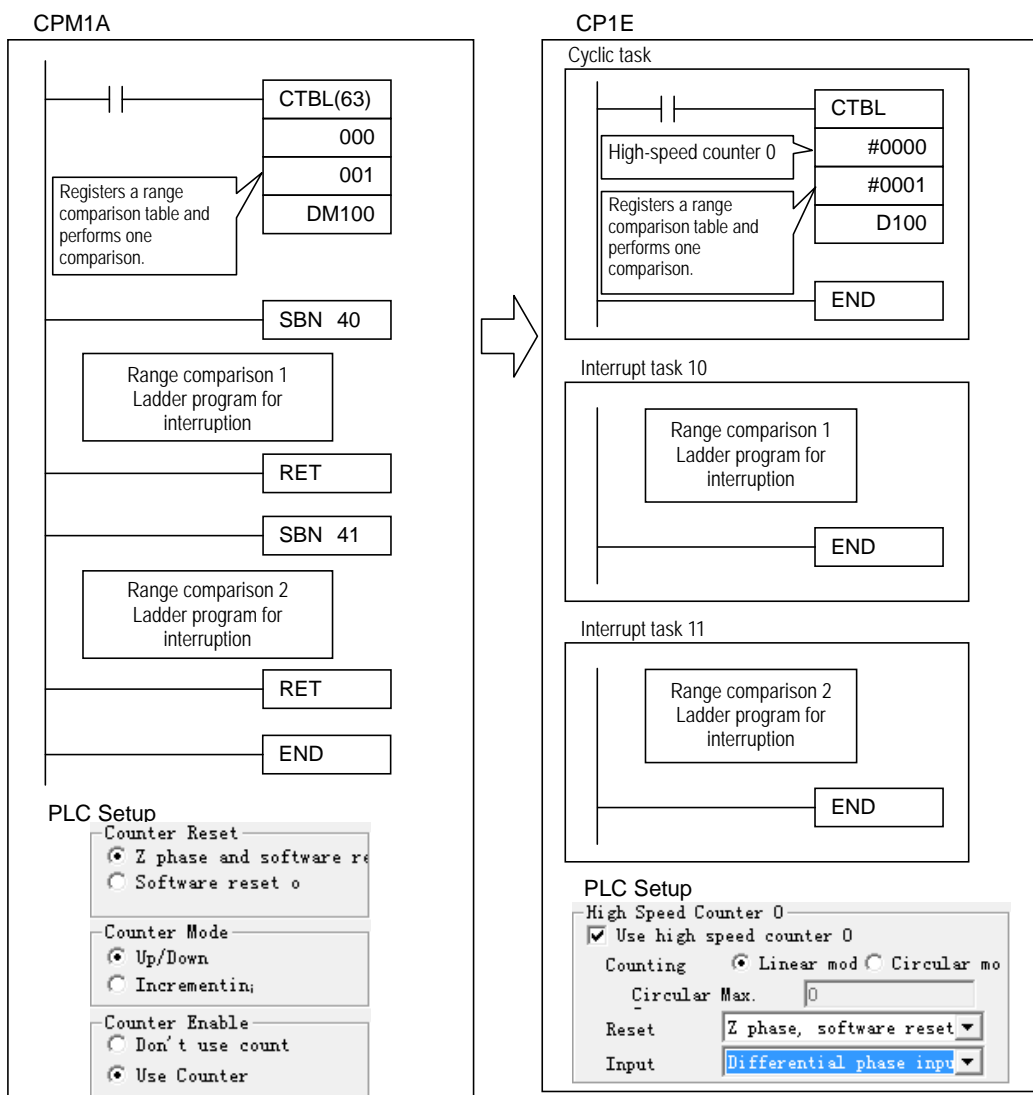

DM setting for CTBL instruction

| | | |
|-------|------|--------------------|
| DM100 | 1500 | Comparison table 1 |
| DM101 | 0000 | Lower word |
| DM102 | 3000 | Comparison table 1 |
| DM103 | 0000 | Upper word |
| DM104 | 0040 | Subroutine number |
| DM105 | 4500 | Comparison table 2 |
| DM106 | 0001 | Lower word |
| DM107 | 6000 | Comparison table 2 |
| DM108 | 0001 | Upper word |
| DM109 | 0041 | Subroutine number |

DM setting for CTBL instruction

| | | |
|------|-------|------------------------------------|
| D100 | #05DC | Comparison table 1 |
| D101 | #0000 | Lower word 1500(5DC Hex) |
| D102 | #0BB8 | Comparison table 1 |
| D103 | #0000 | Upper word 3000(BB8 Hex) |
| D104 | #000A | Interrupt task number No.10(A Hex) |
| D105 | #38A4 | Comparison table 2 |
| D106 | #0000 | Lower word 14500(38A4Hex) |
| D107 | #3E80 | Comparison table 2 |
| D108 | #0000 | Upper word 16000(3E80 Hex) |
| D109 | #000B | Interrupt task number No.11(B Hex) |

4. Transferring data

Transfer the program, settings, and data that had been converted and modified in Section 3 to the CP1E CPU Unit via the peripheral USB port.

5. Precaution

- When the input device such as a Touch Panel is connected, the words used in the Programmable Terminal might not be within the range of the I/O memory area of the CP1E. It is necessary to change the settings of the Touch Panel as well as the ladder program.

Appendix 1. Specification and performance comparison between CPM1A and CP1E

◆ Performance specifications

| Item | CPM1A | CP1E E□□S type CP1E E□□-type | CP1E N□□S(1)-type CP1E N□□-type |
|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum number of I/O points | 10 to 160 points | 10 to 160 points | |
| Number of Expansion Units connected | 10 and 20-point type: None 30 and 40-point type: 3 units | 10, 14 and 20-point type: None 30, 40 and 60-point type: 3 units | |
| Power supply Operating voltage range Power consumption | AC power supply models: 100 to 240VAC Operating voltage range: 85 to 264VAC Power consumption 10, 20-point type: 30VA max. 30, 40-point type: 60VA max. DC power supply models: 24 VDC Operating voltage range: 20.4 to 26.4VDC Power consumption 10, 20-point type: 6W max. 30, 40 -point type: 20W max. | AC power supply models: 100 to 240VAC Operating voltage range: 85 to 264VAC Power consumption 10, 14 , 20-point type: 15VA max./100VAC, 25VA max./ 240VAC 30, 40, 60-point type: 50VA max./100VAC, 70VA max./240VAC DC power supply models: 24VDC Operating voltage range: 20.4 to 26.4VDC Power consumption 10-point type: 9W max., 14, 20-point type: 13W max. 30, 40, 60-point type: 20W max. | |
| Output type | Relay or transistor outputs | Relay or transistor outputs | |
| Terminal block | Fixed | Fixed | |
| External power supply | AC power supply models only 30/40-point CPU Unit: 300mA 10/20-point CPU Unit: 200mA | AC power supply models only 30/40/60-point CPU Unit: 300mA 10/14/20-point CPU Unit: None | |
| Program capacity (External specification. Add 1K steps for internal Specification) | 2K words not including comments, symbol table, and program indices | 2K steps including comments, symbol table, and program indices | 8K steps including comments, symbol table, and program indices |
| DM Area capacity | 1K words | 2K words D0 to D1499 can be backed up to EEPROM. | 8K words D0 to D6999 can be backed up to EEPROM. |
| Program language | Ladder diagram only | Ladder diagram only | |
| Function block | Not provided. | Not provided. | |
| SFC | Not provided. | Not provided. | |
| Instructions | Approximately 90 instructions | Approximately 200 instructions | |
| Instruction execution time | LD: 1.72μs, MOV: 16.3μs | LD: 1.19μs, MOV: 7.9μs | |
| High-speed counter input | | | |
| Mode | Incremental pulse inputs: 5kHz x 1 counter or Differential phase inputs (x4): 2.5kHz x 1counter | Up/down, pulse + direction inputs: 10kHz x 2 counters or Differential phase inputs (x4): 5kHz x 2 counters or Incremental pulse inputs: 10kHz x 6 counters Note. 10kHz x 5 counters for 10-point CPU Unit | Up/down inputs: 100kHz x 1 counter, 10kHz x 1 counter or Pulse + direction inputs: 100kHz x 2 counters or Differential phase inputs (x4): 50kHz x 1 counter, 5kHz x 1 counter or Incremental pulse inputs: 100kHz x 2 counters, 10kHz x 4 counters |
| Control method | Target matching/ Range comparison | Target matching/Range comparison | |
| Quick-response inputs | 4 inputs | 6 inputs (4 inputs only for 10 I/O inputs) | |
| Input interrupts | 4 inputs Direct mode or counter mode | 6 inputs (4 inputs only for 10 I/O inputs) Direct mode only | |

| Item | | CPM1A | CP1E E□□S type CP1E E□□-type | CP1E N□□S(1)-type CP1E N□□-type |
|------------------------------------|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pulse outputs | Pulse output method | Single-phase pulse | Pulse output function not included | Pulse+ direction mode only |
| | Speed control | Included | | Included |
| | Positioning | Included (trapezoidal control not included) | | Included |
| | S-curve acceleration and deceleration | Not included | | Not included |
| | Origin searches | Not included | | Included |
| PWM outputs | | Not included | Not included | 1 output |
| DIP switch on front panel (SW) | | None | None | |
| Analog adjusters | | 2 adjusters | 2 adjusters: CP1E-E□□/N□□-type only Note: CP1E-E□□S/N□□S(1)-type do not have this function. | |
| Peripheral port | | C-series peripheral port | USB2.0 Full-speed (12M) | |
| Programming Console | | Can be connected | Cannot be connected | |
| Built-in serial communication port | | None | None | N□□/N□□S: (RS-232C) N□□S1: RS-232C+RS-485 |
| Serial option port | | None | None | N□□ only 14/20-point CPU Unit: None 30/40/60-point CPU Unit: 1 port |
| Serial communication protocols | | Connected CPM1-CIF01/CIF11 to peripheral port. | Not included | RS-232C port, RS-485 port or serial option port |
| | Baud rate | 1200/2400/4800/9600/19.2k | No communication port | 1200/2400/4800/9600/ 19.2k/38.4k/57.6k/115.2k |
| | Compatible protocols | Host Link Peripheral bus NT Link (1:1) 1:1 link (master) 1:1 link (slave) Refreshed at once when PLC Setup is changed. | | Host Link No-protocol mode NT Link (1:N) *1 *2 Serial PLC Links (master) *3 Serial PLC Links (slave) Modbus-RTU Refreshed for power interruption after PLC Setup has been changed. |

*1. Only one PT can be connected.

*2. PT programming console is not supported.

*3. PTs participation is not possible.

| Item | CPM1A | CP1E E□□S type CP1E E□□-type | CP1E N□□S(1)-type CP1E N□□-type |
|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Item | CPM1A | CP1E E□□S type CP1E E□□-type | CP1E N□□S(1)-type CP1E N□□-type |
| Mountable Option Boards | Option Board cannot be mounted. The followings can be connected to peripheral port: RS-232C Adapter CPM1-CIF01 RS-422A Adapter CPM1-CIF11 | Option Board cannot be mounted. | N□□ only RS-232C Option Board CP1W-CIF01 RS-422A/485 Option Board CP1W-CIF11/12 Ethernet Option Board CP1W-CIF41 The followings cannot be mounted: LCD Option Board CP1W-DAM01 |
| Battery | None Battery cannot be mounted. | None Battery cannot be mounted. | None Optional battery (CP1W-BAT01) can be mounted. |
| Capacitor backup | 20 days (at ambient temperature of 25°C) | 50 hours (at ambient temperature of 25°C) | 40 hours (at ambient temperature of 25°C) |
| Nonvolatile memory (Backup memory) | Built-in flash memory (contains user programs, parameters, DM Area initial values and comment files) | Built-in EEPROM (contains user programs, parameters, DM Area initial values and comment files) | |
| Backup function of DM Area to nonvolatile memory (The function to retain I/O memory data in battery-free operation) | Initial values in DM 6144 to DM 6599 can be changed from Programming Device. They cannot be overwritten from program during operation. | Any specified data (from D0) of DM Area can be backed up to backup memory by using Auxiliary Area control bits. Data can be restored to DM Area automatically when power is turned ON for settings in PLC Setup. Data that can be backed up E-type: D0 to D1499 (max.) N-type: D0 to D6999 (max.) | |
| Trace memory | Not included | Not included | |
| Clock (RTC) | Not included | Not included | Included |
| Address offsets | Not included | Included | |
| Number of cyclic tasks | 1 | 1 | |
| Number of interrupt tasks | None | 16 | |
| Number of subroutine | 49 | 128 | |
| Jump numbers | 49 | 128 | |
| Scheduled interrupt | 1 Time unit: 0.1ms | 1 Time unit: Only 0.1ms Interrupt intervals are fixed when MSKS instruction is executed. Only reset/start can be executed by MSKS instruction. | |

◆ I/O memory

| Item | CPM1A | CP1E E□□S type | CP1E N□□S(1)-type |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | | CP1E E□□-type | CP1E N□□-type |
| CIO | 320 bits CIO0.00 to CIO19.15 Input bits: Starting from CIO0.00 Output bits: Starting from CIO10.00 | 4640 bits CIO0.00 to CIO289.00 Input bits: Starting from CIO0.00 Output bits: Starting from CIO100.00 | |
| Work Area (WR) | 512 bits CIO 200.00 to CIO 231.15 | 1600 bits W0.00 to W99.15 | |
| Link Area(LR) | 256 bits LR0.00 to LR15.15 | None (Serial PLC Link Words: CIO200.00 to 289.15) | |
| Temporary Relay Area | 8 bits TR0 to TR7 | 16 bits TR0 to TR15 | |
| Holding Area (HR) | 320 bits H0.00 to H19.15 | 800 bits H0.00 to H49.15 | |
| Auxiliary Area (AR) Special Area (CPM1A only) | Special Area 384bits SR232.00 to SR255.15 Auxiliary Area 384 bits A00.00 to A15.15 | Auxiliary area Read only: 7168 bits A0 to A447 Read/write: 4896 bits A448 to A753 | |
| Timer Area | 128 timer numbers T0 to T127 (Using same numbers as counters) | 256 timer numbers T0 to T255 | |
| Counter Area | 128 counter numbers C0 to C127 (Using same numbers as timers) | 256 counter numbers C0 to C255 | |
| Data Memory Area | 1K words DM0 to 1023: Read/Write DM1000 to 1021: Error Log Area D6144 to 6599: Read-only D6600-6655: PLC Setup | 2K words D0 to D2047 (D0 to D1499 can be backed up to EEPROM by using Auxiliary Area control bits. Data is restored to RAM when power is turned ON for settings in PLC Setup.) | 8K words D0 to D8191 (D0 to D6999 can be backed up to EEPROM by using Auxiliary Area control bits. Data is restored to RAM when power is turned ON for settings in PLC Setup.) |
| Task Flag Area | None | 1 | |
| Index registers (IR) | None | None | |
| Data registers (DR) | None | None | |
| Trace memory | None | None | |

Appendix 2. Changes in Special Area

| Name | CPM1A Special Area | CP1E Auxiliary Area |
|---------------------------------------|-----------------------|-----------------------------------------------------------------|
| Macro function output area | 236 to 239 | None |
| Input interrupt 3 counter mode SV | 240 | None |
| Input interrupt 4 counter mode SV | 241 | None |
| Input interrupt 5 counter mode SV | 242 | None |
| Input interrupt 6 counter mode SV | 243 | None |
| Input interrupt 3 counter mode PV | 244 | None |
| Input interrupt 4 counter mode PV | 245 | None |
| Input interrupt 5 counter mode PV | 246 | None |
| Input interrupt 6 counter mode PV | 247 | None |
| High-speed counter PV area | 248 to 249 | A270 to A271 |
| Analog setting 0 | 250 | A642: E□□/N□□-type only *: E□□S/N□□S(1)-type Fixed at "0000" |
| Analog setting 1 | 251 | A643: E□□/N□□-type only *: E□□S/N□□S(1)-type Fixed at "0000" |
| High-speed counter reset bit | 252.00 | A531.00 |
| Peripheral port reset bit | 252.08 | A526.01 (Serial option port restart) |
| PLC Setup reset bit | 252.10 | None |
| Forced status hold bit | 252.11 | A500.13 |
| IOM hold bit | 252.12 | A500.12 |
| Error log reset bit | 252.14 | A500.14 |
| Error code | 253.00 to 07 | A400 |
| Cycle time overrun flag | 253.09 | A401.08 |
| Changing COMM port setup flag | 253.12 | None |
| Always ON flag | 253.13 | P_On |
| Always OFF flag | 253.14 | P_Off |
| First cycle flag | 253.15 | A200.11 |
| 1-minute clock pulse | 254.00 | P_1min |
| 0.02-second clock pulse | 254.01 | P_0_02s |
| Negative flag | 254.02 | P_N |
| Differential monitor completed flag | 254.06 | A508.09 |
| STEP execution flag | 254.07 | A200.12 |
| 0.1-second clock pulse | 255.00 | P_0_1s |
| 0.2-second clock pulse | 255.01 | P_0_2s |
| 1.0-second clock pulse | 255.02 | P_1s |
| Instruction execution error (ER) flag | 255.03 | P_ER |
| Carry (CY) flag | 255.04 | P_CY |
| Greater than flag | 255.05 | P_GT |
| Equals flag | 255.06 | P_EQ |
| Less than flag | 255.07 | P_LT |

Appendix 3. Changes in Auxiliary Area

| Name | CPM1A Auxiliary Area | CP1E Auxiliary Area |
|-------------------------------------------|-------------------------|----------------------------------------|
| Expansion Unit error flag for 1st Unit | AR02.00 | A436.00 |
| Expansion Unit error flag for 2nd Unit | AR02.01 | A436.01 |
| Expansion Unit error flag for 3rd Unit | AR02.02 | A436.02 |
| Number of Expansion Units connected | AR02.08 to 11 | A437 |
| Peripheral port error code | AR08.08 to 11 | None |
| Peripheral port communications error flag | AR08.12 | A392.12 |
| Power-off counter | AR10 | A514 |
| Range comparison flags | AR11.00 to 07 | A274.00 to 05 |
| Pulse output status | AR11.15 | A280.04 (pulse 0) A281.04 (pulse 1) |
| Power-up PLC Setup error flag | AR13.00 | A402.10 |
| Start-up PLC Setup error flag | AR13.01 | A402.10 |
| RUN PLC Setup error flag | AR13.02 | A402.10 |
| Long cycle time flag | AR13.05 | A401.08 |
| UM Area specification error flag | AR13.08 | None |
| FROM error flag | AR13.09 | A315.15 |
| Read-only DM error flag | AR13.10 | None |
| PLC Setup error flag | AR13.11 | A402.10 |
| Program error flag | AR13.12 | A401.15/A401.09 |
| Data save error flag | AR13.14 | None |
| Maximum cycle time | AR14 | A262 to A263 |
| Current cycle time | AR15 | A264 to A265 |

Appendix 4. Instructions changed by replacing CPM1A with CP1E

| Instruction | | CPM1A | CP1E | Result of instruction conversion and measure |
|-----------------------------------|-----------------------------|-------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Shift instruction | ASYNCHRONOUS SHIFT REGISTER | ASFT | None | Displayed as error. As CP1E does not have alternative instruction, we recommend you to use CPIL/CP1H. |
| Increment /decrement instructions | INCREMENT | INC | ++B | Converted |
| | DECREMENT | DEC | --B | Converted |
| Calculation instructions | BCD ADD | ADD | +BC | Converted |
| | BCD SUBTRACT | SUB | -BC | Converted |
| | BCD MULTIPLY | MUL | *B | Converted |
| | BCD DIVIDE | DIV | /B | Converted |
| | BINARY ADD | ADB | +C | Converted |
| | BINARY SUBTRACT | SBB | -C | Converted |
| | BINARY MULTIPLY | MLB | None SIGNED BINARY MULTIPLY: * | Displayed as error. Use SIGNED BINARY MULTIPLY instead. |
| | BINARY DIVIDE | DVB | None SIGNED BINARY DIVIDE: / | Displayed as error. Use SIGNED BINARY DIVIDE instead. |
| | DOUBLE BCD ADD | ADDL | +BCL | Converted |
| | DOUBLE BCD SUBTRACT | SUBL | -BCL | Converted |
| DOUBLE BCD MULTIPLY | MULL | *BL | Converted | |
| DOUBLE BCD DIVIDE | DIVL | /BL | Converted | |
| Logic instruction | EXCLUSIVE NOR | XNRW | None (XORW+COM) | Displayed as error. Use combination of XORW instruction and COM instruction instead. |
| Subroutine instruction | MACRO | MCRO | None | Displayed as error. As CP1E does not have alternative instruction, change ladder program with multiple subroutines. |
| Interrupt control instructions | INTERVAL TIMER | STIM | MSKS | Displayed as error. Use MSKS instruction instead. |
| | INTERRUPT CONTROL | INT | MSKS | Displayed as error. Use MSKS instruction instead. |
| Special instruction | MESSAGE DISPLAY | MSG | None | Displayed as error. CP1E does not have alternative instruction because Programming Console cannot be used. We recommend you to use CP1W-DAM01. |

Note. Refer to the Instructions Reference Manuals in the related manuals for details of the instructions.

Appendix 5. Instruction specifications changed by replacing CPM1A with CP1E

| Instruction | Mnemonic | Operand number | Operand specification of CPM1A | Operand specification of CP1E | Modification after converting with CX-Programmer |
|------------------------|----------|----------------|-----------------------------------------------------------------------------|---------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SINGLE WORD DISTRIBUTE | DIST | 3 | C: Control word • C is BCD data when using for single-word distribution. | Of: Offset • Of is BIN data. • No stack operation. | <ul style="list-style-type: none"> • Change Of from BCD data to BIN data when using for single-word distribution. • Stack operation can not be converted because CP1E does not have this function. |
| DATA COLLECT | COLL | 2 | C: Control word • C is BCD data when using for data collection. | Of: Offset • Of is BIN data. • No stack operation. | <ul style="list-style-type: none"> • Change Of to BIN data when using for data collection. • Stack operation can not be converted because CP1E does not have this function. |
| WORD SHIFT | WSFT | 1 | St: Starting word | S: Source word S is store in St. | Although &0 data is input in S: Source word, operation is the same as CPM1A. |
| | | 2 | E: End word | St: Starting word | |
| | | 3 | - | E: End word | |
| SPEED OUTPUT | SPED | 1 | Single-phase pulse output | Pulse + direction only. Single-phase output cannot be specified. | Specify pulse output port and mode to be used. |
| | | 2 | M: Output mode Output method and direction are not specified. | M: Output mode Output method and direction must be specified. | |
| | | 3 | F: Target frequency Set BCD value in 10Hz. | F: Target frequency Set BIN value in Hz. | It is necessary to convert unit of target frequency and convert BCD data into BIN data. |
| SET PULSES | PULS | 1 | Single-phase pulse output Fixed at 000 | Pulse output 0 Fixed at #0000 | Specify pulse output port and mode to be used. |
| | | 2 | Fixed at 000 (relative mode) | Fixed at #0000 (relative mode) | |
| | | 3 | When specifying word, contents of word are BCD data | When specifying word, contents of word are BIN data | Change pulse output amount from BCD data to BIN data. |
| | | | When specifying constant, BCD data | When specifying constant, BIN data | |
| FAILURE ALARM | FAL | 2 | No second operand | Specify message word with second operand. | Second operand is converted to #0 data (no message). |
| SEVERE FAILURE ALARM | FALS | 2 | No second operand | Specify message word with second operand. | Second operand is converted to #0 data (no message). |

Note. Refer to the Instructions Reference Manuals in the related manuals for details of the instructions.

Appendix 6. PLC Setup changed by replacing CPM1A with CP1E

It is necessary to set because the PLC Setup is not converted even if the model is changed.

| CPM1A | | | CP1E | | | |
|----------------------------------------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------|--------------------------|
| Function | Item | | Function | Item | | |
| Startup | Startup mode | PROGRAM | Startup | Startup mode | PROGRAM | |
| | | MONITOR | | | MONITOR | |
| | | RUN | | | RUN | |
| | | Continue operating mode last used before power was turned OFF. | | | None | |
| | | Programming Console switch | | | None | |
| | IOM hold | Reset/Maintain | | None | None | |
| | Forced status | Reset/Maintain | | None | None | |
| | Programming Console display language | Japanese | | - | Programming Console cannot be connected. | |
| Program memory write-protection | Unprotected/Protected | | Transition from PLC Setup. Various protections available. | | | |
| If data could not be saved with built-in capacitor | Memory error will be generated | | Clear held memory to zero when power is turned ON. | | | |
| Cycle time | Cycle monitor timer | Disable: fixed at 120ms Setting: 99s max. Monitor time = setting x unit Setting unit: 10ms/100ms/1s | Timing/Interrupt | Watch cycle time | Default: 1000ms Any value can be set. | |
| | Cycle time | Default: Variable Other: Minimum time | | Constant cycle time | Default: Variable Other: Any value can be set. | |
| | Servicing time for peripheral port | Peripheral port 0 to 99%of cycle time | Service for peripheral port | None | None | |
| Interrupt/Refreshing | Interrupt input | IR 00003 to 6 | Built-in input | Interrupt input | IN2 to 7 | |
| | Input constant | IR 000 to 0009 IN0ch is set every 2bits. 1/2/4/8/16/32/64/128ms | Input constant | Input constant (0 to 17CH) | 0 to 17CH All words including IN0ch are set at the same time. No filter/1/2/4/8/16/32ms | |
| Host Link port | Communications setting | Standard | Built-in RS-232C | Communications setting | Standard | |
| | | Custom | | | Custom | |
| | Baud rate | 1200 to 19.2kbps | | Mode | Host Link | |
| | | Mode | | | Host Link | |
| | | | | | 1:1 PC Link (slave) | Serial PLC Link (slave) |
| | | | | | 1:1 PC Link (master) | Serial PLC Link (master) |
| | | NT Link (1:1) | | | NT Link (1:N) | |
| | Link words | LR00 to LR15 | | - | No setting (fixed value) | |
| Node number | 0 to 31 | Unit number | 0 to 31 | | | |
| Delay | 0 to 9999ms | Delay | 0 to 9999ms | | | |
| Error log setting | Cycle time monitor | Detect (non-fatal error) / Not detect | Timing/Interrupt | Watch cycle time | Check/Not check | |
| | Style | Shift after 7 records has been stored / Store only first 7 records / Not store | | Cycle time | Check/Not check | |
| | | | - | - | No setting 20 records (fixed) | |
| High-speed counter | Counter reset | Z phase + software reset Software reset only | Built-in input | High-speed counter 0 | Select reset method. | |
| | Counter mode | Differential phase input (2.5kHz) | | | Differential phase input (x4) | |
| | | Increment mode (5kHz) | | | Increment pulse input | |
| | Counter enable | Not use/Use | | | | Check "Use". |

Shaded item: Specification of setting item is changed.

Appendix 7. Expansion Units

Model numbers of the Expansion Units when replacing the CPM1A with the CP1E

| | CPM1A Expansion Unit | CP1W Expansion Unit | When replacement model does not exist |
|--------------------------------|-------------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| I/O Unit with 40 I/O points | CPM1A-40EDR | CP1W-40EDR | |
| | CPM1A-40EDT | CP1W-40EDT | |
| | CPM1A-40EDT1 | CP1W-40EDT1 | |
| I/O Unit with 20 I/O points | CPM1A-20EDR1 | CP1W-20EDR1 | |
| | CPM1A-20EDT | CP1W-20EDT | |
| | CPM1A-20EDT1 | CP1W-20EDT1 | |
| Input Unit with 8 inputs | CPM1A-8ED | CP1W-8ED | |
| Output Unit with 8 outputs | CPM1A-8ET | CP1W-8ET | |
| | CPM1A-8ET1 | CP1W-8ET1 | |
| Analog Input Unit | CPM1A-AD041 | CP1W-AD041 | |
| Analog Output Unit | CPM1A-DA041 | CP1W-DA041 | |
| Analog I/O Unit | CPM1A-MAD01 | None | Replace with CP1W-MAD11. |
| | CPM1A-MAD11 | CP1W-MAD11 | |
| CompoBus/S I/O Link Unit | CPM1A-SRT21 | CP1W-SRT21 | |
| DeviceNet I/O Link Unit | CPM1A-DRT21 | None | There is no Unit to replace. Please examine to replace DeviceNet with Compobus/S or replace PLC with another PLC that can be used with DeviceNet. |
| Temperature Sensor Unit | CPM1A-TS001 | CP1W-TS001 | |
| | CPM1A-TS002 | CP1W-TS002 | |
| | CPM1A-TS101 | CP1W-TS101 | |
| | CPM1A-TS102 | CP1W-TS102 | |

MEMO

MEMO

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters

OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp
The Netherlands
Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg,
IL 60173-5302 U.S.A.
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967
Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2012-2013 All Rights Reserved.
In the interest of product improvement,
specifications are subject to change without notice.

Cat. No. P083-E1-02

Printed in Japan
0513(0512)